

### | INTRINSIC SAFETY BARRIER ELECTRONIC MODULES



#### Introduction

This Intrinsic Safety Barrier Module is the perfect complement to our Intrinsically Safe Encoders and, when used together, constitutes a completely engineered solution for encoder operation in Class I and Class II, Division 1 (Zone 0) Hazardous Environments. This single barrier provides both power and signal isolation for an incremental encoder with differential quadrature outputs and an index. This all-in-one approach saves the cost, inconvenience and system design time needed when using separate power and signal barriers. This barrier is galvanically isolated which eliminates the added cost of maintaining a high integrity earth ground. With differential line driver outputs, this barrier can be used to carry signals reliably up to 500 feet with a bandwidth of up to 250 kHz. It is designed around a standard DIN Rail mounting (Type EN 50022, 35 mm X 7.5 mm) for easy installation in standard enclosures. A length of DIN rail is supplied with each module. The module simply snaps directly to the DIN rail and is ready to use.

The Intrinsic Safety Barrier Module is also certified to be installed in Class I, Div. 2 (Zone 2) areas.

When properly connected, differential data signals have an inherent immunity to noise since it is rejected as common mode. However if a connection between the encoder and the barrier is broken or improperly terminated it can act as an antenna and still create a signal. An open wire detection (ISD) option is available on BEI's Intrinsically Safe Barriers (28V/V and 28V/5 only). In the event that the data line is cut or not properly connected the ISD option can detect a change in the impedance of the connection and cause the output data on both legs of the differential signal to go low. This creates an erroneous logic state that can be used by the operator to halt or modify a process.

Power Supply / Output Type										
Part Number	Barrier Supply: Vs ±5%	Output logic to Non-I	nazardous Area Apparatus							
60004-002		Vout = 5V	Line Driver up to 100 mA source/sink (TTL & RS422 compatible)							
60004-003		Vout = Vin	Line Driver up to 100 mA source/sink							
60004-004	12-28 VDC	Open Collector	NPN up to 80 mA sink							
60004-005		Vout = 5V	Line Driver up to 100 mA source/sink Open wire detect option							
60004-006		Vout = Vin	Line Driver up to 100 mA source/sink Open wire detect option							
▲ Caution: Operation	above or below barrier supply voltage (	Vs) range noted will cause perma	nent damage to barrier							

# SPECIFICATIONS



Barrier Parameters											
				Class I, G ass II, Gp: Group I	s E,F,G		lass I, Gps ass II, Gps Group IIE	E,F,G		ss I, Gps A, ass II, Gps I Group IIC	E, <b>F</b> ,G
Barrier Output (Po)	Voc (Uo)	lsc (lo)	Ca (Co)	La (Lo)	L/R Ratio	Ca (Co)	La (Lo)	L/R Ratio	Ca (Co)	La (Lo)	L/R Ratio
870 mW	9.48 VDC	367 mA	255 uF	2.1 mH	327 uH/Ω	27 uF	1.05 mH	160 uH/Ω	3.7 uF	0.26 mH	40.8 uH/Ω

Input to Barrier from Encoder								
Signals	A, B, Z, A/, B/, Z/ differential or A,B,Z single-ended							
Input Signal Impedance	500 $\Omega$ nominal (A to A/, B to B/, Z to Z/)							
Input Signal level	4 VDC minimum, 6 VDC maximum							

### **GENERAL WIRING DIAGRAM**



Copyright © 2019 Sensata Technologies, Inc.

www.sensata.com

Page 2



Use this diagram, working from left to right to construct your model number

	EM	-	DR1	-	IS	-	5	-	RTB	
Туре						-				
<b>EM =</b> Electronic Module, DIN Rail	mount									
Package Style ——										
<b>DR1 =</b> 114.5 mm x 99mm x 22.5 m	m									
Function										
IS = Intrinsically Safe ISD = Intrinsically Safe with Open (available with 28V/V or 28V/5 sup										
Output Voltage to Enc	oder —									
<b>5 =</b> 5 VDC										
Output Termination										
<b>RTB =</b> Remove Terminal Block										
Voltage/Output —										

**28V/V =** 12-28 VDC, Vout = Vin **28V/5 =** 12-28 VDC, Vout = 5 volts **28V/0C =** 12-28 VDC, Vout = Open Coll.



## AGENCY APPROVALS & CERTIFICATES

This Intrinsic Safety Barrier has certifications to be used as an associated apparatus for intrinsically safe encoders installed in the following hazardous locations:



US Class I, Group A,B,C,D; Class II, Groups E,F,G; Class III



Canadian Class I, Zone 0, Group IIC



Made In France

Page 3

**CONTACT US** 

+33 (3) 88 20 8080

+1 (800) 350 2727 - Option 1

sales.beisensors@sensata.com

**Europe, Middle East & Africa** 

position-info.eu@sensata.com

sales.isasia@list.sensata.com

Rest of Asia +886 (2) 27602006

China +86 (21) 2306 1500

Japan +81 (45) 277 7117

Korea +82 (31) 601 2004

India +91 (80) 67920890

ext 2808

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice.

Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.