

EZ-KIT Lite™ Quick Start Guide

Thank you for purchasing this EZ-KIT Lite™ evaluation system. Before you begin to use your EZ-KIT Lite, you must first perform the following procedure, which leads you through the **software installation** and **hardware setup**.

For further information, please refer to the *EZ-KIT Lite Evaluation System Manual* on the CD-ROM.

Software Installation

- 1) Check the contents of your package and identify the following items:
 - *Installation Quick Reference Card for VisualDSP++ Development Environment*
 - *VisualDSP++™* development environment CD-ROM (CD includes the *EZ-KIT Lite* evaluation system software)
 - EZ-KIT Lite board
 - Power supply
 - 9V DC for ADSP-2181
 - 7.5V DC for ADSP-2189 and SHARC DSPs
 - RS-232 serial port 9-pin cable
 - Registration form (to be filled out and returned to Analog Devices)
- 2) Ensure that your PC meets the following minimal requirements along with the requirements stated in the *Installation Quick Reference Card for VisualDSP++*:

Windows® 98, ME, 2000, XP, or Windows NT
An available RS-232 port
- 3) Ensure that the VisualDSP++ Development Environment is installed.
 - a. If the latest version of VisualDSP++ is installed, insert the VisualDSP++ CD into CD-ROM drive. Click on Install VisualDSP++. Click on Install Tools. On this prompt screen, select Modify to add the EZ-KIT Lite software. On the next Component prompt screen make your EZ-KIT Lite selection and begin install.
 - b. If VisualDSP++ is not installed please refer to the *Installation Quick Reference Card for VisualDSP++ Development Environment* for further instructions. **Perform only tasks 1 and 2.** Continue after you have completed the VisualDSP++ install.

Important: Please note that installing the latest version of VisualDSP++ will completely replace the older VisualDSP++™ versions on your computer, making them inoperable. If for some reason, you need to use the older version you will need to uninstall this version and re-install the older version.

Note: The VisualDSP++ serial number shipped with this EZ-KIT Lite evaluation system creates a permanent license, but **limits** the software's capability. For detailed information on these limitations refer to the *EZ-KIT Lite Restrictions* section in the *EZ-KIT Lite Evaluation System Manual*.

Hardware Installation

- 4) Plug the power supply into a wall outlet and plug its connector into the power receptacle on the EZ-KIT Lite board. Verify that the green LED (PWR/VCC) is lit.
- 5) Connect the RS-232 cable to your PC and to the EZ-KIT Lite board.
- 6) Run VisualDSP++ by holding down the keyboard's **Ctrl** key while choosing **Start -> Programs -> VisualDSP -> VisualDSP++**.

The *Session List* dialog box appears if you already have existing sessions. Skip to step 8 if this is the first time running VisualDSP++.

- 7) Click on *New Session*.
- 8) In **Debug target**, choose **EZ-KIT Lite (processor)** and click **OK**.
ADSP-218x DSP Family Note: In **Debug target**, choose **EZ-KIT Lite (ADSP-218x)** and the **ADSP-2189** or **ADSP-2181** processor and click **OK**.
- 9) Then **Activate** your session.

Now You're Ready to use your EZ-KIT Lite.

Run the **example programs** to become familiar with the:

- EZ-KIT Lite evaluation system
- VisualDSP++ development environment
- DSP

These examples are located on your hard drive in the subdirectory: ...VisualDSP\processor_family\EZ-KITs\processor\Examples

You can also write, execute, and debug your own software. Refer to VisualDSP++ **online Help**, which provides access to the Tools documentation (e.g., compiler, assembler). **Read** the *VisualDSP++ User's Guide* and the *VisualDSP++ Getting Started Guide* to learn about VisualDSP++.

For a detailed description of the EZ-KIT Lite board, refer to the *EZ-KIT Lite Evaluation System Manual*, which is located in the ...VisualDSP\Docs\ADSP-processor EZ-KIT subdirectory on your hard drive.

Limited Warranty

The EZ-KIT Lite evaluation board is warranted against defects in materials and workmanship for a period of one year from the date of purchase from Analog Devices or from an authorized dealer.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.