




# MC9S08LL64

S08 ultra-low-power  
LCD segment MCU



# Get to know the TWR-S08LL64

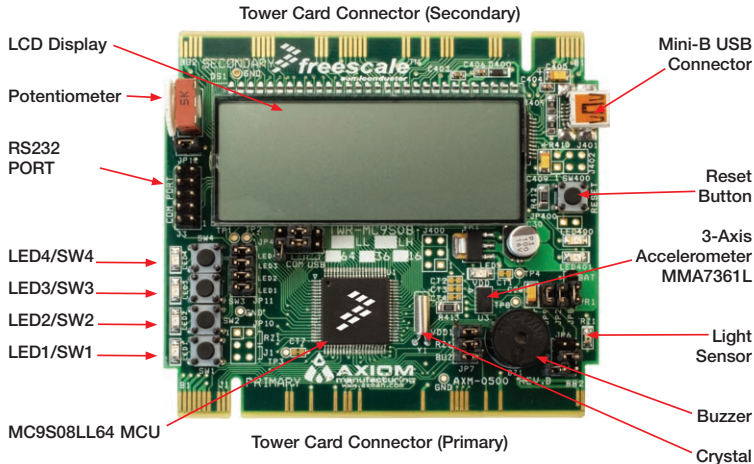

## TWR-S08LL64-KIT Freescale Tower System

The TWR-S08LL64 module is part of the Freescale Tower System, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Take your design to the next level and begin constructing your Tower System today. The TWR-9S08LL64-KIT comes with two elevator modules (TWR-ELEV) and a prototype module (TWR-PROTO).

# Introduction

---

The MC9S08LL64 device is one of Freescale's low-power microcontrollers with an integrated liquid crystal display (LCD) driver. The TWR-S08LL64 module contains an on-module display that allows developers to explore software development using the integrated LCD driver. This quick start guide is designed to get you ready to develop your next LCD application using the MC9S08LL64 within minutes.

# Step-by-Step Installation Instructions

After completing the steps in this quick start guide take a look at the TWR-S08LL64 Labs Tutorial document (TWR9S08LL64LAB) included in the Training section of the DVD. Here you'll learn more about the key benefits that MC9S08LL64 provides your application.

**STEP  
1**


## Install software and tools

Please insert the provided DVD into your computer. After the initial screen appears, install CodeWarrior development tools in the order listed below. Follow the prompts through the installation of each component, answering each prompt with the default input.

1. Install CodeWarrior Development Studio for Microcontrollers v6.3 Special Edition
2. Install P&E toolkit
3. Install the two CodeWarrior project files by selecting the Software tab and click the Lab Software Projects link. This will begin extraction of the two project files listed below. Place them in a new My Documents\TWRL64 folder on the hard disk of your computer.
  - TWRL64\_Quick\_Start
  - TWRL64\_Accelerometer

STEP  
2


## Set up the TWR-S08LL64 module

1. Remove the TWR-S08LL64 module from anti-static pouch. Make sure the jumpers are in the default positions (see diagram on next page).
2. This symbol  indicates **no** jumper is installed.
3. Connect provided USB cable from a free USB port on your computer to the mini-B USB connector on the TWR-S08LL64 module. Allow the PC to automatically configure the USB drivers as needed. USB drivers for your TWR-S08LL64 module were pre-loaded in the CodeWarrior installation.

STEP  
3

## Start CodeWarrior and debug environment

1. Start CodeWarrior by selecting it from the Windows Start menu.
2. From the CodeWarrior main menu, choose **“File > Open”** and choose the **PE\_LL64\_Quick\_Start.mcp** that is found in the My Documents\TWRL64 folder on the hard disk of your computer created in step 1. This is the on-board example you copied from the Getting Started DVD included with the Tower module tool kit.
3. Click **“Open”** to open the project window.

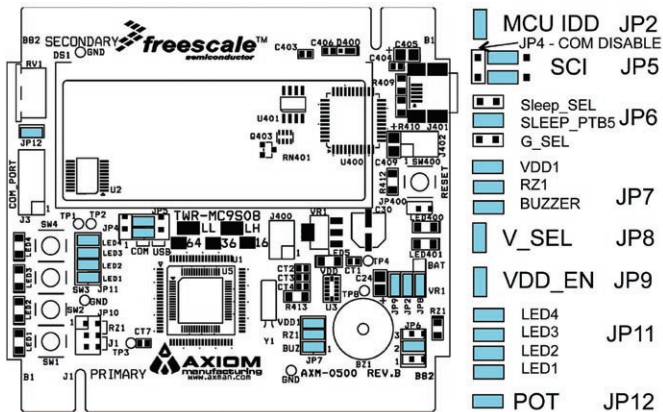

- The main portion of the C code for this example is contained in the “LL64\_Demo.c” file. Open this file to review the code.
- From the main menu, choose “**Project > Debug.**” This will compile the source code, generate an executable file and download it to the demo TWR-S08LL64 module.
- If prompted, set the connection to HCS08 and Freescale open source BDM. If the derivative is not set, select MC9S08LL64 from the list. If any further prompts appear, please select “**OK.**” A new debugger environment will open.

**STEP  
4**

## Run and debug example code on TWR-S08LL64 module

1. From the main menu, choose **“Run > Start/Continue.”** The program will be executed in real time.
2. From the main menu, choose **“Run > Halt.”** The program execution will stop. The next instruction to be executed is highlighted in the source window.
3. From the main menu, choose **“Run > Single Step.”** The instruction highlighted in the source window will be executed and the program execution will be stopped immediately.
4. From the main menu, choose **“Run > Start/Continue.”**  
The application will restart from where it was previously stopped.
5. Now that you have successfully completed the software and hardware setup, test your TWR-S08LL64 module by running the Tower module application pre-loaded in the microcontroller’s on-chip flash memory. For more detailed information on how to use the demonstration code, please refer to the TWR-S08LL64 Labs Tutorial.

## Learn more about the MC9S08LL64 and software

Additional information can be found in the documentation and training tab of the enclosed DVD.

### MC9S08LL64 documents:

- MC9S08LL64 Reference Manual
- MC9S08LL64 Data Sheet

### TWR-S08LL64-KIT documents:

- Tower Module Schematics
- Tower Module LCD Glass Specifications
- Three Axis Low-g Micromachined Accelerometer Data Sheet

Learn more at [www.freescale.com/tower](http://www.freescale.com/tower) and  
[www.freescale.com/lcd](http://www.freescale.com/lcd).

Freescale, the Freescale logo and CodeWarrior are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2009.

Doc Number: MC9S08LL6436QSG / REV 1  
Agile Number: 926-26220 / REV B







Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.