



CURTIS

CURTIS INSTRUMENTS, INC.

200 Kisco Ave.

Mount Kisco, New York 10549

914-666-2971 Tel


914-666-2188 Fax

www.curtisinstruments.com

CURTIS[®] MODEL 906

Battery "Fuel" Gauge

CE

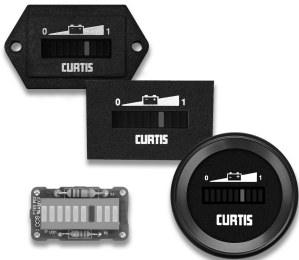

Read Instructions Carefully!



SAFETY INSTRUCTIONS

This instrument was manufactured and tested according to the applicable technical standards. It complies with all the safety regulations as shipped from the factory.

Installation and startup must be performed by skilled personnel.

Failure to install and operate the unit in accordance with these instructions may result in damage or injury.

If safe operation of the instrument can no longer be ensured, stop and secure it against accidental operation.

If instrument failure or malfunction may cause personal injury or material damage, use additional safety measures such as limit switches, guards, etc.

Read the Operating Instructions carefully before startup.

Note the safety instructions marked with this warning symbol in this manual!

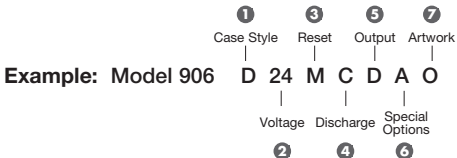


TABLE OF CONTENTS

1. Model Encodement	2
2. Technical Specifications	
2.1 Electrical	6
2.2 Mechanical	6
2.3 Environmental	7
3. Installation	8
4. Operation	
4.1 Display	9
4.2 Reset	10
5. Troubleshooting	11
6. Maintenance	12
7. Warranty	13



1. MODEL ENCODEMENT



1 Case Style Options

F
T
J
D
Y
Z
P
R

2 Voltage Options

12
24
36
48

3 Reset Profile Options

Letter Code with Memory Option	Letter Code without Memory Option	Volts per Cell			
		Open Circuit Reset	High Voltage Reset	CTR Full	CTR Empty
K		1.928	2.167	2.167	2.10
	J	N/A	2.167		
Y		2.083	2.167	2.167	2.10
N		1.980	2.230	2.230	2.10
	E	N/A	2.230		
T		2.028	2.280	2.28	2.10
	L	N/A	2.280		
D		2.060	2.320	2.32	2.10
	P	N/A	2.320		
B		2.090	2.350	2.35	2.10
	H	N/A	2.350		
C		2.135	2.400	2.400	2.10
	M	N/A	2.400		

4 Discharge Profile Options

Letter Code	Volts per Cell	
	Full	Empty
G	1.97	1.75
H	1.97	1.70
J	1.97	1.63
K	2.01	1.65
L	2.10	1.92
M	2.00	1.83
N	2.04	1.73
P	2.08	1.98
R	2.02	1.90
T	2.03	1.90
V	1.98	1.85
W	2.02	1.85
X	1.95	1.75
Y	2.00	1.90

Note: This gauge is not intended to measure the state-of-charge of batteries subject to extended periods of inactivity since it does not account for self-discharge effects. Consult factory for details.

5 Output Options

Letter Code	Signal
A	None
B	Output + Memory
C	Output + Memory + CTR
D	5 $\pm$ 0.5V above empty 0 to 0.1 V at empty 10K Ω impedance
M	Memory option

6 Special Options

A = (TBD)

7 Artwork Options

Letter Code	Logo
O	Curtis
N	None

2. TECHNICAL SPECIFICATIONS



2.1 Electrical Operating Voltage

Operating Range: $\pm 25\%$ of nominal voltage

Operating Current

Voltage (VDC)	Nominal Current (mA)	Maximum Current (mA @B ⁺ +25%)
12	23	38
24	17	24
36	16	22
48	16	21

2.2 Mechanical Display

10-digit

Red LED

Tri-color (5 green, 3 yellow, 2 red)



Recommended Panel Cutouts

F, J, T, TX, Y, Z Cases: 36.8 mm x 24.1 mm
+0.3/-0.0mm
D Case: 45.3 mm x 22.3 mm ± 0.1
R Case: 52.4 mm

Terminals

D, T, TX: 3/16" blade
R, F, Z: 1/4" blade
J, Y: 4-pin Packard Connector equivalent to
Delphi PN 15336035
P: Solder pins

2.3 Environmental Temperature

Operating: -40 to $+85^{\circ}\text{C}$
Storage: -50 to $+90^{\circ}\text{C}$
Humidity: 95% RH non-condensing at 38°C
Shock and Vibration: Meets SAE J 1378

3. INSTALLATION

Connecting Model 906



Pin 1 = Battery +

Connects to the vehicle's main positive (+) terminal.
Use as short a wire as practical.

Pin 2 = Battery -

Connects to the vehicle's main negative (-) terminal
Use as short a wire as practical.

Note: Pins 1 & 2 are connected across the total battery pack.

Pin 3 = Output Signal + or No Option

Output Signal option: 5 VDC ± 0.5 VDC (90 μ A current source) above Empty, 0-0.1 VDC at Empty
1 VDC maximum (90 μ A sink);
No Option: Pin 3 is left open.

Pin 4 = Keyswitch


Connects to Battery + through the switched terminal of the keyswitch.

4. OPERATION



4.1 Display

- 1 Only when the battery is properly charged is the right-most LED lit.
- 2 As the battery's state-of-charge decreases, successive LEDs light up, only one on at a time.
- 3 The 2nd-from-left LED flashes, indicating "energy reserve" (70% depth of discharge).
- 4 The 2 left-most LEDs alternately flash, indicating "empty" (80% depth of discharge).

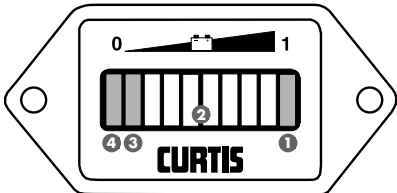



4.2 Reset

OCR (Open Circuit Reset)

Upon reconnection of a battery the gauge will reset if it measures 2.09 volts/cell or higher (example “B” profile) (for units with memory option).

HVR (High Voltage Reset)

Gauge must measure >2.35 volts per cell for 6 continuous minutes during charging (example “B” profile).

CTR (Charge Tracking Reset)

Display tracks charge level during opportunity charging (requires gauge to be connected to battery when charging).

5. TROUBLESHOOTING

The following checklist should help you troubleshoot any problem with Model 906.

Problem	Possible Cause
Keyswitch on and no display	Terminals not connected or improper voltage; Keyswitch not high
Stays at Full	Model 906 voltage does not match battery voltage
Will not reset	Model 906 voltage does not match battery voltage or battery not fully charged
Reset without terminals charging battery	Not connected directly to battery
Empty too soon	Model 906 voltage does not match battery voltage or terminals not connected directly to battery



6. MAINTENANCE

Curtis Model 906 series is not field serviceable. Return defective units to your distributor for warranty coverage.



7. WARRANTY

Curtis Instruments' products and/or components are guaranteed against defects in workmanship and material for a period of one year, or as defined in the individual product literature, from date of shipment from our factory, when applied in a proper application within specified ratings. This guarantee is limited to repair or replacement F.O.B. our factory. There is no further warranty or implied representation, guarantee, promise or agreement as to any Curtis Instruments product and/or component. Curtis Instruments, Inc., cannot assume responsibility or accept invoices for unauthorized repairs to its products and/or components, even though defective. In no case will Curtis Instruments' responsibility extend to products, components or equipment not of its manufacture. Under no circumstances shall Curtis Instruments, Inc., be liable for any special or consequential damages or loss of profits or other damages. Returned goods will not be accepted unless identified by a Curtis Return Material Authorization (RMA).

**All specifications are subject to
change without notice.**



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.