



Infrared Remote Control Transmitter

PT2560

Description

PT2560 is an infrared remote control transmitter utilizing CMOS technology housed in a 20-pin DIP or SO package. A 4 x 8 key matrix and extension bit inputs allow the transmission of up to 256 instructions. The transmission code consists of 16 bits code (8 bits custom code and 8 bits data code) and a leader code. PT2560 is functionally compatible with M50560. However, there is a slight difference in their application circuits. If you are to replace M50560 with PT2560, you do not need to connect an external capacitor to Pin No.3 (SEL Pin).

Pin assignments and application circuit of PT2560 are optimized for easy PCB layout and cost saving advantage for remote control applications.

Features

- ☐ CMOS Technology
- ☐ Low Power Consumption: 2.0 ~ 4.0 V
- ☐ Least External Components
- ☐ LED Power Dissipation is less during the transmission of instructions


Applications

- ☐ Audio Equipment
- ☐ Television
- ☐ Video Cassette Recorder
- ☐ Air Conditioner



Infrared Remote Control Transmitter

PT2560

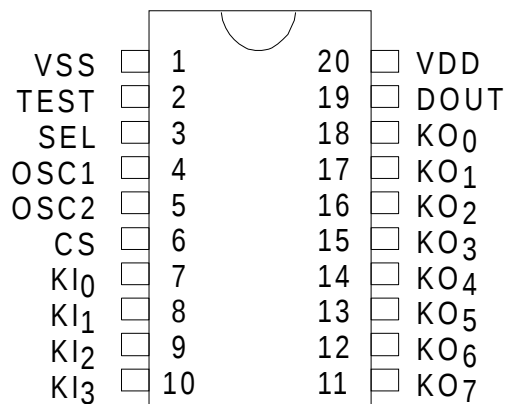Pin Configuration**PT2560****Order Information**


Valid Part Number	Package
PT2560-001	20 Pins, DIP Package (300 mil)
PT2560S-001	20 Pins, SO Package (300 mil)
PT2560-002	20 Pins, DIP Package (300 mil)
PT2560S-002	20 Pins, SO Package (300mil)
PT2560-003	20 Pins, DIP Package (300 mil)
PT2560S-003	20 Pins, SO Package (300 mil)



Infrared Remote Control Transmitter

PT2560

Application Circuit 1

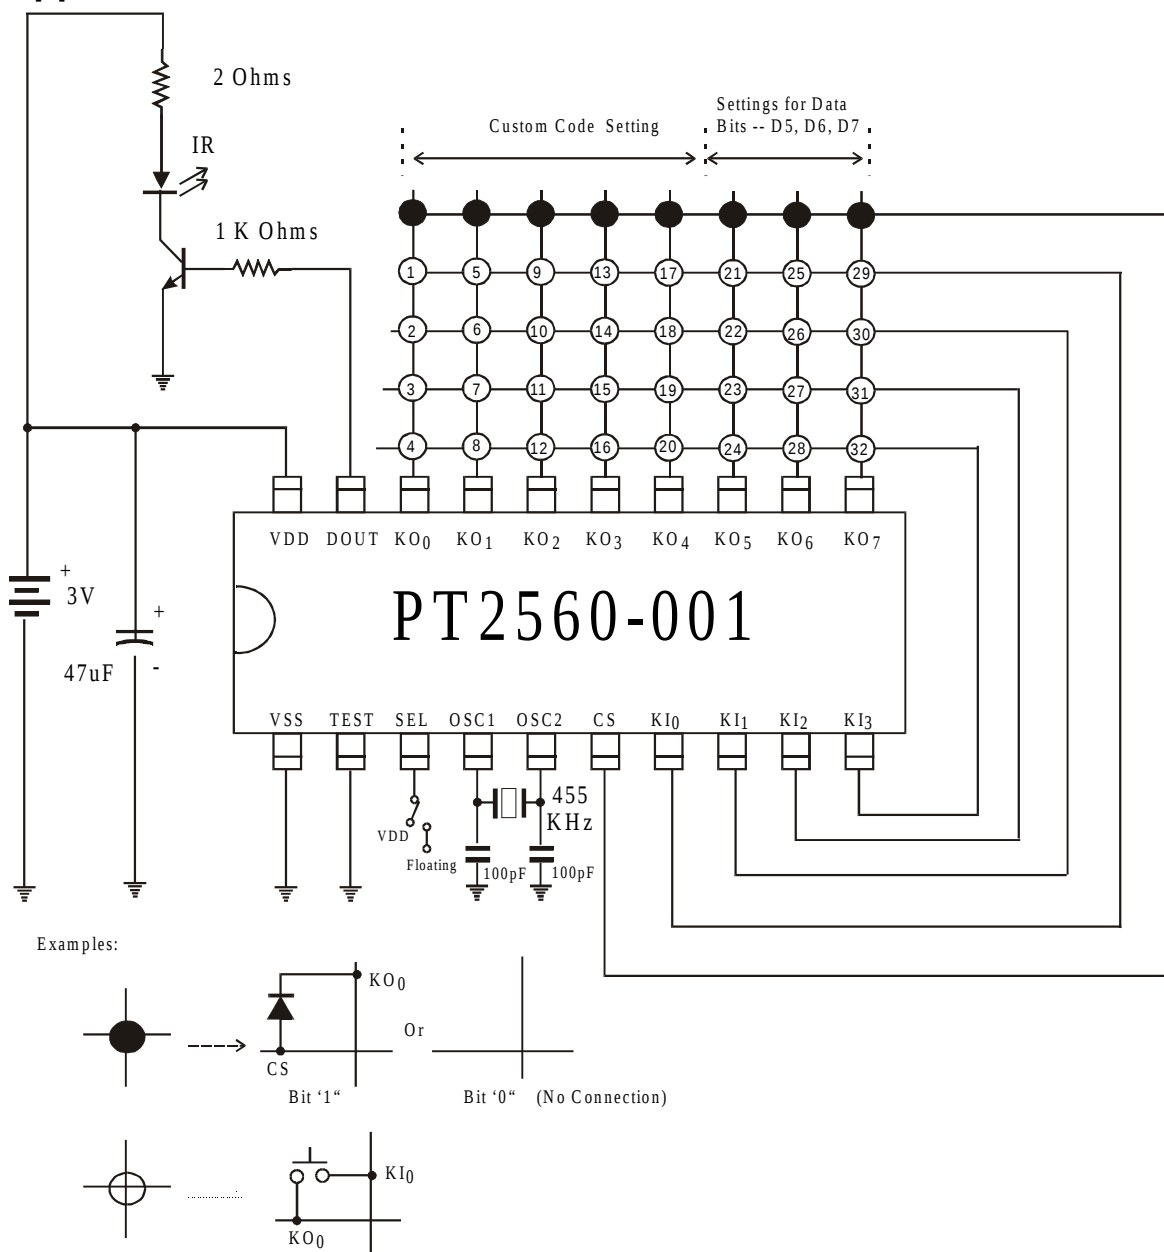


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must either be "floating" or connected to VDD.



Infrared Remote Control Transmitter

PT2560

Application Circuit 2

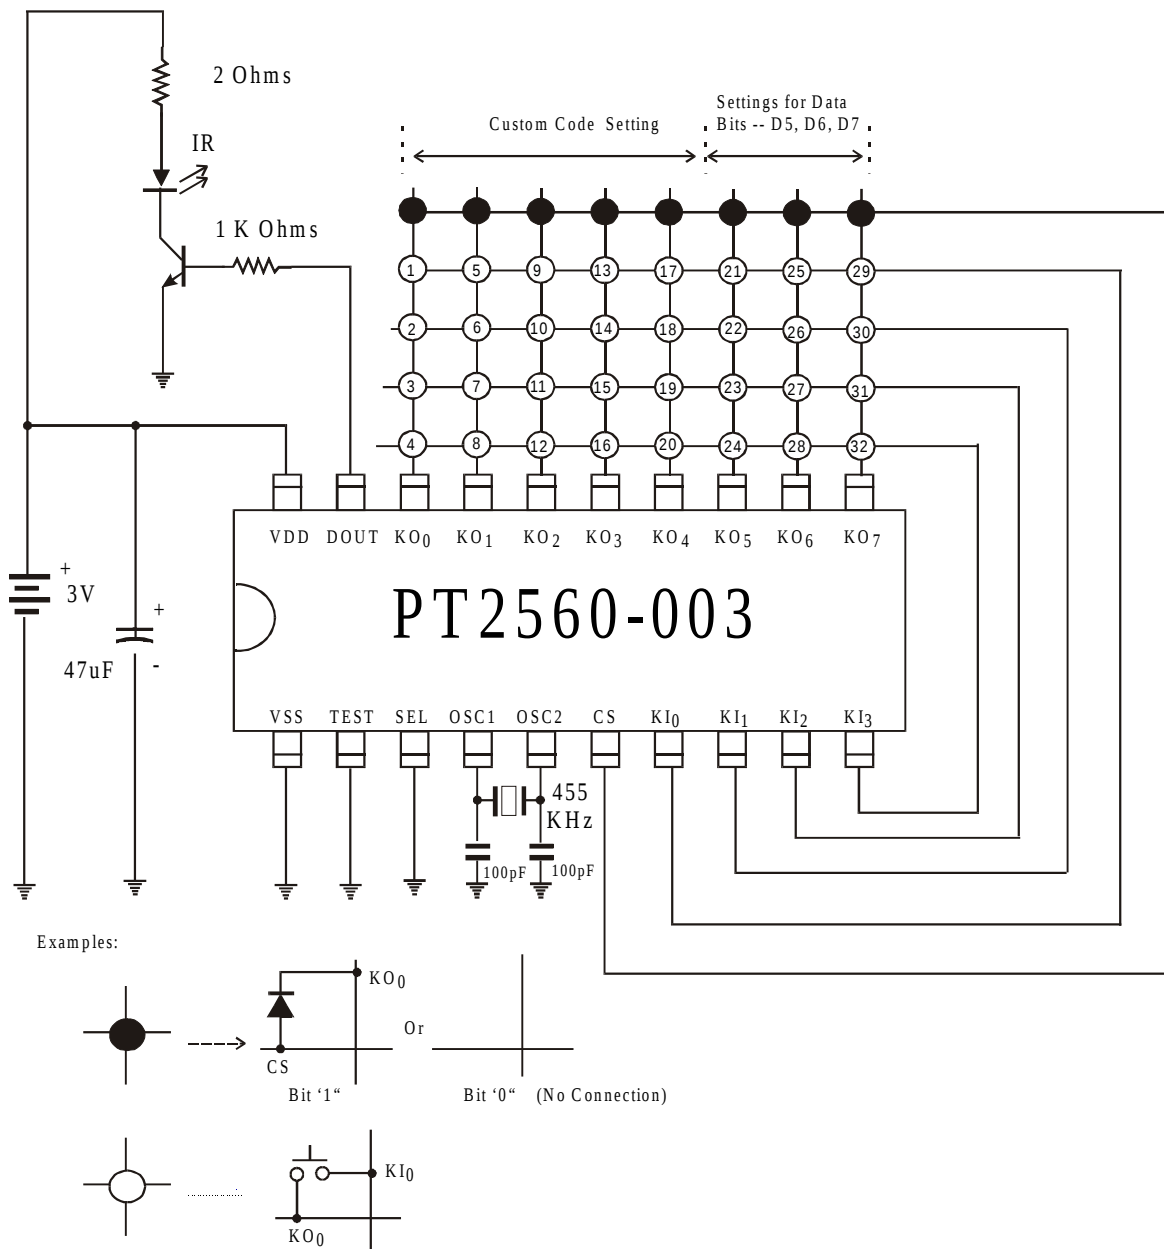


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must be connected to the Ground.



Infrared Remote Control Transmitter

PT2560

Application Circuit 1 & 2 Key Table

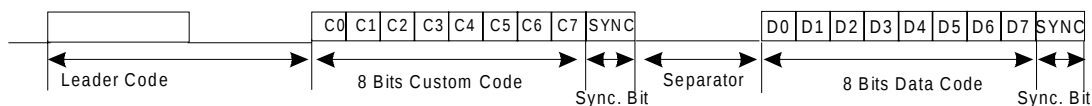

PT2560-001/ PT2560-003 Custom Code Table for Application Circuit 1/2

Input	KO Lines					Custom Codes							
CS	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*		*	*	1	1	0	1	1	0/1	0	0
*			*	*	*	0	0	1	1	1	0/1	0	0
*	*		*	*	*	1	0	1	1	1	0/1	0	0
*		*	*	*	*	0	1	1	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS connected to the respective KO Line

For PT2560-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003 Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 1/2

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

Input CS	KO Lines			Data Code		
	KO ₅	KO ₆	KO ₇	D5	D6	D7
				0	0	0
*	*			1	0	0
*		*		0	1	0
*	*	*		1	1	0
*			*	0	0	1
*	*		*	1	0	1
*		*	*	0	1	1
*	*	*	*	1	1	1




Infrared Remote Control Transmitter

PT2560

Application Circuit 4

(Extended Codes)

Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must connected to the Ground.

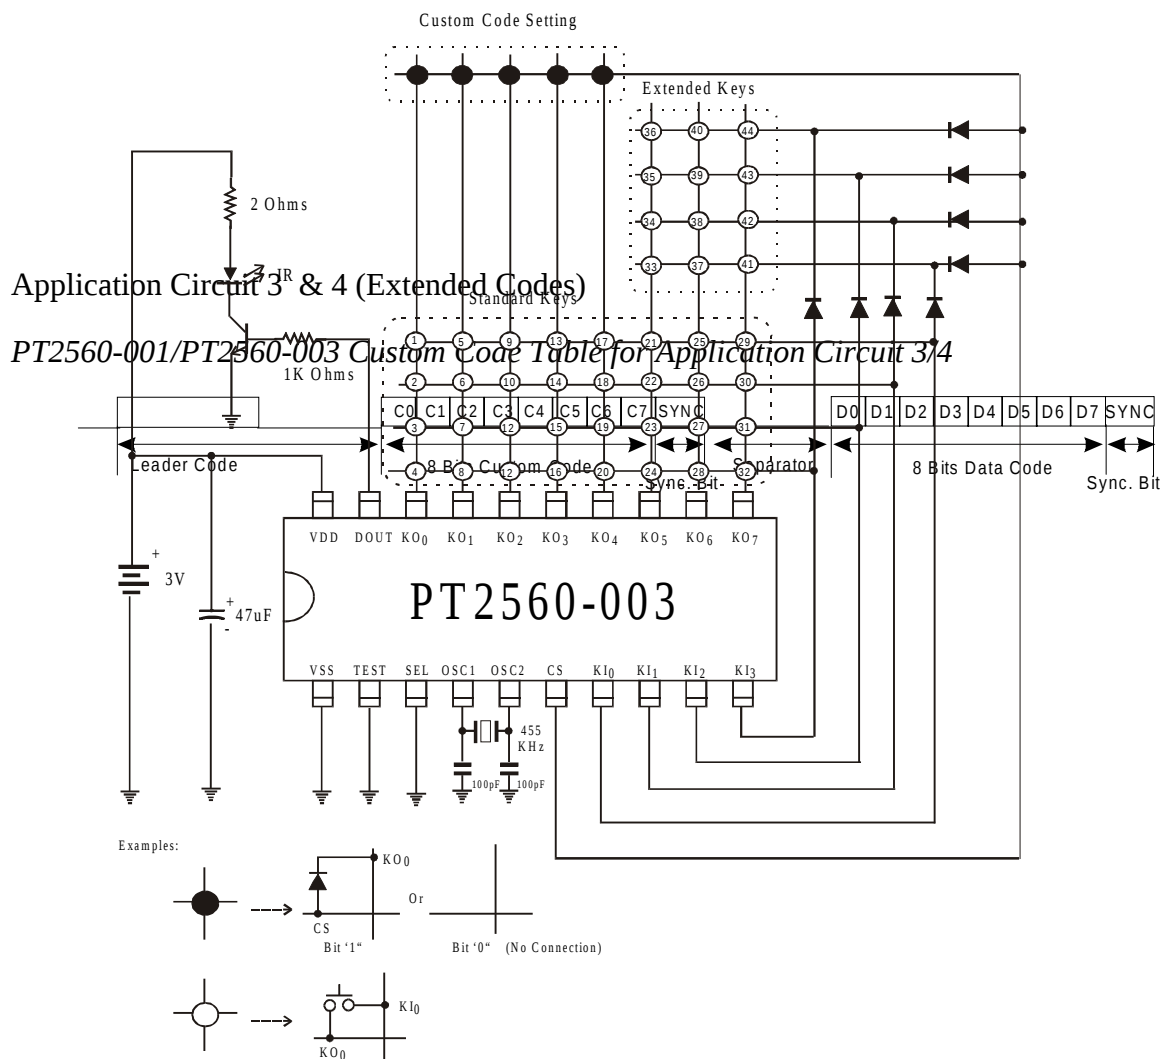



Infrared Remote Control Transmitter

PT2560

Input CS	KO Lines					Custom Codes							
	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*		*	*	1	1	0	1	1	0/1	0	0
*			*	*	*	0	0	1	1	1	0/1	0	0
*	*		*	*	*	1	0	1	1	1	0/1	0	0
*		*	*	*	*	0	1	1	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS is connected to the respective KO Line.

For PT2650-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003, Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 3/4

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

Input CS	KO Lines			Data Code		
	KO ₅	KO ₆	KO ₇	D5	D6	D7
				0	0	0
*	*			1	0	0
*		*		0	1	0
*	*	*		1	1	0
*			*	0	0	1
*	*		*	1	0	1
*		*	*	0	1	1
*	*	*	*	1	1	1

**Infrared Remote Control Transmitter****PT2560***PT2560-001/PT2560-003 Data Code Table for Application Circuit 3/4 (Extended Keys)*

No.	Input	KI Lines				KO Lines			Data Code							
	CS	KI ₀	KI ₁	KI ₂	KI ₃	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4	D5	D6	D7
33	*	*				*			0	0	1	0	1	1	0	0
34	*		*			*			1	0	1	0	1	1	0	0
35	*			*		*			0	1	1	0	1	1	0	0
36	*				*	*			1	1	1	0	1	1	0	0
37	*	*					*		0	0	0	1	1	0	1	0
38	*		*				*		1	0	0	1	1	0	1	0
39	*			*			*		0	1	0	1	1	0	1	0
40	*				*		*		1	1	0	1	1	0	1	0
41	*	*						*	0	0	1	1	1	0	0	1
42	*		*					*	1	0	1	1	1	0	0	1
43	*			*				*	0	1	1	1	1	0	0	1
44	*				*			*	1	1	1	1	1	0	0	1




Infrared Remote Control Transmitter

PT2560

Application Circuit 6

(Double Key Operation)

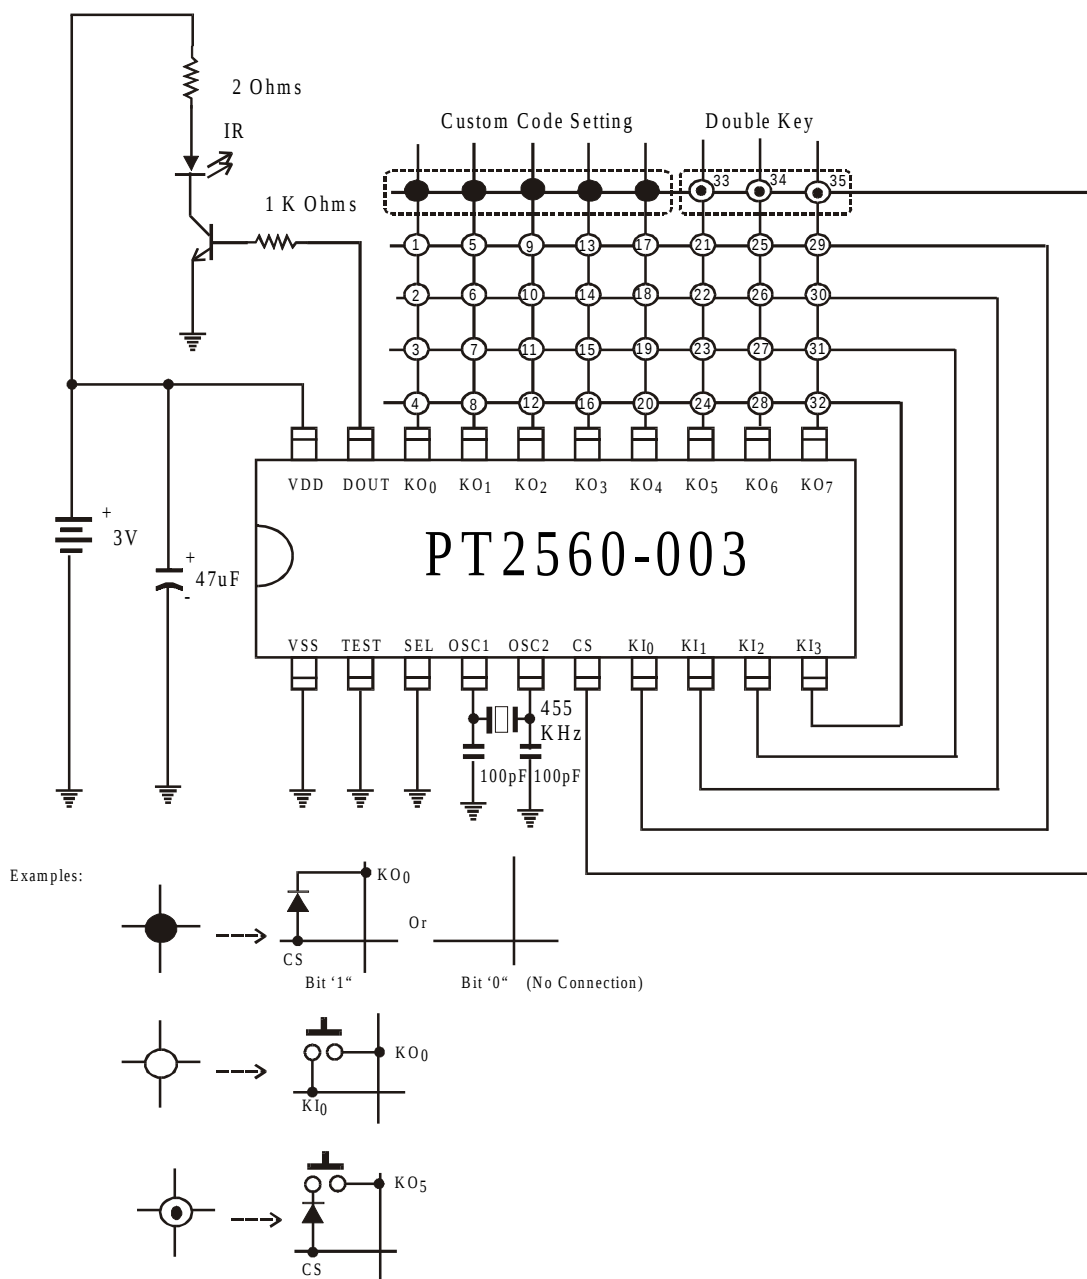


Note: Please take note that if you are replacing M50560 with PT2560, you do not need to connect an external capacitor to PT2560's Pin No. 3 (SEL PIN). PT2560 SEL Pin must be connected to the Ground.



Infrared Remote Control Transmitter

PT2560

 Application Circuit 5 & 6 (Double Key Operation)



PT2560-001/PT2560-003 Custom Code Table for Application Circuit 5/6

Input CS	KO Lines					Custom Codes							
	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	C0	C1	C2	C3	C4	C5	C6	C7
						0	0	0	0	0	0/1	0	0
*	*					1	0	0	0	0	0/1	0	0
*		*				0	1	0	0	0	0/1	0	0
*	*	*				1	1	0	0	0	0/1	0	0
*			*			0	0	1	0	0	0/1	0	0
*	*		*			1	0	1	0	0	0/1	0	0
*		*	*			0	1	1	0	0	0/1	0	0
*	*	*	*			1	1	1	0	0	0/1	0	0
*				*		0	0	0	1	0	0/1	0	0
*	*			*		1	0	0	1	0	0/1	0	0
*		*		*		0	1	0	1	0	0/1	0	0
*	*	*		*		1	1	0	1	0	0/1	0	0
*			*	*		0	0	1	1	0	0/1	0	0
*	*		*	*		1	0	1	1	0	0/1	0	0
*		*	*	*		0	1	1	1	0	0/1	0	0
*	*	*	*	*		1	1	1	1	0	0/1	0	0
*					*	0	0	0	0	1	0/1	0	0
*	*				*	1	0	0	0	1	0/1	0	0
*		*			*	0	1	0	0	1	0/1	0	0
*	*	*			*	1	1	0	0	1	0/1	0	0
*			*		*	0	0	1	0	1	0/1	0	0
*	*		*		*	1	0	1	0	1	0/1	0	0
*		*	*		*	0	1	1	0	1	0/1	0	0
*	*	*	*		*	1	1	1	0	1	0/1	0	0
*				*	*	0	0	0	1	1	0/1	0	0
*	*			*	*	1	0	0	1	1	0/1	0	0
*		*		*	*	0	1	0	1	1	0/1	0	0
*	*	*		*	*	1	1	0	1	1	0/1	0	0
*			*	*	*	0	0	1	1	1	0/1	0	0
*	*		*	*	*	1	0	1	1	1	0/1	0	0
*		*	*	*	*	0	1	1	1	1	0/1	0	0
*	*	*	*	*	*	1	1	1	1	1	0/1	0	0

Note: * = CS is connected to the respective KO Line.

For PT2560-001, Custom Code Bit 5 (C5) = "0".

For PT2560-003, Custom Code Bit 5 (C5) = "1".



Infrared Remote Control Transmitter

PT2560

PT2560-001/PT2560-003 Data Code Table for Application Circuit 5/6

No.	KI Lines				KO Lines								Data Code				
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4
1	*				*								0	0	0	0	0
2		*			*								1	0	0	0	0
3			*		*								0	1	0	0	0
4				*	*								1	1	0	0	0
5	*					*							0	0	1	0	0
6		*				*							1	0	1	0	0
7			*			*							0	1	1	0	0
8				*		*							1	1	1	0	0
9	*						*						0	0	0	1	0
10		*					*						1	0	0	1	0
11			*				*						0	1	0	1	0
12				*			*						1	1	0	1	0
13	*							*					0	0	1	1	0
14		*						*					1	0	1	1	0
15			*					*					0	1	1	1	0
16				*				*					1	1	1	1	0
17	*								*				0	0	0	0	1
18		*							*				1	0	0	0	1
19			*						*				0	1	0	0	1
20				*					*				1	1	0	0	1
21	*									*			0	0	1	0	1
22		*								*			1	0	1	0	1
23			*							*			0	1	1	0	1
24				*						*			1	1	1	0	1
25	*										*		0	0	0	1	1
26		*									*		1	0	0	1	1
27			*								*		0	1	0	1	1
28				*							*		1	1	0	1	1
29	*											*	0	0	1	1	1
30		*										*	1	0	1	1	1
31			*									*	0	1	1	1	1
32				*								*	1	1	1	1	1

PT2560-001/PT2560-003 Data Code Table for Double Key Operation

Double Keys Key Nos.	Input CS	KO Lines			Data Code		
		KO ₅	KO ₆	KO ₇	D5	D6	D7
					0	0	0
33	*	*			1	0	0
34	*		*		0	1	0
33+34	*	*	*		1	1	0
35	*			*	0	0	1
33+35	*	*		*	1	0	1
34+35	*		*	*	0	1	1
33+34+35	*	*	*	*	1	1	1



Infrared Remote Control Transmitter

PT2560

Example 1: When the Double Key Operation is NOT used and the Key No. 2 is pressed, then the Data Code will be:

D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>0</u>	<u>0</u>	<u>0</u>

Take note that since the Double Key Operation is NOT used, the value of data bits D5, D6, and D7 is "0".

Example 2: When only 1 Double Key (Key Nos. 33 + Key No. 2) is used, then the Data Code is

D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>1</u>	<u>0</u>	<u>0</u>

Example 3: When 2 Double Keys (Key Nos. [33 + 35] + Key No. 2) are used, the Data Code is

D0	D1	D2	D3	D4	D5	D6	D7
1	0	0	0	0	<u>1</u>	<u>0</u>	<u>1</u>




Infrared Remote Control Transmitter

PT2560

Application Circuit 7

(No Leader Code and Custom Code)

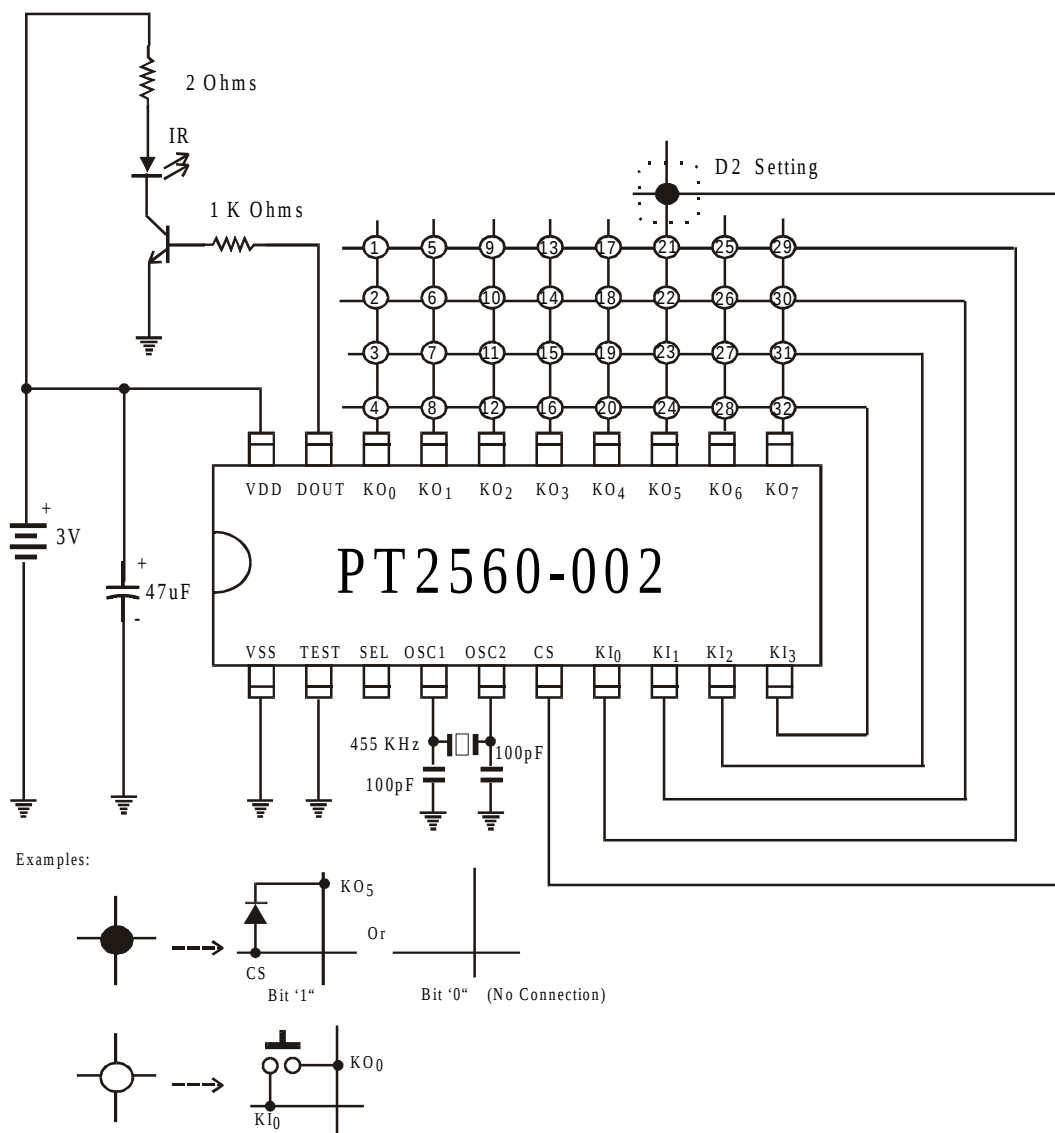

Note: D2 is the Extended Code setting. When KO5 is connected to a DIODE, the Data Bit D5 is "1". Conversely, if the KO5 is not connected to a DIODE, then the Data Bit, D5 is "0". PT2560 SEL Pin is "floating".



Infrared Remote Control Transmitter

PT2560

PT2560-002 Data Code Table for Application Circuit 7 (MODE B)

No.	KI Lines				KO Lines								Data Code					
	KI ₀	KI ₁	KI ₂	KI ₃	KO ₀	KO ₁	KO ₂	KO ₃	KO ₄	KO ₅	KO ₆	KO ₇	D0	D1	D2	D3	D4	D5
1	*				*								0	0	0	0	0	0/1
2		*			*								1	0	0	0	0	0/1
3			*		*								0	1	0	0	0	0/1
4				*	*								1	1	0	0	0	0/1
5	*					*							0	0	1	0	0	0/1
6		*				*							1	0	1	0	0	0/1
7			*			*							0	1	1	0	0	0/1
8				*		*							1	1	1	0	0	0/1
9	*						*						0	0	0	1	0	0/1
10		*					*						1	0	0	1	0	0/1
11			*				*						0	1	0	1	0	0/1
12				*			*						1	1	0	1	0	0/1
13	*							*					0	0	1	1	0	0/1
14		*						*					1	0	1	1	0	0/1
15			*					*					0	1	1	1	0	0/1
16				*				*					1	1	1	1	0	0/1
17	*								*				0	0	0	0	1	0/1
18		*							*				1	0	0	0	1	0/1
19			*						*				0	1	0	0	1	0/1
20				*					*				1	1	0	0	1	0/1
21	*									*			0	0	1	0	1	0/1
22		*								*			1	0	1	0	1	0/1
23			*							*			0	1	1	0	1	0/1
24				*						*			1	1	1	0	1	0/1
25	*										*		0	0	0	1	1	0/1
26		*									*		1	0	0	1	1	0/1
27			*								*		0	1	0	1	1	0/1
28				*							*		1	1	0	1	1	0/1
29	*											*	0	0	1	1	1	0/1
30		*										*	1	0	1	1	1	0/1
31			*									*	0	1	1	1	1	0/1
32				*								*	1	1	1	1	1	0/1



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.