


Photoelectrics Amplifier, μ -Processor Controlled Type S1430 UAP, 3 Inputs/3 Transistor Outputs

CARLO GAVAZZI

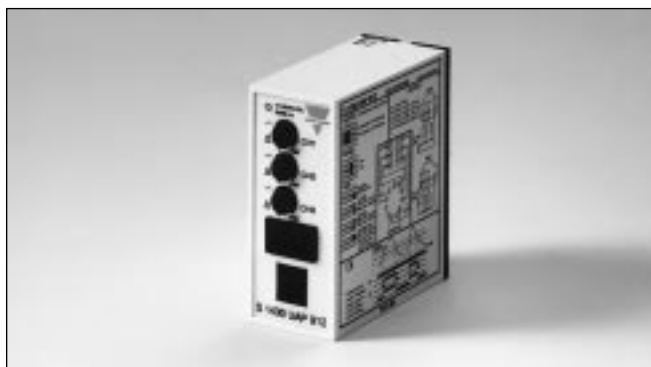

- μ -Processor controlled
- Amplifier unit for 3 sets of photoelectrics
- 3 independent outputs
- NPN/PNP both NO or NC selectable
- Self-diagnostic functions
- Alignment failure indication
- Multivoltage 12 to 30 VAC/DC
- Modulated and synchronized light
- Adjustable sensitivity for each channel
- LED indications: supply, outputs, signal quality
- 11-pin plug-in housing
- For 115 or 230 VAC use power supplies from SS120-series

Product Description

μ -Processor controlled amplifier for 3 sets of photoelectric sensors, type MOFTR, MKFTR, MIFTR or MHFTR. Utilising an 11-pin circular plug for easy connection, outputs freely selectable for NPN/PNP or NO/NC. Self-

diagnostics for system test. Protected against short-circuits, reverse wiring or cross talk from adjacent photoelectrics. Multi-voltage power supply. Sensitivity is individually adjustable for each set of photoelectrics.

Ordering Key

S14 30 UAP 912

Type _____
Special function _____
Output type _____
Power supply _____

Type Selection

Plug type

Ordering no.
Supply: 12 - 30 VAC/DC

Circular, 11 pins

S 1430 UAP 912

Specifications

Rated operational voltage (U_B) pins 2 & 10	DC AC	10.8 to 33 VDC 10.8 to 33 VAC, 45 to 65 Hz
Rated operational power AC supply DC supply		4 VA 3 W
Power ON delay (t_v)		< 300 ms
Output function		NPN and PNP switching Make and break function DIP-Switch selectable
Output current Continuous (I_e) Short-time (I)		100 mA per output 100 mA max.
Min. load current (I_m)		0.5 mA
OFF-state current (I_r)		Max. 100 μ A
Voltage drop (U_d)		$\leq$ 3.5 VDC
Protection, outputs		Reverse polarity, short-circuit, transients
Supply to photoelectric switch Emitter		Tx1: Pin 1 Tx2: Pin 9 Tx3: Pin 6 Shield: Pin 11 (common)
Supply voltage (open loop) Current Output resistance		7 V square wave $\leq$ 300 mA short-circuit protected 10 Ω

Supply to photoelectric switch (cont.) Receiver	Rx1: Pin 4 Rx2: Pin 7 Rx3: Pin 8 Shield: Pin 5 (common)
Supply voltage (open loop) Short-circuit current Input resistance	5 VDC 10 mA 470 Ω
Sensitivity (% of S_n)	• 2 ranges, DIP-Switch selectable - low sensitivity (25%) - high sensitivity (100%) • Sensitivity adjustment with 270°: Turn knob on CH 1, 2, 3 • Maximum range indicated on photoelectric switch data sheet in high sensitivity range only • Operation within low sensitivity range, increases ambient light and crosstalk immunity
Note:	
Operating frequency (f) Light/dark ratio 1:1	16 Hz



Specifications (cont.)

Response time	
OFF-ON (t _{ON})	20 ms
ON-OFF (t _{OFF})	20 ms
Indication	
Supply ON	LED, green
Output ON	LED, yellow
Signal quality	LED, red
Environment	
Overvoltage category	III (IEC 60664)
Degree of protection	IP 20 (IEC 60529, 60947-1)
Pollution degree	3 (IEC 60664/60664A, 60947-1)
Temperature	
Operating	-20° to +50°C (-4° to +122°F)
Storage	-50° to +85°C (-58° to 185°F)
Weight	150 g
Approvals	CSA
CE-marking	Yes

Truth Table

	Make switching			Break switching		
Object present	Yes	No	No	Yes	No	No
Dirt on lenses, misaligned or sensitivity too low	--	No	Yes ¹⁾	--	No	Yes ¹⁾
Output LED yellow	OFF	ON	ON	OFF	ON	ON
Level LED red	OFF	OFF	ON or flashing	OFF	OFF	ON or flashing
Output NPN/PNP	OFF	ON	ON	ON	OFF	OFF

¹⁾ Under normal operating conditions, the red level indication LED has to be OFF. The level indication LED will turn on shortly each time an object enters or exits the sensing zone, even if the photoelectric switch is correctly installed and adjusted.

Procedure for Test Functions (Dip-Switch Selection)

Transmitter test (switch 5 in the up position)
When switch 5 is placed in the up position all yellow and red LED's on the front of the unit will flash simultaneously. Once the test is completed (approx. 3 scans) and a wiring fault is detected, such as reverse polarity or short-circuit, the transmitter that has the fault condition will be indicated by the red LED being continuously ON. If a fault condition is not existing then only the yellow LED will be ON. If a fault exists, correct the fault condition and then repeat the test, this will ensure proper wiring has been done. Always reset **switch 5** for normal operation of system when testing completed.


Receiver test (switch 6 in the up position)
When switch 6 is placed in the up position all yellow and red LED's on the front of the unit will flash simultaneously. Once the test is completed (approx. 3 scans) and a wiring fault is detected, such as reverse polarity or short-circuit, the receiver that has the fault condition will be indicated by the red LED being continuously ON. If a fault condition is not existing then only the yellow LED will be ON. If a fault exists, correct the fault condition and then repeat the test, this will ensure proper wiring has been done. Always reset **switch 6** for normal operation of system when testing completed.

Function test (switch 5 and 6 in the up position)
When switch 5 and 6 are both placed in the up position (simultaneously) the yellow and red LED's on the front of the housing will begin to flash simultaneously and then the LED's

will cycle from channel 1 to channel 2 and then to channel 3. Once the complete system scan is done the indication of the system condition will be displayed (see below). System test will continue until switch 5 and 6 are reset.

LED Indication		
Yellow LED ON Red LED OFF	}	System Test OK
Yellow LED ON Red LED ON	}	Tx's and Rx's mismatched, e.g. Rx3 seeing Tx1
Yellow LED OFF Red LED ON	}	Alignment error or beam obstructed by object

Operation Diagram

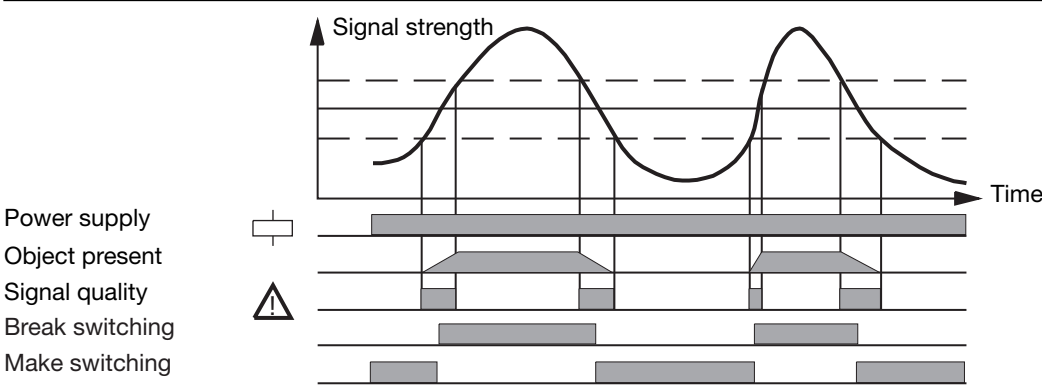

Dimensions

DIP-Switch (located behind cover):

SW 1 2 3 4 5 6

1: PNP/NPN CH 1 output
 2: PNP/NPN CH 2 output
 3: PNP/NPN CH 3 output
 4: Low sensitivity (25%) / high sensitivity (100%)
 5: Test button, transmitters are transmitting, no short, wired correctly
 6: Test button, receivers are receiving, no short, wired correctly
 5+6 together: System test (transmitter and receiver)

sw 1, 2, 3:	sw 4:
☐ PNP make/NPN break	☐ Range 25%
☐ NPN make/PPN break	☐ Range 100%, normal operation
sw 5:	sw 6:
☐ Transmitter test	☐ Receiver test
☐ Normal operation	☐ Normal operation
sw 5+6:	
☐ System test	
☐ Normal operation	

Wiring Diagrams

ON sockets

1: Transmitter 1
 2: Supply (+ VDC)
 3: No connection
 4: Receiver 1
 5: GND (Receivers)
 6: Transmitter 3
 7: Receiver 2
 8: Receiver 3
 9: Transmitter 2
 10: Supply (- VDC)
 11: GND (Transmitters)

Output

A: + (10-40 VDC)
 B: Output 1 (max. 100 mA)
 C: Output 2 (max. 100 mA)
 D: Output 3 (max. 100 mA)
 E: For handheld tester
 F: - DC

Wire colour coding

white
 black
 red
 green
 yellow
 blue

PNP

NPN


Accessories

- | | |
|--------------------------------|--------------------------|
| - 11 pole circular socket | S111, S111A, S411, ZPD11 |
| - Socket cover for S111 | BB1 |
| - Socket cover for S411 | BB4 |
| - Holding down spring | HF |
| - Mounting rack | SM13 |
| - Front panel mounting bezel | FRS2 |
| - Connection cable (2 plugs) | |
| 2 x 6/6 modular plugs | 2.0 m, 6 wires two plugs |
| - Power supply for 115/230 VAC | SS120-series |
| - DIN-rail interface | 6IODC |

Delivery Contents

- | | |
|---------------------------|--------------------------|
| • Output connection cable | 1 m, 6 wires one plug |
| • Output connection cable | 0.2 m, 6 wires two plugs |
| • Amplifier | S 1430 UAP 912 |
| • DIN-rail interface | 6IODC |
| • Screw driver | |
| • Packaging: | Cardboard box |

Interface

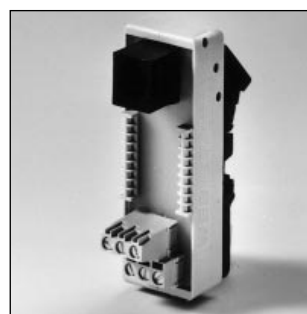

6IODC
 DIN-rail interface
 (DIN EN 50 035, EN 50 022)
 output from plug to screw terminals



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.