

Getting Started Guide



ZigBee[®] RF Module Development Kit

This guide walks through how the XBee[®] & XBee-PRO[®] ZB modules are configured and how they interact with one another. The guide includes information on how to:

- Download and install software tools
- Configure the modules
- Perform a range test
- Explore advanced configurations
- Manage your RF network.

Software Setup

Step 1: Download and Install X-CTU Software

X-CTU is a stand-alone tool for configuring XBee modules. Download the installation file [here](#).

1. Click **Save** or **Save File**.
2. Browse to where the file is stored.
3. Double-click on the installer file and follow the X-CTU Setup Wizard.
4. When asked if you would like to check Digi's website for firmware updates, click **Yes**.
5. After the firmware updates are complete, click **Close**.
6. Start X-CTU by double-clicking on the X-CTU icon placed on your desktop or by selecting:
Start > Programs > Digi > X-CTU

The X-CTU software is now available for use.

Step 2: Download and Install USB Drivers (Hardware USB Bus & Virtual COM Port Drivers)

The USB interface board is a "plug-and-play" device that should be detected by the PC automatically. To interface between the modem and a PC, two drivers must be installed: a USB driver and a virtual COM port driver that makes the USB port look and perform like a physical COM port. After the modem is detected, a wizard for installing the USB driver is launched.

To install the two USB drivers:

1. Download the drivers [here](#). Save the file on the Desktop or other designated area. Extract the files for future use.


2. Plug in the RPSMA XBee-PRO and USB interface board assembly put together from the Quick Start instructions found in the kit. The Found New Hardware Wizard dialog box will load.
3. Select **Install from a specific list or location (Advanced)**; then click **Next**.
4. Select **Include this location in the search**. Browse to where you saved the extracted **WINDOWS drivers** folder.
5. Click **Next**. If a hardware installation Windows alert box pops up click **Continue Anyway**.
6. Click **Finish**.

You may be prompted to install another driver, the virtual COM port driver. Repeat steps 5 and 6 to install this driver.

Configure RF Modules


Setting Parameters

1. Launch the X-CTU Software: **Start > Programs > Digi > X-CTU**.
2. In X-CTU, under the **PC Settings** tab, select the PC serial COM port from the displayed list. The USB port will be labeled as a Digi PKG-U Serial Port Adapter and is assigned a number based on your PC's settings.

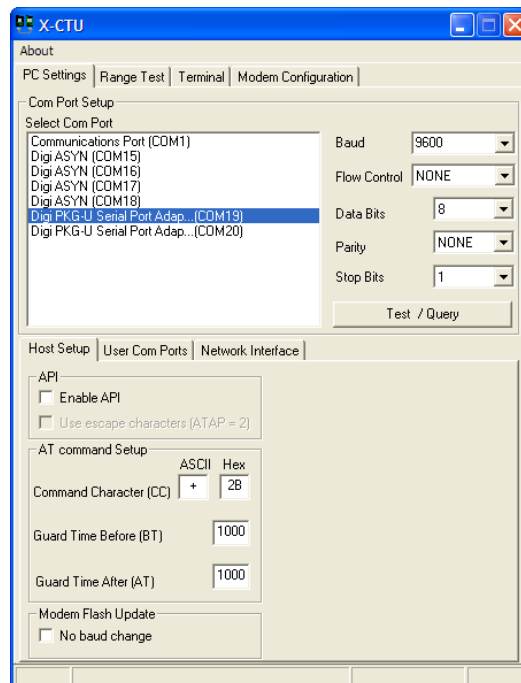

3. Verify that the baud rate and data settings match the internal settings of the radios. The default settings for the radios are Baud Rate: 9600, Flow Control: HARDWARE, Data Bits: 8, Parity: NONE, and Stop Bits: 1.

4. In the X-CTU **Modem Configuration** tab, click **Read** to display a list of the RF module configuration parameters. Parameters shown in green are still set to default. Parameters in blue have been changed. Parameters in black are read-only with the exception of the Encryption Key (KY), which is write-only.
5. Select any of the module parameters you wish to change (e.g. Destination Address, Encryption, etc.) and type in or select the desired value. In this case, in order to successfully run a range test you will need to set the ZigBee Cluster ID (CI) value to 12 which can be found in the ZigBee Addressing section.

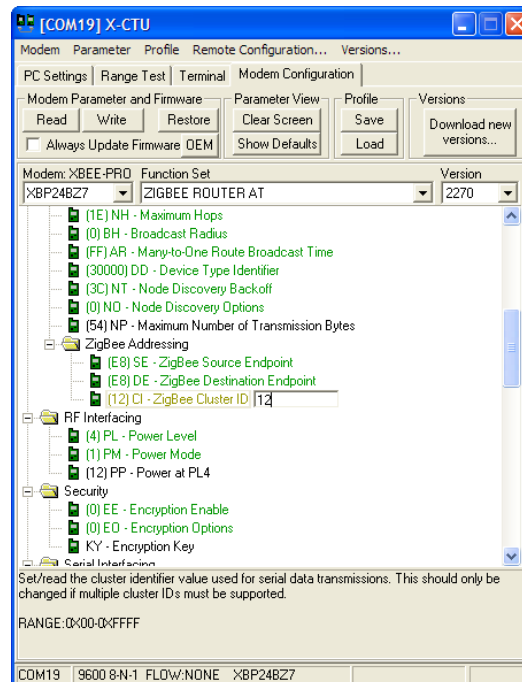


6. Then click **Write** to save the changes to non-volatile memory. If you want to direct a message to a particular node, you can set the Destination Address Low/High (DL/DH) to the Source Address Low/High (SL/SH) of that node. This is referred to as unicast addressing. By default all routers are addressed to the coordinator so for this example, the addressing does not need to be changed.

This is one of several configuration methods. Refer to the product manual for more information. If at any point you wish to restore the module back to defaults, click **Restore**.


Run a Range Test

Run Range Test

1. Assemble and power on the remote unit as shown in the Quick Start instructions. The module should be the wire version whose part number ends in -002[J]. This is the coordinator.

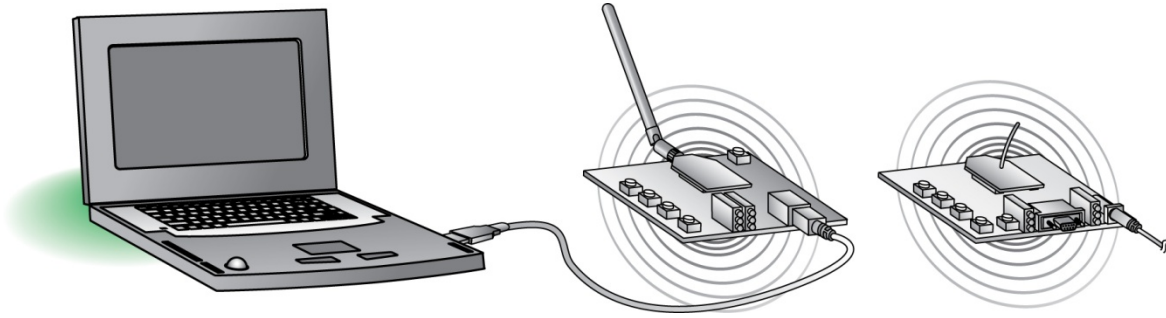


2. In X-CTU, select the **Range Test** tab.
3. (Optional) Check the **RSSI** checkbox to enable the Received Signal Strength Indicator. The RSSI value indicates the signal strength of the last packet that the radio received.
4. Click **Start** to begin the range test.

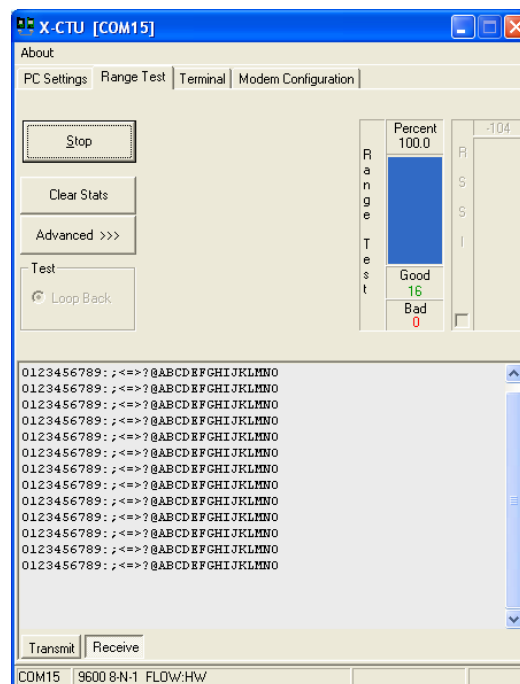

5. Monitor the link quality by reading the **Percent** section on the **Range Test** tab. This section displays the running percentage of good packets sent to the receiving radio and looped back to the base.
6. Click **Stop** to end the range test.

Extend the Network

1. Restart the **Range Test**.
2. Move the remote further away from the base until the signal is lost.
3. Assemble and power on another module and interface board.
4. Place this radio halfway between the remote and the base as shown below.

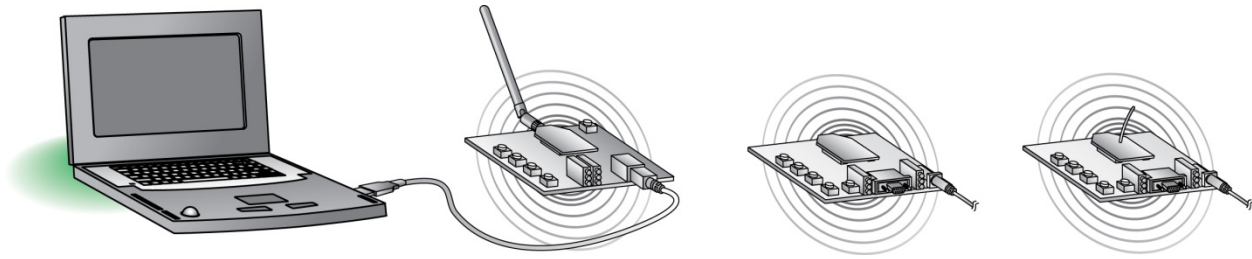

The intermediate radio bridges the gap between the remote and the base and reestablishes communication. The network “self-heals” by redirecting communications as soon as a pathway becomes available.

Note: Clicking the **Advanced >>>** button in X-CTU under the Range Test tab displays several more options. If you run the range test with several mesh radios acting as intermediaries, you will want to increase the **Data receive timeout** value to compensate for the additional latency.


Explore Advanced Configurations

Each XBee has the option for asynchronous sleep except the coordinator. Using X-CTU, you can set up a simple example illustrating the XBee’s sleeping capabilities.

Change Firmware

First you will need to configure a radio for sleep. Because your remote radios are not directly connected to a PC, the easiest way to configure the modules is using the ‘over-the-air’ Remote Configuration feature in X-CTU. In order to use this feature, the XBee initiating remote commands must be configured for API mode. Change the firmware on the locally connected radio to **XBee ZB Router API** using X-CTU.

1. Click on the **Modem Configuration** tab.
2. Select the modem type **XBP24BZ7**.

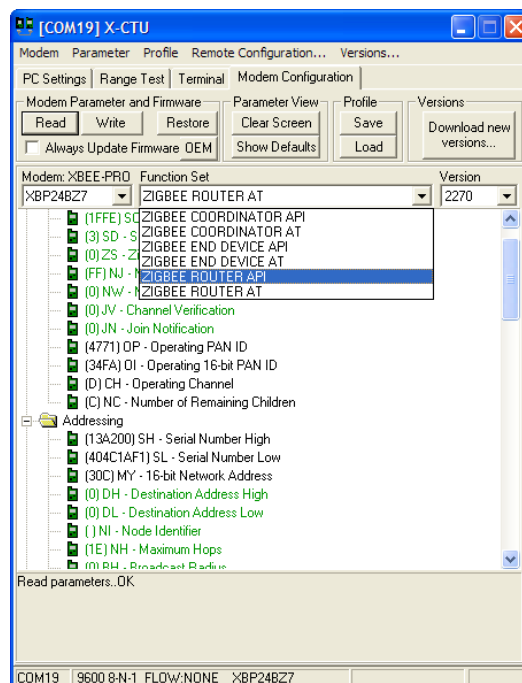


3. Choose the Function Set, **ZigBee Router API**. The latest firmware version loaded into X-CTU will populate the Version box.
4. Click the **Show Defaults** button. This helps to avoid out of range errors since some parameters have different limits based on the firmware type.
5. Check the **Always update firmware** box.
6. Click **Write**.

Configure Remote Modules for Sleep


From here you can configure units locally or remotely. For demonstration purposes, follow the steps to configure your module remotely for sleep.

1. Record the 16-digit serial number on the fourth radio (found on the white label on the XBee and begins with “0013A200”...) and plug in the remaining radio/USB interface board.
2. Go to the **Modem Configuration** tab and click the **Remote Configuration** option at the top of the window.
3. Click **Open Com Port** and **Discover** from the menu bar at the top of the Network window. A list of nodes in the network will populate the screen. By selecting a particular node from the list, you can interact with it as if it were connected to the PC directly.

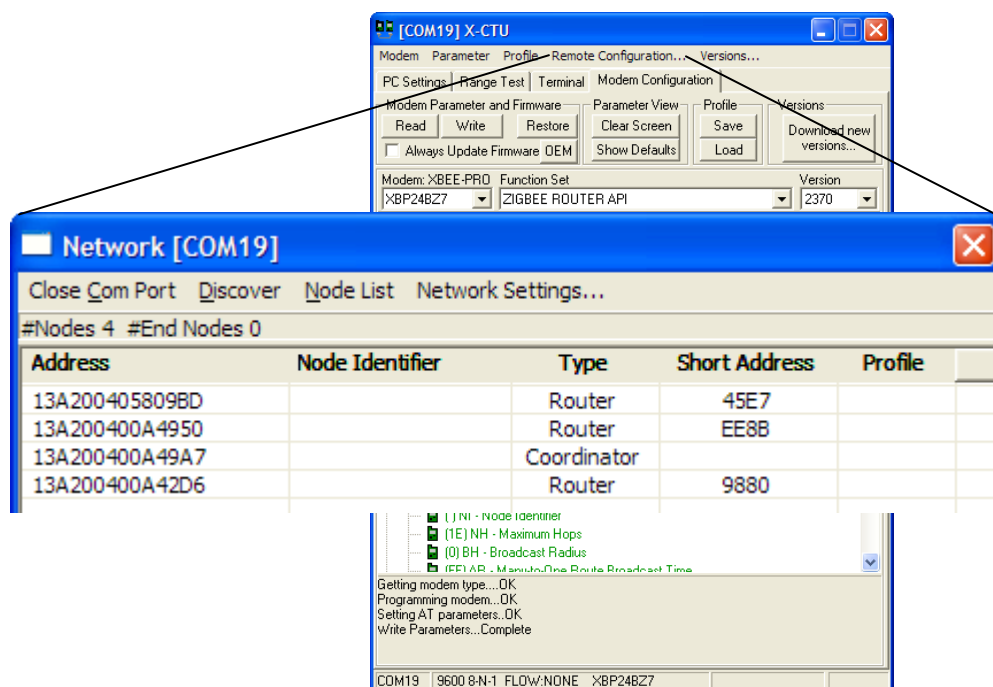

4. Select the new router from the list of discovered nodes by matching the serial number you recorded earlier.

5. In the main X-CTU window, click **Read**. A blue progress bar will display in the Network window as the local device requests information from the remote unit.

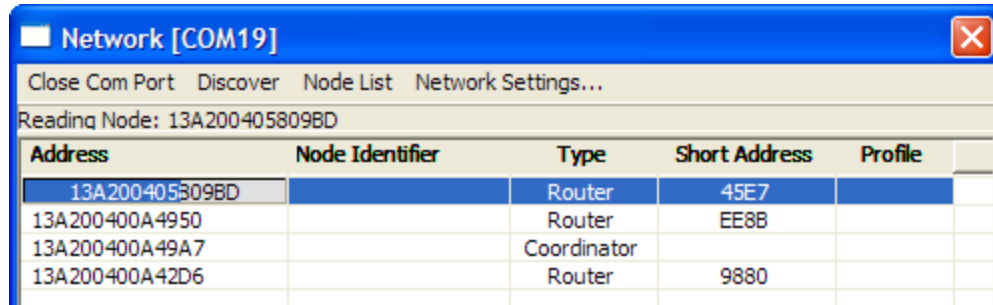


Network [COM19]

Close Com Port Discover Node List Network Settings...

Reading Node: 13A200405809BD

Address	Node Identifier	Type	Short Address	Profile
13A200405809BD		Router	45E7	
13A200400A4950		Router	EE8B	
13A200400A49A7		Coordinator		
13A200400A42D6		Router	9880	

6. Scroll through the list of displayed parameters and find the Sleep Modes section.
7. Click on **SM-Sleep Mode** and select **4-Cyclic Sleep** from the drop-down box.

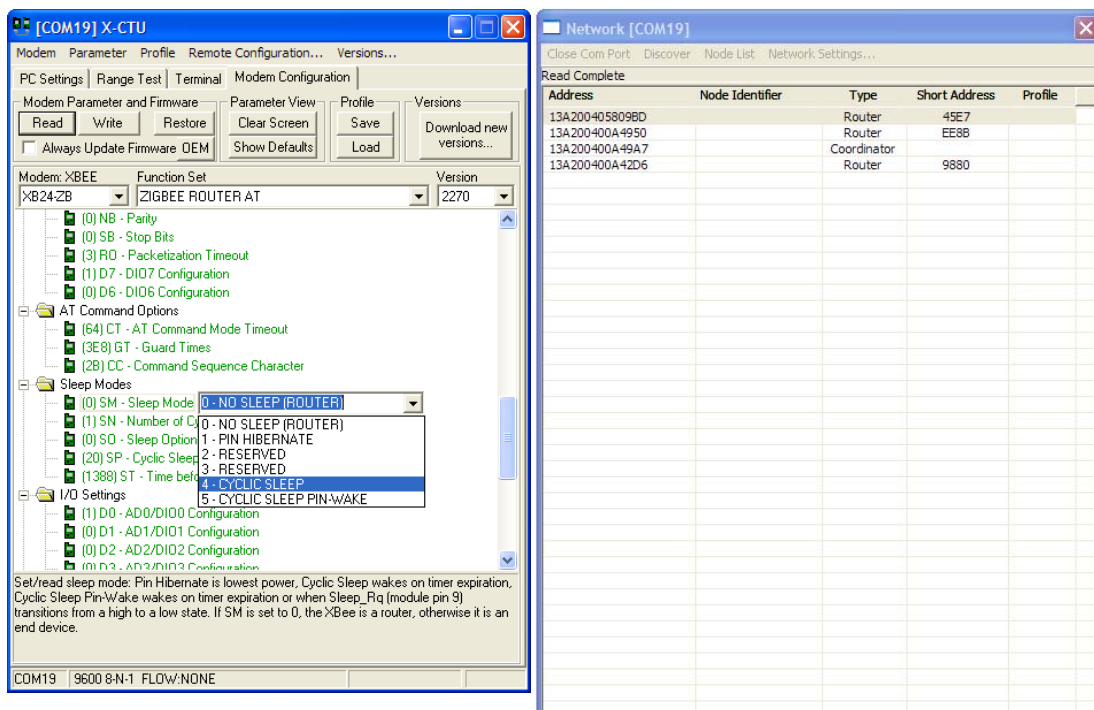

[COM19] X-CTU

Modem Parameter Profile Remote Configuration... Versions...

PC Settings | Range Test | Terminal | Modem Configuration

Modem Parameter and Firmware | Parameter View | Profile | Versions

Read Write Restore Clear Screen Save Download new versions...

Always Update Firmware OEM Show Defaults Load

Modem: XBEE Function Set: ZIGBEE ROUTER AT Version: 2270

(0) NB - Parity
(0) SB - Stop Bits
(3) RD - Packetization Timeout
(1) D7 - DIO7 Configuration
(0) D6 - DIO6 Configuration

AT Command Options

(64) CT - AT Command Mode Timeout
(3E8) GT - Guard Times
(2B) CC - Command Sequence Character

Sleep Modes

(0) SM - Sleep Mode: 0 - NO SLEEP (ROUTER)
(1) SN - Number of Cycles: 0 - NO SLEEP (ROUTER)
(0) SD - Sleep Option: 1 - PIN HIBERNATE
(20) SP - Cyclic Sleep: 2 - RESERVED
(1388) ST - Time before Sleep: 3 - RESERVED
4 - CYCLIC SLEEP
5 - CYCLIC SLEEP PIN-WAKE

I/O Settings

(1) D0 - AD0/DIO0 Configuration
(0) D1 - AD1/DIO1 Configuration
(0) D2 - AD2/DIO2 Configuration
(0) D3 - AD3/DIO3 Configuration

Set/read sleep mode: Pin Hibernate is lowest power. Cyclic Sleep wakes on timer expiration. Cyclic Sleep Pin-Wake wakes on timer expiration or when Sleep_Rq (module pin 9) transitions from a high to a low state. If SM is set to 0, the XBee is a router, otherwise it is an end device.

COM19 9600 8-N-1 FLOW:NONE

Network [COM19]

Close Com Port Discover Node List Network Settings...

Read Complete

Address	Node Identifier	Type	Short Address	Profile
13A200405809BD		Router	45E7	
13A200400A4950		Router	EE8B	
13A200400A49A7		Coordinator		
13A200400A42D6		Router	9880	


8. Uncheck the **Always update firmware** box. Click **Write**. Again a progress bar will be displayed in the Network window as the new parameter is written into memory.
9. Using the other default sleep settings the remote radio will sleep for 320 ms at a time. To illustrate, the Associate LED should be flashing approximately 3 times per second as the radio alternately sleeps and checks for input.

Note: You can configure the modules plugged into the RS-232 interface boards remotely or you can use the RS-232 cable provided in the kit to configure them locally.

Next Steps

Manage RF Network: Gateways

Now that you have an RF network running, it is important to know how to manage the network. X-CTU software and the various RF module features provide good tools for on-site XBee configuration, firmware upgrades, and network diagnostics. However, in many cases it is necessary for the end user to be able to perform these functions from a remote location via the Internet. Digi has solved this problem by creating RF-to-Internet gateways to allow monitoring and control of your RF network through the Internet.

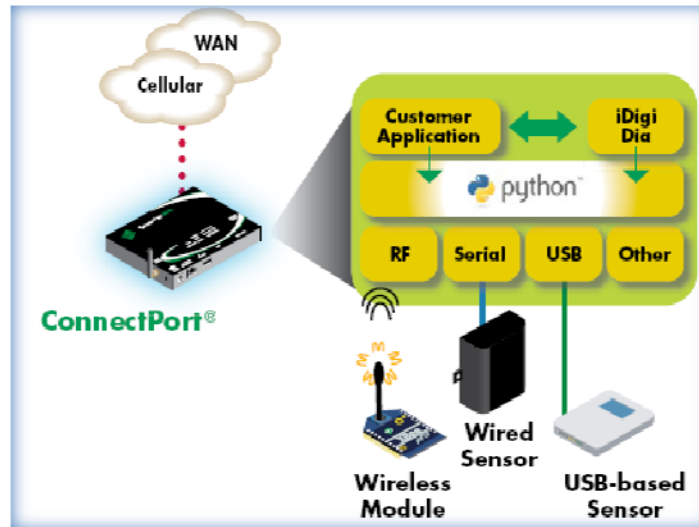

In the diagram above, a Digi ConnectPort gateway is used to connect an RF network (plus other peripherals) to the Internet via either the Ethernet port or a cellular WAN connection. Note that gateways are programmable and can also be used to run local monitoring/control of the RF network, with or without Internet connectivity. See www.digi.com/products/wirelessdropinnetworking/gateways for an overview of Digi gateways.

Cloud Connectivity

On a larger scale, the next task is to manage several gateways with multiple RF networks. Challenges with managing gateways include knowledge of IP addresses, access through firewalls, security and reliability of servers, scalability as the number of gateways grows, and ongoing maintenance for each of these functions. iDigi™ Manager Pro is Digi's device management solution.

iDigi Manager Pro is a subscription-based solution that offers robust network management capability and on-demand scalability hosted on a high-availability, commercial-class cloud platform. iDigi is monitored by Digi's operations organization continuously and provides both Tier 1 and Tier 2 support.



Home	XBee Networks				
Welcome	XBee Networks 00:13:a2:00:40:34:02:30!				
Documentation					
Management	Search:				
Devices	Network Gateway	Node Address	Node ID	Module Type	Product Type
XBee Networks	00409DFF-FF28789A	00:13:a2:00:40:34:02:30!	...	XBee ZB	X8 Gateway
Storage	00409DFF-FF318347	00:13:a2:00:40:0a:29:2a!		XBee ZB	X2 Gateway
Web Services Console	00409DFF-FF3238A5	00:13:a2:00:40:0a:15:b7!	...	XBee ZB	X8 Gateway
Subscriptions	00409DFF-FF33875D	00:13:a2:00:40:0a:38:6a!	X8 Coordinator	XBee ZB	X8 Gateway
Summary		00:13:a2:00:40:0a:26:1f!	Upstairs	XBee ZB	Wall Router
Details		00:13:a2:00:40:48:59:bd!	Downstairs	XBee ZB	Smart Plug
Administration	00409DFF-FF33B89D	00:13:a2:00:40:0a:38:bf!	...	XBee ZNet 2.5	X8 Gateway
My Account	00409DFF-FF36DF43	00:13:a2:00:40:54:1d:fb!	...	XBee ZB	X4 Gateway
Messages	00409DFF-FF382CF3	00:13:a2:00:40:52:5f:7e!	X4_Gateway	XBee ZB	X4 Gateway
Operations		00:13:a2:00:40:34:0c:6d!	Smart_Plug_1	XBee ZB	Smart Plug

The image above shows the secure connection to your gateway or end device after logging on to your iDigi account. Learn more about managing your remote devices at www.idigi.com. Digi provides end-to-end products and services in order to make wireless M2M easy.

Contact Digi International

Toll-free phone U.S.A. & Canada: (866) 765-9885
Worldwide: (801) 765-9885
Live chat: www.digi.com
Online support: <http://www.digi.com/support/eservice/login.jsp>
Email: rf-experts@digi.com

PN (1P): 90002009_A



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.