


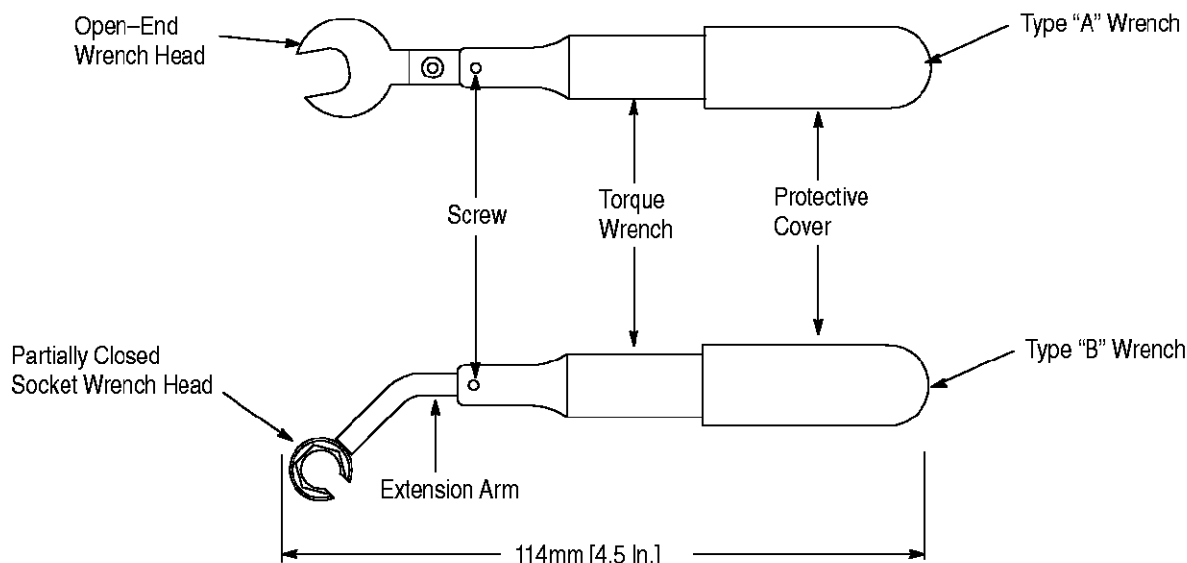

Tyco Electronics Part No.	Previous Part No.	Description	Wrench Size		Preset Torque
			(mm)	(Inches)	
1055258-1	2098-0275-54	For SMA Connectors, Type "A" Wrench	7.9	[5/16]	8 in.-lbs.
1055516-1	2098-5642-54	For SMA Connectors, Type "B" Wrench	7.9	[5/16]	8 in.-lbs.
1055850-1	2598-5235-54	For SMC Connectors, Type "A" Wrench	5.9	[15/64]	2.6 in.-lbs.
1055787-1	2598-5014-54	For SSMA (OSSM) Connectors, Type "A" Wrench	6.4	[1/4]	5 in.-lbs.
1055789-1	2598-5024-54	For SSMA (OSSM) Connectors, Type "A" Wrench	4.7	[3/16]	3 in.-lbs.
1055853-1	2098-5243-54	For SMB/SMC Connectors, Type "A" Wrench	5.6	[7/32]	8 in.-lbs.
1055267-1	2098-0299-54	Kit, Type "A" Wrench	6.4 and 7.9	[1/4] and [5/16]	8 in.-lbs.

Figure 1

1. INTRODUCTION

These mini-torque wrenches are used to properly install or disassemble the connectors listed in Figure 1.

Figure 1 also contains the Tyco Electronics part numbers for the wrenches, the previous part numbers for the wrenches, wrench description and size, and the preset torque for each wrench.

NOTE

Dimensions on this sheet are in metric units [with U.S. customary units in brackets], unless otherwise noted.

2. DESCRIPTION

Each mini-torque wrench contains a protective cover, a torque wrench, and a "fillister head" screw which permits the replacement/change of various wrench heads.

The Type "A" wrench is equipped with an open-end wrench head. The Type "B" wrench is equipped with a socket head and an extension arm. Refer to Figure 2 for the appropriate replacement part numbers.

The wrenches are designed to be used in the clockwise or counterclockwise direction.

Tyco Electronics Part Number	Description
1055265-1	7.9 [5/16] Open-End Wrench Head (Type A)
1055264-1	6.4 [1/4] Open-End Wrench Head (Type A)
1403926-1	5.9 [15/64] Open-End Wrench Head (Type A)
1406702-1	4.7 [3/16] Open-End Wrench Head (Type A)
1055784-1	7.9 [5/16] Socket Wrench Head (Type B)
1055786-1	Extension Arm (Type B)

Figure 2

3. OPERATION OF THE WRENCHES

NOTE

If a wrench has not been used recently, move the wrench head back and forth several times, listening for audible "clicks." Clicking the wrench head back and forth spreads lubricant throughout the internal mechanism to improve wrench performance.

Using the appropriate sized head (Figure 1), turn the wrench clockwise (or counterclockwise) until there is an audible "click." This "click" indicates that the proper torque has been achieved.

CAUTION

Do NOT overtighten the connector with the torque wrench. Over-tightening the wrench could result in inaccurate torque settings.

CAUTION

Do not re-use terminated connectors.

4. REPLACEMENT

Type "A" wrench heads are interchangeable. Remove the screw securing the wrench head to the mini-torque wrench. Remove the wrench head. Then replace the head with the appropriate head listed in Figure 2.

Refer to Figure 3.

Type "B" partially closed socket wrench heads are replaceable. Remove the screw securing the socket wrench and extension arm to the mini-torque wrench. Remove the socket wrench and extension arm. Break the press fit between the socket wrench and extension arm. Replace the components in the reverse order of removal. See Figure 2 for replacement parts.

Refer to Figure 3.

Order replacement parts through your Tyco Electronics representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (38-35)
TYCO ELECTRONICS CORPORATION
P.O. BOX 3608
HARRISBURG, PA 17105-3608

5. REVISION SUMMARY

New release per EC 0990-0434-02

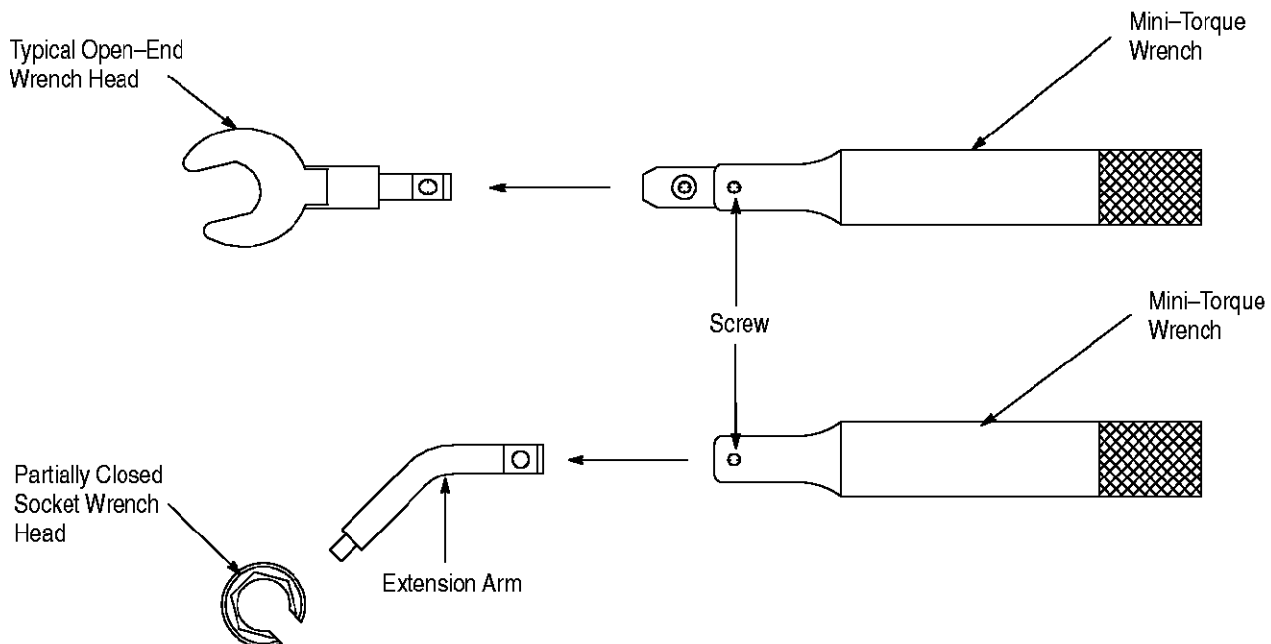


Figure 3



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.