# Solelphi Series



# Delphi Series Q54SG Quarter Brick Family Full Digital Control DC/DC Power Modules: 54V In, 12V/50A Out

The Delphi Series Q54SG, 40~60V input, isolated single output, Quarter Brick, are full digital control DC/DC converters, and are the latest offering from a world leader in power systems technology and manufacturing — Delta Electronics, Inc. The Q54SG series provide up to 600 watts of power in an industry standard, DOSA compliant footprint and pin out; The typical efficiency is 96.7% at 12V/25A load, and 96% at 12V/50A load. There is a built-in digital PWM controller in the Q54SG series, which is used to complete the Vo feedback, PWM signal generation, fault protection, and PMBUS communications, and so on. With the digital control, many design and application flexibility, advanced performance, and reliability are obtained;

## **FEATURES**

- High efficiency: 96.7% @ half Load
- Size:
- 58.4 x 36.8 x 12.7mm (2.30"x1.45"x0.50")
- PMBus Rev.1.2 compliance
- Industry standard, DOSA compliant pin out
- Fixed frequency operation
- Input UVLO, Output OCP & OVP, OTP
- Monotonic startup into normal and Pre-biased loads
- 2250V Isolation and basic insulation
- No minimum load required
- ISO 9001, TL 9000, ISO 14001, QS 9000, OHSAS 18001 certified manufacturing facility
- UL/cUL 60950-1 (US & Canada) recognized

# OPTIONS

- With/without Digital PMBus interface
- Optional Analog Trim
- Negative/Positive On/Off logic

## **APPLICATIONS**

- Telecom / DataCom
- Wireless Networks
- Optical Network Equipment
- Server and Data Storage
- Industrial/Test Equipment





# **TECHNICAL SPECIFICATIONS**

(T<sub>A</sub>=25°C, airflow rate=300 LFM,  $V_{in}$ =54Vdc, nominal Vout unless otherwise noted.)

| PARAMETER   | NOTES and CONDITIONS  |             | Q54S0        | <u>512050</u> |                  |
|---|---|-------------|--------------|---------------|------------------|
|   |   | Min.        | Тур.         | Max.          | Units            |
| ABSOLUTE MAXIMUM RATINGS  |   |             |              |               |                  |
| Input Voltage<br>Continuous   |   |             |              | 60            | Vdc              |
| Transient (100ms)   | 100ms   |             |              | 70            | Vdc              |
| On/off Pin Voltage  |   | -50         |              | 50            | V                |
| Other Pin Voltage   | Trim/Current Sharing, C2, Data, SMBAlert, Clock, Addr1,         | -0.3        |              | 3.6           | V                |
|   | Addr0   | -40         |              |               | °C               |
| Operating Ambient Temperature Storage Temperature                             |   | -40         |              | 85<br>125     | ں۔<br>℃          |
| Input/Output Isolation Voltage  |   | 00          |              | 2250          | Vdc              |
| INPUT CHARACTERISTICS   |   |             |              |               |                  |
| Operating Input Voltage   |   | 40          |              | 60            | Vdc              |
| Input Under-Voltage Lockout   |   | 00.0        | 00.4         | 00.0          |                  |
| Turn-On Voltage Threshold<br>Turn-Off Voltage Threshold                       |   | 38.8<br>37  | 39.4<br>37.7 | 39.8<br>38.2  | Vdc<br>Vdc       |
| Lockout Hysteresis Voltage  |   | 37          | 57.7         | 30.2          | Vdc              |
| Maximum Input Current   | Vin=40V, 100% Load,   |             | 15.7         | 15.9          | A                |
| No-Load Input Current   |   |             | 90           | 135           | mA               |
| Off Converter Input Current   |   |             | 18           | 23            | mA               |
| Inrush Current(I <sup>2</sup> t)  | With 100uF external input capacitor                             |             | 4-           | 1             | A <sup>2</sup> s |
| Start up Current Input Terminal Ripple Current                                | Peak, 100% Load, With 5000uF Co                                 |             | 15<br>0.85   | 20            | A                |
| Input Terminal Ripple Current   | P-P thru 12µH inductor, 5Hz to 20MHz                            |             | 70           | 100           | mA               |
| Input Voltage Ripple Rejection  | 120 Hz  |             | 50           | 100           | dB               |
| OUTPUT CHARACTERISTICS  |   |             |              |               |                  |
| Output Voltage Set Point(without current sharing)                             | Vin=54, Tc=25°C   | 11.88       | 12           | 12.12         | Vdc              |
| Output Voltage Set Point(with current sharing)                                | Vin=54V, lo=lo.min, Tc=25°C                                     | 12.1        | 12.125       | 12.15         | Vdc<br>Vdc       |
| Output Voltage Set Point(with current sharing)<br>Output Voltage Regulation   | Vin=54V, Io=Io.max, Tc=25°C                                     | 11.85       | 11.875       | 11.9          | vac              |
| Over Load(without current sharing)  | lo=lo,min to lo,max   | -60         |              | 60            | mV               |
| Over Load(with current sharing)   | Vo at Iomin - Vo at Iomax under 25°C                            | 200         | 250          | 300           | mV               |
| Over Line   | Vin=40V to 60V, 100% Load                                       |             | 30           |               | mV               |
| Over Temperature  | Tc=-40°C to 125°C   |             | -120         |               | mV               |
| Total Output Voltage Range (without current sharing)                          | over sample load, and temperature, from 40~60V Vin              | 11.7        |              | 12.3          | V                |
| Total Output Voltage Range (with current sharing)                             | over sample load, and temperature, from 40~60V Vin              | 11.6        |              | 12.4          | V                |
| Output Voltage Ripple and Noise<br>Peak-to-Peak                               | 5Hz to 20MHz bandwidth<br>Full Load, 1µF ceramic, 10µF tantalum |             | 150          | 250           | mV               |
| RMS   | Full Load, 1µF ceramic, 10µF tantalum                           |             | 60           | 100           | mV               |
| Operating Output Current Range  | Full input voltage range  | 0           | 00           | 50            | A                |
| Output DC Current-Limit Inception   | Output Voltage 10% Low  | 110         |              | 140           | %                |
| Output Voltage Trim Range   | Vin=54V   | -20         |              | 10            | %                |
| DYNAMIC CHARACTERISTICS   |   |             |              |               |                  |
| Output Voltage Current Transient  | 54V, 10µF Tan & 1µF Ceramic load cap, 0.1A/µs                   |             | 050          | 450           |                  |
| Positive Step Change in Output Current Negative Step Change in Output Current | 50% lo.max to 75% lo.max<br>75% lo.max to 50% lo.max            |             | 250<br>250   | 450<br>450    | mV<br>mV         |
| Setting Time (within 1% Vout nominal)   | 7570 10.111ax 10 5070 10.111ax                                  |             | 200          | 300           | μs               |
| Turn-On Transient   |   |             |              |               |                  |
| Start-up delay time by On/off, from On/off to 10%Vo.set                       | Vin=54V, with current sharing / without current sharing         |             | 110/70       | 150/100       | ms               |
| Start-up delay time by Vin, from Input to 10%Vo.set                           | Vin=54V, with current sharing / without current sharing         |             | 120/80       | 160/110       | ms               |
| Output rise time, from 10%Vo.se to 90%Vo.set                                  | Vin=54V, with current sharing / without current sharing         | 220         | 200/25       | 16000         | ms               |
| Output Capacitance EFFICIENCY   |   | 220         |              | 16000         | μF               |
| 60% Load(without current sharing)   | Vin=54V   |             | 96.7         |               | %                |
| 100% Load(without current sharing)  | Vin=54V   |             | 96           |               | %                |
| 60% Load(with current sharing)  | Vin=54V   |             | 96.3         |               | %                |
| 100% Load(with current sharing)   | Vin=54V   |             | 95.8         |               | %                |
| ISOLATION CHARACTERISTICS Input to Output                                     |   |             |              | 2250          | Vdc              |
| Isolation Resistance  |   | 10          |              | 2230          | MΩ               |
| Isolation Capacitance   |   |             | 1500         |               | pF               |
| FEATURE CHARACTERISTICS   |   |             |              |               |                  |
| Switching Frequency   |   |             | 130          |               | kHz              |
| ON/OFF Control  |   | 07          |              | 0.0           |                  |
| Logic Low<br>Logic High   | Von/off<br>Von/off  | -0.7<br>2.4 |              | 0.8<br>50     | V<br>V           |
| ON/OFF Current (for both remote on/off logic)                                 | Ion/off at Von/off=0.0V   | 2.4         |              | 0.5           | mA               |
| ON/OFF Current (for both remote on/off logic)                                 | Ion/off at Von/off=2.4V   | 10          |              | 3.0           | μΑ               |
|   |   |             |              | =0            |                  |
| Leakage Current (for both remote on/off logic)                                | Logic High, Von/off=15VVin=54V, Pout $\leq$ max rated power     |             |              | 50            | μA               |



# **TECHNICAL SPECIFICATIONS**


(T<sub>A</sub>=25°C, airflow rate=300 LFM, V<sub>in</sub>=54Vdc, nominal Vout unless otherwise noted.)

| Q54SG12050 |        |  |  |  |
|------------|--------|--|--|--|
| Typ. Max.  | Units  |  |  |  |
|            |        |  |  |  |
| 0.8        | V      |  |  |  |
| 3.3        | V      |  |  |  |
| 0.4        | V      |  |  |  |
|            | V      |  |  |  |
| 400        | KHz    |  |  |  |
|            |        |  |  |  |
| +5         | %      |  |  |  |
| +2         | A      |  |  |  |
| +2         | %      |  |  |  |
| +4         | %      |  |  |  |
| +5         | °C     |  |  |  |
|            |        |  |  |  |
| 1.56       | M hour |  |  |  |
| 66.5       | grams  |  |  |  |
| 112        | °C     |  |  |  |
| 103        | °C     |  |  |  |
| 125        | °C     |  |  |  |
| 103        | 3      |  |  |  |


# **PIN DEFINATION**

| Pin# | Name    | Function                   | Pin# | Name     | Function  |
|------|---------|----------------------------|------|----------|---|
| 1    | VIN(+)  |                            | 7    | C2       | Secondary on/off control pin; The default configuration is set to ignore this input. And such pin can be reconfigured by the PMBus Interface. |
| 2    | ON/OFF  | Primary on/off control pin | 8    | Sig_Gnd  | Signal ground   |
| 3    | VIN(-)  |                            | 9    | Data     | PMBus data line   |
| 4    | VOUT(-) |                            | 10   | SMBAlert | PMBus SMBAlert line   |
| 5    | Trim    | Trim pin                   | 11   | Clock    | PMBus clock line  |
| 6    | VOUT(+) |                            | 12   | Addr1    | ADDR1 pin sets the high order digit of the address.   |
|      |         |                            | 13   | Addr0    | ADDR0 pin sets the low order digit of the address.  |


# SIMPLIFIED APPLICATION CIRCUIT

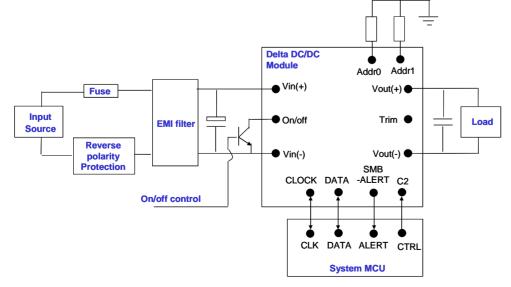




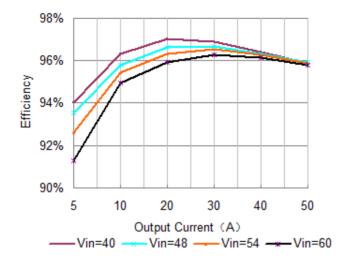


**Figure 1:** Efficiency vs. load current for minimum, nominal, and maximum input voltage at 25°C(For module without current sharing)

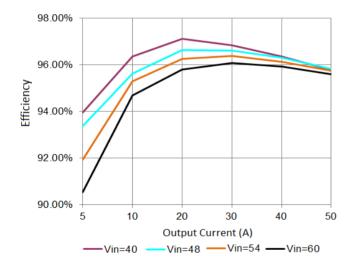

**Figure 3:** Efficiency vs. load current for minimum, nominal, and maximum input voltage at 25°C(For module with current sharing)

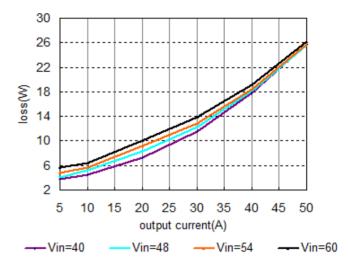

**Figure 2**: Power dissipation vs. load current for minimum, nominal, and maximum input voltage at 25°C(For module without current sharing)

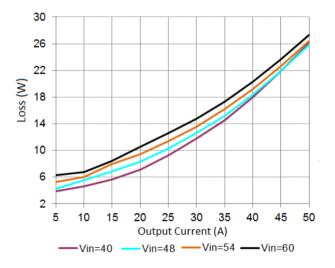

**Figure 4**: Power dissipation vs. load current for minimum, nominal, and maximum input voltage at 25°C(For module with current sharing)





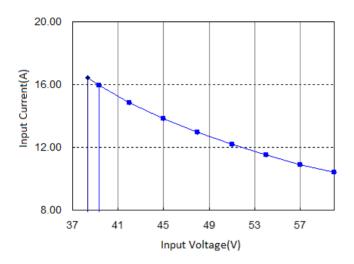


Figure 5: Typical full load input characteristics at room temperature

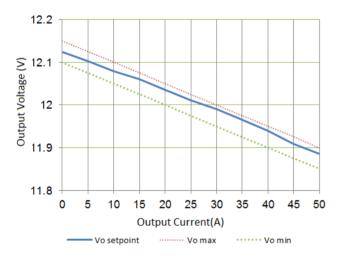


*Figure 7:* Typical Output voltage vs output current (For module with current sharing), 54Vin under room temperature.

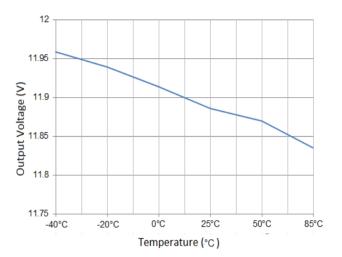


*Figure 6:* Typical Vo set point vs temperature (For module with current sharing), 54Vin with full load.




# For Negative Remote On/Off Logic

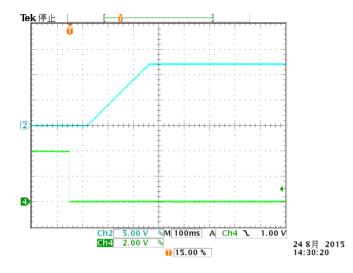


*Figure 8:* Turn-on transient at zero load current (10ms/div), Vin=54V; Top Trace: Vout, 5V/div; Bottom Trace: ON/OFF input, 2V/div;

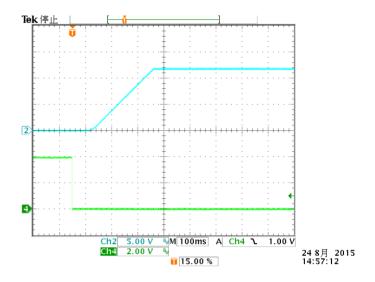

**Figure 9:** Turn-on transient at full rated load current (constant current load) (10 ms/div), Vin=54V; Top Trace: Vout, 5V/div; Bottom Trace: ON/OFF input, 2V/div;

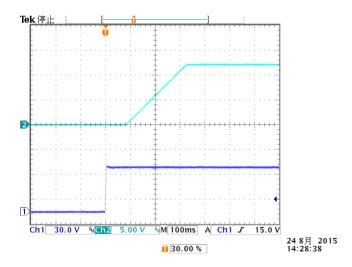


*Figure 10:* Turn-on transient at zero load current (10 ms/div), Vin=54V; Top Trace: Vout, 5V/div; Bottom Trace: input voltage, 30V/div;

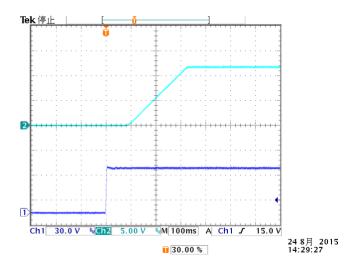

*Figure 11:* Turn-on transient at full rated load current (constant current load) (10 ms/div), Vin=54V; Top Trace: Vout, 5V/div; Bottom Trace: input voltage, 30V/div;

## For Input Voltage Start up

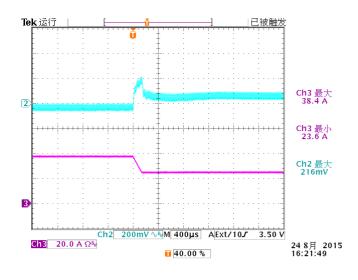

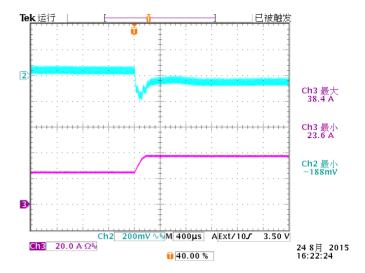


Figure 12: Output voltage response to step-change in load current (75%-50% of Io, max; di/dt = 0.1A/us, Vin=54V). Load cap: 10µF, tantalum capacitor and 1µF ceramic capacitor. Top Trace: Vout (200mV/div, 400us/div); Bottom Trace: Io (20A/div, 400us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.

Figure 13: Output voltage response to step-change in load current (50%-75% of Io, max; di/dt = 0.1A/us, Vin=54V). Load cap: 10µF, tantalum capacitor and 1µF ceramic capacitor. Top Trace: Vout (200mV/div, 400us/div); Bottom Trace: Io (20A/div, 400us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.


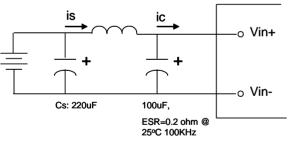



Figure 14: Test set-up diagram showing measurement points for Input Terminal Ripple Current and Input Reflected Ripple Current.


Note: Measured input reflected-ripple current with a simulated source Inductance (LTEST) of 12 µH. Capacitor Cs offset possible battery impedance. Measure current as shown below

Figure 15: Input Terminal Ripple Current, ic, at full rated output current and nominal input voltage with 12µH source impedance and 100µF electrolytic capacitor (500 mA/div, 2us/div).

 




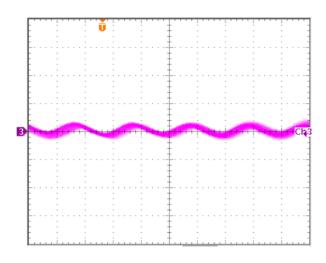

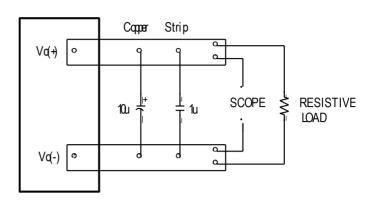

**Figure 16:** Input reflected ripple current,  $i_s$ , through a  $12\mu$ H source inductor at nominal input voltage and rated load current (50 mA/div, 5us/div).

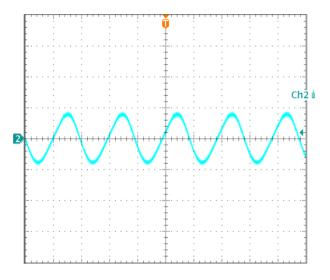

*Figure 18:* Output voltage ripple at nominal input voltage and rated load current (100 mV/div, 2us/div)

Load capacitance:  $1\mu$ F ceramic capacitor and  $10\mu$ F tantalum capacitor. Bandwidth: 20 MHz. Scope measurements should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.

Figure 17: Output voltage noise and ripple measurement test setup

# **DESIGN CONSIDERATIONS**


#### Input Source Impedance

The impedance of the input source connecting to the DC/DC power modules will interact with the modules and affect the stability. A low ac-impedance input source is recommended. If the source inductance is more than a few  $\mu$ H, we advise adding a 100 to 200  $\mu$ F electrolytic capacitor (ESR < 0.7  $\Omega$  at 100 kHz) mounted close to the input of the module to improve the stability.

#### Layout and EMC Considerations

Delta's DC/DC power modules are designed to operate in a wide variety of systems and applications. For design assistance with EMC compliance and related PWB layout issues, please contact Delta's technical support team. An external input filter module is available for easier EMC compliance design. Below is the reference design for an input filter tested with Q54SG120XXXXXX to meet class B in CISSPR 22.

#### **Schematic and Components List**

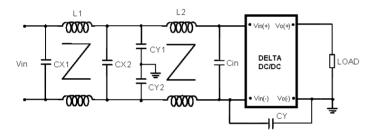

#### For Single Module Application

Cin is 100uF low ESR Aluminum cap x3pcs in parallel; CX1 is 2.2uF ceramic capx2pcs in parallel;

CX2 is 2.2uF ceramic cap;


CY1 is 47nF ceramic cap x 2pcs in parallel;

CY2 is 47nF ceramic cap x 2pcs in parallel;

CY is 3.3nF ceramic cap;

L1 and L2 are common-mode inductors, L1=L2=0.33mH;

Test Result: Vin=54V, Io=50A

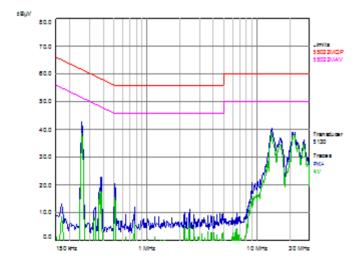

#### **Safety Considerations**

The power module must be installed in compliance with the spacing and separation requirements of the end-user's safety agency standard, i.e., UL60950-1, CSA C22.2 NO. 60950-1 2nd, IEC 60950-1 2nd : 2005, EN 60950-1 2nd: 2006+A11+A1: 2010, if the system in which the power module is to be used must meet safety agency requirements.

Basic insulation based on 75 Vdc input is provided between the input and output of the module for the purpose of applying insulation requirements when the input to this DC-to-DC converter is identified as TNV-2 or SELV. An additional evaluation is needed if the source is other than TNV-2 or SELV.

When the input source is SELV circuit, the power module meets SELV (safety extra-low voltage) requirements. If the input source is a hazardous voltage which is greater than 60 Vdc and less than or equal to 75 Vdc, for the module's output to meet SELV requirements, all of the following must be met:

- The input source must be insulated from the ac mains by reinforced or double insulation.
- The input terminals of the module are not operator accessible.
- A SELV reliability test is conducted on the system where the module is used, in combination with the module, to ensure that under a single fault, hazardous voltage does not appear at the module's output.

When installed into a Class II equipment (without grounding), spacing consideration should be given to the end-use installation, as the spacing between the module and mounting surface have not been evaluated.

The power module has extra-low voltage (ELV) outputs when all inputs are ELV.

This power module is not internally fused. To achieve optimum safety and system protection, an input line fuse is highly recommended. The safety agencies require a Fast-acting fuse with 30A maximum rating to be installed in the ungrounded lead. A lower rated fuse can be used based on the maximum inrush transient energy and maximum input current.

#### **Soldering and Cleaning Considerations**

Post solder cleaning is usually the final board assembly process before the board or system undergoes electrical testing. Inadequate cleaning and/or drying may lower the reliability of a power module and severely affect the finished circuit board assembly test. Adequate cleaning and/or drying is especially important for un-encapsulated and/or open frame type power modules. For assistance on appropriate soldering and cleaning procedures, please contact Delta's technical support team.

# **FEATURES DESCRIPTIONS**

#### **Over-Current Protection**

The modules include an internal output over-current protection circuit. If the output current exceeds the OCP set point, the modules will shut down, and enter hiccup mode or latch mode. For hiccup mode, the module will try to restart after shutdown. If the overload condition still exists, the module will shut down again. This restart trial will continue until the overload condition is corrected. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The OCP threshold and protection mode can be reconfigured by the PMBus Interface; the default configuration is hiccup mode.

#### **Over-Voltage Protection**

The modules include an internal output over-voltage protection circuit. If output voltage exceeds the over-voltage set point, the module will shut down, and enter in hiccup mode or latch mode. For hiccup mode, the module will try to restart after shutdown. If the output overvoltage condition still exists, the module will shut down again. This restart trial will continue until the over-voltage condition is corrected. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The Vo OVP threshold and protection mode can be reconfigured by the PMBus Interface; the default configuration is hiccup mode.

#### **Over-Temperature Protection**

The modules include an internal over-temperature protection circuit. If the module temperature exceeds the over-temperature threshold the module will shut down, and enter in auto-recovery mode or latch mode. For auto-recovery mode, the module will monitor the module temperature after shutdown. Once the temperature is dropped and within the specification, the module will be auto-recovery. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The OTP threshold and protection mode can be reconfigured by the PMBus Interface; the default configuration is hiccup mode.

#### **Primary Remote On/Off**

The primary remote on/off feature on the module can be either negative or positive logic. Negative logic turns the module on during a logic low and off during a logic high. Positive logic turns the modules on during a logic high and off during a logic low. The primary remote on/off can be controlled by an external switch between the on/off terminal and the Vi(-) terminal. The switch can be an open collector or open drain. If the remote on/off feature is not used, for negative logic, please short the on/off pin to Vi(-); For positive logic, please leave the on/off pin floating. The module will not response to the remote on/off signal which is less than 120us. The primary remote on/off logic can be reconfigured by the PMBus Interface.

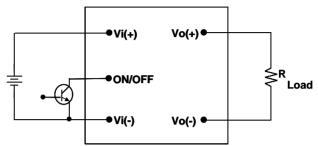


Figure 19: Remote on/off implementation

#### Secondary Remote On/Off

Reference to the Vo(-) terminal, there is a C2 pin. The default configuration is set to ignore this input. And such pin can be reconfigured as secondary remote on/off pin by the PMBus interface including either negative or positive logic. Negative logic turns the module on during a logic low and off during a logic high. Positive logic turns the modules on during a logic low. The secondary remote on/off can be controlled by an external switch between the on/off terminal and the Vo(-) terminal. The switch can be an open collector or open drain.

#### **PMBus Communication**

The module has a digital PMBus interface to allow the module to be monitored, controlled and configured by the system. The module supports 4 PMBus signal lines, Data, Clock, SMBALERT (optional), Control (C2 pin, optional), and 2 Address line Addr0 and Addr1. More detail PMBus information can be found in the PMB Power Management Protocol Specification, Part I and part II, revision 1.2; which is shown in <u>http://pmbus.org</u>. Both 100kHz and 400kHz bus speeds are supported by the module. Connection for the PMBus interface should be following the High Power DC specifications given in section 3.1.3 in the SMBus specification V2.0 or the Low Power DC specification is shown in <u>http://smbus.org</u>.



The module supports the Packet Error Checking (PEC) protocol. It can check the PEC byte provided by the PMBus master, and include a PEC byte in all message responses to the master.

SMBALERT protocol is also supported by the module. SMBALERT line is also a wired-AND signal; by which the module can alert the PMBUS master via pulling the SMBALERT pin to an active low. There are two ways that the master and the module response to the alert of SMBALERT line.

One way is for the module used in a system that does not support Alert Response Address (ARA). The module is to retain it's resistor programmed address, when it is in an ALERT active condition. The master will communicate with the slave module using the programmed address, and using the various READ\_STATUS commands to find who cause for the SMBALERT. The CLEAR\_FAULTS command will clear the SMBALERT.

The other way is for the module used in a system that does support Alert Response Address (ARA). In this case, the master simultaneously accesses all SMBALERT devices through the ARA. Only the device which pulled SMBALERT low will acknowledge the ARA. The master is expected to perform the modified received byte operation to get the address of the alert slave, and retire the SMBALERT active signal. And then, the alter slave will return to it's resistor programmed address, allowing normal master-slave communications to proceed.

If more than one slave pulls SMBALERT line low, the lowest address slave will win communication rights via standard arbitration during the slave address transfer. After acknowledging the ARA, the lowest address slave must disengage its SMBALERT pull down. If the master still sees SMBALERT line low, it knows to send another ARA and ask again "Now, who is holding the alert down". The second slave is now locked-up and can't responsive. But the solution is easy; the master should now initiate a "dummy command", for example read command on the bus and read any parameter from any slave. After this, the second slave (the one that lost arbitration in the first run) will be released. Now, if master sends the second ARA, the second slave will provide its address to the Master.

The module contains a data flash used to store configuration settings, which will not be programmed into the device data flash automatically. The STORE\_DEFAULT\_ALL command must be used to commit the current settings are transfer from RAM to data flash as device defaults.

#### **PMBUS Addressing**

The Module has flexible PMBUS addressing capability. When connect different resistor from Addr0 and Addr1 pin to GND pin, 64 possible addresses can be acquired. The address is in the form of octal digits; Each pin offer one octal digit, and then combine together to form the decimal address as shown in below. Address = 8 \* ADDR1 + ADDR0

Addr1 • Addr0 • Sig\_Gnd •

 
Corresponded to each octal digit, the requested resistor values are shown in below, and +/-5% resistors accuracy can be accepted. If there is any resistances exceeding the requested range, address 127 will be return. 0-12 and 40, 44, 45, and 55 in decimal address can't be used, since they are reserved according to the SMBus specifications, and which will also return address 127.

| Octal digit | Resistor(Kohm) |
|-------------|----------------|
| 0           | 10             |
| 1           | 15.4           |
| 2           | 23.7           |
| 3           | 36.5           |
| 4           | 54.9           |
| 5           | 84.5           |
| 6           | 130            |
| 7           | 200            |

#### **PMBus Data Format**

The module receives and report date in LINEAR format. The Exponent of the data words is fixed at a reasonable value for the command; altering the exponent is not supported. DIRECT format is not supported by the module.

For commands that set or report any voltage thresholds related to the output voltage, the module supports the linear data format consisting of a two byte value with a 16-bit, unsigned mantissa, and a fixed exponent of -12. The format of the two data bytes is shown below:




The equation can be written as:

Vout = Mantissa x 2<sup>-12</sup>

For example, considering set Vout to 12V by VOUT COMMAND, the read/write data can be calculated refer to below process:

- 1. Mantissa = $Vout/2^{-12} = 12/2^{-12} = 49152;$
- 2. Converter the calculated Mantissa to hexadecimal 0xC000.

 For commands that set or report all other thresholds, including input voltages, output current, temperature, time and frequency, the supported linear data format is a two byte value with: an 11 bit, two's complement mantissa, and a 5 bit, two's complement exponent (scaling factor). The format of the two data bytes is shown as in below.



The equation can be written as: Value = Mantissa x 2<sup>exponent</sup>

For example, considering set the turn on threshold of input under voltage lockout to 34V by VIN ON command; the read/write data can be calculated refer to below process:

- 1. Get the exponent of Vin, -3; whose binary is 11101
- 2. Mantissa =Vin/2<sup>-3</sup>=34/2<sup>-3</sup>=272;
- 3. Converter the calculated Mantissa to hexadecimal 110. then converter to binary 00100010000:
- 4. Combine the exponent and the mantissa, 11101

The detail exponent and resolution of main parameter is summarized as below:

|                    | Exponent | Resolution |
|--------------------|----------|------------|
| Vin                | -3       | 0.125V     |
| Vo                 | -12      | 0.244mV    |
| lo                 | -4       | 62.5mA     |
| Temperature        | -2       | /          |
| Switching requency | -2       | 0.25Khz    |
| Time               | -1       | 0.5ms      |

#### **Supported PMBus Commands**

The main PMBus commands described in the PMBus 1.2 specification are supported by the module. Partial PMBus commands are fully supported; Partial PMBus commands have difference with the definition in PMBus 1.2 specification. All the supported PMBus commands are detail summarized in below table.



| Command             | Comman<br>d Code | Command description  | Transf<br>-er type | Compatible<br>with<br>standard<br>PMBUS or<br>not? | Data<br>Format          | Default value                                | Range<br>limit | Data<br>units | Expon<br>-ent | Note  |
|---------------------|------------------|--|--------------------|--|-------------------------|--|----------------|---------------|---------------|---|
| OPERATION           | 0x01             | Turn the module on or off by PMBUS command                               | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field               | 0x80   | /              | /             | /             | 1   |
| ON_OFF_CONFIG       | 0x02             | Configures the combination of<br>primary on/off pin and PMBUS<br>command | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field               | 0x1D<br>(Neg Logic);<br>0x1F<br>(Pos Logic); | /              | /             | /             | 1   |
| CLEAR_FAULTS        | 0x03             | Clear any fault bits that have been set                                  | Send<br>byte       | Yes  | /                       | /  | /              | /             | /             | /   |
| STORE_DEFAULT_ALL   | 0x11             | Stores operating parameters from RAM to data flash                       | Send<br>byte       | Yes  | /                       | /  | /              | /             | /             | This command is effective to the<br>parameter of all command in the<br>table. |
| RESTORE_DEFAULT_ALL | 0x12             | Restores operating parameters<br>from data flash to RAM                  | Send<br>byte       | Yes  | /                       | /  | /              | /             | /             | This command can't be issued when the power unit is running.                  |
| VOUT_MODE           | 0x20             | To read Vo data format   | Read<br>byte       | Yes  | mode+<br>exp            | 0x14   | /              | /             | /             | 1   |
| VOUT_COMMAND        | 0x21             | Set the output voltage   | R/W<br>word        | Yes  | Vout<br>Linear          | 12   | 9.6<br>~13.2   | Volts         | -12           | 1   |
| FREQUENCY_SWITCH    | 0x33             | Set the switching frequency  | R/W<br>word        | Yes  | Freque<br>ncy<br>Linear | 130  | 120<br>~140    | KHz           | -2            | Need be changed after module<br>turn off                                      |
| VOUT_OV_FAULT_LIMIT | 0x40             | Set the output overvoltage fault threshold.                              | R/W<br>word        | Yes  | Vout<br>Linear          | 15   | 11~16          | V             | -12           | Must be higher than the value of<br>VOUT_COMMAND and<br>VOUT_OV_WARN_LIMIT;   |



| Command             | Comman<br>d Code | Command description  | Transf<br>-er type | Compatible<br>with<br>standard<br>PMBUS or<br>not? | Data<br>Format | Default value | Range<br>limit | Data<br>units | Expon<br>-ent | Note  |
|---------------------|------------------|--|--------------------|--|----------------|---------------|----------------|---------------|---------------|---|
| VOUT_OV_FAULT_RESP  | 0x41             | Instructs what action to take in<br>response to an output<br>overvoltage fault.                | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field      | 0xB8          | /              | N/A           | /             | 1   |
| VOUT_OV_WARN_LIMIT  | 0x42             | Set a threshold causing an<br>output voltage high warning.                                     | R/W<br>word        | Yes  | Vout<br>Linear | 15            | 11~16          | V             | -12           | Must be less than VOUT_OV_FAULT_LIMIT value             |
| IOUT_OC_FAULT_LIMIT | 0x46             | Set the output overcurrent fault threshold.  | R/W<br>word        | Yes  | lout<br>Linear | 60            | 50~80          | A             | -4            | Must be greater than IOUT_OC_WARN_LIMIT value           |
| IOUT_OC_FAULT_RESPO | 0x47             | Instructs what action to take in<br>response to an output<br>overcurrent fault.                | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field      | 0xF8          | /              | N/A           | /             | 1   |
| IOUT_OC_WARN_LIMIT  | 0x4A             | Set a threshold causing an output current high warning.  | R/W<br>word        | Yes  | lout<br>Linear |               | 50~80          | A             | -4            | Must be less than<br>IOUT_OC_FAULT_LIMIT value          |
| OT_FAULT_LIMIT      | 0x4F             | Set the over temperature fault threshold.  | R/W<br>word        | Yes  | TEMP<br>Linear | 125           | 25~140         | Deg.<br>C     | -2            | Must be greater than OT_WARN_LIMIT value                |
| OT_FAULT_RESPONSE   | 0x50             | Instructs what action to take in<br>response to an over temperature<br>fault.                  | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field      | 0xB8          | /              | N/A           | /             | 1   |
| OT_WARN_LIMIT       | 0x51             | Set a threshold causing a temperature high warning.  | R/W<br>word        | Yes  | TEMP<br>Linear | 115           | 25~125         | Deg.<br>C     | -2            | Must be less than<br>OT_FAULT_LIMIT value               |
| VIN_OV_FAULT_LIMIT  | 0x55             | Set the input overvoltage fault threshold.   | R/W<br>word        | Yes  | Vin<br>Linear  | 110           | 48~110         | v             | -3            | /   |
| POWER_GOOD_ON       | 0x5E             | Sets the output voltage at which<br>the bit 3 of STATUS_WORD<br>high byte should be asserted.  | R/W<br>word        | Yes  | Vout<br>Linear | 11            | 8.1<br>~13.2   | V             | -12           | Must be greater than<br>POWER_GOOD_OFF value by<br>1.6V |
| POWER_GOOD_OFF      | 0x5F             | Sets the output voltage at which<br>the bit 3 of STATUS_WORD<br>high byte should be negated.   | R/W<br>word        | Yes  | Vout<br>Linear | 9             | 8.1<br>~13.2   | V             | -12           | Must be less than<br>POWER_GOOD_ON value by<br>1.6V     |
| TON_DELAY           | 0x60             | Sets the time from a start<br>condition is received until the<br>output voltage starts to rise | R/W<br>word        | Yes  | Time<br>Linear |               | 5~500          | ms            | -1            | /   |



| Command            | Comman<br>d Code | Command description   | Transf<br>-er type | Compatible<br>with<br>standard<br>PMBUS or<br>not? | Data<br>Format | Default value | Range<br>limit | Data<br>units | Expon<br>-ent | Note |
|--------------------|------------------|---|--------------------|--|----------------|---------------|----------------|---------------|---------------|------|
| TON_RISE           | 0x61             | Sets the time from the output<br>starts to rise until the voltage has<br>entered the regulation band. | R/W<br>word        | Yes  | Time<br>Linear |               | 15~500         | ms            | -1            | 1    |
| STATUS_WORD        | 0x79             | Returns the information with a<br>summary of the module's<br>fault/warning                            | Read<br>word       | Refer to<br>below<br>description;                  | Bit field      | 1             | /              | /             | /             | /    |
| STATUS_VOUT        | 0x7A             | Returns the information of the module's output voltage related fault/warning                          | Read<br>byte       | Refer to<br>below<br>description;                  | Bit field      | /             | /              | /             | /             | /    |
| STATUS_IOUT        | 0x7B             | Returns the information of the module's output current related fault/warning                          | Read<br>byte       | Refer to<br>below<br>description;                  | Bit field      | 1             | /              | /             | /             | 1    |
| STATUS_INPUT       | 0x7C             | Returns the information of the module's input over voltage and under voltage fault                    | Read<br>byte       | Refer to<br>below<br>description;                  | Bit field      | 1             | /              | /             | /             | /    |
| STATUS_TEMPERATURE | 0x7D             | Returns the information of the module's temperature related fault/warning                             | Read<br>byte       | Refer to<br>below<br>description;                  | Bit field      | 1             | /              | /             | /             | 1    |
| STATUS_CML         | 0x7E             | Returns the information of the module's communication related faults.                                 | Read<br>byte       | Refer to<br>below<br>description;                  | Bit field      | 1             | /              | /             | /             | /    |
| READ_VIN           | 0x88             | Returns the input voltage of the module   | Read<br>word       | Yes  | Vin<br>Linear  | 1             | /              | Volts         | /             | /    |
| READ_VOUT          | 0x8B             | Returns the output voltage of the module  | Read<br>word       | Yes  | Vout<br>Linear | /             | /              | Volts         | /             | 1    |
| READ_IOUT          | 0x8C             | Returns the output current of the module  | Read<br>word       | Yes  | lout<br>Linear | 1             | /              | Amps          | /             | 1    |
| READ_TEMPERATURE_1 | 0x8D             | Returns the module's hot spot temperature of the module   | Read<br>word       | Yes  | TEMP<br>Linear | 1             | /              | Deg.<br>C     | /             | 1    |
| PMBUS_REVISION     | 0x98             | Reads the revision of the PMBus   | Read<br>byte       | Yes  | Bit field      | 1.2           | /              | /             | /             | 1    |



| Command          | Comman<br>d Code | Command description  | Transf<br>-er type | Compatible<br>with<br>standard<br>PMBUS or<br>not? | Data      | Default value | Range<br>limit | Data<br>units | Expon<br>-ent | Note |
|------------------|------------------|--|--------------------|--|-----------|---------------|----------------|---------------|---------------|------|
| MFR_C2_Configure | 0xE1             | Configures the C2 pin<br>(secondary on/off pin) function<br>and logic; | R/W<br>byte        | Refer to<br>below<br>description;                  | Bit field | 0x00          | /              | /             | /             | /    |



## **OPERATION** [0x01]

| Bit number | Purpose                   | Bit Value | Meaning            | Default Settings, |
|------------|---------------------------|-----------|--------------------|-------------------|
|            |                           |           |                    | 0x80              |
| 7:         | Enable/Disable the module | 1         | Output is enabled  | 1                 |
|            |                           | 0         | Output is disabled |                   |
| 6:0        | Reserved                  |           |                    | 0000000           |

#### ON\_OFF\_CONFIG [0x02]

| Bit number | Purpose  | Bit Value | Meaning   | Default Settings,<br>0x1D (negative)<br>/0x1F (positive) |
|------------|--|-----------|---|--|
| 7:5        | Reserved   |           |   | 000  |
| 4          | Controls how the unit responds to the primary on/off pin and the | 1         | Module does not power up until commanded by the primary ON/OFF pin and the OPERATION            | 1  |
|            | OPERATION command;   | 0         | Module power up at any time regardless of the state of the primary ON/OFF pin and the OPERATION |  |
| 3          | Controls how the unit responds to the OPERATION command          | 1<br>0    | Module responds to the 7 bit in the OPERATION<br>Module ignores the 7 bit in the OPERATION      | 1  |
| 2          | Controls how the unit responds to the primary on/off pin         | 1         | Module requires the primary ON/OFF pin to be asserted to start the unit                         | 1  |
|            |  | 0         | Module ignores the state of the primary ON/OFF pin  |  |
| 1          | Control logic of primay on/off pin                               | 1         | Positive Logic  | 0, negative;   |
|            |  | 0         | Negative Logic  | 1, positive.   |
| 0          | Unit turn off delay time control                                 | 1         | Shut down the module with 0 delay cycle   | 1  |

# VOUT\_OV\_FAULT\_RESPONSE [0x41]

| Bit number | Purpose            | Bit Value | Meaning  | Default Settings,<br>0xB8 |
|------------|--------------------|-----------|--|---------------------------|
| 7:6        | Response settings  | 10        | Unit shuts down and responds according to the retry settings             | 10                        |
| 5:3        | Retry setting      | 111       | Unit continuously restarts while fault is present<br>until commanded off | 111                       |
|            |                    | 000       | Unit does not attempt to restart on fault                                |                           |
| 2:0        | Delay time setting | 000       | No delay supported   | 000                       |

## IOUT\_OC\_FAULT\_RESPONSE [0x47]

| Bit number | Purpose            | Bit Value | Meaning  | Default Settings,<br>0xF8 |
|------------|--------------------|-----------|--|---------------------------|
| 7:6        | Response settings  | 11        | Unit shuts down and responds according to the retry settings             | 11,                       |
| 5:3        | Retry settings     | 111       | Unit continuously restarts while fault is present<br>until commanded off | 111                       |
|            |                    | 000       | Unit does not attempt to restart on fault                                |                           |
| 2:0        | Delay time setting | 000       | No delay supported   | 000                       |



# OT\_FAULT\_RESPONSE [0x50]

| Bit number | Purpose            | Bit Value | Meaning  | Default Settings,<br>0xB8 |
|------------|--------------------|-----------|--|---------------------------|
| 7:6        | Response settings  | 10        | Unit shuts down and responds according to the retry settings             | 10,                       |
| 5:3        | Retry settings     | 111       | Unit continuously restarts while fault is present<br>until commanded off | 111                       |
|            |                    | 000       | Unit does not attempt to restart on fault                                |                           |
| 2:0        | Delay time setting | 000       | No delay supported   | 000                       |

# STATUS\_WORD [0x79]

## High byte

| Bit number | Purpose   | Bit Value | Meaning     |
|------------|---|-----------|-------------|
| 7          | An output over voltage fault or warning                         | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 6          | An output over current fault or warning                         | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 5          | An input voltage fault, including over voltage and undervoltage | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 4          | Reserved  |           |             |
| 3          | Power_Good  | 1         | is negated  |
|            |   | 0         | ok          |
| 2:0        | Reserved  |           |             |

## Low byte

| Bit number | Purpose   | Bit Value | Meaning     |
|------------|---|-----------|-------------|
| 7          | Reserved  |           |             |
| 6          | OFF (The unit is not providing power to the output, regardless of the | 1         | Occurred    |
|            | reason)   | 0         | No Occurred |
| 5          | An output over voltage fault  | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 4          | An output over current fault  | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 3          | An input under voltage fault  | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 2          | A temperature fault or warning  | 1         | Occurred    |
|            |   | 0         | No Occurred |
| 1          | CML (A communications, memory or logic fault)                         | 1         | Occurred;   |
|            |   | 0         | No Occurred |
| 0          | Reserved  |           |             |



# STATUS\_VOUT [0x7A]

| Bit number | Purpose                     | Bit Value   | Meaning     |  |
|------------|-----------------------------|-------------|-------------|--|
| 7          | Output over voltage fault   | 1 Occurred; |             |  |
|            |                             | 0           | No Occurred |  |
| 6          | Output over voltage warning | 1           | Occurred;   |  |
|            |                             | 0           | No Occurred |  |
| 5:0        | Reserved                    |             |             |  |

#### STATUS\_IOUT [0x7B]

| Bit number | Purpose                     | Bit Value | Meaning     |
|------------|-----------------------------|-----------|-------------|
| 7          | Output over current fault   | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 6          | Reserved                    |           |             |
| 5          | Output over current warning | 1         | Occurred;   |
|            |                             | 0         | No Occurred |
| 4:0        | Reserved                    |           |             |

#### STATUS\_INPUT [0x7C]

| Bit number | Purpose                   | Bit Value | Meaning     |
|------------|---------------------------|-----------|-------------|
| 7          | Input over voltage fault  | 1         | Occurred;   |
|            |                           | 0         | No Occurred |
| 6: 5       | Reserved                  |           |             |
| 4          | Input under voltage fault | 1         | Occurred;   |
|            |                           | 0         | No Occurred |
| 3:0        | Reserved                  |           |             |

## STATUS\_TEMPERATURE [0x7D]

| Bit number | Purpose                  | Bit Value | Meaning     |
|------------|--------------------------|-----------|-------------|
| 7          | Over temperature fault   | 1         | Occurred;   |
|            |                          | 0         | No Occurred |
| 6          | Over temperature warning | 1         | Occurred;   |
|            |                          | 0         | No Occurred |
| 5:0        | Reserved                 |           |             |

# STATUS\_CML [0x7E]

| Bit number | Purpose                              | Bit Value | Meaning     |
|------------|--------------------------------------|-----------|-------------|
| 7          | Invalid/Unsupported Command Received | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 6          | Invalid/Unsupported Data Received    | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 5          | Packet Error Check Failed            | 1         | Occurred;   |
|            |                                      | 0         | No Occurred |
| 4:0        | Reserved                             |           |             |

# MFR\_ C2\_Configure [0xE1]

| Bit    | Purpose               | Bit Value | Meaning                                 | Default Settings, |
|--------|-----------------------|-----------|---|-------------------|
| number |                       |           |   | 0x00              |
| 7:2    | Reserved              |           |   | 000000            |
| 1      | Secondary ON/OFF      | 1         | AND – Primary and Secondary side on/off | 0                 |
|        | Configuration         | 0         | C2 is ignored                           |                   |
| 0      | Secondary side on/off | 1         | Positive Logic                          | 0                 |
|        | Logic                 | 0         | Negative Logic                          |                   |

#### **Output Voltage Adjustment (TRIM)**

To increase or decrease the output voltage set point, connect an external resistor between the TRIM pin and either the Vo(+) or Vo(-). The TRIM pin should be left open if this feature is not used. Below Trim equation is only adapt to the module without droop current sharing option code; For the module with droop current sharing option code, please contact Delta's technical support team.

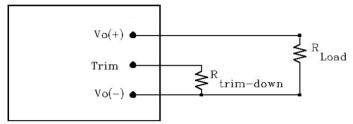


Figure 20: Circuit configuration for trim-down (decrease output voltage)

If the external resistor is connected between the TRIM and Vo (-) pins, the output voltage set point decreases (Fig. 19). The external resistor value required to obtain a percentage of output voltage change  $\triangle$ % is defined as:

$$Rtrim - down = \left[\frac{511}{\Delta} - 10.2\right] (K\Omega)$$
  
Ex. When Trim-down -10% (12V×0.9=10.8V)  
$$Rtrim - down = \left[\frac{511}{10} - 10.2\right] (K\Omega) = 40.9 (K\Omega)$$

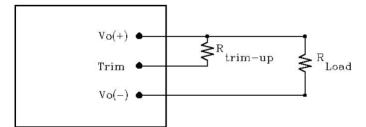


Figure 21: Circuit configuration for trim-up (increase output voltage)

If the external resistor is connected between the TRIM and Vo (+) the output voltage set point increases (Fig. 20). The external resistor value required to obtain a percentage output voltage change  $\triangle$ % is defined as:

$$Rtrim - up = \frac{5.11 \text{Vo} (100 + \Delta)}{1.225 \Delta} - \frac{511}{\Delta} - 10.2 (K\Omega)$$


Ex. When Trim-up +10% (12V×1.1=13.2V)

$$Rtrim - up = \frac{5.11 \times 12 \times (100 + 10)}{1.225 \times 10} - \frac{511}{10} - 10.2 = 489.3 (K\Omega)$$

Care should be taken to ensure that the maximum output power of the module remains at or below the maximum rated power.

#### Parallel and Droop Current Sharing

The module has voltage droop function is capable of parallel operation. There is a 250mV output voltage droop when output current varies from 0A to full load current, so the maximum  $\pm 25$ mV set point variation will guarantee the current sharing accuracy at room temperature within 10%. By connecting the Vin pin and the Vo pin of the parallel module together, the current sharing can be realized automatically.

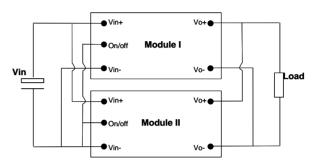

**Figure 21:** Parallel and droop current sharing configuration for no redundancy requirement system

If system has no redundancy requirement, the module can be parallel directly without adding external oring-fet; whereas, if the redundancy function is required, external oring-fets are needed.

To ensure normal parallel operation, the following precautions must be observed:

1. The current sharing accuracy equation is: X% = | Io - ( Itotal / N ) | / Irated, Where,Io is the output current of each module; Itotal is the total load current; N is parallel module numbers; Irated is the rated full load current of per module.

2. To ensure a better current sharing accuracy, below design guidelines should be followed:

a) The inputs of the converters must be connected to the same voltage source; and the PCB trace resistance from Input voltage source to Vin+ and Vin- of each converter should be equalized as much as possible.

b) The PCB trace resistance from each converter's output to the load should be equalized as much as possible.

c) For accurate current sharing accuracy test, the module should be soldered in order to avoid the unbalance of the contact resistance between the modules to the test board.



3. To ensure the parallel module can start up monotonically without trigging the OCP, below design guideline should be followed:

a) Before all the parallel modules finish start up, the total load current should be lower than the rated current of a single module.

b) The ON/OFF pin of the converters should be connected together to keep the parallel modules start up at the same time.

c) Since theinput under voltage lockout set point varies slightly from module to module, the dv/dt of the rising edge of the input source voltage must be greater than 1V/ms to ensure the parallel modules start up at the same time.

# **THERMAL CONSIDERATIONS**


Thermal management is an important part of the system design. To ensure proper, reliable operation, sufficient cooling of the power module is needed over the entire temperature range of the module. Convection cooling is usually the dominant mode of heat transfer.

Hence, the choice of equipment to characterize the thermal performance of the power module is a wind tunnel.

#### **Thermal Testing Setup**

Delta's DC/DC power modules are characterized in heated vertical wind tunnels that simulate the thermal environments encountered in most electronics equipment. This type of equipment commonly uses vertically mounted circuit cards in cabinet racks in which the power modules are mounted.

The following figure shows the wind tunnel characterization setup. The power module is mounted on a 185mmX185mm,70µm (2Oz),6 layers test board and is vertically positioned within the wind tunnel. The space between the neighboring PWB and the top of the power module is constantly kept at 6.35mm (0.25").

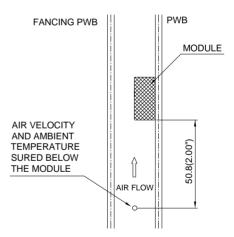



#### Figure 22: Wind tunnel test setup

#### **Thermal Derating**

Heat can be removed by increasing airflow over the module. To enhance system reliability; the power module should always be operated below the maximum operating temperature. If the temperature exceeds the maximum module temperature, reliability of the unit may be affected.

# 200

# THERMAL CURVES (WITH HEAT SPREADER)



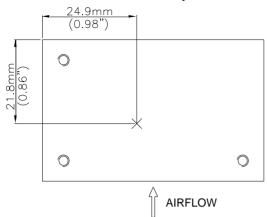


Figure 23: \* Hot spot 1 temperature measured point. the allowed maximum hot spot temperature is defined at 102  $\mathcal{C}$ 

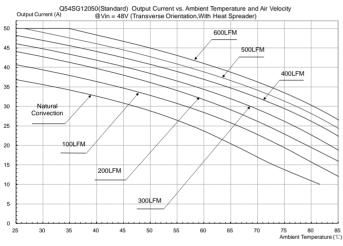

**Figure 25** Output power vs. ambient temperature and air velocity @Vin=48V(Transverse Orientation, airflow from Vin- to Vin+, with heat spreader)

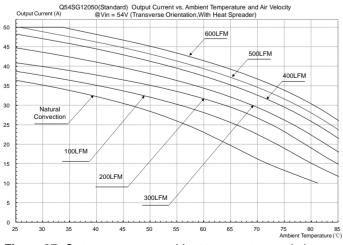

**Figure 27:** Output power vs. ambient temperature and air velocity @Vin=54V(Transverse Orientation, airflow from Vin- to Vin+, with heat spreader)

# THERMAL CURVES (WITH 0.5" HEIGHT HEAT SINK)



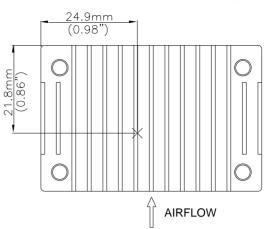


Figure 24: \* Hot spot 2 temperature measured point. the allowed maximum hot spot temperature is defined at 90  $\mathcal{C}$ 

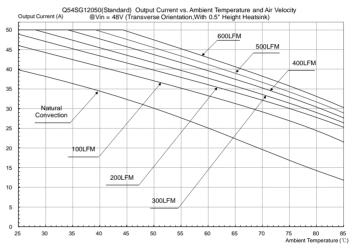

**Figure 26:** Output power vs. ambient temperature and air velocity @Vin=48V(Transverse Orientation, airflow from Vin- to Vin+, with 0.5" height heat sink)

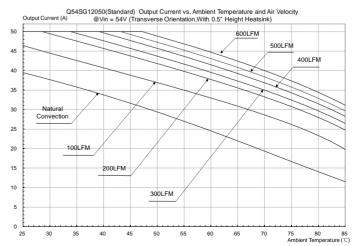


**Figure 28:** Output power vs. ambient temperature and air velocity @Vin=54V(Transverse Orientation, airflow from Vin- to Vin+, with 0.5" height heat sink)



# **MECHANICAL DRAWING (WITH HEAT SPREADER)**


\*For modules with through-hole pins and the optional heat spreader, they are intended for wave soldering assembly onto system boards, please do not subject such modules through reflow temperature profile.

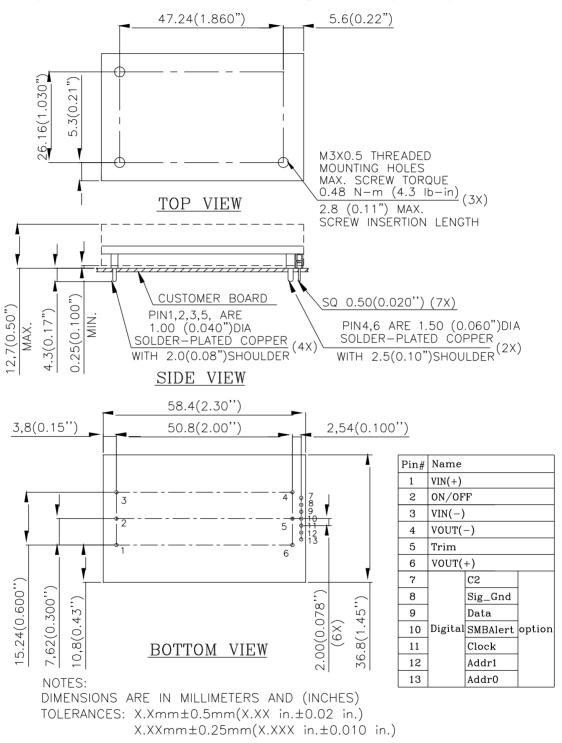

#### **Pin Specification:**

Pins 1-3&5 Pins 4 &6 Pins 7-13 1.00mm (0.040") diameter (All pins are copper with matte Tin plating over Nickel under plating) 1.50mm (0.059") diameter (All pins are copper with matte Tin plating over Nickel under plating) SQ 0.50mm(0.020") (All pins are copper with gold flash plating)



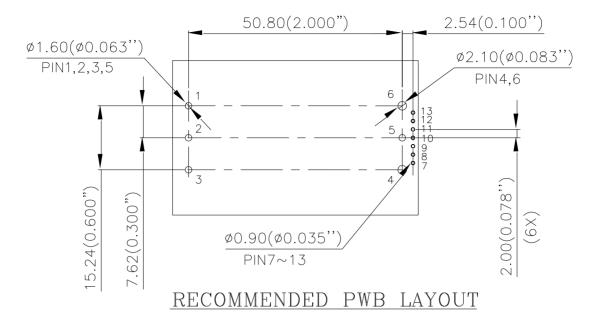

NOTES:

DIMENSIONS ARE IN MILLIMETERS AND (INCHES) TOLERANCES: X.Xmm±0.5mm(X.XX in.±0.02 in.) X.XXmm±0.25mm(X.XXX in.±0.010 in.)



| Q                  | 54     | S                    | G                   | 120       | 50                | Ν                      | R                   | F           |         | G                           |          |              |                  |  |  |  |  |                          |             |   |    |     |    |     |
|--------------------|--------|----------------------|---------------------|-----------|-------------------|------------------------|---------------------|-------------|---------|-----------------------------|----------|--------------|------------------|--|--|--|--|--------------------------|-------------|---|----|-----|----|-----|
| Type of<br>Product |        | Number of<br>Outputs | Product<br>Series   |           | Output<br>Current |                        | Pin Length<br>/Type |             |         | Option Code                 |          |              |                  |  |  |  |  |                          |             |   |    |     |    |     |
| Q -<br>Quarter     | 54 -   | S - Single           | G - Full<br>digital | 120 - 12V | 50 - 50A          | N -<br>Negative<br>P - | N - 0.145″          | F- RoHS 6/6 |         | Droop<br>Current<br>Sharing | Trim Pin | PMBus<br>pin | Heat<br>spreader |  |  |  |  |                          |             |   |    |     |    |     |
| Brick              | 40~60V | 0 Olingie            | control             | 120 120   |                   |                        |                     | 00 00/1     | 00 00/1 | 00 00/1                     | 00 00/1  |              | P -<br>Positive  |  |  |  |  | e R - 0.17"<br>Y - 0.20" | (Lead Free) | С | NO | Yes | No | Yes |
|                    |        |                      |                     |           |                   |                        |                     |             | G       | No                          | Yes      | Yes          | Yes              |  |  |  |  |                          |             |   |    |     |    |     |
|                    |        |                      |                     |           |                   |                        |                     |             | J       | Yes                         | Yes      | Yes          | Yes              |  |  |  |  |                          |             |   |    |     |    |     |

# **MODEL LIST**

| MODEL NAME     | INPUT   |     | OUTPUT  |     | EFF @ 100% LOAD |
|----------------|---------|-----|---------|-----|-----------------|
| Q54SG12050NRFG | 40V~60V | 17A | 12V     | 50A | 96%             |
| Q54SG12050NYFC | 40V~60V | 17A | 12V     | 50A | 96%             |
| Q54SG12050NRFJ | 40V~60V | 17A | 11.875V | 50A | 95.8%           |

Default remote on/off logic is negative and pin length is 0.170"

For different remote on/off logic and pin length, please refer to part numbering system above or contact your local sales office.

#### CONTACT: www.deltaww.com/dcdc

USA: Telephone: East Coast: 978-656-3993 West Coast: 510-668-5100 Fax: (978) 656 3964

#### Email: dcdc@deltaww.com

**Europe:** Telephone: +31-20-655-0967 Fax: +31-20-655-0999 Asia & the rest of world: Telephone: +886 3 4526107 x 6220~6224 Fax: +886 3 4513485

#### WARRANTY

Delta offers a two (2) year limited warranty. Complete warranty information is listed on our web site or is available upon request from Delta.

Information furnished by Delta is believed to be accurate and reliable. However, no responsibility is assumed by Delta for its use, nor for any infringements of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Delta. Delta reserves the right to revise these specifications at any time, without notice.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.