




Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

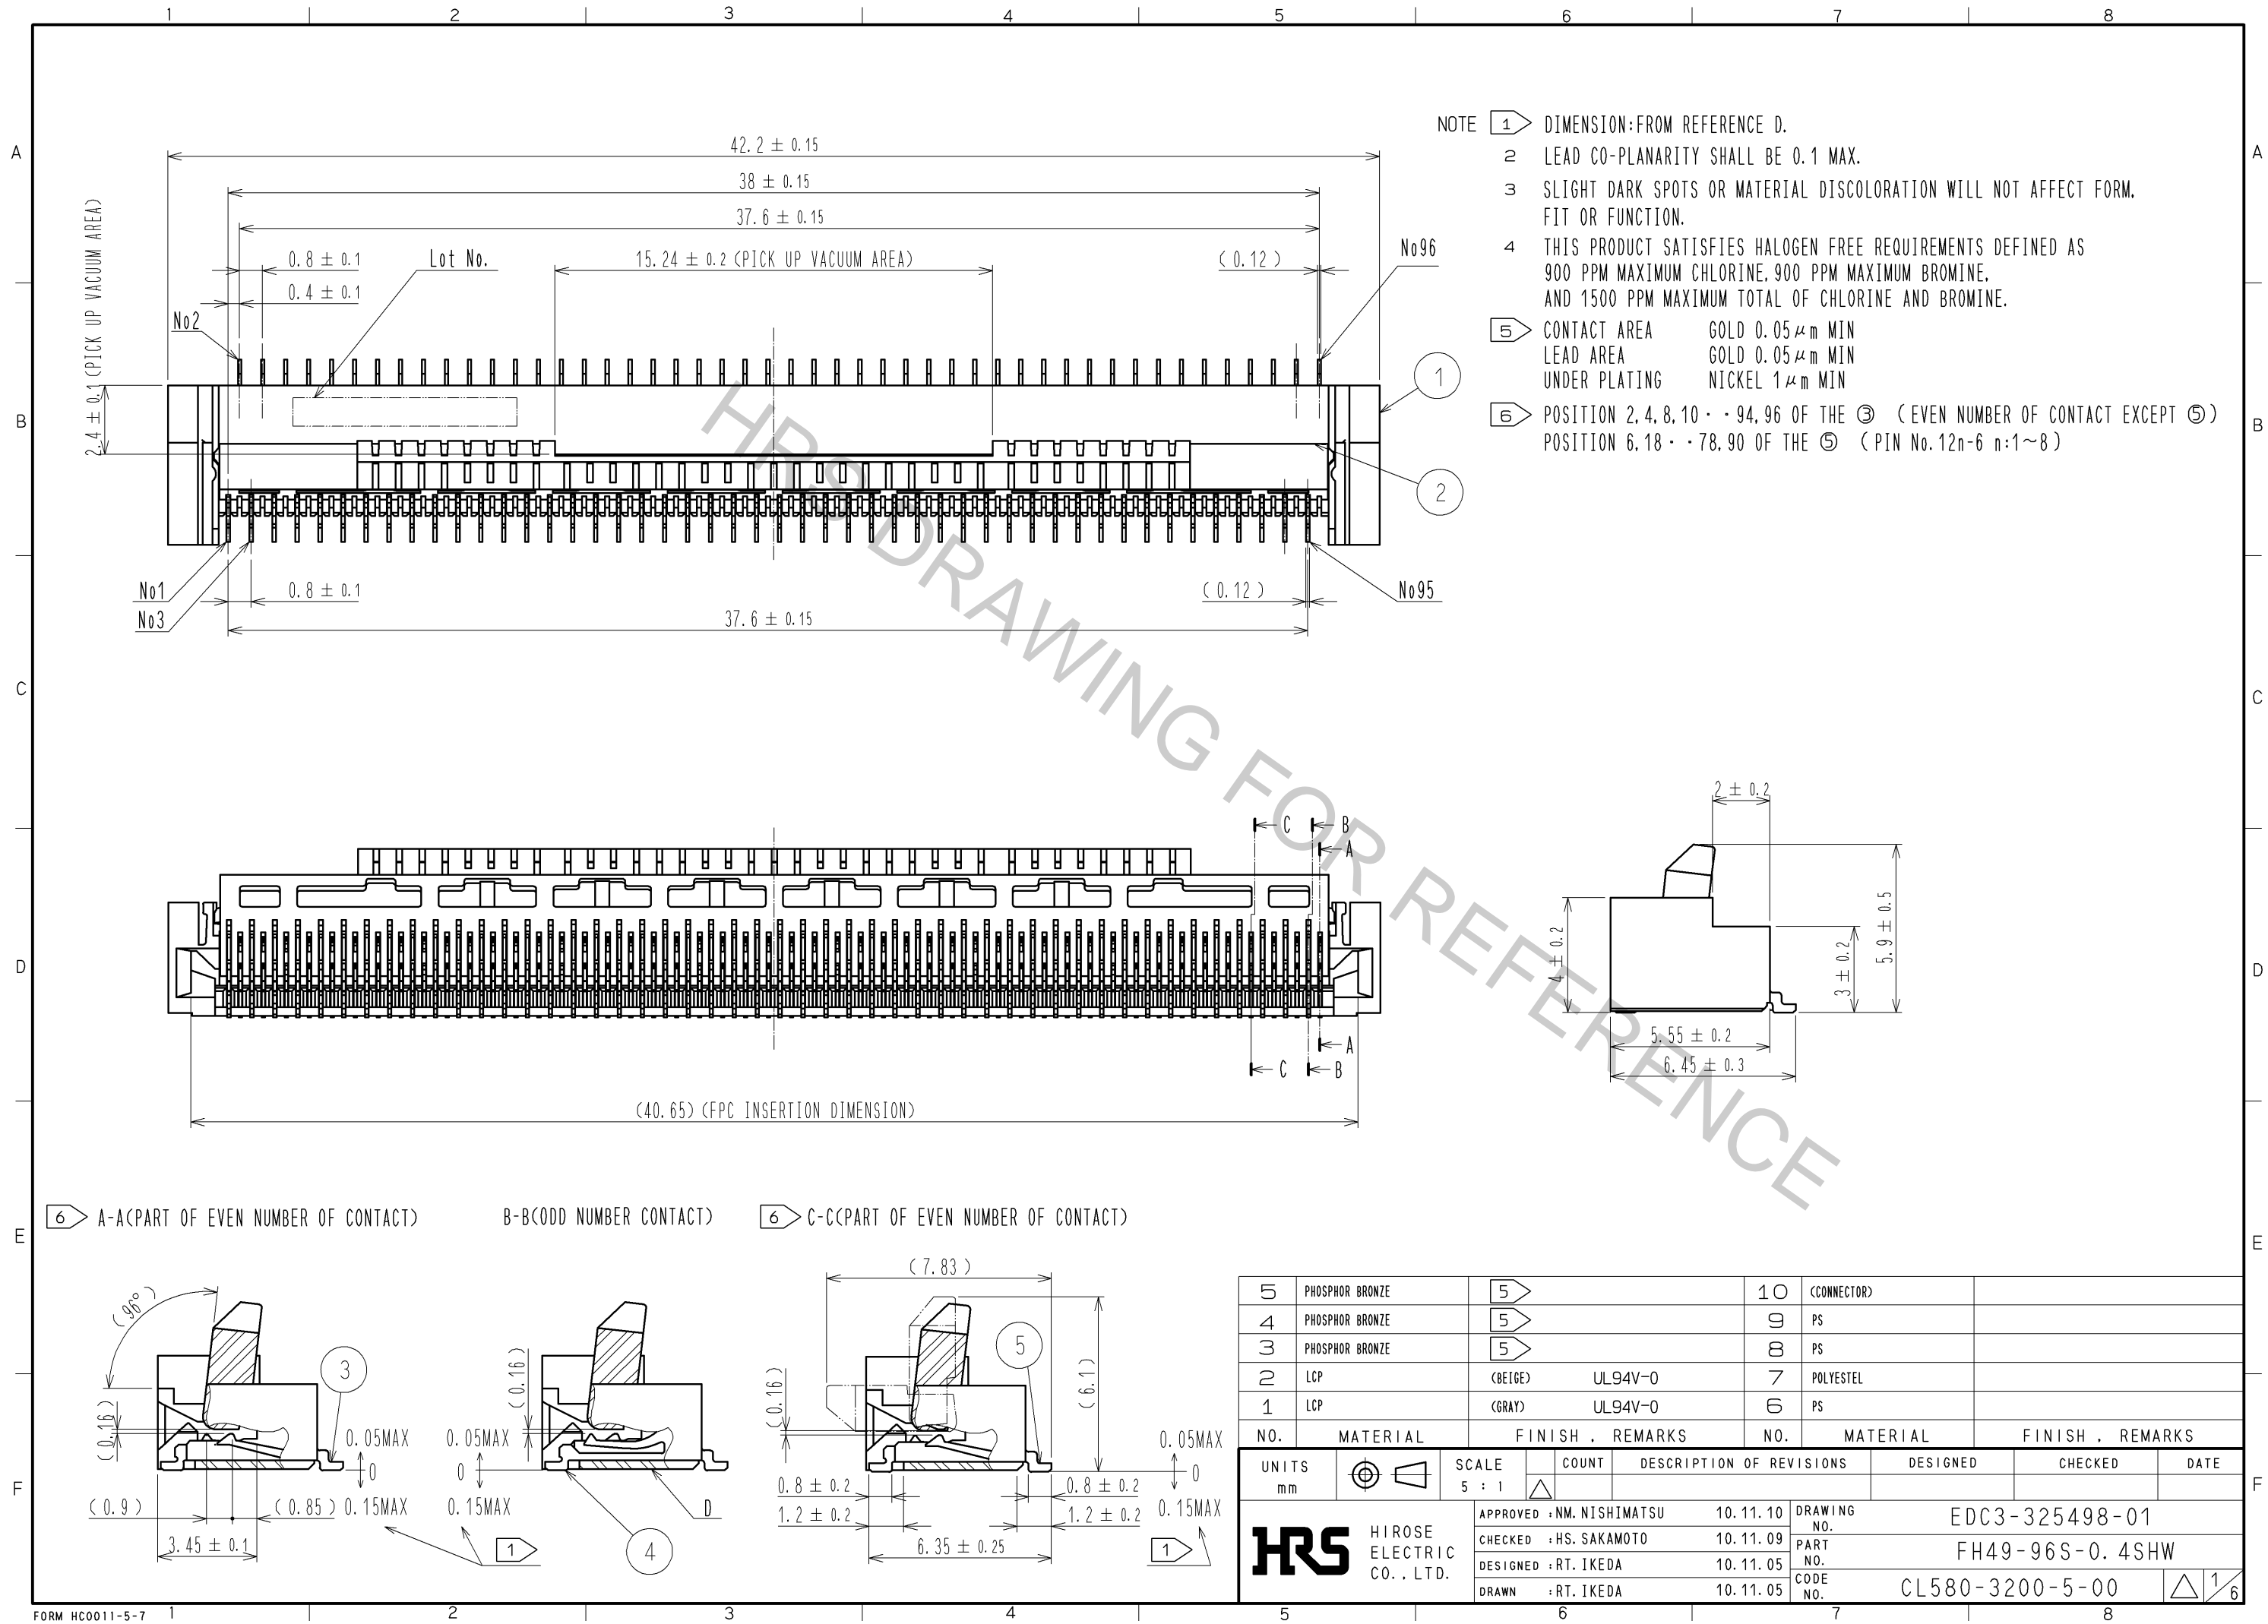

Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

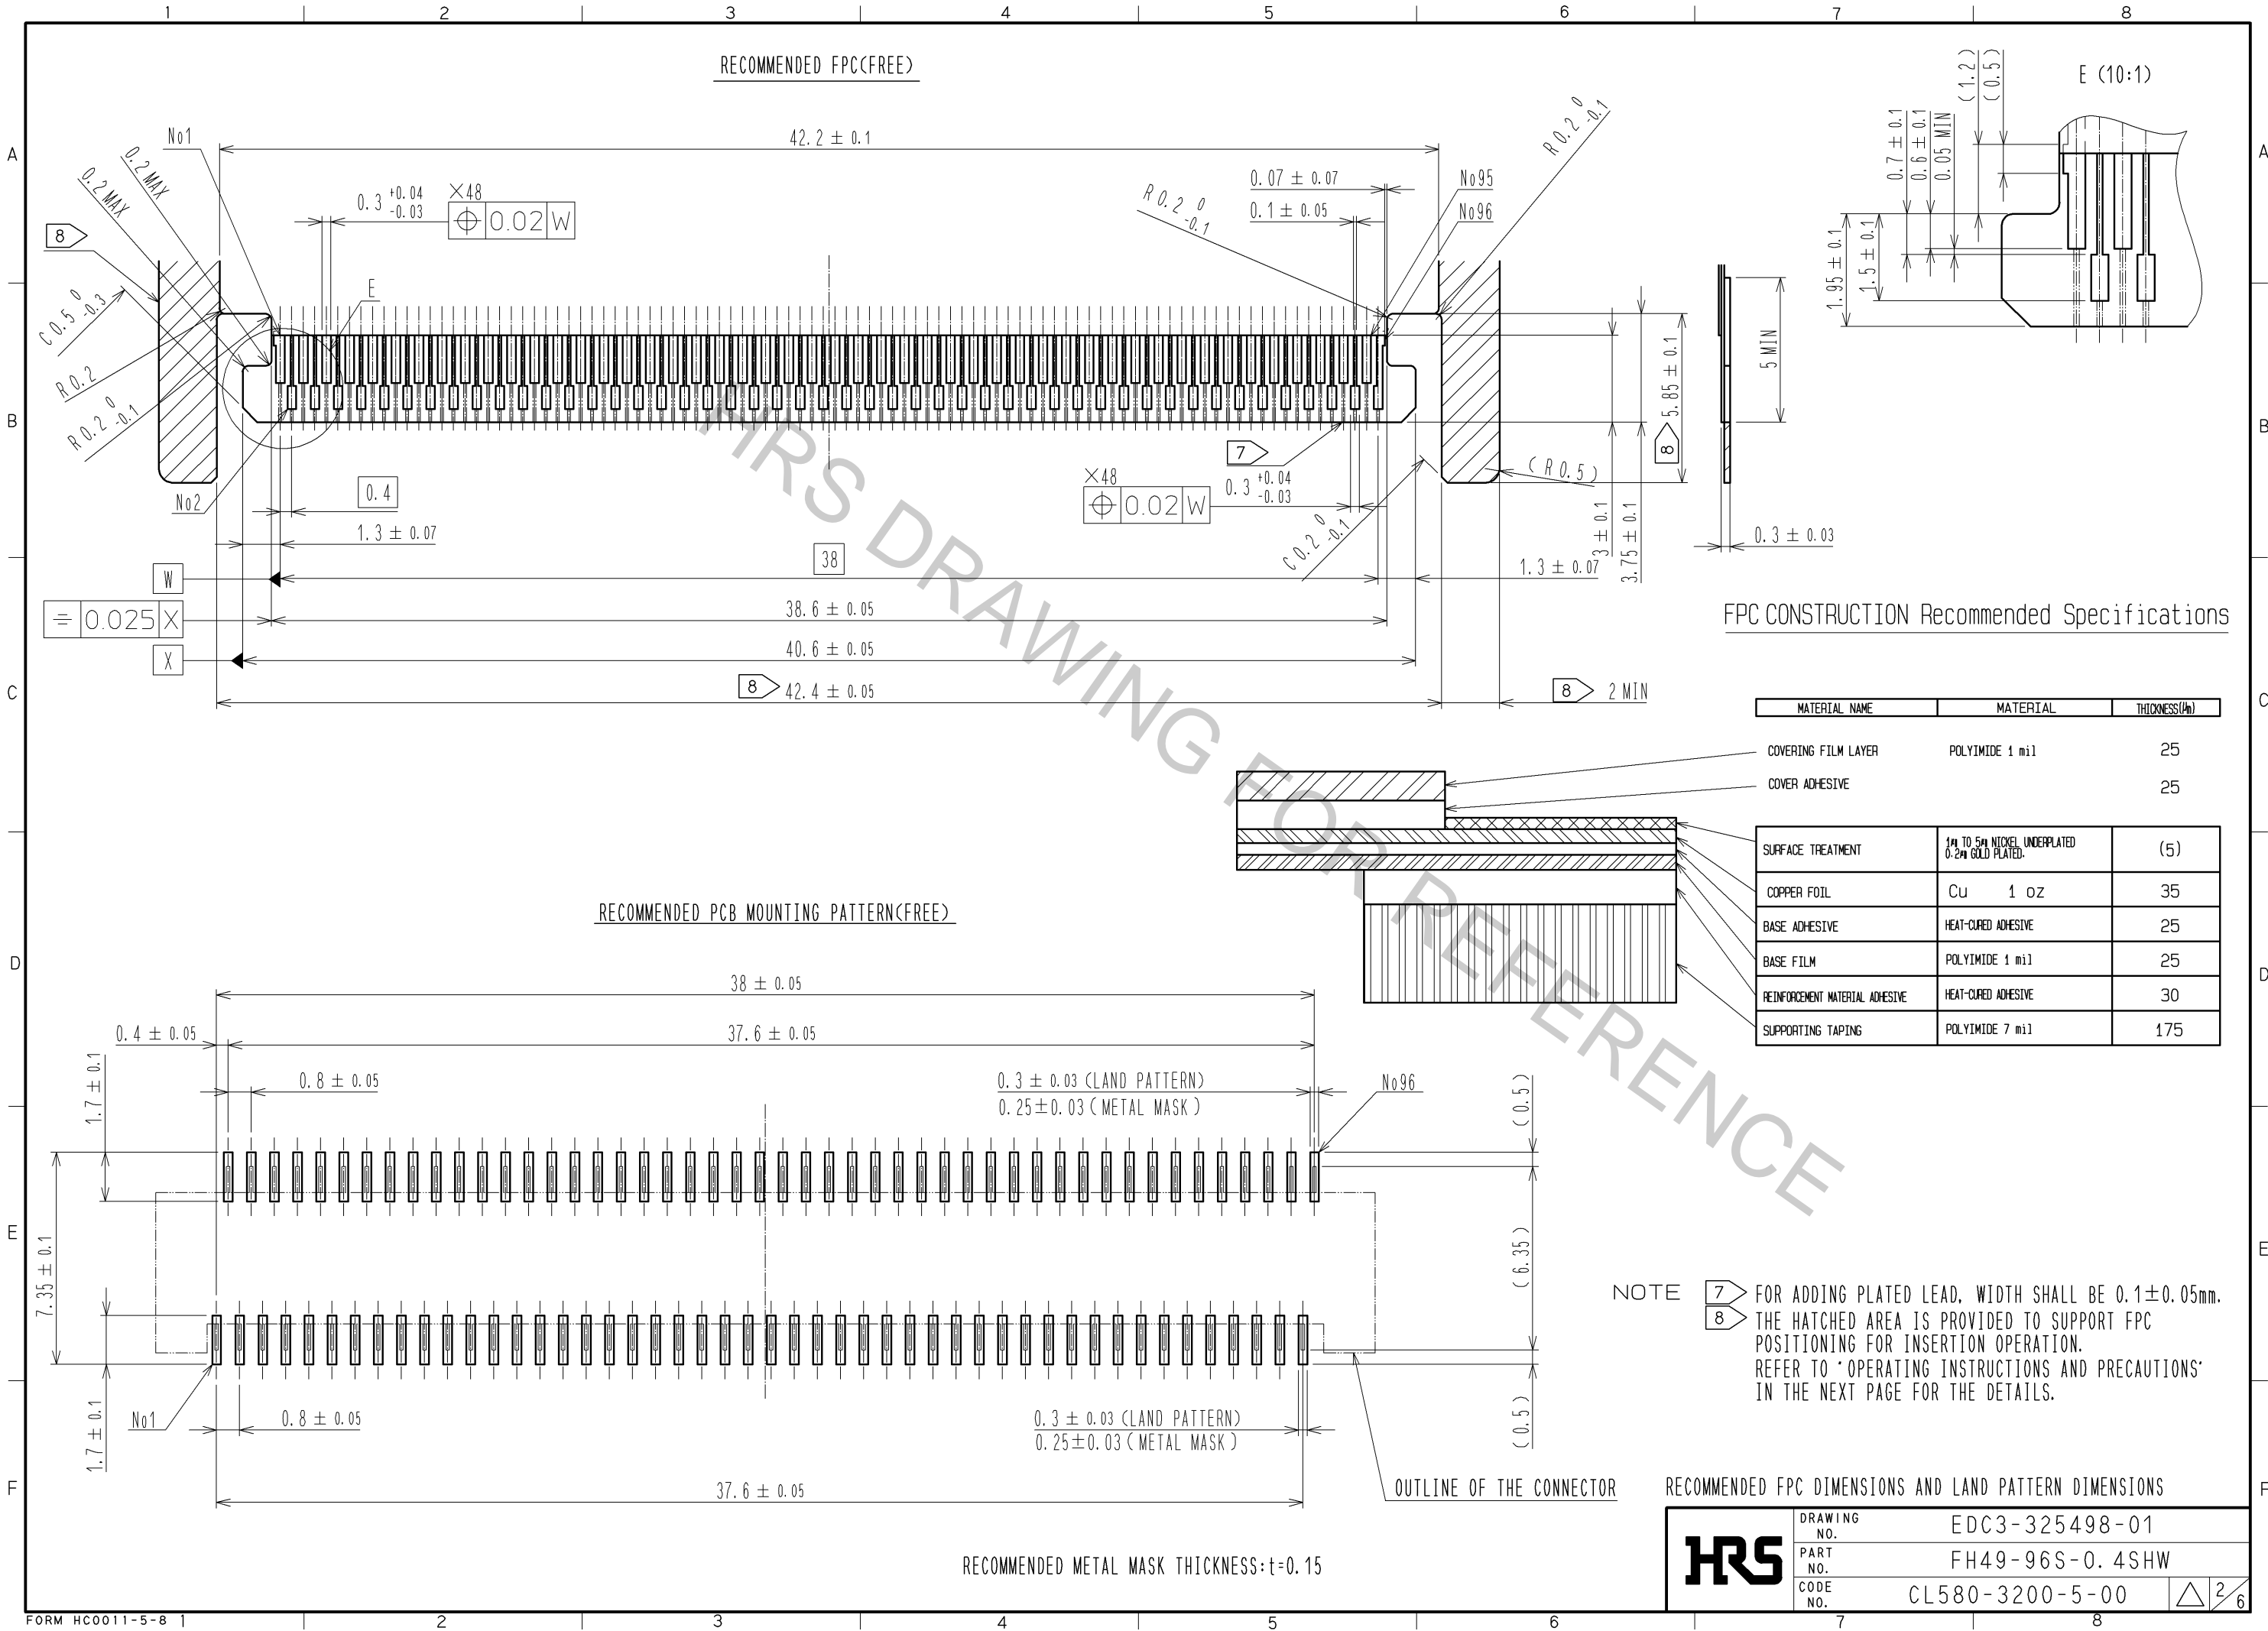

Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

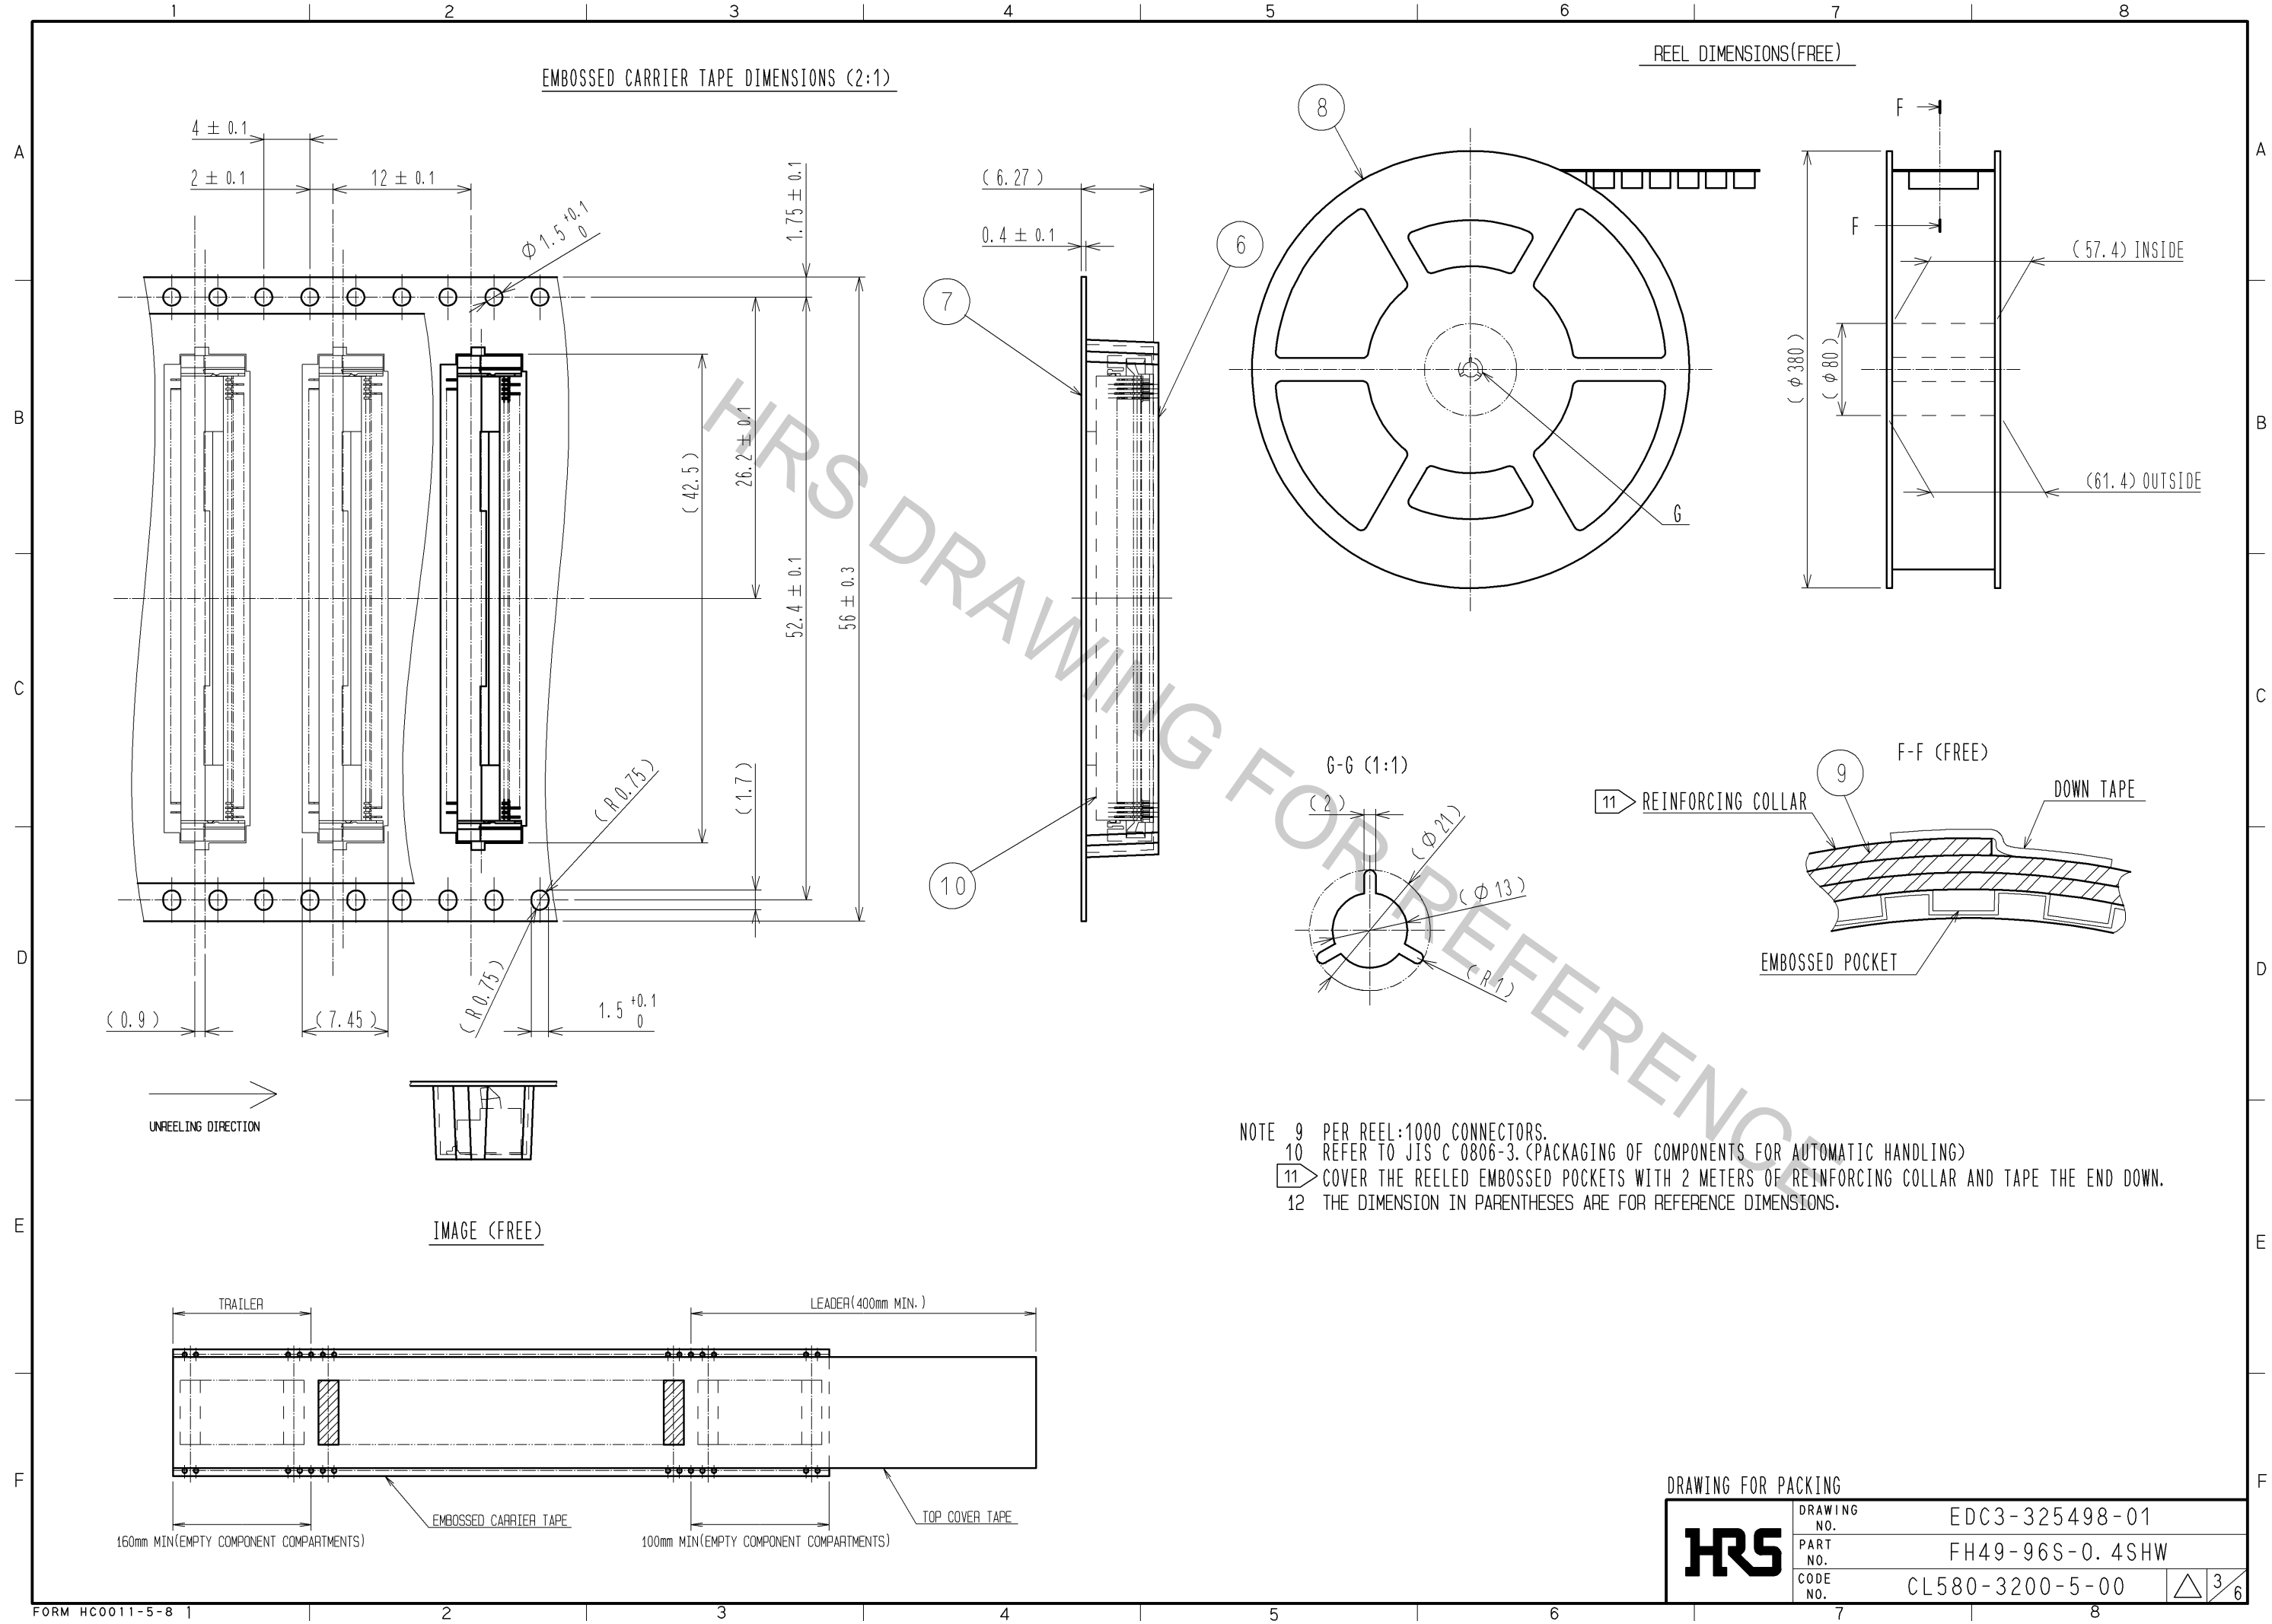


Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

This connector requires careful handling.
Follow recommendations given below.
The numerical values shown are not part of the connector specification.


[MOUNTING ON THE PCB]

- ◆Warp of Board
Minimize warp of the board as much as possible.
Lead co-planarity is 0.1 mm max.
Excessive warp of the board may result in solder joint failures.
- ◆Forces on the connector
Do not apply a force of 1 N or more to the connector before mounting it on the board.
Do not insert the FPC or operate the connector before mounting it on the board.
- ◆Forces on the board
When breaking-up large board into smaller one exercise caution a NOT to apply forces to the mounted connectors.
When mounting the boards in the device with the screws exercise caution as NOT to apply forces to the mounted connectors.
- ◆Bending of the board
The bend of the 100 mm wide board should be 1 mm or less(as shown below).
Excessive bending of the board may cause malfunction or damage of the connector.

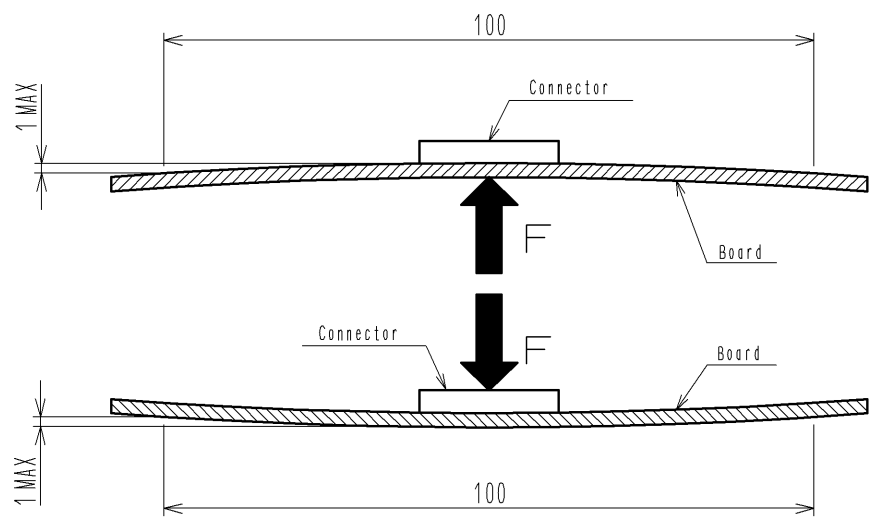

[INSERTION OF THE FPC AND ROCK]


- ◆Use of the actuator
When using fingernails to use the actuator exercise caution NOT to damage or deform the contacts.

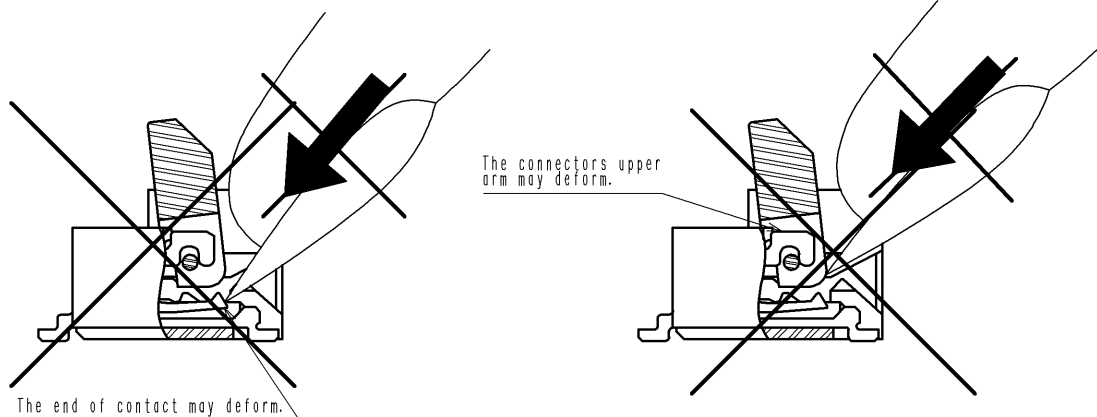

The actuator is designed to rotate on its axis as shown in the figure below.
Make sure to use rotating motion when operating it.
The actuator is designed to open 96 degrees max.
Do not push it back further than this.
This may deform contacts, break-off the actuator or damage the connector.



Operate the actuator only as instructed.
Do not attempt to dislodge the open actuator as shown below.

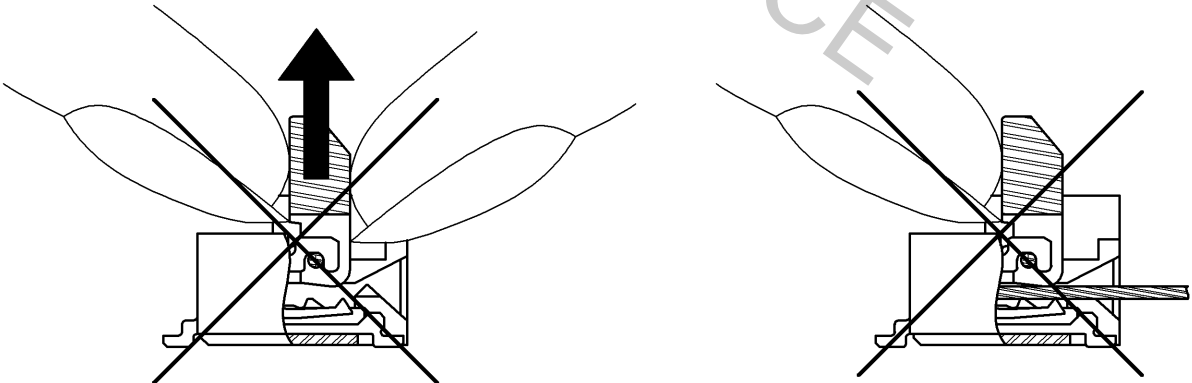

<ADDITIONAL RECOMMENDATIONS 1>

HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00
		4/6

Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.




◆Contact point orientation
This is a bottom contact point connector.
FPC must be inserted with the exposed contact surfaces facing down.

◆Insertion of FPC

① Pre-insertion



Position the FPC with the actuator fully open, aligning the both FPC ends to connector taper until the FPC end is inserted to the FPC insertion opening.

※ If operation or routing condition does not allow straight insertion, optional FPC guide could prevent angled FPC insertion.
(Refer to the FPC dimensions on page 2 for the details.)

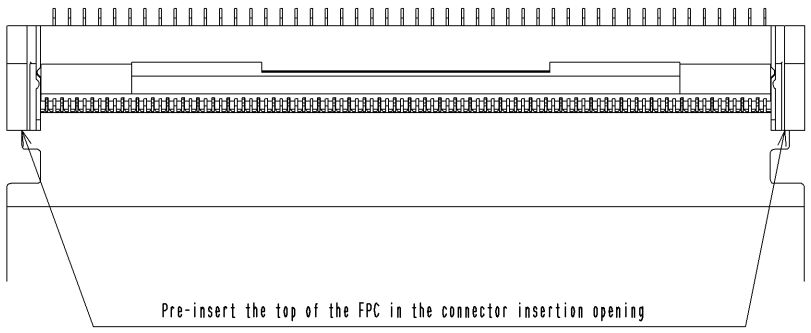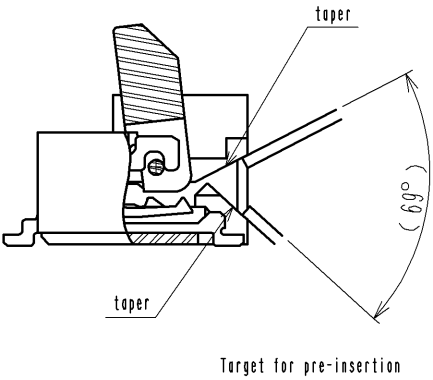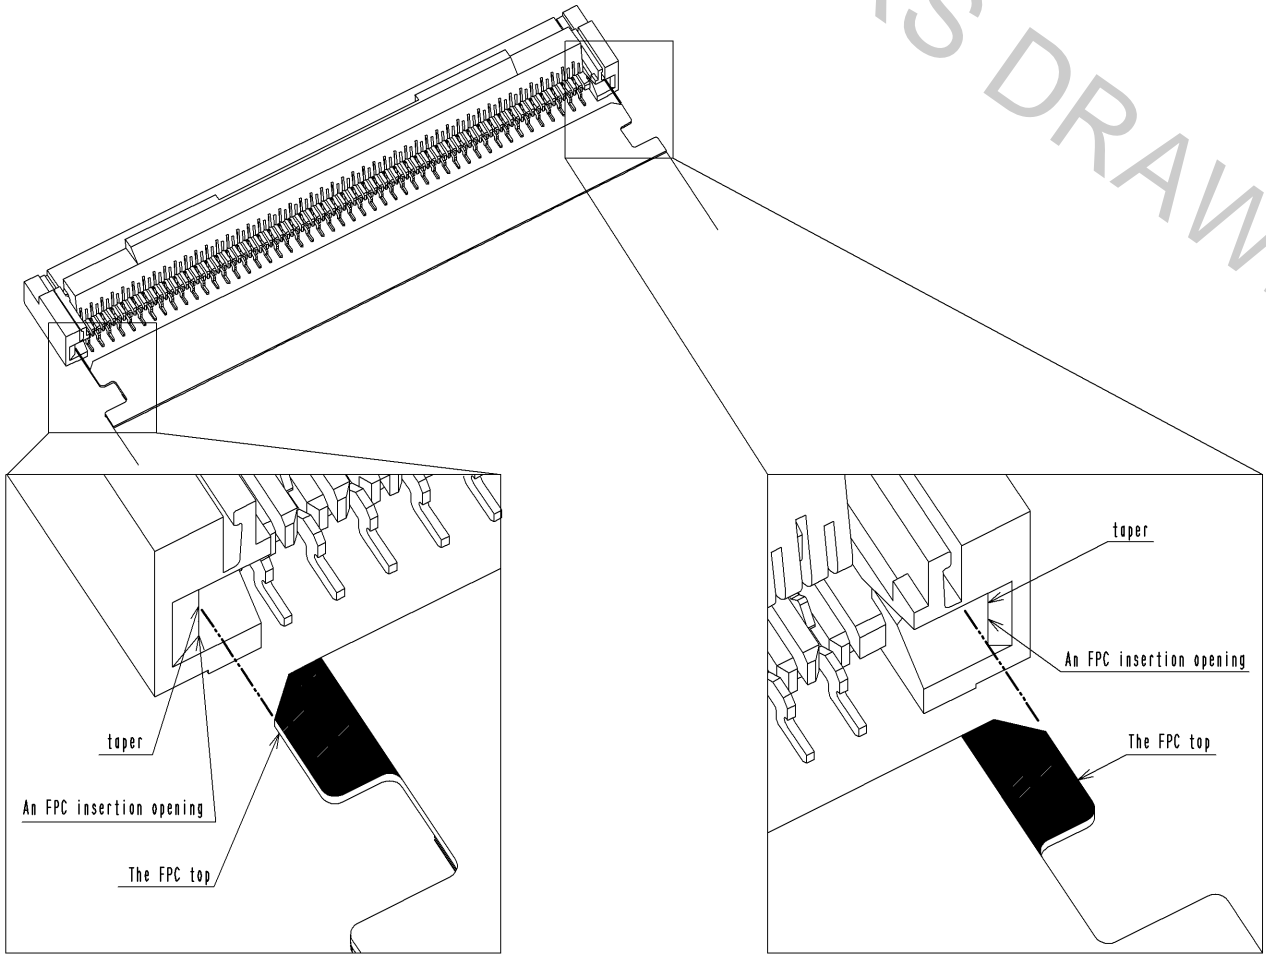


② Full insertion

After FPC tops are inserted to FPC opening, insert the FPC in the connector opening, targeting between the lower line of the taper and the bottom of the insertion opening, parallel to the PCB and vertical to FPC insertion opening, until the FPC end reaches to the opening end. Make sure not to bend the FPC during insertion.

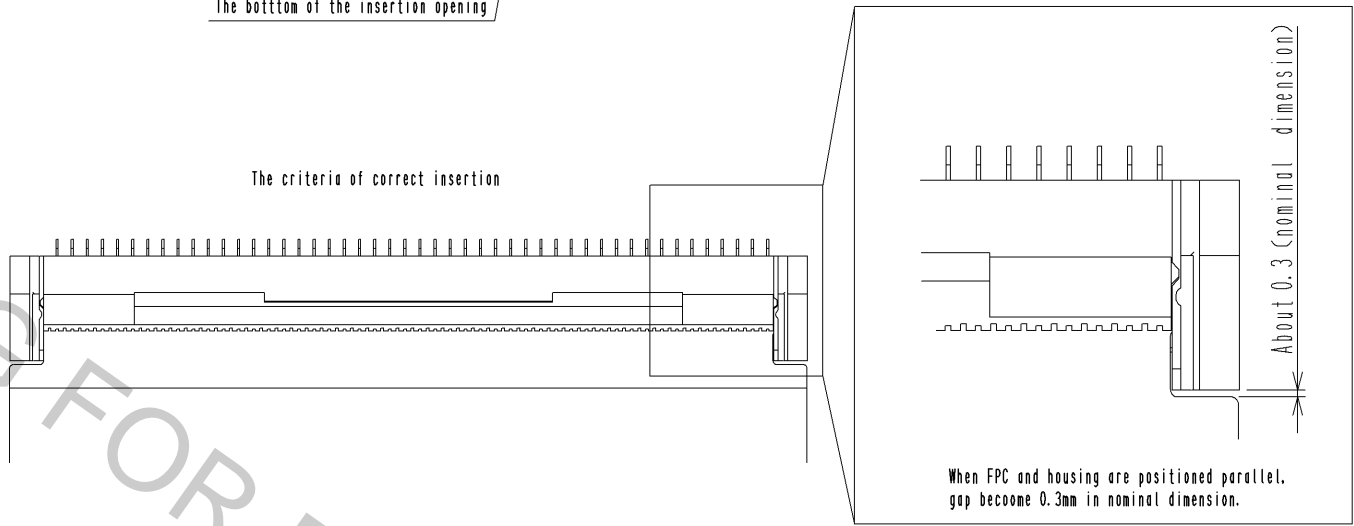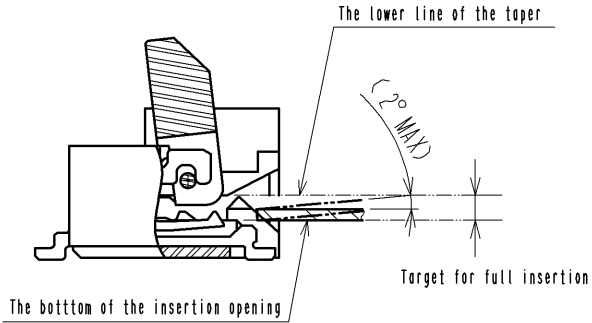

Do not move the FPC to the side direction when above operation is not achieved.
Remove the FPC at first, confirm there is no damage on the FPC and connector, and then start the insertion operation from the beginning.

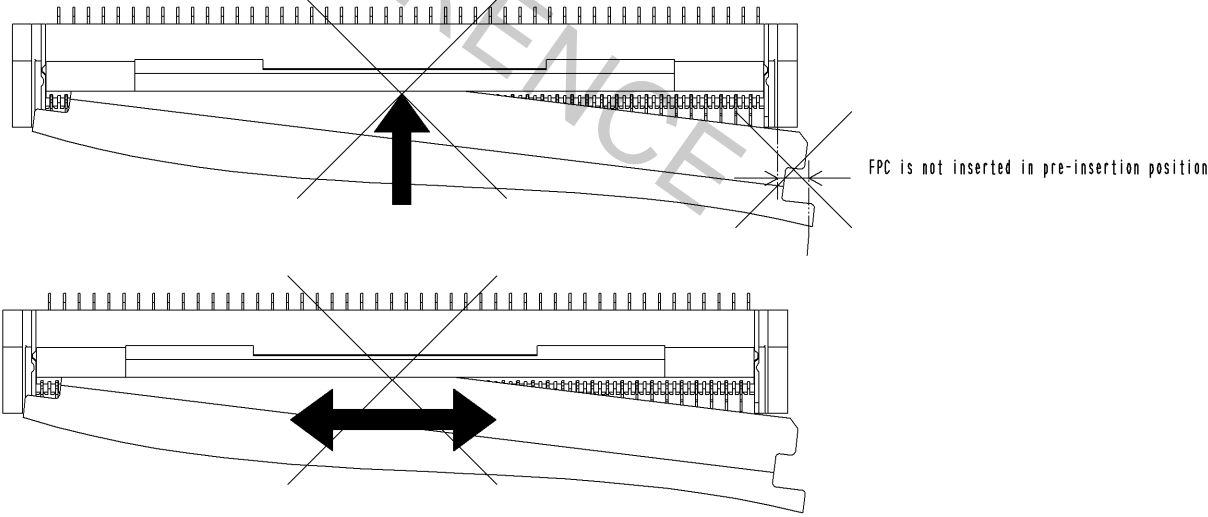


<ADDITIONAL RECOMMENDATIONS 2>

HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00
		5/6


Dec.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

Do not insert the FPC off the specified angle for full FPC insertion, as this may cause contact deformation and/or FPC damage by FPC end nocking the contacts.
Also, this may cause pattern breakage by FPC bent and/or conduction failure by insufficient insertion.

- ※Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.
Besides, it is not difficult to insert FPC correctly all the way to the end.
Design the proper layout of parts.
- ※Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.

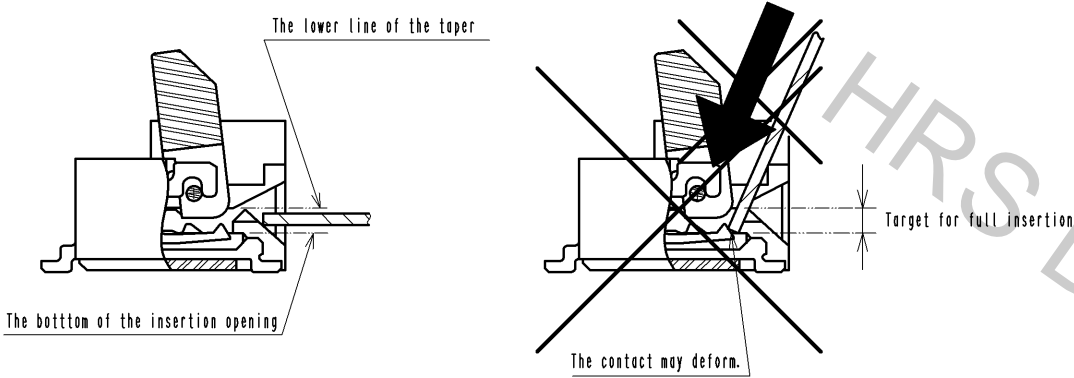


Do not apply force to the actuator during FPC full insertion procedure.
FPC insertion could become stiff and/or difficult for wiping.

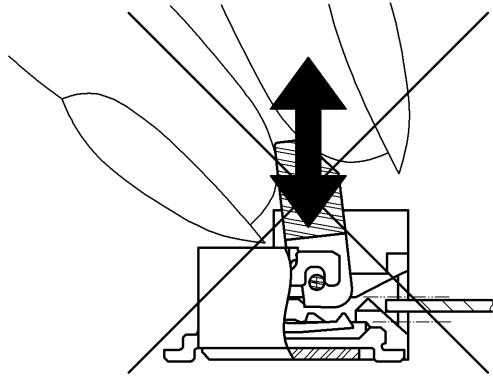


[INSTRUCTIONS ON FPC LAYOUT AFTER CONNECTION]

- ◆ Load to FPC
Be very careful not to apply any force to the FPC after inserting it.
Otherwise, the connector may become unlocked or the FPC may break.
Fix the FPC, in particular, when loads are applied to it continuously.
Design the FPC layout with care not to bend it sharply near the insertion opening.
Please take 5mm MIN from the reinforcement taping.

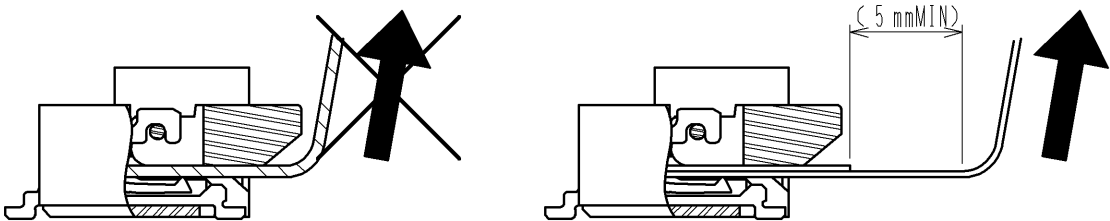


[Instructions on removing FPC]

- ◆ Do not apply forces only at one end(right figure below) as this may cause damage to the actuator.

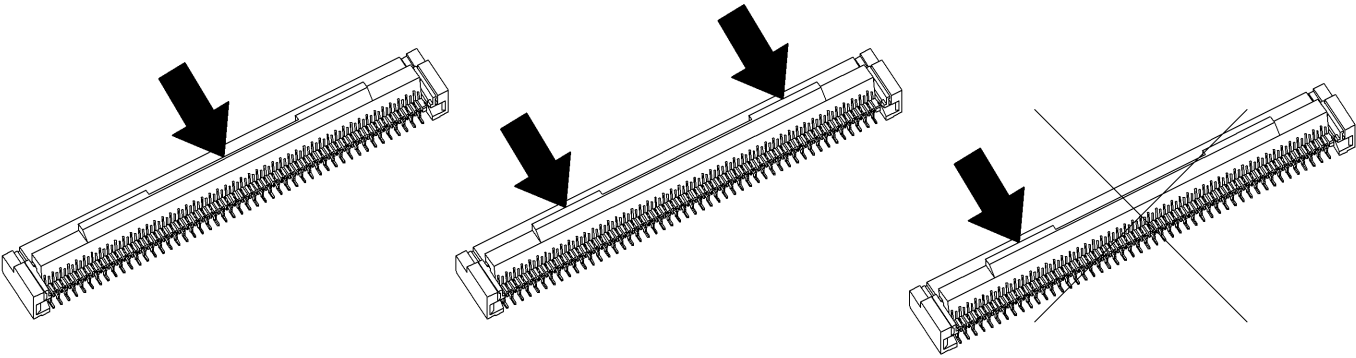

- ◆ Release the actuator to remove the FPC.

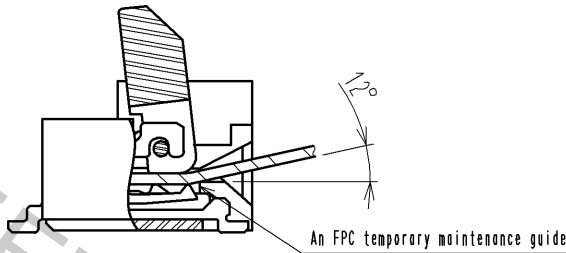

[Other recommendations]

- ◆ Manual soldering
 1. Do not perform soldering operations with the FPC inserted in the connector.
 2. The soldering iron must contact only the terminals.
Do not touch any other part of the connector with the soldering iron.
 3. Do not apply excessive solder (or flux).
If excessive solder (or flux) is applied on the terminals, solder (or flux) may adhere to the contacts or rotating parts of the actuator resulting in the poor contact or rotation failure of the actuator.

<ADDITIONAL RECOMMENDATIONS 3>

HRS	DRAWING NO.	EDC3-325498-01
	PART NO.	FH49-96S-0.4SHW
	CODE NO.	CL580-3200-5-00
		△ 6/6



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.