

# iMCU7100EVB User's Guide

Version 1.0



© 2011 WIZnet Co., Inc. All Rights Reserved. For more information, visit our website at <u>http://www.wiznet.co.kr</u>

©Copyright 2011WIZnet Co., Inc. All rights reserved.



## **Table of Contents**

1	Overv	'iew	3
	1.1	Introduction	3
	1.2	Specification	4
2	Gettir	ng Started	5
	2.1	Power On	5
	2.2	Ping Test	5
	2.3	Programming	6
	2.4	TCP Server Demonstration	6
3	Produ	ct Description	10
	3.1	Package and Contents	10
	3.2	Board Layout	
	3.3	Hardware Description	
	3.4	Physical Specification	



## 1 Overview

iMCU7100EVB is an Evaluation Board where the function and performance of W7100A can be tested. In this document, basic ping and TCP serer test will be tested.

## 1.1 Introduction

iMCU7100EVB is an Evaluation Board made for testing whole functions of internet embedded MCU W7100A.iMCU7100EVB can easily build serial-to-Ethernet communication environment by using RS-232 port and LAN port; W7100A can also use supported Character LCD and other added ports to control and test the all functions of theW7100A chip.

The list of Application notes from WIZnet website is as followed.

- ✓ TCP server, client
- ✓ UDP
- ✓ DHCP
- ✓ DNS client
- ✓ DDNS
- ✓ HTTP server, client
- ✓ Telnet
- ✓ Serial to Ethernet server, client, UDP
- ✓ IPRAW
- ✓ MACRAW
- ✓ UART
- ✓ Timer
- ✓ LCD
- ✓ I<sup>2</sup>C



## 1.2 Specification

ltem	Details	Note	
MCU	Internet Embedded MCU - W7100A	8051 compatible	
Memory	64KBytes Data Memory (RAM)		
	64KBytes Code Memory (ROM)	Emboddod in W/71004	
	2KBytes Boot code Memory	Embedded in wy toua	
	256Bytes Data Flash		
Serial	On board RS-232C 1Port with DB9 Connector		
Ethernet	On board RJ-45 with Transformer		
LCD	16Character * 2Line Character LCD		
LED	LED General purpose LED 3Ea		
	Network Status LED 8Ea		
Button	Reset Switch 1Ea		
Debugger	On board Debugger Socket		
Expansion Port	pansion Port MCU port expansion		
	- 32Pin (8pin * 4) 2.54mm Pitch Pin-Header Hole		
	- 14Pin (7pin * 2) 2.54mm Pitch Pin-Header Hole		
	- 32Pin (8pin * 4) 2.00mm Pitch Pin-Header Hole		
	- 14Pin (7pin * 2) 2.00mm Pitch Pin-Header Hole		
	Dummy Hole		
	- 167Pin 2.54mm Pitch Dummy Hole		
	- 236Pin 2.00mm Pitch Dummy Hole		
Power	DC 5V / 2A Adapter	Built-in	



## 2 Getting Started

### 2.1 Power On

Connect Character LCD, UTP cable, RSR232, and the power cable to the iMCU7100EVB.



<Fig. 2.1> iMCU7100EVB

Power on the iMCU7100EVB board, and check the following.

- 1. Check whether POWER LED(D13) is ON.
- 2. Check whether "iMCU7100 EVB" and "192.168.001.002" appears on the Character LCD.

If the above two are checked iMCU7100EVB board is normally working.

## 2.2 Ping Test

Run the command prompt at thetest PC, and execute the ping command to the IP of the test PC. Send the ICMP ping request and check the ICMP ping reply from the PC. Note: the test PC and the iMCU7100EVB board must be placed on the same sub-network.

- Confirm the network information of Test PC as the following Source IP Address : 192.168.1.xxx Gateway IP Address : 192.168.1.1 Subnet Mask : 255.255.255.0
- Execute ping command as the following "C:\> ping 192.168.1.2"



C:\>ping 192.168.1.2
Pinging 192.168.1.2 with 32 bytes of data:
Reply from 192.168.1.2: bytes=32 time<1ms TTL=128
Ping statistics for 192.168.1.2:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = Oms, Maximum = Oms, Average = Oms
C:₩>_

<Fig 2.2> Ping test

### 2.3 Programming

The iMCU7100EVB uses the WizISP program or W7100A debugger to program the compiled binary image(firmware). Please refer to the WizISP program guide and W7100A debugger guide for more detailed information.

## 2.4 TCP Server Demonstration

The document for TCP server application note and the sample code are included in the bundle CD. The application note can also be downloaded from the <u>WIZnet website</u>. User can easily test the TCP loopback server demonstration by using the sample code.

Lets test a simple TCP server demonstration as followed.

- 1. Confirm the testing environment.
  - $\circ$  Connect test PC to iMCUW7100EVB by using UTP cable directly.
  - $\circ$  Connect test PC to iMCUW7100EVB by using Serial able directly.
  - Connect 5V power adaptor to test PC
- 2. Confirm the network information of test PC as fallows
  - Source IP Address : 192.168.0.2
  - o Gateway IP Address : 192.168.0.1
  - o Subnet Mask : 255.255.255.0
- After executing serial terminal program (ex: HyperTerminal), set up the properties as followed.



Properties	Setting Value
Bits Per second (Baud Rate)	115200 bps
Data Bits	8 Bits
Stop Bits	1 Bits
Parity	No
Flow Control	None

The serial message that indicates the operation of the TCP server is shown on the HyperTerminal. In order to check serial messages, the settings for HyperTerminal connection information must be done as shown in Figure 2.3. Check the COM port since it differs depending on the user's settings.

	9 / IL C II.	
CU7100	)-EVB Properties	8 23
Connect	To Settings	
	COM15 Properties	8
	Port Settings	
Coun		
Enter	Bits per second: 115200	I •
Area	Data bits: 8	•
Phone		
Conn	Parity: None	•
	Stop bits: 1	•
T	Tob and I	
R	Flow control: None	•
		Restore Defaults
-		

<Fig 2.3> Setting of HyperTerminal program

- 4. Turn on the iMCU7100EVB and check the power LED.
- Run AX1 as in the order below. (Please refer to AX1 user's manual for more details) Execute AX1 as shown in Fig 2.4



Listen(L) Ctrl+L Connect(C) Ctrl+N Send Close	Peer IP 192.168.1.2 OK Peer Port 5000 Cancel
(a) Connecting	(b)set IP and Port
iInChip Loopback Test Pr	rogram. TCP : Send Data 🛛 🛛
IE(E) TCP UDP CPUTICK	Peer IP Address : 192.168.1.2
Connect(C) Ctrl+N	- Llata Format
Connect(C) Ctrl+N	Size : 100 OK
Connect( <u>C</u> ) Ctrl+N Send Close	Size :      100      0K        Base Value(0-255) :      97      Cancel

Since iMCU7100EVB is operating in TCP server mode, select 'TCP Connect' from AX1 program and connect to the board. Enter the IP address and Port number of the iMCU7100EVB; the 'connected' message will show and connect to TCP server. If 'send' button is clicked, the loopback test will start. The data size and base value for the loopback test can be set by user.

#### 6. Loopback server Result

(a) Loopback server Result (HyperTerminal)



LOOPBACK_TEST_START CLOSED. CH : 0 CLOSED. CH : 1 CLOSED. CH : 2 CLOSED. CH : 3 CLOSED. CH : 3 CLOSED. CH : 5 CLOSED. CH : 5 CLOSED. CH : 7 LOOPBACK_TCPSStarted. CH : 0 LOOPBACK_TCPSStarted. CH : 1 LOOPBACK_TCPSStarted. CH : 2 LOOPBACK_TCPSStarted. CH : 3 LOOPBACK_TCPSStarted. CH : 3 LOOPBACK_TCPSStarted. CH : 5 LOOPBACK_TCPSStarted. CH : 5 LOOPBACK_TCPSStarted. CH : 5 LOOPBACK_TCPSStarted. CH : 6 LOOPBACK_TCPSStarted. CH : 7 Connected from client!! CH 0: Received 100 bytes from Client CH 0: Send 100 bytes to Client CH 0: Send 100 bytes to Client	



(b) Loopback server Result(AX1)



<Fig 2.6> Result of LOOPBACK server Demonstration on AX1

If the loopback test successfully starts, the message that was sent from AX1 to iMCU7100EVB will be sent back to AX1. Continuous loopback test can be operated if user wishes to.





## 3 Product Description

## 3.1 Package and Contents

	ltem	Quantity
	iMCU7100EVB Board	1
Board	16 x 2 Character LCD	1
	Power adapter (DC 5V / 2A)	1
Accessory	UTP Cable	1
	Serial Cable	1

#### <Table > 3.1 List of items contained in the iMCU7100EVB

- Sample codes and documents are available on <u>WIZnet website</u>.
  The H/W version of iMCU7100EVB board can change for performance/function improvement.
- The fine parts of the component might differ depending on the manufacturer.

Directory			Contents	
iMCU7100EVB	Documents	Manual	User's Manual	
		Datasheet	Datasheet of Main Parts	
		App Note	Application Notes	
	Hardware	Schematics	iMCU7100EVB Hardware Schematic	
		Parts List	iMCU7100EVB Parts List	
	Software	Firmware	iMCU7100EVB Firmware	
		Tools	AX1, WizISP	

#### <Table> 3.2 Web Contents

The content of software might differ depending on the version.
 Download the latest version of firmware, software, and documents at <u>WIZnet website</u>.



## 3.2 Board Layout



<Fig 3.1> Layout of iMCU7100EVB

• The description of each Part is shown in the Table 3.3 is as below.

No	Description	No	Description
1	WIZnetiMCUW7100A	2	RJ-45 Jack (integrated transformer)
3	RS-232C DB9 Connector	4	RS-232C 3Pin Header Hole (TTL)
5	DC 5V / 2A Adapter Jack	6	Power Switch
7	Reset Switch	8	Enable Boot Switch
9	PHY mode selection Switch	10	W7100ADebugger Connector
11	User LED * 3Ea	12	Network Status Indicate LED * 8Ea
13	Character LCD Connector	14	MCU Port Expansion Pin Header Hole
		14	32Pin (8pin * 4) 2.54mm Pitch
15	MCU Port Expansion Pin Header Hole	10	MCU Port Expansion Pin Header Hole
	14Pin (7pin * 2) 2.54mm Pitch	10	14Pin (7pin * 2) 2.00mm Pitch
47	MCU Port Expansion Pin Header Hole	40	Dummy Pin Header Hole
17	32Pin (8pin * 4) 2.00mm Pitch	18	236Pin 2.00mm Pitch Dummy Hole
10	Dummy Pin Header Hole		
19	167Pin 2.54mm Pitch Dummy Hole		

<Table 3.3> Parts Description of iMCU7100EVB



### 3.3 Hardware Description

#### iMCUW7100A (U1)

The W7100A is the one chip solution that includes a hardwired TCP/IP core and an 8-bit internet microcontroller unit (iMCU), which is 100% compatible to standard embedded 8051 compatible MCU core.Please refer to the W7100A datasheet for more detailed information.

#### Ethernet Port (P1)

Ethernet Port (P1) is the connector that connects the UTP cable; and the RJ-45 connector internally includes a transformer to connect iMCU7100EVB board to the network.

#### RS-232C Serial Port (P2, J11)

RS-232C Serial Port (P2, J11) is a serial interface supported by W7100A. RS-232C Serial Port is basically structured to use DSUB 9Pin Male type connector (P2). But the RS-232C Serial Port is also structured to independently connect three pins of TX/RX/GND which are TTL signals, with the Pin header; allowing the user to use user-produced cable. Fig 2.2 shows the structure.



<Fig 3.2> Simple RS-232C Serial Port

#### DC Power Input Connector (DC1)

DC Power Input Connector (DC1) is supported by 5V/2A Adaptor of iMCU7100EVB. DC Power Input Connector (DC1) is structured for a safe and stable environmentby applying Poly\_Fuse(F1); to prevent board damage from excessive electric current caused from misusing the adaptor.

Power Switch (SW1)

Power Switch (SW1) is a Toggle switch for turning on/off DC.

#### Reset Switch (SW2)

Reset Switch (SW2) is for manual reset to provide users the ability to reset whenever they want (ex: during the system is running).

#### Boot Enable Switch (SW3)

Boot Enable Switch (SW3) is used to select the W7100A booting mode and provides the



following modes.

SW3	Description
On	Boot Enable. To program by using the WIZISP
Off	Boot Disable. To run the application programmed by the WIZISP

#### <Table 3.4> Description of Boot Enable switch

#### PHY Mode Switch (SW4)

PHY Mode Switch(SW4) is for setting the mode of PHY block inside W7100A.PHY Mode Switch(SW4) provides the following modes.

SW4		Mada	Description		
1	2	3	mode	Description	
OFF	OFF	OFF	Auto	Normal Operation Mode	
UFF	UFF	UFF	Auto	Auto-negotiation enable with all capabilities	
OFF	OFF	ON	A100	Auto-negotiation with 100 BASE-TX FDX/HDX ability	
OFF	ON	OFF	A10	Auto-negotiation with 10 BASE-T FDX/HDX ability	
OFF	ON	ON	-	Reserved	
ON	OFF	OFF	100F	Manual selection of 100 BASE-TX FDX	
ON	OFF	ON	100H	Manual selection of 100 BASE-TX HDX	
ON	ON	OFF	10F	Manual selection of 10 BASE-T FDX	
ON	ON	ON	10H	Manual selection of 10 BASE-T HDX	

<Table 3.5> Description of PHY Mode selection switch

#### W7100A Debugger Connector (JP2)

W7100A Debugger Connector (JP2) is for monitoring and changing various registers and internal memory inside W7100A. User can write applications in the Code memory, therefore allowing efficient debugging of software made by user.



<Figure 3.3> W7100A Debugger Connector

• Please refer to W7100A Debugger Guide for more details on W7100A Debugger.



#### General purpose LEDs

There are three User LEDs for the user to control/test the Port and Debugging.

LED Name	W7100A Pin Name	Direction
LED0	P0_3	0
LED1	P0_4	0
LED2	P0_5	0

Table 3 6		o of Usor	
< Table 3.0	> Description	I OI USEI	

#### Network Status Indicate LEDs

Table 3.7 lists the descriptions for Indicate LEDs that tell the network status.

LED Name	W7100A Pin Name	DIR.	Description
10/100	SPDLED	0	Network speed indicate LED
			Low: 100Mbps, High: 10Mbps
FDX	FDXLED	0	Full / Half duplex indicate LED
			Low : Full duplex , High : Half duplex
COL	COLLED	0	Collision detect LED
			Low : Collisions occurred (only in half duplex mode)
RX	RXLED	0	Active Low. Receive activity LED
ТХ	TXLED	0	Active Low. Transmit activity LED
LINK	LINKLED	0	Active Low. Network link status indicate LED
ACT	ACTLED	0	Active Low. Rx or Tx activity LED
PLOCK	PLOCK	0	Active High. It notifies when internal PLL is locked.

<Table 3.7> Description of Status indicate LED

#### Character LCD Connector (JP1)

Character LCD Connector (JP1) is for Debugging and showing the system status.Pin descriptions of the Character LCD Interface are as followed.

PIN#	iMCU7100EVB Board PIN NAME / Character LCD PIN NAME		Description
1	GND / VSS		Signal Ground
2	5V / VDD	I	LCD Power Supply
3	V0 / V0	I	Voltage for LCD drive
4	P0_0 / RS	Ι	Data / Instruction register select
5	P0_1 / RW	Ι	Read / Write

<Table 3.8> Character LCD Interface Pin Description

© Copyright 2011 WIZnet Co., Inc. All rights reserved.



6	P0_2 / E	Ι	Enable signal,start data read / write
7 ~ 14	P2_0 ~ P2_7 / DB0~ DB7	1/0	Data Bus Line
15	Not Connect / LED A	0	LED Anode, power supply+
16	Not Connect / LED K	0	LED Cathode,ground 0V

Please refer to LCD Datasheet (LC1624-R2.pdf) for more details on driving Character LCD.

MCU Port Expansion Pin header Hole (J1 ... J10)

W7100A provides two types of pitches from the total of 32pin (8bit x 4Port) IO pin. User can select according to their needs between 2.54mm Pin pitch and 2.00mm Pin pitch.

iMCU7100EVB board provides four ports of IO to allow users to use with the general pin header. The description of port expansion is as followed.



<Figure 3.4> Port Expansion Connector

#### Dummy Pin Header Hole

Dummy pin header holes are not connected with system circuits. The dummy pin header hole is provided into two types: 2.54mm Hole pitch and 2.00mm Hole pitch. By using dummy hole, users can test external devices that are in need of additional tests.



## 3.4 Physical Specification



<Figure 3.5> iMCU7100EVB Dimension

Symbols	Dimensions (mm)	Symbols	Dimensions (mm)
А	129.2	F	31.1
В	37.2	G	2.7
С	12.6	Н	9.4
D	15.9	I	8.3
F	3.6	1	83.6

<Table 3.9> iMCU7100EVB Board Dimension



## **Document History Information**

Revision	Data	Description
Ver. 0.9	Aug 17, 2009	Beta release
Ver. 1.0	May 12, 2011	Modified and added contents with iMCU7100EVB Rev. 1.1 lunching

## **Copyright Notice**

Copyright 2011 WIZnet, Inc. All Rights Reserved.

Technical Support: <u>support@wiznet.co.kr</u> Sales & Distribution: <u>sales@wiznet.co.kr</u>

For more information, visit our website at <a href="http://www.wiznet.co.kr">http://www.wiznet.co.kr</a>



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.