Quick Start Guide

TWR-P1025

QorlQ Processor with Networking and Industrial Connectivity and Protocol Offload Engine



TOWER SYSTEM

Get to Know the TWR-P1025





TWR-P1025 Freescale Tower System

The TWR-P1025 module is part of the Freescale Tower System portfolio, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Elevate your design to the next level by building your Tower System today.

TWR-P1025

The TWR-P1025 processor module can be operated as a stand-alone single board computer (SBC) or a Tower System rapid prototyping development platform. Freescale's MQX[™] real-time OS (shipped separately) support enables applications to quickly migrate from Freescale MCUs up to the high-performance QorlQ P1025 processor featuring networking and industrial connectivity. The P1025 also features a protocol offload engine which eliminates the need for an external industrial protocol FPGA/ASIC in the system.

Pre-Loaded Software

- U-boot bootloader
- Freescale Linux[®] OS with real-time patches
- · Diagnostic routines to validate board functionality

Step-by-Step Installation Instructions

In this quick start guide, you will learn how to set up the TWR-P1025 module and run the included demonstration software. For more detailed information, please see the user manual found on the included DVD or at **freescale.com/TWR-P1025**.

1 Connect a Display (Optional)

Purchase and connect the TWR-ELEV modules and TWR-LCD display module to see a short video on example applications included with the TWR-P1025. See the TWR-LCD quick start guide for assembly instructions. The SW1 Dip[1:3] switches should be set to [ON, OFF, ON], respectively. The remaining dip switches should be at their default setting.

After applying power, wait one minute for the video to begin.

2 Powering TWR-P1025

Connect the 5-volt @5A power supply to the 5-volt barrel connector on the TWR-P1025 module. Note that the heatsink on the TWR-P1025 can become hot. This is normal.

3 Configuring a Terminal Application for the Console

On-board circuitry has been provided to support a host computer console window over the mini type B USB connector. Users should note that USB drivers should be installed onto the host PC before the serial terminal can be used. These can be downloaded from **ftdichip.com/Drivers/ VCP.htm** (FT2232).

Plug in the USB cable between the mini type B USB connector on the board and your PC. Do not bend the cable once it has been inserted. Your PC will assign two COM port numbers to the USB serial ports after the driver is installed. Open a serial console using any terminal emulation application attached to the lower numbered COM port with the following serial protocol settings: **Bits per Second: 115200, Data Bits: 8, Parity: None, Stop Bits: 1, Flow Control: None.** See the user manual for more details.

4 Connecting Cables

Dual Ethernet and RS485 ports enable point-to-point networking demos on a single TWR-P1025 module. Any Ethernet cable can be connected between the Ethernet ports and the ports will autoconfigure for proper communication. Autoconfigure also enables a direct connection from either Ethernet port to a host computer Ethernet port. All TWR-P1025 headers have pin 1 marked with a white dot printed on the board and increasing pin numbers proceeding top to bottom, right to left from pin 1 while looking into the header pins. For cable connections on other interfaces, refer to the user manual.

5 Controlling the Board

Upon power-up, you can also hit any key on a connected serial terminal to get to the u-boot prompt, otherwise the board will boot to the Freescale Linux OS.

You can also log in to the module via the OpenWRT interface by opening your browser to 192.168.1.1 (you will need to connect your PC LAN port to the module's Eth0 port and reconfigure your PC IP address to 198.168.1.54). The OpenWRT interface will allow for easy configuration of the module's network settings. Use the following information to log in:

Login: root Password: root

Standard u-boot and Linux commands are supported.

6 Debugger Interface Connections

When the board is powered off, connect the desired debugger hardware to the standard JTAG/COP header connector J3 lining up pin 1. TWR-P1025 includes on-board debugging circuitry to support CodeWarrior software to work with the board.

7 Configuration Switch Settings

See configuration switch settings on the following page.

TOWER SYSTEM

Configuration Switch Settings



SW ¹	Signals ²	Settings ²	Switch ³	Description
1	Reserved	0	ON	Reserved
			OFF	
2	PCIE_HOST_AGENT	0	ON	PCle Agent Mode
			OFF	PCIe Host Mode
3	Reserved	0	ON	Reserved
		1	OFF	
4	CFG_CPU0_1_BOOT	0	ON	Core0 boots, Core1 is in holdoff mode after reset
		1		Both cores run after reset
5	BOOT_SEQ		ON	Boot sequencer is OFF
		1	OFF	Boot sequencer is ON
6	LOCALBUS_QE_MUXSEL	0		LB pins muxed with QE function as QE pins in CPLD
		1	OFF	LB pins muxed with QE function as LB pins in CPLD
7, 8	CPU_SPEED_SELECT[0:1]	00	ON, ON	533 MHz core, 266 MHz QE, 66.667 MHz SYSCLK
		01	ON, OFF	Reserved
		10	OFF, ON	Reserved
		11	OFF, OFF	Reserved
9	ETH_TDM_SEL	0	ON	TDM clock is routed to the P1025 thru the CPLD
		1	OFF	Eth1 clock is routed to the P1025 thru the CPLD
10	Reserved	0	ON	Reserved
			OFF	

1) Switch positions as printed on the switch

2) Schematic signal settings readable from software from MSB (top-left as bit 0) to LSB (bottom-right as bit 7)

3) Switch settings as printed on the switch, factory settings highlighted red

Quick Start Guide

Visit **freescale.com/TWR-P1025** for the latest information on the TWR-P1025 module, including:

- · Board database: Schematics, layout and BOM
- User manual
- Quick start guide
- Software BSPs, industrial protocol evaluation stacks and CodeWarrior
- Demos and tutorial
- Fact sheet

Support

Visit **freescale.com/support** for a list of phone numbers within your region.

Warranty

Visit **freescale.com/warranty** for complete warranty information.

For more information, visit freescale.com/Tower

Join the online Tower community at towergeeks.org

Freescale, the Freescale logo, CodeWarrior and QorlQ are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org. All other product or service names are the property of their respective owners. © 2012 Freescale Semiconductor, Inc.

Document Number: P1025TWRQSG REV 1 Agile Number: 926-27216 REV B







Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.