



PFH05W Evaluation Test Board Application notes

Version 1.05

Table of Contents

1.0	Getting Started.....	5
1.1	Test Equipment.....	6
1.2	Test Setup	7
1.3	Test Points.....	9
1.4	PMBus and Remote On/Off Functions.....	10
1.5	Setting the PMBus Address.....	11
1.6	Turning PFH Module On/Off	12
2.0	Electrical Schematic Drawing.....	13
3.0	Bill of Material.....	14
4.0	Board Files.....	15

BEFORE USING THE POWER SUPPLY UNIT

Be sure to read and understand this instruction manual thoroughly before using this product. Pay attention to all cautions and warnings before using this product. Incorrect usage could lead to an electrical shock, damage to the unit or a fire hazard.

DANGER

Never use this product in locations where flammable gas or ignitable substances are present. There are risks of igniting these substances and exploding by arcing.

WARNING

- Do not touch this product or its internal components while circuit is live, or shortly after shut down. There may be high voltage or high temperature present and you may receive an electric shock or burn.
- While this product is operating, keep your hands and face away from it as you may be injured by an unexpected situation.
- Do not make unauthorized changes to this product, otherwise you may receive an electric shock and void your warranty.
- Do not drop or insert anything into the product. It might lead to a failure, fire or electric shock.
- Do not use this product if abnormal conditions such as emission of smoke and/or abnormal smell or audible noise, etc... are present. It might lead to fire and/or electric shock. In such cases, please contact TDK Lambda. Do not attempt repair by yourself, as it is dangerous for the user.
- Do not operate these products in the presence of condensation. It might lead to fire or electric shock.

CAUTION

- This power supply is designed and manufactured for use within an end product such that it is accessible only to trained SERVICE ENGINEERS.
- Confirm that the connections to input/output terminals, and signal terminals are correct as specified in this instruction manual before turning on the power.
- Input voltage, Output current, Output power, ambient temperature, case temperature, and ambient humidity should be kept within the specifications, otherwise the product may be damaged.
- Do not operate and store this product in an environment where condensation might occur. In such case, waterproof treatment is necessary.
- The equipment has been evaluated for use in a Pollution Degree 2 environment.
- Do not use this product in environment with a strong electromagnetic field, corrosive gas or conductive substances.
- For applications, which require very high reliability, such as nuclear related equipment, medical equipment, traffic control equipment, etc., it is necessary to provide a fail-safe mechanism in the end equipment.
- Do not inject abnormal voltages into the output terminal or signal terminal of this product. The injection of reverse voltage or over voltage exceeding nominal output voltage into the output terminal or signal terminal might cause damage to internal components.
- Never operate the product under the over-current or short circuit conditions. Failure or other damage may occur.
- The output voltage of this power supply unit is considered to be a hazardous energy level (The voltage is 2V or more and the electric power is 240W or more). It must not be made accessible to users. Protection must be provided for Service Engineers against indirect contact with the output terminals and/or to prevent tools being dropped across them. While working on this product, the AC input power must be switched off, and the input, output, +VBus, and -VBus terminal voltages should be at a safe level.
- The application circuits and their parameters are for reference only. Be sure to verify effectiveness of these circuits and their parameters before finalizing the circuit design.
- Use a Fast-Blow external fuse to each module to ensure safe operation and compliance with the safety standards to which it is approved. The recommended input fuse rating within the instructions is as follows: 10A, 250V fast acting fuse. The breaking capacity and voltage rating of this fuse may be subject to the end use application.

⚠ CAUTION

- This information in this document is subject to change without prior notice. Please refer to the latest version of the data sheet, etc., for the most up-to date specifications of the product.
- No part of this document may be copied or reproduced in any form without prior written consent TDK-Lambda.

Reference Documents:

- 1.) PFH Instruction Manual
- 2.) PFH PMBus Specification Customer Release
- 3.) PFH500F-## Evaluation Report
- 4.) PFH GUI Interface

Note: ## - Denotes output voltage of PFH modules (e.g. "28" for 28Vdc)

1.0 Getting Started



PFH05W##-100-EVK-S1 & PFH05W##-1D0-EVK-S1 Evaluation Boards

NOTE: ## - Denotes output voltage of PFH modules (e.g. "28" for 28Vdc)



PFH05W-001-EVK-S0 Evaluation Board


1.1 Test Equipment

- 1.) **AC Voltage Source:** Capable of single-phase output, AC voltage range 85 V_{AC} - 265 V_{AC}, 47 Hz - 63 Hz, adjustable. AC Source should be adequately sized to support the PFH module's operation.
- 2.) **DC Multimeter:** capable of 0V to 500V input range.
- 3.) **Output Load:** DC load capable of 60 V_{DC} or greater, DC Load current up to 42A or greater (12V/42A, 28V/18A, or 48V/10.5A), and 500 W or greater, with display such as load current and load power.
- 4.) **Fan:** Airflow is required to be directed across the mounted heatsink of the PFH module.

1.2 Test Setup

1.) Electrical Input Connections:


- CONN1:** *LINE*, Input Line Connection
CONN2: *NEUT*, Input Neutral Connection
CONN3: *EGND*, Earth Ground Connection

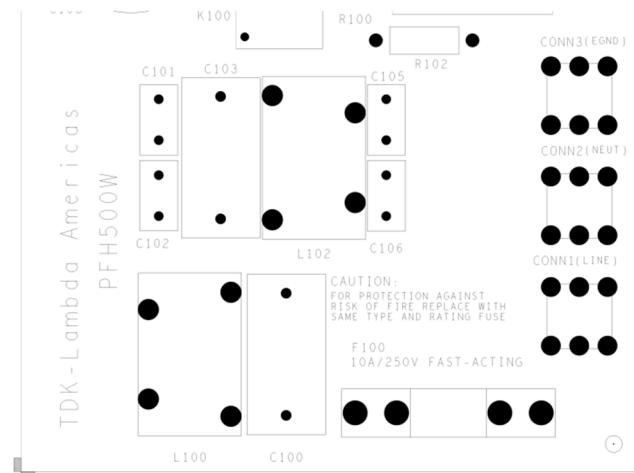

NOTE: Refer to the PFH Datasheet for specific module's AC Input Current requirement when sizing wire gauge and cable length.


2.) Electrical Output Connection:

- CONN5** *+Vout*, Output Load Connections (Red Cable)
CONN4 *-Vout*, Output Load Return Connections (Black Cable)

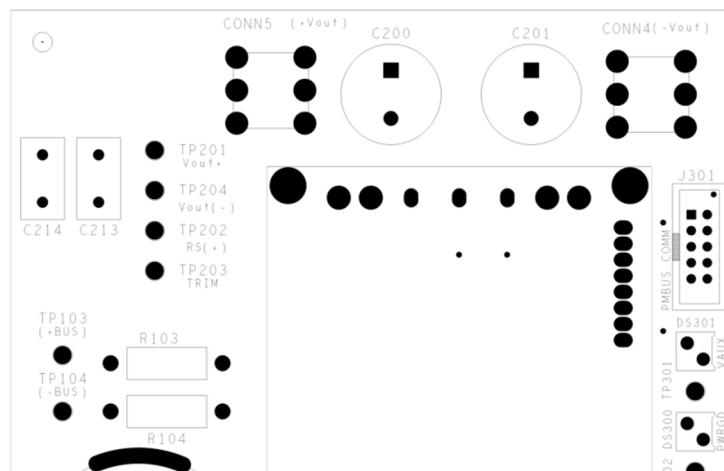


⚠️ WARNING

Make sure ALL input and output cables are de-energized before making electrical connections to the Evaluation Test Board

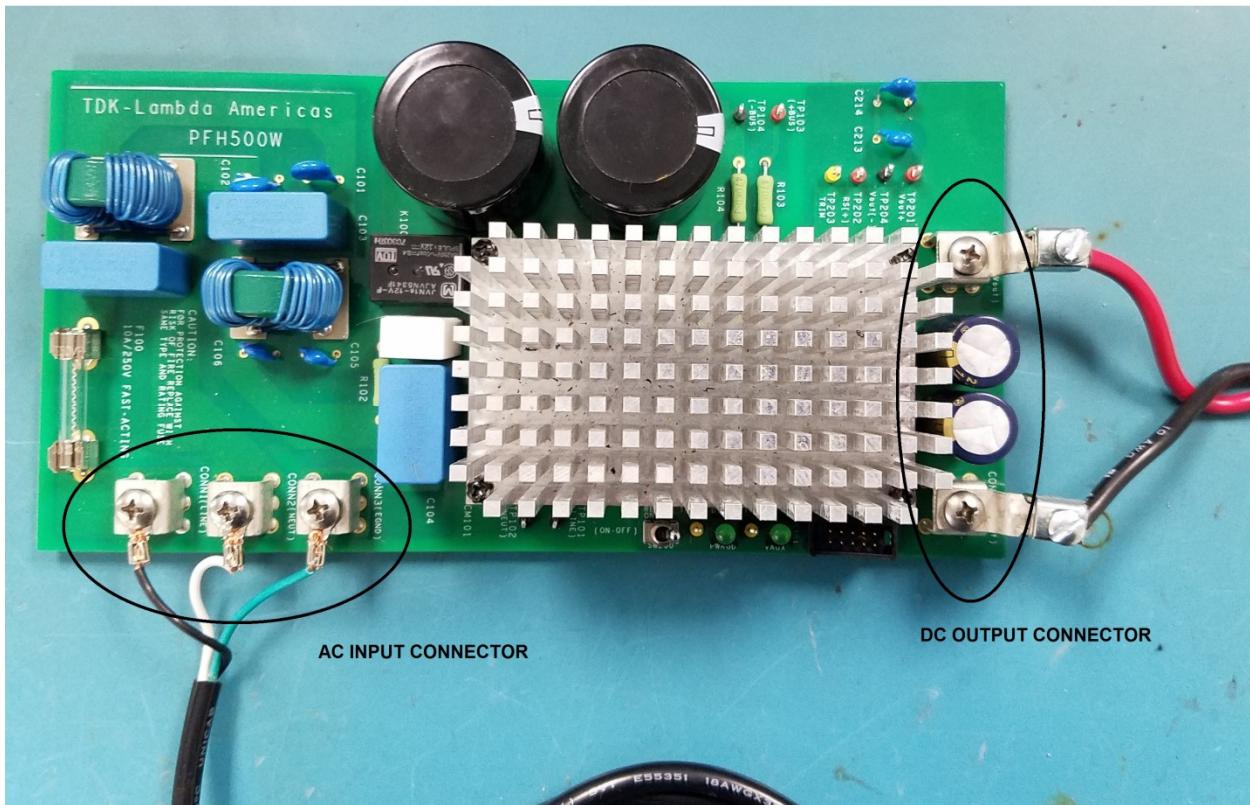

1.3 Test Points

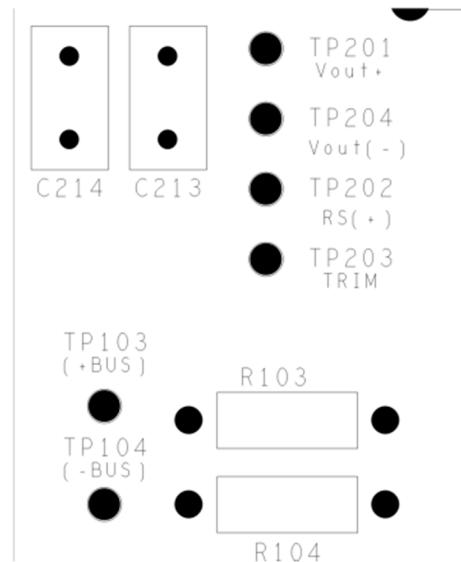


- 1.) Secondary Test Points:

TP201	<i>Vout+</i> , Monitor Output Voltage
TP204	<i>Vout(-)</i> , Monitor Output Voltage return
TP202	<i>RS(+)</i> , Output Remote Sense (+) connection
TP203	<i>TRIM</i> , Trim Test connection

⚠️ WARNING HAZARDOUS VOLTAGE


- 2.) Primary Test Points:

TP103	<i>+BUS</i> , Monitor 400Vdc
TP104	<i>-BUS</i> , Monitor 400Vdc return

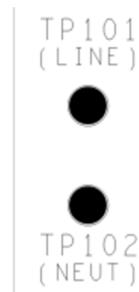

- | | |
|-------|---|
| TP101 | <i>LINE</i> , Monitor AC Line Input |
| TP102 | <i>NEUT</i> , Monitor AC Neutral Input |

 1.4 PMBus and Remote On/Off Functions



1.) PMBus Connections (J301)

Pin #:	Description:
1	Not Used
2	Not Used
3	Not Used
4	Not Used
5	USB 3.3Vdc ¹
6	SGND
7	Not Used
8	PMBus Alert
9	PMBus Clock
10	PMBus Data

NOTE:

1. 3.3Vdc is supplied by the interface module


To communicate with the PFH module via PMBus, use the Texas Instruments Interface Adapter EVM (P/N#: USB-TO-GPIO). This adapter is available from,

- [TI](#)
- [Digi-Key](#)
- [Newark Element](#)
- [Mouser Electronics](#)
- [Arrow](#)

⚠️ *WARNING When AC voltage is applied to the Evaluation Test Board the 450V bulk capacitors ARE energized at ALL time*****

- | | | | | | |
|-------------------------------|---|-------|---------------------------|-------|---------------------------|
| 2.) Remote On/Off (SW200) | SW200 , Will either turn the module On or put it into Standby | | | | |
| 3.) Auxiliary Voltage (DS301) | DS301 , The LED will Turn-On when the 450Vdc bulk capacitors are energized above 70Vdc | | | | |
| 4.) Power Good (DS300) | DS300 , The LED will Turn-On once the module's output has been Turned-On | | | | |
| 5.) Test Points | <table border="0"> <tr> <td>TP301</td> <td>Monitor Auxiliary Voltage</td> </tr> <tr> <td>TP302</td> <td>Monitor Power Good Signal</td> </tr> </table> | TP301 | Monitor Auxiliary Voltage | TP302 | Monitor Power Good Signal |
| TP301 | Monitor Auxiliary Voltage | | | | |
| TP302 | Monitor Power Good Signal | | | | |

1.5 Setting the PMBus Address

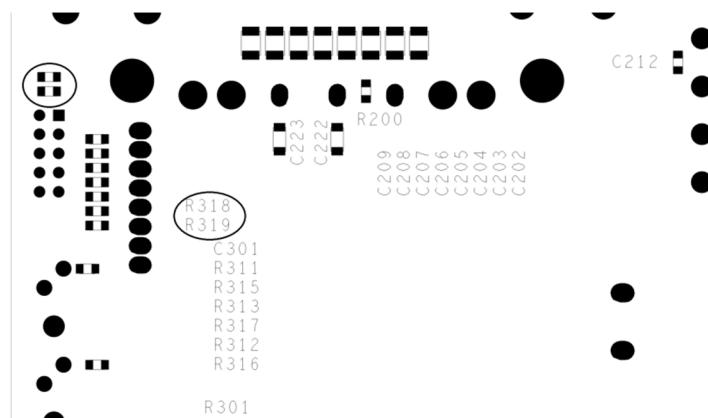

- The PMBus address setting on the Evaluation Test Board comes with the Factory default setting, Address: 0x33 (Hex) (R318 & R319 are populated with 41.2K)
- To change PMBus address to a different address R318 (AD1) and R319 (AD2) must be populated with appropriate resistor values located in "PFH PMBus Specification Customer Release" document.

Example: Suppose a PMBus address of 0x51 was desired instead of 0x33.

- | | |
|-------------------|--|
| R318 (PMBus AD1): | Remove 41.2K (0805 Resistor) → Populate with 14K (0805 Resistor) |
| R319 (PMBus AD2): | Remove 41.2K (0805 Resistor) → Populate with 69.8K (0805 Resistor) |


1.6 Turning PFH Module On/Off

- 1.) Before applying AC voltage to the module make sure,
 - a. The surface under the test fixture is a non-conductive surface
 - b. Securely connect Input and Output cables to the test board
 - c. Securely connect all monitoring devices to test board

 ***WARNING When AC voltage is applied to the Evaluation Test Board the 450V bulk capacitors ARE energized at ALL time***

- 2.) Apply AC input voltage to test fixture
 - a. AC input voltage range 100Vac – 265Vac
 - b. AC input voltage range < 100Vac, output load is de-rated 6.7W/V
 - c. Once AC input voltage is applied, Auxiliary Voltage LED (DS301) will Turn-On
- 3.) Turning On PFH module can be accomplished 1 of 2 ways,
 - i. Remote On/Off
 - ii. PMBus
 - a. The method chosen to turn On PFH has to be the **SAME** method to turn Off PFH
 - i. Example: If Remote On/Off turns On PFH, then PMBus cannot turn it Off, only Remote On/Off can turn Off PFH.
 - b. Method 1: Toggle Remote On/Off,
 - I. Remote On/Off switch (SW200) On – Will turn PFH On
 - II. Remote On/Off switch (SW200) Off – Will turn PFH Off.
 - c. Method 2: PMBus,
 - I. Write CMD 0x01, Byte 0x80 – Turns PFH On
 - II. Write CMD 0x01, Byte 0x00 – Turn PFH Off
 - d. Once PFH is turned On, Power Good LED (DS300) will turn On
 - e. When PFH is turned Off, Power Good LED (DS300) will turn Off

2.0 Electrical Schematic Drawing

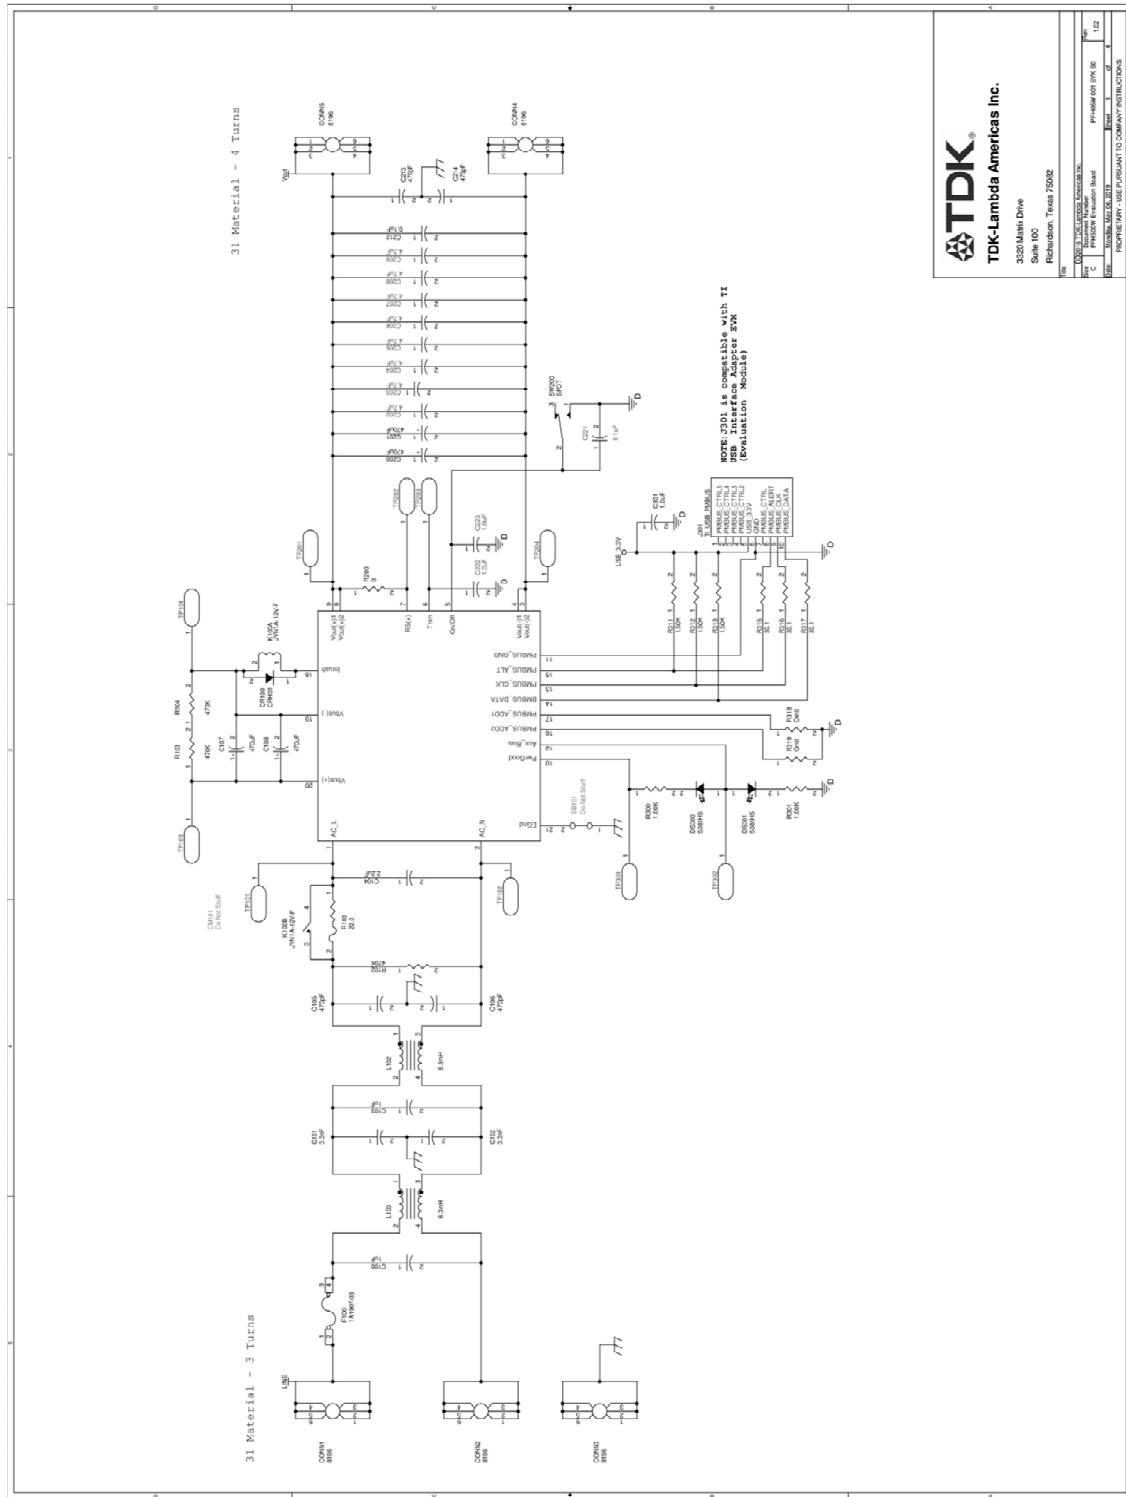

3.0 Bill of Material

PFH05W-001-EVK-S0 Bill of Material

Part Reference	Mfr Part Number1	Value	Description	Voltage	Mfr1
BMPR1 BMPR2					
BMPR3 BMPR4					
BMPR5 BMPR6	SJ-5027 (BLACK)	Rubber Bumper	Bumper, Rubber, 0.63" Dia x 0.31"		3M
C100 C103	B32923C3105M2040	1uF	Film Capacitor,305V, X2 Cap	250V	TDK
C101 C102	CS45-E2GA332M-NKA	3.3nF	Film Capacitor,305V, Y2 Cap	250V	TDK
C104	B32923C3225M1040	2.2uF	Film Capacitor,305V, X2 Cap	250V	TDK
C105 C106					
C213 C214	CS45-B2GA471K-NKA	470pF	Film Capacitor,305V, Y2 Cap	250V	TDK
C107 C108	B43508B5477M007	470uF	Electrolytic Capacitor, 450V, 35X40	450V	TDK
C200 C201	EEUFC2A471	470uF	Electrolytic Capacitor, 100V, 16X40	100V	Panasonic
C202 C203					
C204 C205					
C206 C207					
C208 C209	C3225X7S2A475K200AB	4.7uF	Ceramic Capacitor, 100V, 1210, 4.7uF	100V	TDK
C212 C221	C2012X7R2A104K125AA	0.1uF	Ceramic Capacitor, 100V, 0805	100V	TDK
C222 C223	C3216X7R2A105MT	1.0uF	Ceramic Capacitor, 100V, 1206, 1.0uF	100V	TDK
C301	C2012X7R1E105KT	1.0uF	Ceramic Capacitor, 25V, 0805	25V	TDK
CONN1 CONN2					
CONN3 CONN4					
CONN5		8196	PC Screw Terminal		
CR100	CRH01	CRH01	PN Diode, Single Package, SMT		TOSHIBA
DOC1		PFH500	PFH500 Evaluation Instruction Manual		
DS300 DS301	5381H5	5381H5	LED, Green, Thru Hole		Chicago Miniature Lamp
F100 F101	1A1907-03	1A1907-03	Fuse, Fuse holder, PWB		BUSSMANN
F102	312010	312010	Fuse, 10A Fuse, Fast-Blow		Littlefuse
J301	N2510-60XX	TI_USB_PMB US	.100" x .100" Four-Wall Header		3m
K100	JVN1A-12V-F	JVN1A-12V-F	RELAY SPST		Panasonic
L100 L102	ARA00499	6.3mH	Com Ind, 6325uH, Thru Hole		TDK-Lambda
PWB100	ZB00511	ZB00511	PWB, (n) oz. Cu, .062"		
R100	A5MC-220J	22.0	Res,22.0,5.0W	250V	UCHIHASHI
R102 R103					
R104	SPR2C474J	470K	Res,470K,2.0W	250V	KOA SPEER
R200	RK73Z2ATTE	0	Res,0.2,0A,70C,0805	N/A	KOA SPEER
R300 R301	RK73H2ATTE1001F	1.00K	Res,1.00K,0.125W,100ppm,70C,0805	150V	KOA SPEER
R311 R312					
R313	RK73H2ATTE1501F	1.50K	Res,1.50K,0.125W,100ppm,70C,0805	150V	KOA SPEER
R315 R316					
R317	RK73H2ATTE30R1F	30.1	Res,30.1,0.125W,100ppm,70C,0805	150V	KOA SPEER
R318 R319	RK73H2ATBK4122F	41.2K	Res,41.2K, 0.125W,100ppm,70C,0805	150V	KOA SPEER
SW200	T101SHCQE	SPDT	SPDT two position switch vertical (On None On)		C&K
TP101 TP102					Keystone Electronics
TP104 TP204	5011	5011	Test Point, Black, Thru Hole		Keystone Electronics
TP103 TP201					Keystone Electronics
TP202	5010	5010	Test Point, Red, Thru Hole		Keystone Electronics
TP203 TP301					Keystone Electronics
TP302	5014	5014	Test Point, Yellow, Thru Hole		Keystone Electronics

4.0 Board Files

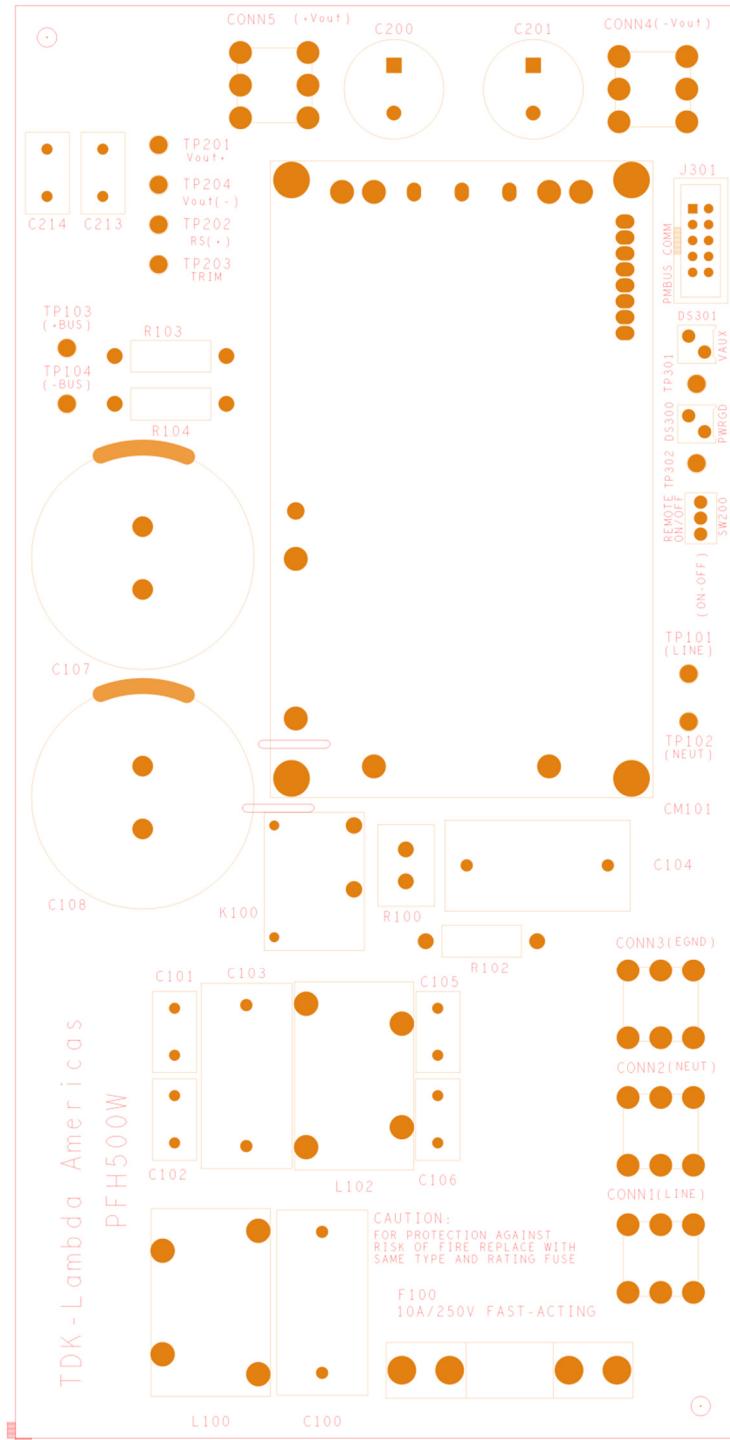


FIGURE 1 Top side Component Placement

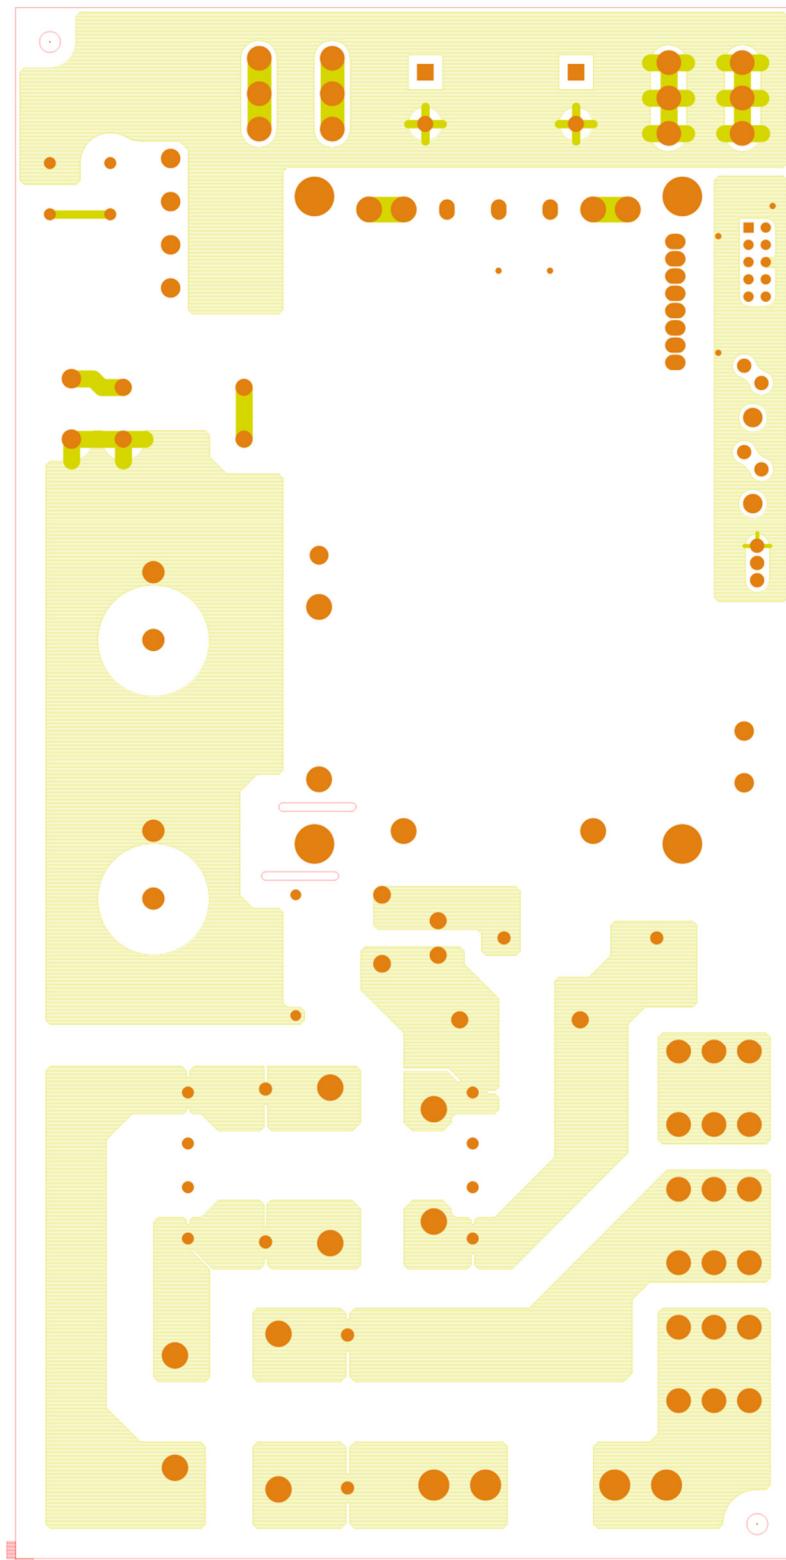


FIGURE 2 Top Layer (Etch 1)

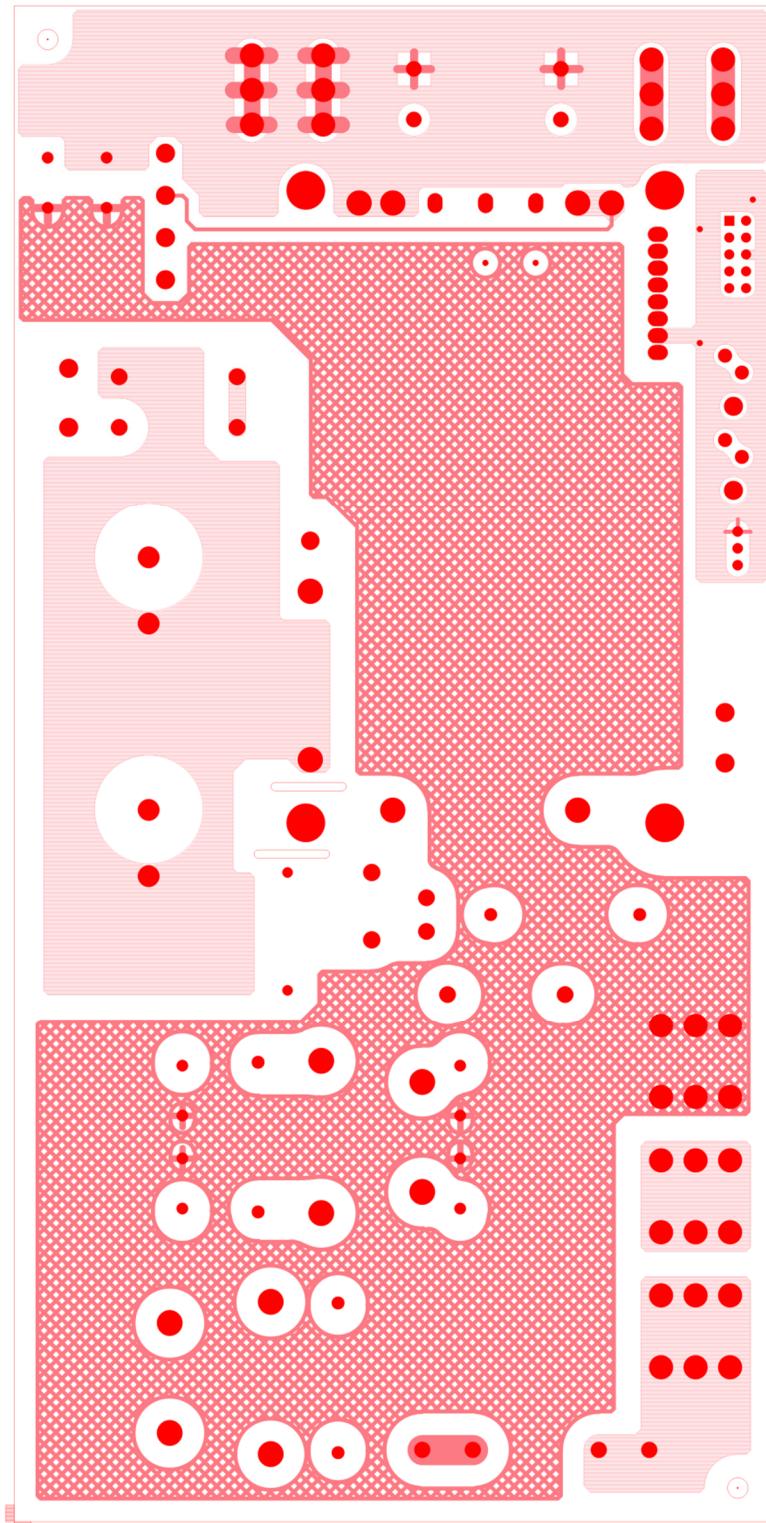


FIGURE 3 Internal Layer (Etch 2)

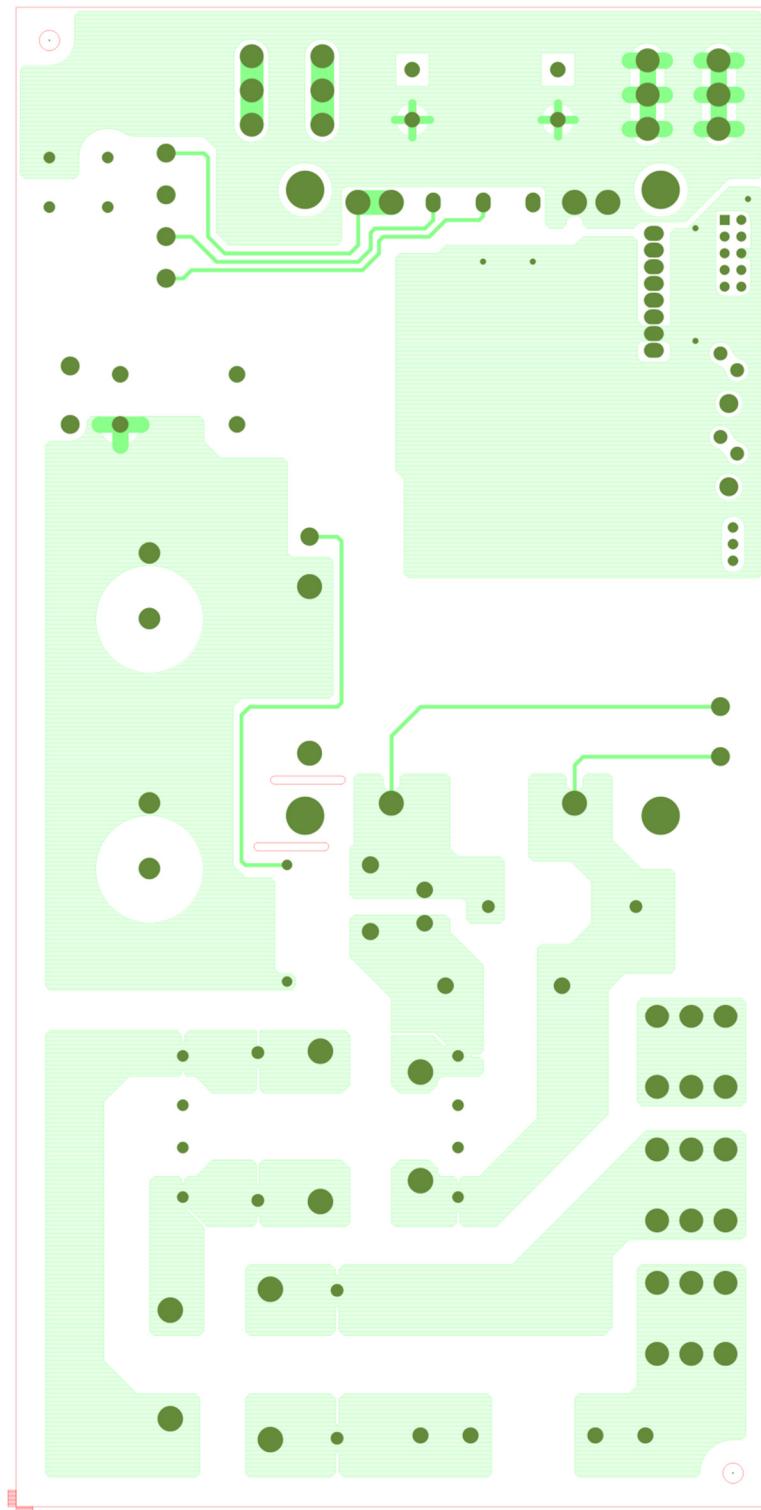


FIGURE 4 Internal Layer (Etch 3)

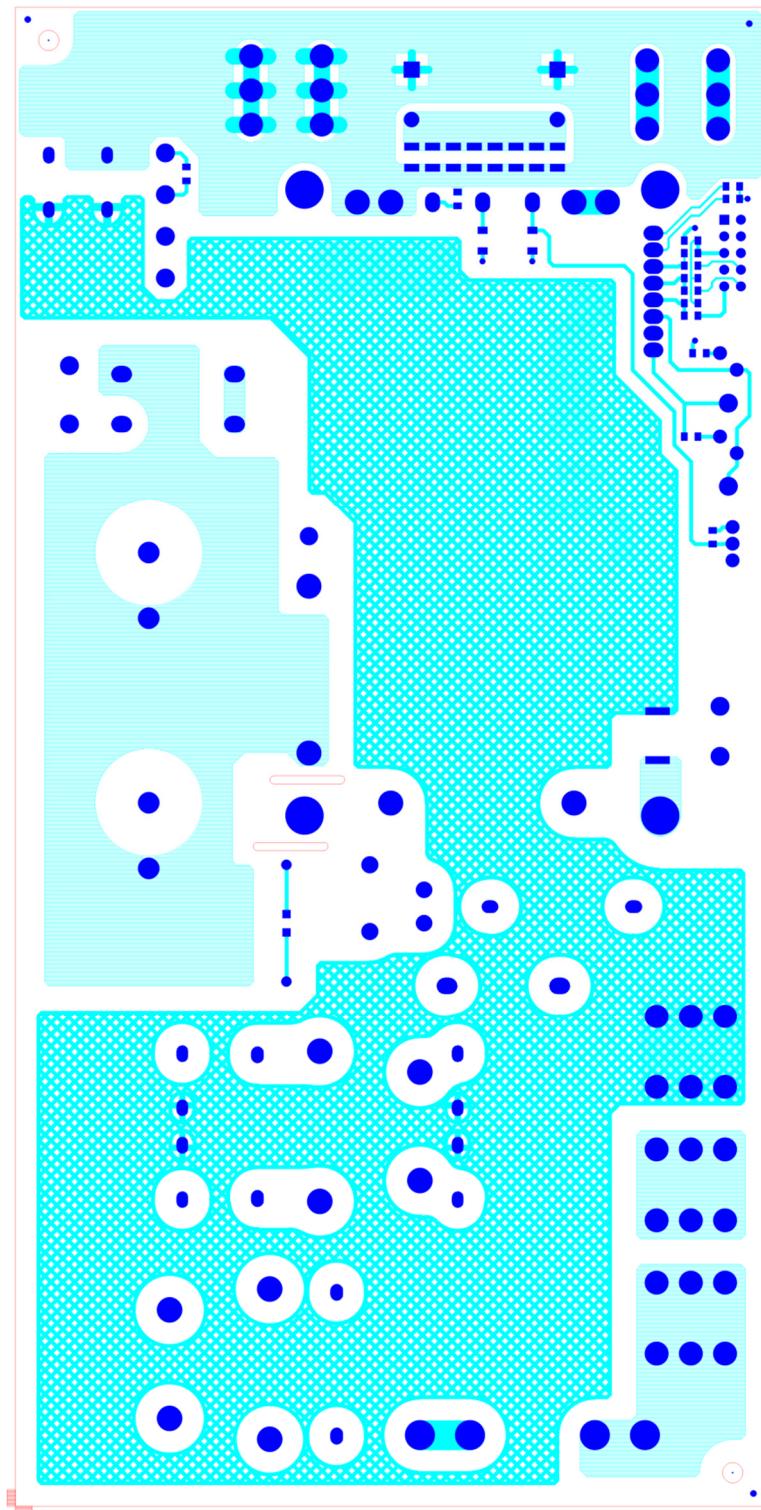


FIGURE 5 Bottom Layer (Etch 4)

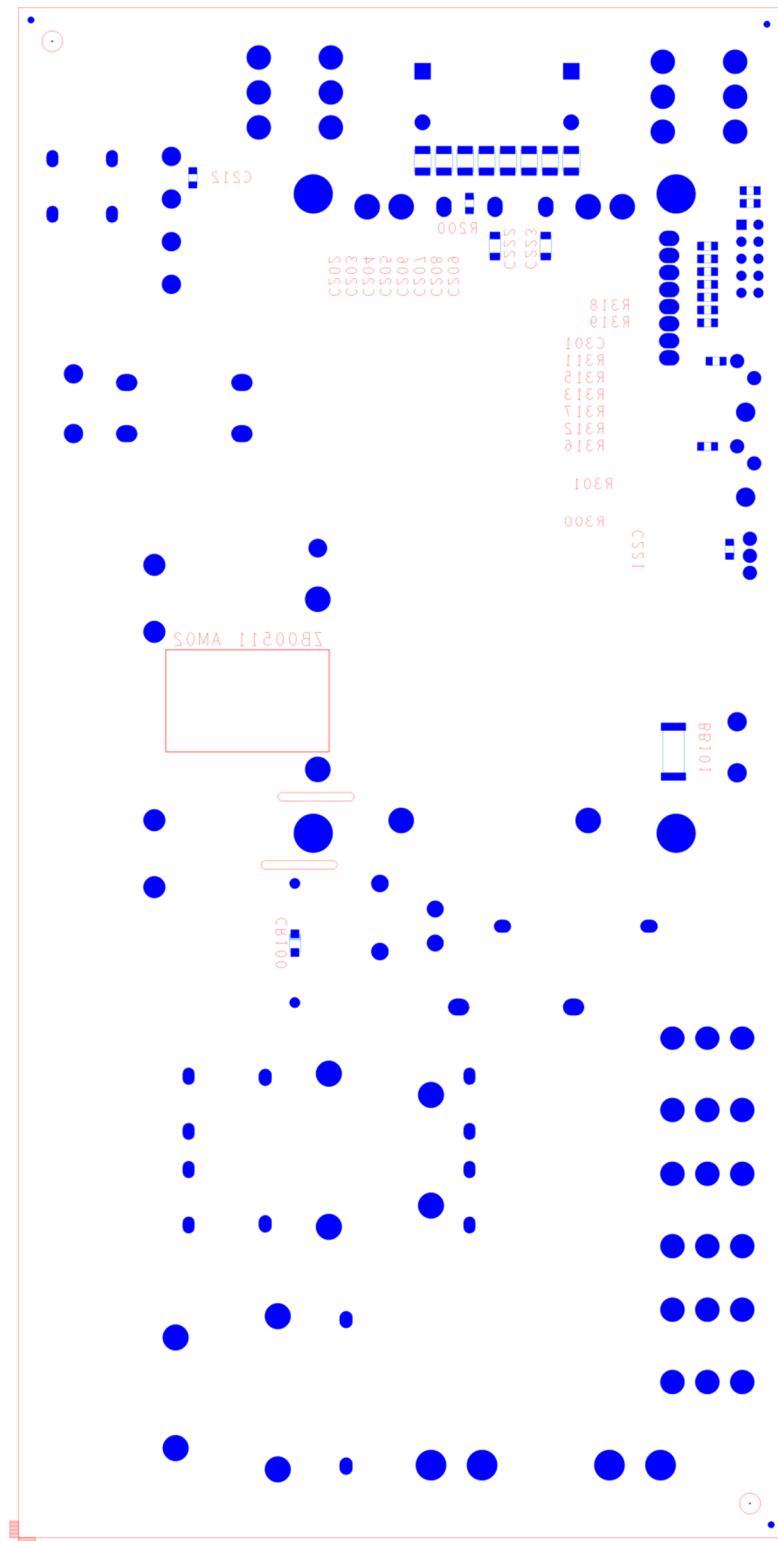


FIGURE 6 Bottom side Component Placement

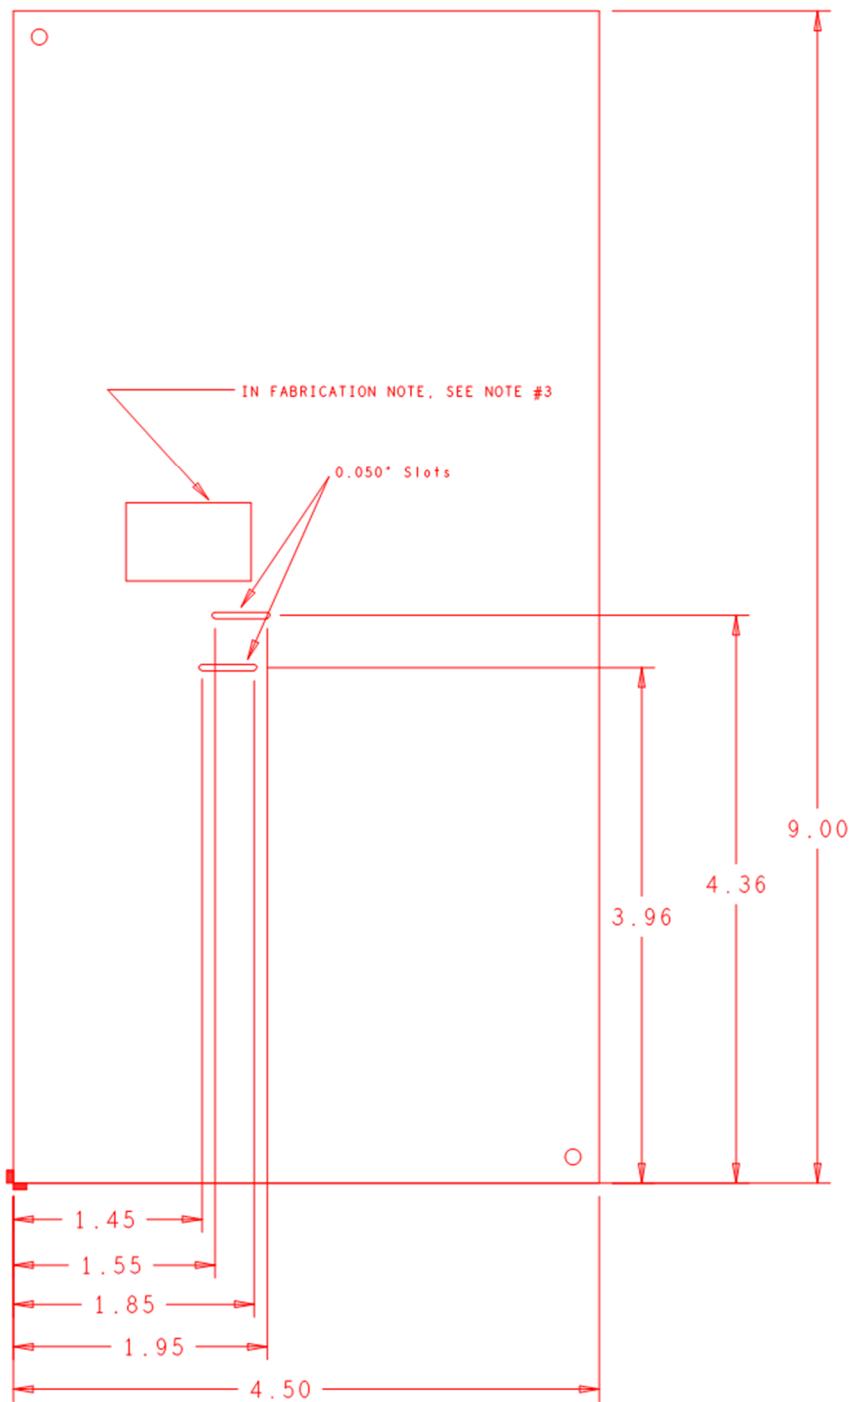


FIGURE 7 Circuit Outline



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.