

Fuse Holders for 1/4" x 1 1/4" and 5 x 20mm Fuses

HTB Panel Mount Series



Description

- For 1/4" x 1 1/4" and 5 x 20mm fuses
- All holder bodies have the option of using 1/4" x 1 1/4" or 5 x 20mm carriers
- Withstands 15 to 20 Lb-In torque to mounting nut when mounting fuse holder to panel
- High temperature, flame retardant, Thermoplastic meets UL 94V0



Specifications

| Product Code | UL Rating (amps) | CSA Rating (amps) | Voltage Rating | Fuse Size | Quick Connect |
|--------------|------------------|-------------------|----------------|---------------|---------------|
| HTB-X2I | 20 | 16 | 250 | 1/4" x 1 1/4" | 3/16" |
| HTB-X4I | 20 | 16 | 250 | 1/4" x 1 1/4" | 3/16" |
| HTB-X6I | 20 | 16 | 250 | 1/4" x 1 1/4" | 1/4" |
| HTB-X8I | 20 | 16 | 250 | 1/4" x 1 1/4" | 1/4" |
| HTB-X2M | 16 | 16 | 250 | 5 x 20mm | 3/16" |
| HTB-X4M | 16 | 16 | 250 | 5 x 20mm | 3/16" |
| HTB-X6M | 16 | 16 | 250 | 5 x 20mm | 1/4" |
| HTB-X8M | 16 | 16 | 250 | 5 x 20mm | 1/4" |


Agency Information

- UL Recognized: IZLT2, E14853
- CSA Component Acceptance: Class 6225-01, File 47235
- VDE Certified: 136128, HTB-XXM
- SEMKO Certification: Ref. #0146149/01, HTB-XXM
- CE


Maximum Panel Thickness

| Body Type | Inch | mm |
|-----------|-------|------|
| HTB-2 | 0.30 | 7.62 |
| HTB-3 | 0.30 | 7.62 |
| HTB-4 | 0.125 | 3.18 |
| HTB-5 | 0.125 | 3.18 |
| HTB-6 | 0.30 | 7.62 |
| HTB-8 | 0.125 | 3.18 |
| HTB-9 | 0.125 | 3.18 |

Replacement Parts

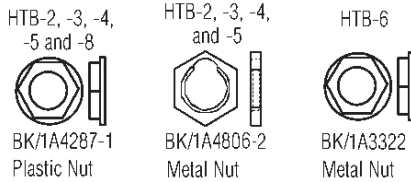

Mounting Dimensions - in (mm)






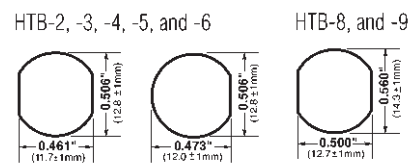


Dimensions - in (mm)

| Knob Type Carrier | Maximum Panel Thickness | Terminal Options | | | | Carrier Options | |
|--|-------------------------|--------------------------------|-----------|--------------------|-----------|--------------------------------------|---------------------------------|
| | | Solder/ 3/16" Quick-Connect | | 1/8" Quick-Connect | | 1/4" x 1 1/4" ("I" Equals Inches) | 5 x 20mm ("M" Equals Metric) |
| | | In-Line | Rt. Angle | In-Line | Rt. Angle | Knob | Knob |
| Low Profile Rear Hex Nut HTB-2 | 0.30" 7.62mm | | | | | 3 | — |
| | | HTB-22I-R | HTB-24I-R | HTB-26I-R | HTB-28I-R | — | 3 |
| High Profile Rear Hex Nut HTB-4 | 0.125" 3.18mm | | | | | 3 | — |
| | | HTB-42I-R | HTB-44I-R | HTB-46I-R | HTB-48I-R | — | 3 |
| Front Hex Nut HTB-6 | 0.30" 7.62mm | | | | | 3 | — |
| | | HTB-62I-R | HTB-64I-R | HTB-66I-R | HTB-68I-R | — | 3 |
| Low Profile Snap-In HTB-8 | 0.125" 3.18mm | | | | | 3 | — |
| | | HTB-82I-R | HTB-84I-R | HTB-86I-R | HTB-88I-R | — | 3 |





       
 
 



 
 
 



Fuseholders and fuse carriers may be ordered separately.

Dimensions - in (mm)

| Screwdriver Type Carrier | Maximum Panel Thickness | Terminal Options | | | | Carrier Options | |
|--|-------------------------|---|---|---|--|---|---|
| | | Solder/ 3/16" Quick-Connect | | 1/4" Quick-Connect | | 1/4" x 1/4" ("I" Equals Inches) | 5 x 20mm ("M" Equals Metric) |
| | | In-Line | Rt. Angle | In-Line | Rt. Angle | Screwdriver | Screwdriver |
| Common Dimensional Data: (Screwdriver Slotted) 1.75" (44.5mm) NOTE: Plus In-Line Terminal | |  |  |  |  |  |  |
| Low Profile Rear Hex Nut HTB-3 | 0.30" 7.62mm | HTB-32I-R HTB-32M-R | HTB-34I-R HTB-34M-R | HTB-36I-R HTB-36M-R | HTB-38I-R HTB-38M-R | 3 — | — 3 |
| High Profile Rear Hex Nut HTB-5 | 0.125" 3.18mm | HTB-52I-R HTB-52M-R | HTB-54I-R HTB-54M-R | HTB-56I-R HTB-56M-R | HTB-58I-R HTB-58M-R | 3 — | — 3 |
| Low-Profile Snap-In HTB-9 | 0.125" 3.18mm | HTB-92I-R HTB-92M-R | HTB-94I-R HTB-94M-R | HTB-96I-R HTB-96M-R | HTB-98I-R HTB-98M-R | 3 — | — 3 |

Fuseholders and fuse carriers may be ordered separately.

Ordering Information

| | | | | | | | | | | | | | | | | |
|--|--|---|---|---|---|---|---|---|---|--|---|---|---|---|---|--|
|  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | |
| Packing (Blank) – Std. BK/ – Bulk | Product Symbol | HTB- | | | | | | S | P | FUSE CARRIER ONLY | | | | | | |
| Body Configuration and Mounting Knob Holders 2 – Low Profile (Rear Panel Hex-Nut) 4 – High Profile *6 – (Front Panel Hex-Nut) 8 – Low Profile (Snap-In) Screwdriver Slotted Holders 3 – Low Profile 5 – High Profile 9 – Low Profile (Snap-In) | Rear Terminal Configuration 2 – Solder / 3/16" Quick-Connect (In-Line) 4 – Solder / 3/16" Quick-Connect (Right Angle) 6 – 1/4" Quick-Connect (In-Line) 8 – 1/4" Quick-Connect (Right Angle) | | | | | | | | | Packing (Blank) – Std. BK/ – Bulk | Product Symbol FT – Knob Type (For 20, 40, 60, and 80 Series Only) ST – Screwdriver Slotted (For 30, 50, and 90 Series Only) | Fuse Carrier I – 1/4" x 1 1/4" M – 5mm x 20mm | | | | |
| | | | | | | | | | | | | | | | | |

*Profile varies with panel thickness. Holder installs thru rear of panel.

| Packaging | |
|-----------------------|--|
| Packaging Code Prefix | Description |
| Blank | 10 fuse holders packed into a carton |
| BK | 100 fuse holders packed into a cardboard shelf package |

The only controlled copy of this Data Sheet is the electronic read-only version located on the Cooper Bussmann Network Drive. All other copies of this document are by definition uncontrolled. This bulletin is intended to clearly present comprehensive product data and provide technical information that will help the end user with design applications. Cooper Bussmann reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Cooper Bussmann also reserves the right to change or update, without notice, any technical information contained in this bulletin. Once a product has been selected, it should be tested by the user in all possible applications.

Life Support Policy: Cooper Bussmann does not authorize the use of any of its products for use in life support devices or systems without the express written approval of an officer of the Company. Life support systems are devices which support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.

© 2009 Cooper Bussmann
St. Louis, MO 63178
www.cooperbussmann.com





Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.