

Is Now Part of



ON Semiconductor®

To learn more about ON Semiconductor, please visit our website at www.onsemi.com

Please note: As part of the Fairchild Semiconductor integration, some of the Fairchild orderable part numbers will need to change in order to meet ON Semiconductor's system requirements. Since the ON Semiconductor product management systems do not have the ability to manage part nomenclature that utilizes an underscore (_), the underscore (_) in the Fairchild part numbers will be changed to a dash (-). This document may contain device numbers with an underscore (_). Please check the ON Semiconductor website to verify the updated device numbers. The most current and up-to-date ordering information can be found at www.onsemi.com. Please email any questions regarding the system integration to Fairchild guestions@onsemi.com.

ON Semiconductor and the ON Semiconductor logo are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdf/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any EDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officer



August 2014

FSA880 / FSA881 – USB Port 2:1 Switch with Accessory and Charger Detection

Features

| Switch Type | 2:1 USB | | | | |
|--------------------------|-------------------------------------|--|--|--|--|
| Switch Mechanism | Automatic switching with Available | | | | |
| - Witom Woonamom | Interrupt | | | | |
| | USB Data Cable | | | | |
| Accessory Detection | Chargers (CDP, DCP, Travel Adapter, | | | | |
| 7 tococoony Dottoction | Car Kit-CEA-936-A) | | | | |
| | Factory-Mode Cables | | | | |
| USB | FS and HS 2.0 Compliant | | | | |
| LISE Charging | Battery Charging 1.1 Compliant | | | | |
| USB Charging | Charger Detect, DCD, OVT (28 V) | | | | |
| UART | RxD and TxD | | | | |
| VBAT | 3.0 to 4.4 V | | | | |
| Programmability | I ² C | | | | |
| ESD | 15kV IEC 61000-4-2 Air Gap | | | | |
| Operating | -40°C to 85°C | | | | |
| Temperature | -40 C to 65 C | | | | |
| Dookogo | 16-Lead UMLP | | | | |
| Package | 1.8x2.6x0.55 mm, 0.4 mm Pitch | | | | |
| IIC Ontinu | FSA880 – Active LOW | | | | |
| JIG Option | FSA881 – Active HIGH | | | | |
| Ondersia a latema etiene | FSA880UMX | | | | |
| Ordering Information | FSA881UMX | | | | |
| | | | | | |

Description

The FSA88x is a high-performance switch featuring automatic switching and accessory detection for a USB port. The FSA88x allows sharing of a common USB port to pass USB data, as well as factory programmability. In addition, the FSA88x integrates accessory detection of devices such as USB chargers and factory data cables. The FSA88x can be programmed for manual switching or automatic switching of data paths. VBUS_IN has 28 V over-voltage tolerance.

The difference between the FSA880 and the FSA881 is that FSA880 JIG output is an open-drain, active-LOW output, while FSA881 JIG is an active-HIGH, CMOS output.

Applications

- Cellular Phones, Smart Phones
- MP3 and PMP

Related Resources

■ FSA880 / FSA881 Demonstration Board

Typical Application

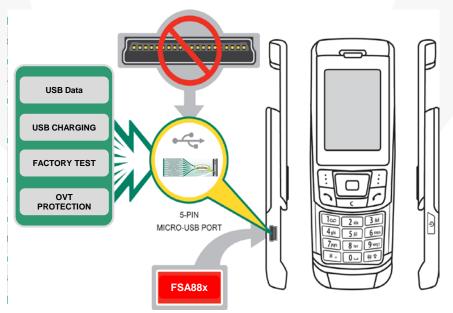


Figure 1. Mobile Phone Example

Ordering Information

| Part Number | Operating Temperature Range | Top Mark | Package |
|-------------|-----------------------------|----------|--|
| FSA880UMX | -40 to +85°C | | 16-Lead, Ultrathin Molded Leadless Package (UMLP), 1.8 mm x 2.6 mm x 0.55 mm, 0.4 mm Pitch |
| FSA881UMX | -40 to +85°C | | 16-Lead, Ultrathin Molded Leadless Package (UMLP), 1.8 mm x 2.6 mm x 0.55 mm, 0.4 mm Pitch |

Block Diagram

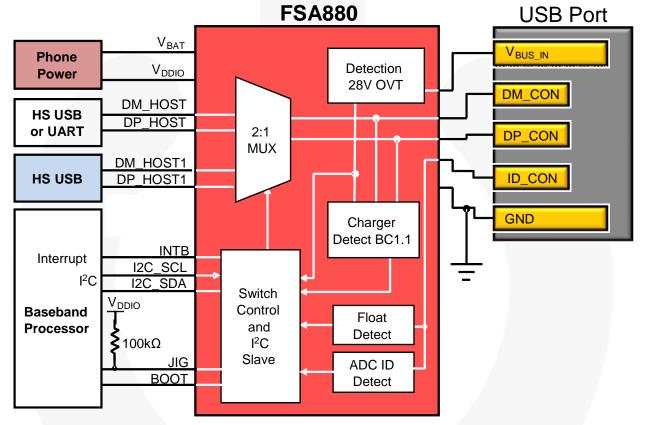


Figure 2. Block Diagram

Pin Configuration

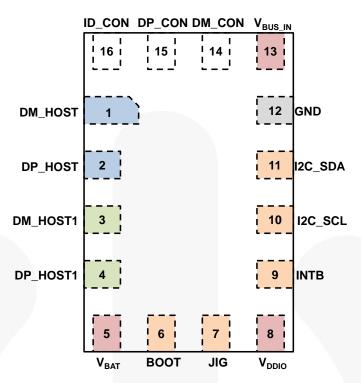


Figure 3. Pin Assignment (Through View)

Pin Descriptions

| Name | Pin # | Туре | Default State | Description |
|----------------------------|---------|--|-------------------------------|--|
| USB/UART Inte | rface | | | |
| DP_HOST | 2 | Signal Path | Open | D+ signal switch path, dedicated USB port to be connected to the resident USB / UART on the phone. Default port for all USB accessories and USB factory modes. |
| DM_HOST | 1 | Signal Path | Open | D- signal switch path, dedicated USB port to be connected to the resident USB / UART on the phone. Default port for all USB accessories and USB factory modes. |
| V _{BUS_IN} | 13 | Input | N/A | Input voltage supply pin to be connected to the VBUS pin of the USB connector |
| USB/UART Inte | rface 1 | | | |
| DM_HOST1 | 3 | Signal Path | Open | D- signal switch path, dedicated USB port to be connected to the secondary resident USB / UART on the phone. Default port for UART factory modes. |
| DP_HOST1 | 4 | Signal Path | Open | D+ signal switch path, dedicated USB port to be connected to the secondary resident USB / UART on the phone. Default port for UART factory modes. |
| Connector Inte | rface | | | |
| GND | 12 | Ground | N/A | Ground |
| ID_CON | 16 | Signal Path | Open | Connected to the USB connector ID pin and used for detecting accessories |
| DP_CON | 15 | Signal Path | Open | Connected to the USB connector D+ pin; depending on the signaling mode, this pin can be switched to DP_HOST or RxD_HOST pins. |
| DM_CON | 14 | Signal Path | Open | Connected to the USB connector D- pin; depending on the signaling mode, this pin can switched to DM_HOST or TxD_HOST pins. |
| Power Interface | 9 | | | |
| V _{DDIO} | 8 | Power | N/A | Input baseband interface I/O supply pin |
| V _{BAT} | 5 | Power | N/A | Input voltage supply pin to be connected to the mobile phone battery output or to an internal regulator on the phone |
| Factory Interfac | ce | | | |
| JIG | 7 | FSA880: Open-Drain Output FSA881: CMOS Output | FSA880:Hi-Z FSA881: LOW | Output control signal and used by the processor for factory test modes FSA880: Active LOW open-drain output FSA881: Active HIGH CMOS output |
| воот | 6 | CMOS Output | LOW | Output control signal and used by the processor for factory test modes |
| I ² C Interface | | | | |
| I2C_SCL | 10 | Input | Hi-Z | I ² C serial clock signal to be connected to the phone-based I ² C master |
| I2C_SDA | 11 | Open-Drain I/O | Hi-Z | I ² C serial data signal to be connected to the phone-based I ² C master |
| INTB | 9 | CMOS Output | LOW | Interrupt active LOW output used to prompt the phone baseband processor to read the I ² C register bits, indicate a change in ID_CON pin status or accessories' attach status |

Note:

1. LOW = V_{OL} or V_{IL} ; HIGH = V_{OH} or V_{IH} .

1. Functionality

The FSA88x is USB port accessory detector and switch with integrated 28 V over-voltage tolerance. Fully controlled using I²C, FSA88x enables high-speed USB 2.0 Standard Downstream Port (SDP), USB Charging Downstream Port (CDP) battery charger, USB Dedicated Charging Port (DCP) charger data cables to use a common connector micro or mini USB 2.0 port. Factory-mode cables can be detected and switched to use either the UART or USB data path. The FSA88x can be programmed for manual switching or automatic switching of data paths.

The architecture uses ID pin detection for convenient factory testing. Figure 9 - Figure 13 show the FSA88x passing the USB eye compliance test with ample margin.

1.1. Functional Overview

The FSA88x is designed for minimal software requirements for proper operation. The flow diagram in Figure 4 walks through the fundamental steps of operation and contains references to more detailed information.

| Flow Diagram | State | Datasheet Section | Description |
|---|----------------------------|----------------------|---|
| Power-up & | Power-Up & Reset | Section 2 | Applies power to the device and resets state of the device |
| Reset | I ² C | Section 3 | Communication with device through I ² C |
| I ² C | Configuration | Section 4 | Configures the device using I ² C and the internal registers (which can be bypassed during power-up) |
| Configuration | Detection | Section 5 | Manages accessory detection, including attachment and detachment |
| Accessory | Processor Communication | Section 6 | How the detection of the accessory is indicated to the processor |
| Plug-in Detection Processor Communication Switch Configuration Active Signals Accessory Detached | Switch Configuration | Section 7 | Configuration of switches based on detection |
| Figure 4. Basic Operation Flow | Active Signal | Section 8 | Signal performance of selected configuration |

2. Power-Up & Reset

The FSA88x does not need special power sequencing for correct operation. The main power is provided by V_{BAT} only. V_{DDIO} is only used for I^2C interface and interrupt processing.

Table 1 summarizes the enabled features of each power state. The valid voltages levels for each power supply can be found in Section 9.

Table 1. Power States Summary

| | | | | Enabled Functionality | | | |
|------------------------------|------------------------|---|-------------------------------|---|-----|--|--|
| Valid V _{BUS_IN} | Valid V _{BAT} | Valid V _{DDIO} ⁽¹⁾ | Power State | Processor Communication (I ² C & Interrupts) | | | |
| Х | N | N | Power Down | NO | | | |
| Х | N | Y ⁽²⁾ | Not Typical | Illegal State | | | |
| Х | Υ | N | Powered from V _{BAT} | NO | YES | | |
| Х | Υ | Υ | Powered from V _{BAT} | YES | YES | | |

Notes:

- 1. V_{DDIO} is expected to be the same supply used by the baseband I/Os.
- 2. Typically V_{DDIO} is only present when V_{BAT} is valid.
- 3. X = Don't care.

2.1. Reset

When the device is reset, all the registers are initialized to the default values shown in Section 9.9 and all switch paths are open. After reset or power up, FSA88x enters Standby Mode and is ready to detect accessories sensed on its $V_{\text{BUS \ IN}}$ and / or ID_CON pins.

2.1.1. Hardware Reset

Power-on reset is caused by the initial rising edge of VBAT

2.1.2. Software Reset

The device can be reset through software by writing to the Reset bit in the Register (1BH).


3. I²C

The FSA88x integrates a full fast-mode I^2C slave controller compliant with the I^2C specification version 2.1. The FSA88x I^2C interface runs up to 400 kHz.

The slave address is shown in Table 2. Status information and configuration occurs via the I²C interface. *Please see Table 7 for more information.*

Table 2. I²C Slave Address

| Name | Size (Bits) | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|---------------|-------------|-------|-------|-------|-------|-------|-------|-------|--------------|
| Slave Address | 8 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | Read / Write |

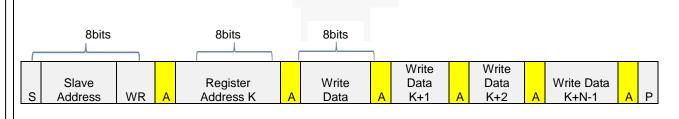

Note: Single-byte write is initiated by Master with P immediately following first data byte.

Figure 5. I²C Write Sequence

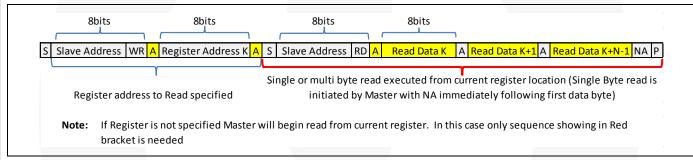


Figure 6. I²C Read Sequence



4. Configuration

FSA88x requires minimal configuration for proper detection and reporting. The following steps provide full configuration.

- Write Control register (02h) to configure manual or automatic switching modes.
- a. If using manual switching modes, write Manual SW1 register (13h) to configure switches.
- Write Control register (02h) to clear INT Mask bit. This enables interrupts to the baseband.

5. Detection

The FSA88x monitors both V_{BUS_IN} and ID_CON to detect accessories. The ID_CON detection is a "resistive detection" that reads the resistance to GND on the ID_CON pin to determine the accessory attached. Table 3 shows the assignment of accessories based on resistor values.

FSA88x can also detect accessories with ID resistances outside the specified ranges. The FSA88x detects these unknown accessories in the same manner as the defined accessories and interrupts the baseband processor and provides the correct ADC value, as shown in Table 3.

Table 3. ID CON Accessory Detection

| | ΑI | OC Co | de | | | Equivalent R _ı | D | Description | | |
|-----|--------|---------|--------|-----|----------|---------------------------|-------------|---|--|--|
| 4 | 3 | 2 | 1 | 0 | Min. | Target | Max. | Description | | |
| 1 | 0 | 1 | 0 | 1 | 117.4 kΩ | 121 kΩ | 124.6 kΩ | Unknown Accessory | | |
| 1 | 0 | 1 | 1 | 0 | 145.5 kΩ | 150 kΩ | 154.5 kΩ | Unknown Accessory | | |
| 1 | 0 | 1 | 1 | 1 | 176.4 kΩ | 200 kΩ ⁽⁴⁾ | 206 kΩ | Travel Adapter (TA) or Car Kit Type 1 Charger | | |
| 1 | 1 | 0 | 0 | 0 | 247.3 kΩ | 255 kΩ | 262.7 kΩ | Factory Mode Boot OFF-USB | | |
| 1 | 1 | 0 | 0 | 1 | 291.9 kΩ | 301 kΩ | 310.1 kΩ | Factory Mode Boot ON-USB | | |
| 1 | 1 | 0 | 1 | 0 | 354 kΩ | 365 kΩ | 375.9 kΩ | Unknown Accessory | | |
| 1 | 1 | 0 | 1 | 1 | 428.7 kΩ | 442 kΩ ⁽⁴⁾ | 455.3 kΩ | Unknown Accessory | | |
| 1 | 1 | 1 | 0 | 0 | 507.3 kΩ | 523 kΩ | 538.7 kΩ | Factory Mode Boot OFF-UART | | |
| 1 | 1 | 1 | 0 | 1 | 600.4 kΩ | 619 kΩ | 637.6 kΩ | Factory Mode Boot ON-UART | | |
| 1 | 1 | 1 | 1 | 0 | 750 kΩ | 1000 kΩ | 1030 kΩ | Unknown Accessory | | |
| Not | 'h1F o | r any c | ode ab | ove | 3 ΜΩ | None of the a | bove ranges | Unknown Accessory | | |

Note:

5.1. Factory Cable Detection

Factory modes are initiated with the attachment of special test hardware, called a "JIG box" for factory testing. The FSA88x automatically configures switch paths to any of the factory-mode accessories when the appropriate resistor is sensed on the ID_CON pin. A change of resistor on the ID_CON pin dynamically switches between factory modes and auto-configures the appropriate switch paths without detaching and attaching the cable.

The different factory mode accessories with the associated resistor values (1% standard resistors) on the ID_CON pin

and the JIG and BOOT logic states are listed in Table 4. The FSA88x allows both HS USB and FS USB in addition to UART signals to be passed on both ports with matched performance. This allows greater flexibility when designing with the FSA88x.

JIG output signals when a factory mode accessory is plugged in and BOOT output signals the mobile phone to boot up. The switch paths for factory modes are shown in Table 4.

Table 4. ID CON Factory Cable Detection

| Configuratio | n Type | DP_CON | DM_CON | 1 | ID_CON | | воот | FSA880 JIG | FSA881 JIG |
|---------------------|----------|----------|----------|-------|--------|-------|------|---------------|---------------|
| Factory Mode | Boot_On | DP_HOST1 | DM_HOST1 | 600kΩ | 619kΩ | 637kΩ | HIGH | LOW | HIGH |
| Jig: UART | Boot_Off | DP_HOST1 | DM_HOST1 | 507kΩ | 523kΩ | 538kΩ | LOW | LOW | HIGH |
| Factory Mode | Boot_On | DP_Host | DM_Host | 292kΩ | 301kΩ | 310kΩ | HIGH | LOW | HIGH |
| Jig: USB | Boot_Off | DP_Host | DM_Host | 247kΩ | 255kΩ | 262kΩ | LOW | LOW | HIGH |

The FSA88x detection algorithms monitor both the V_{BUS} and ID pins of the USB interface. Based on the detection results, multiple registers are updated and the INTB pin is asserted to indicate to the baseband processor that an accessory was detected and to read the registers for the complete

information. The detection algorithm allows the application to control the timing of the detection algorithm and the configuration of the internal switches. The flow diagram in Figure 7 shows the operation of the detection algorithm.

These accessories need VBUS to be valid in order to be detected since they are charger accessories.

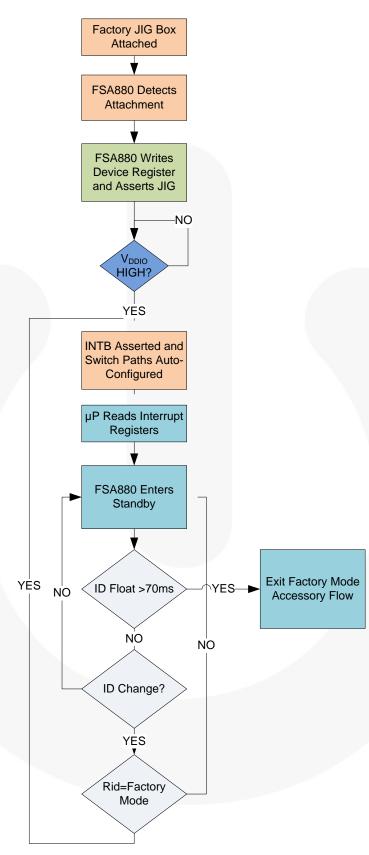


Figure 7. Factory Cable Detection Flow Chart (FSA880)

5.2. USB Port Detection

The multiple types of USB 2.0 ports the FSA88x can detect are summarized in Table 5.

Table 5. ID_CON and VBUS Detection Table for USB Devices

| V | DD CON | DM CON | ID_CON | resistance | to GND | Accessory Detected ⁽⁵⁾ |
|---------------------|-------------------|-------------------|----------|--|--------|--|
| V _{BUS_IN} | DP_CON | DM_CON | Min. | Тур. | Max. | Accessory Detected |
| 5V | Not Checked | Not Checked | 174.6 kΩ | $1.6 \text{ k}\Omega$ 200 kΩ 206 kΩ TA (travel adapter) Charger (1 Car Kit Charger Type 1 only | | |
| 5V | Shorted to DM_CON | Shorted to DP_CON | 3 ΜΩ | Open | Open | USB Dedicated Charging Port, Travel Adapter or Dedicated Charger (DCP) ⁽⁶⁾ |
| 5V | DP_HOST | DM_HOST | 3 ΜΩ | Open | Open | USB Charging Downstream Port (CDP) ⁽⁶⁾ |
| 5V | DP_HOST | DM_HOST | 3 ΜΩ | Open | Open | USB Standard Downstream Port (SDP) ⁽⁶⁾ |

Notes:

- 5. The accessory type is reported in the Device Type 1 (0Ah) register for each valid accessory detected.
- 6. The FSA88x follows the Battery Charging 1.1 specification, which uses DP_CON and DM_CON to determine the USB accessory attached. *Refer to Battery Charging 1.1 specification for further details*.

For SDP and CDP USB accessories, the following pin mapping is automatically configured:

- DP_HOST = DP_CON
- DM_HOST = DM_CON

For DCP charger, the DP_HOST and DM_HOST switches are open. For all USB accessories V_{BUS_IN} is Over-Voltage Tolerance (OVT) up to 28 V.

6. Processor Communication

Typical communication steps between the processor and the FSA88x during accessory detection are:

- INTB is asserted LOW, indicating change in accessory detection.
- Processor reads Interrupt 1 (03h) register to determine if an attach or detach event was detected.
- Processor reads Status registers to determine the exact accessory detected.
- a. Device Type 1 (0Ah): Indicates which USB, Car Kit CDP, or DCP accessory was detected.
- b. Device Type 2 (0Bh): Indicates which factory mode or unknown accessory was detected.


7. Switch Configuration

FSA88x devices have two modes of operation when configuring the internal switches. The FSA88x can autoconfigure the switches or the switches can be configured

manually by the processor. Typical applications use Auto-Configuration Mode and do not require interaction with the baseband to configure the switches correctly.

7.1. Configurations

USB Accessories and Factory Cables: DP_CON=DP_HOST DM_CON=DM_HOST

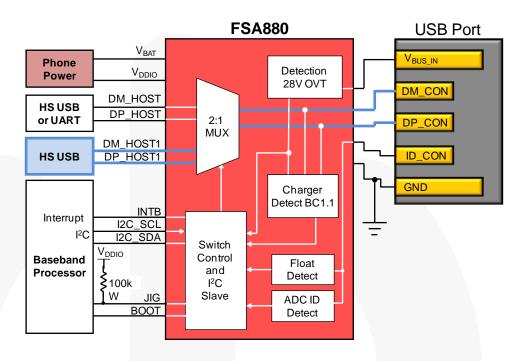

UART Factory
Cables:
DP_CON=DP_HOST1
DM_CON=DM_HOST1

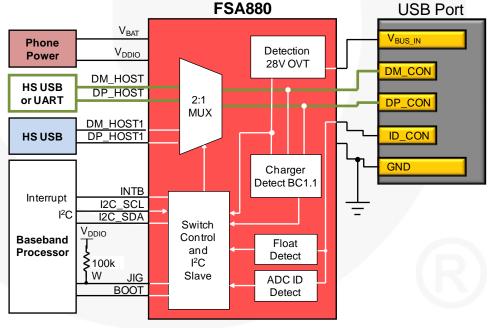


Figure 8. Switch Configurations

7.2. Manual Switching

Manual switching is enabled by writing the following registers:

- Manual Switch 1 (13h): Configures the switches for DM_CON, and DP_CON.
- Manual Switch 2 (14h): Configures the BOOT, and JIG pins.

8. Active Signal Performance

8.1. HS USB Data

8.1.1. DP_HOST/DM_HOST

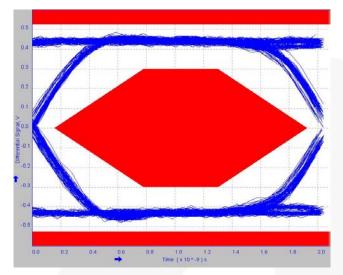


Figure 9. Pass Through Eye Compliance Testing Input Signal

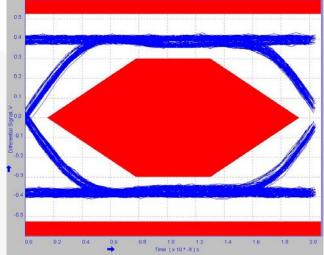


Figure 10. USB 2.0 Eye Compliance Test Results at Output

8.1.2. DP_HOST1/DM_HOST1

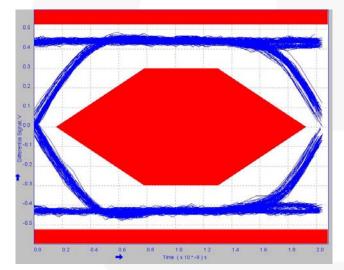


Figure 11. Pass-Through Eye Compliance Testing Input Signal

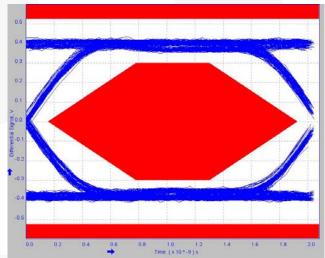


Figure 12. USB 2.0 Eye Compliance Test Results at Output

8.2. Full-Speed USB

8.2.1. DP_HOST/DM_HOST

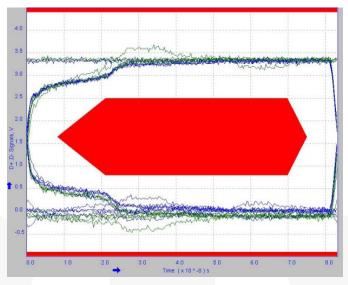


Figure 13. USB FS Eye Compliance Testing

8.2.2. DP_HOST1/DM_HOST1

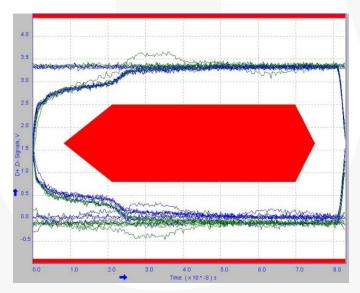


Figure 14. USB FS Eye Compliance Testing

9. Product Specifications

9.1. Absolute Maximum Ratings

Stresses exceeding the absolute maximum ratings may damage the device. The device may not function or be operable above the recommended operating conditions and stressing the parts to these levels is not recommended. In addition, extended exposure to stresses above the recommended operating conditions may affect device reliability. The absolute maximum ratings are stress ratings only.

| Symbol | | Parameter | | Min. | Max. | Unit | |
|---------------------|-----------------------------------|--|----------|------|------|------|--|
| V_{BAT} | Supply Voltage from Battery | | | -0.5 | 6.0 | V | |
| V _{BUS_IN} | Supply Voltage from USB Connec | | -0.5 | 28.0 | V | | |
| V | Switch I/O Voltage | USB | -1.0 | 6.0 | V | | |
| V_{SW} | Switch I/O Voltage | UART | | -1.0 | 6.0 | V | |
| I _{IK} | Input Clamp Diode Current | | -50 | | mA | | |
| 1 | Switch I/O Current (Continuous) | USB at T _A =85°C | | | 25 | mA | |
| I _{SW} | Switch I/O Current (Continuous) | UART at T _A =85°C | | | 12 | ША | |
| I _{SWPEAK} | Peak Switch Current (Pulsed at 1r | ns Duration, <10% Duty Cyc | cle) | | 150 | mA | |
| T_{STG} | Storage Temperature Range | | | -65 | +150 | °C | |
| TJ | Maximum Junction Temperature | | | | +150 | °C | |
| TL | Lead Temperature (Soldering, 10 | Seconds) | | | +260 | °C | |
| | | USB Connector Pins | Air Gap | 15 | | | |
| ESD | IEC 61000-4-2 System ESD | (DP_CON, DM_CON, VBUS_IN, ID_CON) to GND | Contact | 8 | | kV | |
| _ 3 _ | Human Body Model, JEDEC JESE | D22-A114 | All Pins | 4 | | | |
| | Charged Device Model, JEDEC JE | SD22-C101 | All Pins | 2 | | | |

9.2. Recommended Operating Conditions

The Recommended Operating Conditions table defines the conditions for actual device operation. Recommended operating conditions are specified to ensure optimal performance to the datasheet specifications. Fairchild does not recommend exceeding them or designing to Absolute Maximum Ratings.

| Symbol | Parameter | Min. | Тур. | Max. | Unit | |
|--------------------|--|-------------------------|------|------|------|----|
| V_{BAT} | Battery Supply Voltage | 3.0 | | 4.4 | V | |
| V _{BUSIN} | V _{BUS_IN} Voltage | 4.0 | | 5.5 | V | |
| V_{DDIO} | Processor Supply Voltage | 1.8 | | 3.6 | V | |
| \ / | Outlieb 1/O Valte rea | 0 | | 3.6 | | |
| V_{SW} | Switch I/O Voltage | 0 | ø, | 3.6 | V | |
| ID _{CAP} | Capacitive Load on ID_CON Pin for Reliab | ble Accessory Detection | | | 1.0 | nF |
| T _A | Operating Temperature | | -40 | | +85 | °C |

9.3. Switch Path DC Electrical Characteristics

All typical values are at T_A=25°C unless otherwise specified.

| Cumbal | Poromotor | \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ | Conditions | T _A = | Unit | | |
|---------------------------|--|---------------------------------------|---|------------------------|---------|-----------------------|---------|
| Symbol | Parameter | V _{BAT} (V) | Conditions | Min. | Тур. | Max. | Unit |
| Host Interf | face Pins (BOOT, JIG, INTB) | | | | | | |
| V_{OH} | Output High Voltage (FSA881 JIG Output) | 3.0 to 4.4 | I _{OH} =-2 mA | 0.8•V _{BAT} | | | V |
| V _{OH} | Output High Voltage (just BOOT & INTB Outputs) ⁽⁷⁾ | 3.0 to 4.4 | I _{OH} =-2 mA | 0.7•V _{DDIO} | | | V |
| V _{OL} | Output Low Voltage (INTB, JIG & BOOT Outputs) | 3.0 to 4.4 | I _{OL} =3 mA | | | 0.4 | V |
| I ² C Interfac | ce Pins – Fast Mode (I2C_SDA, I2C | SCL) | | | | | , |
| V _{IL} | Low-Level Input Voltage | 3.0 to 4.4 | | | | 0.3•V _{DDIO} | V |
| V _{IH} | High-Level Input Voltage | 3.0 to 4.4 | | 0.7•V _{DDIO} | | | V |
| ., | | 001.44 | V _{DDIO} >2 V | 0.05 V _{DDIO} | | | V |
| V_{HYS} | Hysteresis of Schmitt Trigger Inputs | 3.0 to 4.4 | V _{DDIO} <2 V | 0.1 V _{DDIO} | | | V |
| ., | Low-Level Output Voltage at 3 mA | | V _{DDIO} >2 V | | | 0.4 | |
| V_{OL1} | Sink Current (Open-Drain) | 3.0 to 4.4 | V _{DDIO} <2 V | | | 0.2•V _{DDIO} | V |
| I _{I2C} | Input Current of I2C_SDA and I2C_SCL Pins | 3.0 to 4.4 | Input Voltage 0.26 V to 2.34 V | -10 | | 10 | μA |
| Switch OF | F Characteristics | | | | | | |
| l _{OFF} | Power-Off Leakage Current | 0 | All Data Ports V _{SW} =0 V to 4.4 V | | | 10 | μA |
| I _{NO(OFF)} | Off Leakage Current | 3.0 to 4.4 | V _{BAT} =4.4 V; I/O Pins=0.3 V, 4.1 V, or Floating | -0.100 | 0.001 | 0.100 | μA |
| I _{IDSHRT} | Short-Circuit Current | 3.0 to 4.4 | Current Limit if ID_CON=0 V | | 1 | | mA |
| USB Switc | ch ON Path | | | | | | |
| Ronusb | USB Switch On Resistance ⁽⁸⁾ | 3.0 to 4.4 | V _{D+/D} =0 V, 0.4 V; I _{ON} =8 mA V _{SW} =0 V, 3.6 V; I _{ON} =30 mA | | 8 25 | 10 30 | Ω |
| VBUS Path | | | VSW=0 V, 3.0 V, ION=30 IIIA | | 25 | 30 | 12 |
| | | | | 0.8 | | 4.0 | V |
| V _{BUSIN} | V _{BUS_IN} Valid Threshold | | | 0.6 | 3 | 4.0 | V MΩ |
| R _{BUS} | V _{BUS_IN} Resistance to GND tch ON Paths | | | | 3 | | IVILZ |
| | | 2 0 to 4 4 | | 0 | | 1 26 | V |
| V _{ASR_UART} | Analog Signal Range | 3.0 to 4.4 | \\ 0\\ 0\\ 0\\\\ 1\\\\\\\\\\\\\\\\\\\\\ | 0 | 8 | 3.6 | V |
| R_{ONUART} | UART Switch On Resistance | 3.0 to 4.4 | $V_{D+/D}=0 V, 0.4 V; I_{ON}=8 mA$ | | | 10 | Ω |
| Total Curr | ent Consumption | | V _{SW} =0 V, 3.6 V; I _{ON} =30 mA | | 25 | 30 | - |
| Total Curr | ent Consumption | | No Accessory, Static | | | H | |
| I _{CCSL} | Battery Supply Standby Mode Current (No Accessory Attached) | 3.0 to 4.4 | Current During Standby Mode | | 15 | 25 | μA |
| locaum | Battery Supply Standby Mode | 3.0 to 4.4 | With non-Factory Mode Accessories Attached | | 30 | 40 | μΑ |
| I _{CCSLWA} | Current with Accessory Attached ⁽⁷⁾ | 3.0 10 4.4 | With Factory Mode Accessories Attached ⁽⁹⁾ | | 100 | 120 | μA |

Notes:

- 7. Limits based on electrical characterization data.
- 8. On resistance is the voltage drop between the two terminals at the indicated current through the switch.
- 9. Factory mode accessories leave the detection circuitry active after attach to allow detection of ID changes without an attach.

9.4. Capacitance

| Symbol | Parameter V _{BAT} (V) | | Conditions | T _A =- | 35°C | Unit | |
|----------|--------------------------------|---------------------------|-----------------------------------|-------------------|------|------|-------|
| Syllibol | Farameter | V BAT (V) | Conditions | Min. | Тур. | Max. | Oilit |
| Con | DP_CON, DM_CON On Capacitance | 3.8 | V _{BIAS} =0.2 V, f=1 MHz | | 6 | | pF |
| Cı | Capacitance for Each I/O Pin | 3.8 | | | 5 | | pF |

9.5. I²C DC Electrical Characteristics

| Complete | Dovomotov | V 00 | | Conditions | T _A = -40 | to +85°C | Linit |
|------------------|---|----------------------|--------------|----------------------|------------------------|-----------------------|-------|
| Symbol | Parameter | V _{BAT} (V) | | Conditions | Min. | Max. | Unit |
| Fast Mode | (I2C_SDA, I2C_SCL) | • | | | | | |
| V _{IL} | Low-Level Input Voltage | 3.0 to 4.4 | | | | 0.3•V _{DDIO} | V |
| V _{IH} | High-Level Input Voltage | 3.0 to 4.4 | | | 0.7•V _{DDIO} | | V |
| V | Hysteresis of Schmitt Trigger Inputs | 3.0 to 4.4 | V_{DDI} | o>2 V | 0.05 V _{DDIO} | | V |
| V_{hys} | Hysteresis of Schillill Higger Inputs | 3.0 10 4.4 | V_{DDI} | ₀ <2 V | 0.1 V _{DDIO} | | V |
| \/ | Low-Level Output Voltage at 3 mA | 2.0 to 4.4 | V_{DDI} | o>2 V | | 0.4 | |
| V_{OL1} | Sink Current (Open-Drain) | 3.0 to 4.4 | V_{DDI} | ₀ <2 V | | 0.2∙V _{DDIO} | V |
| I _{i2C} | Input Current of I2C_SDA and I2C_SCL Pins | 3.0 to 4.4 | Inpu 2.34 | ut Voltage 0.26 V to | -10 | 10 | μΑ |

9.6. I²C AC Electrical Characteristics

| Cumbal | Deremeter | Fast N | Fast Mode | | |
|---------------------|---|----------------------|-----------|------|--|
| Symbol | Parameter | Min. | Max. | Unit | |
| f _{SCL} | I2C_SCL Clock Frequency | 0 | 400 | kHz | |
| t _{HD;STA} | Hold Time (Repeated) START Condition | 0.6 | | μs | |
| t_{LOW} | LOW Period of I2C_SCL Clock | 1.3 | | μs | |
| t _{HIGH} | HIGH Period of I2C_SCL Clock | 0.6 | | μs | |
| t _{SU;STA} | Set-up Time for Repeated START Condition | 0.6 | | μs | |
| t _{HD;DAT} | Data Hold Time | 0 | 0.9 | μs | |
| t _{SU;DAT} | Data Set-up Time ⁽¹⁰⁾ | 100 | | ns | |
| t _r | Rise Time of I2C_SDA and I2C_SCL Signals ^(10,11) | 20+0.1C _b | 300 | ns | |
| t _f | Fall Time of I2C_SDA and I2C_SCL Signals ^(10,11) | 20+0.1C _b | 300 | ns | |
| t _{SU;STO} | Set-up Time for STOP Condition | 0.6 | | μs | |
| t _{BUF} | BUS-Free Time between STOP and START Conditions | 1.3 | | μs | |
| t _{SP} | Pulse Width of Spikes that Must Be Suppressed by the Input Filter | 0 | 50 | ns | |

Notes:

- 10. A fast-mode I²C Bus[®] device can be used in a Standard-Mode I²C Bus system, but the requirement t_{SU;DAT} ≥ 250 ns must be met. This is automatically the case if the device does not stretch the LOW period of the I2C_SCL signal. If a device does stretch the LOW period of the I2C_SCL signal, it must output the next data bit to the I2C_SDA line t_{r_max} + t_{SU;DAT} = 1000 + 250 = 1250 ns (according to the Standard-Mode I²C bus specification) before the I2C_SCL line is released.
- 11. C_b equals the total capacitance of one bus line in pF. If mixed with high-speed devices, faster fall times are allowed by the I²C specification.

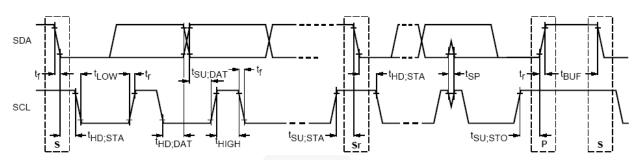


Figure 15. Definition of Timing for Full-Speed Mode Devices on the I²C Bus®

Table 6. I²C Slave Address

| Name | Size (Bits) | Bit 7 | Bit 6 | Bit 5 | Bit 4 | Bit 3 | Bit 2 | Bit 1 | Bit 0 |
|---------------|-------------|-------|-------|-------|-------|-------|-------|-------|-------|
| Slave Address | 8 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | R/W |

9.7. Switch Path AC Electrical Characteristics

All typical values are for V_{BAT} =3.8 V at T_A =25°C unless otherwise specified.

| Symbol | Parameter | | Conditions | Min. | Тур. | Max. | Unit |
|---------------------|--|---|---|------|------|------|------|
| | Active Channel Crosstalk | | f=1 MHz, R _T =50 Ω, C _L =0 pF | | -60 | | |
| Xtalk | DP_CON to DM_CON | USB Mode | f=240 MHz, R_T =50 Ω , C_L =0 pF | | -30 | | dB |
| O _{IRR} | Off Isolation | USB Mode | f=1 MHz, R_T =50 Ω , C_L =0 pF | | -60 | | dB |
| t _{SK(P)} | Skew of Opposite Transitions of Output (USB Mode) | t_r = t_f =750 ps (10-90%) at 240 MHz, C _L =0 pF, R _L =50 Ω | | 35 | | ps | |
| tsw | Goes LOW to Signal the Interrup | ime after INT Mask Cleared to "0" until INTB Goes LOW to Signal the Interrupt after Interruptible Event while INT Mask Bit Set to "1" | | | 10 | | ms |
| t _{SDPDET} | Time from V _{BUS_IN} Valid to USB S for USB Standard Downstream F | | See Figure 17 | | 130 | | ms |
| t _{CHGOUT} | Time from V _{BUS_IN} Valid to USB S for USB Charging Downstream F | | See Figure 18 | | 170 | | ms |
| tuigvbus | Time from V _{BUS_IN} Valid to JIG LOW for Factory Mode Operation with V _{BUS_IN} Present | | See Figure 20 | | 200 | | ms |
| tJIGVBUS | Time from V_{BUS_IN} Valid to JIG L0 Mode Operation without V_{BUS_IN} | | See Figure 21 | | 200 | | ms |

9.8. Timing Diagrams

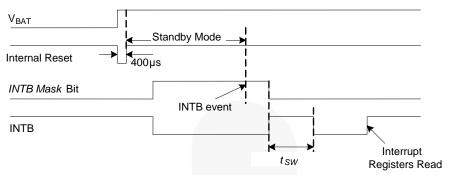


Figure 16. INT Mask to INTB Interrupt at Power-Up Timing Diagram

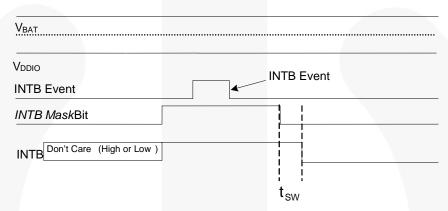


Figure 17. INT Mask to INTB Interrupt During Operation Timing Diagram

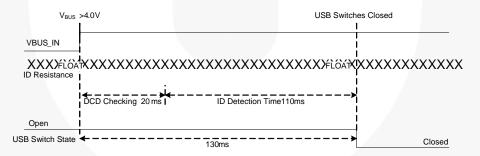


Figure 18. USB Standard Downstream Port Attach Timing

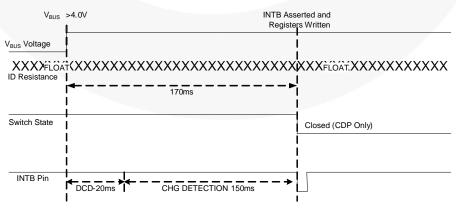


Figure 19. USB Charging Ports (DCP & CDP) Attach Timing

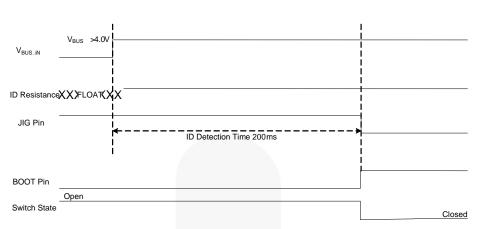


Figure 20. Jig Box Attach Timing (V_{BUS_IN} Valid)

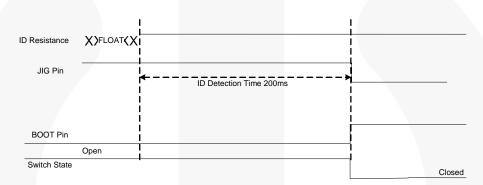


Figure 21. JIG Box Attach Timing without $V_{\text{BUS_IN}}$

9.9. Programmability Tables

Table 7. I²C Register Map

| Address | Register | Туре | Reset Value ^(12,13) | Bit 7 ⁽¹⁴⁾ | Bit 6 ⁽¹⁴⁾ | Bit 5 ⁽¹⁴⁾ | Bit 4 ⁽¹⁴⁾ | Bit 3 ⁽¹⁴⁾ | Bit 2 ⁽¹⁴⁾ | Bit 1 ⁽¹⁴⁾ | Bit 0 ⁽¹⁴⁾ |
|---------|------------------|------|-----------------------------------|-----------------------|-------------------------------|-------------------------|--------------------------------------|-----------------------|--------------------------|-----------------------|-----------------------|
| 01H | Device ID | R | N/A | | Revi | sion Num | ber | | | Vendor ID |) |
| 02H | Control | R/W | xxx0x1x1 | | | | Switch Open | | Auto Config | | INT Mask |
| 03H | Interrupt | R/C | xxxxxx00 | | | | | | | Detach | Attach |
| 07H | ADC | R | xxx11111 | | | | | , | ADC Value |) | |
| ОАН | Device Type 1 | R | x000x0xx | | Dedicated Charger (DCP) | USB Charger (CDP) | Car Kit Type 1 & TA Charger | | Standard USB (SDP) | | |
| 0BH | Device Type 2 | R | 0xxx0000 | Unknown Accessory | | | | Jig UART Off | Jig UART On | Jig USB Off | Jig USB On |
| 13H | Manual SW 1 | R/W | 000000xx | С | - Switching | 1 | С |)+ Switchin | g | | |
| 14H | Manual SW 2 | R/W | xxxx00xx | | | | | BOOT SW | JIG ON | | |
| 1BH | Reset | R/W | xxxxxxx0 | | | | | | | | Reset |

Notes

- 12. Write "0" to undefined register bits.
- 13. Values read from undefined register bits are not defined and invalid.
- 14. Do not use undefined register locations.

Table 8. Device ID

Address: 01h Type: Read

| Ві | it# | Name | Size (Bits) | Description |
|----|-----|-----------------|-------------|------------------------------|
| 7 | 7:3 | Revision Number | 5 | Rev 0.0 = 00000 |
| 2 | 2:0 | Vendor ID | 3 | 000: Fairchild Semiconductor |

Table 9. Control

Address: 02h

Reset Value: xxx0x1x1

Type: Read/Write

| Bit # | Name | Size (Bits) | Description |
|-------|-------------|-------------|---|
| 7:5 | DoNotUse | 3 | N/A |
| 4 | Switch Open | 1 | Open all switches Automatic switching by accessory status |
| 3 | DoNotUse | 1 | N/A |
| 2 | Auto Config | 1 | Automatic switching (also called auto-configuration) Manual switching |
| 1 | DoNotUse | 1 | N/A |
| 0 | INT Mask | 1 | Mask interrupt – do not interrupt baseband processor Unmask interrupt – interrupt baseband processor on change of state in Interrupt register |

Table 10. Interrupt

Address: 03h

Reset Value: xxxxxx00 Type: Read/Clear

| Bit # | Name | Size (Bits) | Description |
|-------|----------|-------------|---|
| 7:2 | DoNotUse | 6 | N/A |
| 1 | Detach | 1 | Accessory detached Accessory not detached |
| 0 | Attach | 1 | Accessory attached Accessory not attached |

Table 11. Device Type 1

Address: 07h

Reset Value: xxx11111

Type: Read

| Bit # | Name | Size (Bits) | Description |
|-------|-----------|-------------|------------------------|
| 7:5 | Reserved | 3 | NA |
| 4:0 | ADC Value | 5 | ADC value read from ID |

Table 12. Device Type 1

Address: 0Ah

Reset Value: x00x00xx

Type: Read

| Bit # | Name | Size (Bits) | | Description | | |
|-------|--------------------------------|-------------|---|--|--|--|
| 7 | DoNotUse | 1 | N/A | | | |
| 6 | Dedicated Charger (DCP) | 1 | USB dedicated charging port (DCP) charger detected USB dedicated charging port (DCP) charger not detected | | | |
| 5 | USB Charger (CDP) | 1 | USB charging downstream port (CDP) charger detected USB charging downstream port (CDP) charger not detected | | | |
| 4 | Car Kit Type 1 & TA Charger | 1 | | r Travel Adapter (TA) detected r Travel Adapter (TA) not detected | | |
| 3 | DoNotUse | 1 | N/A | | | |
| 2 | Standard USB (SDP) | 1 | USB standard downstream port (SDP) detected USB standard downstream port (SDP) not detected | | | |
| 1:0 | DoNotUse | 2 | N/A | | | |

Table 13. Device Type 2

Address: 0Bh

Reset Value: 0xxx0000

Type: Read

| Bit # | Name | Size (Bits) | Description |
|-------|-------------------|-------------|--|
| 7 | Unknown Accessory | 1 | 1: Any accessory detected as unknown or an accessory that cannot be detected as being valid even though ID_CON is not floating 0: Unknown accessory not detected |
| 6:4 | DoNotUse | 4 | N/A |
| 3 | JIG_UART_OFF | 1 | Factory mode BOOT-OFF-UART detected Factory mode BOOT-OFF-UART not detected |

| Bit # | Name | Size (Bits) | Description | |
|-------|-------------|-------------|---|--|
| 2 | JIG_UART_ON | 1 | Factory mode cable UART path with BOOT ON detected Factory mode cable UART path with BOOT ON not detected | |
| 1 | JIG_USB_OFF | 1 | Factory mode cable USB path with BOOT OFF detected Factory mode cable USB path with BOOT OFF not detected | |
| 0 | JIG_USB_ON | 1 | Factory mode cable USB path with BOOT ON detected Factory mode cable USB path with BOOT ON not detected | |

Table 14. Manual S/W 1⁽¹⁵⁾

Address: 13h

Reset Value: 000000xx Type: Read/Write

| Bit # | Name | Size (Bits) | Description |
|-------|------------------|-------------|---|
| 7:5 | DM_CON Switching | 3 | 000: Open switch 001: DM_CON connected to DM_HOST of USB port 011: DM_CON connected to DM_HOST1 of UART port All other values: DoNotUse |
| 4:2 | DP_CON Switching | 3 | 000: Open switch 001: DP_CON connected to DP_HOST of USB port 011: DP_CON connected to DP_HOST1 of UART port All other values: DoNotUse |
| 1:0 | DoNotUse | 2 | N/A |

Note:

15. When switching between manual switch configurations on a single attach, the accessory must pass through an "000: Open Switch" state between configurations. Manual Modes must have an accessory attached prior to operation. The FSA88x does not configure per the Manual Modes register if an accessory has not been previously attached.

Table 15. Manual S/W 2

Address: 14h

Reset Value: xxxx00xx Type: Read/Write

| Bit # | Name | Size (Bits) | Description | |
|-------|----------|-------------|---|--|
| 7:4 | DoNotUse | 4 | N/A | |
| 3 | BOOT_SW | 1 | 1: HIGH 0: LOW | |
| 2 | JIG_ON | 1 | 1: JIG output=GND (FSA880) or JIG output=HIGH (FSA881) 0: JIG output=High impedance (FSA880) or JIG output=LOW (FSA881) | |
| 1:0 | DoNotUse | 2 | N/A | |

Table 16. Reset

Address: 1Bh

Reset Value: xxxxxx0

Type: Read/Write

| Bit # | Name | Size (Bits) | Description | |
|-------|----------|-------------|---|--|
| 7:1 | DoNotUse | 6 | N/A | |
| 0 | Reset | 1 | 1: Resets the FSA88x 0: Does not reset the FSA88x | |

10. Layout Guidelines

10.1. PCB Layout Guidelines for High-Speed USB Signal Integrity

- Place FSA88x as close to the USB controller as possible. Shorter traces mean less loss, less chance of picking up stray noise, and less radiated EMI.
 - a) Keep the distance between the USB controller and the device less than 25 mm (< one inch).
 - b) For best results, this distance should be <18mm. This keeps it less than one quarter (¼) of the transmission electrical length.
- 2. Use an impedance calculator to ensure 90 Ω differential impedance for DP_CON and DM_CON lines.
- 3. Select the best transmission line for the application.
 - For example, for a densely populated board, select an edge-coupled differential stripline.
- Minimize the use of vias and keep HS USB lines on same plane in the stack.
 - Vias are an interruption in the impedance of the transmission line and should be avoided.
 - b) Try to avoid routing schemes that generally force the use of at least two vias: one on each end to get the signal to and from the surface.
- Cross lines, only if necessary, orthogonally to avoid noise coupling (traces running in parallel couple).
- If possible, separate HS USB lines with GND to improve isolation.
 - Routing GND, power, or components close to the transmission lines can create impedance discontinuities.
- Match transmission line pairs as much as possible to improve skew performance.
- Avoid sharp bends in PCB traces; a chamfer or rounding is generally preferred.
- Place decoupling for power pins as close to the device as possible.
 - a) Use low-ESR capacitors for decoupling if possible.
 - b) A tuned PI filter should be used to negate the effects of switching power supplies and other noise sources if needed.

10.2. Layout for GSM / TDMA Buzz Reduction

There are two possible mechanisms for TDMA / GSM noise to negatively impact FSA88x performance. The first is the result of large current draw by the phone transmitter during active signaling when the transmitter is at full or almost-full power. With the phone transmitter dumping large amounts of current in the phone GND plane; it is possible for there to be temporary voltage excursions in the GND plane if not properly designed. This noise can be coupled back through the GND plane into the FSA88x device and, although the FSA88x has very good isolation; if the GND noise amplitude is large enough, it can result in noise coupling to the FSA88x. The second path for GSM noise is through electromagnetic coupling onto the signal lines themselves.

In most cases, the noise introduced as a result is on the V_{BAT} and / or GND supply rails. Following are recommendations for PCB board design that help address these two sources of TDMA / GSM noise.

- Provide a wide, low-impedance GND return path to both the FSA88x and to the power amplifier that sources the phone transmit block.
- Provide separate GND connections to PCB GND plane for each device. Do not share GND return paths among devices.
- Add as large a decoupling capacitor as possible (≥1µF) between the V_{BAT} pin and GND to shunt any power supply noise away from the FSA88x. Also add decoupling capacitance at the PA (see the reference application schematic in Figure 22 for recommended decoupling capacitor values).
- Add 33 pF shunt capacitors on any PCB nodes with the potential to collect radiated energy from the phone transmitter.
- 5. Add a series R_{BAT} resistor prior to the decoupling capacitor on the V_{BAT} pin to attenuate noise prior to reaching the FSA88x.



11. Reference Schematic



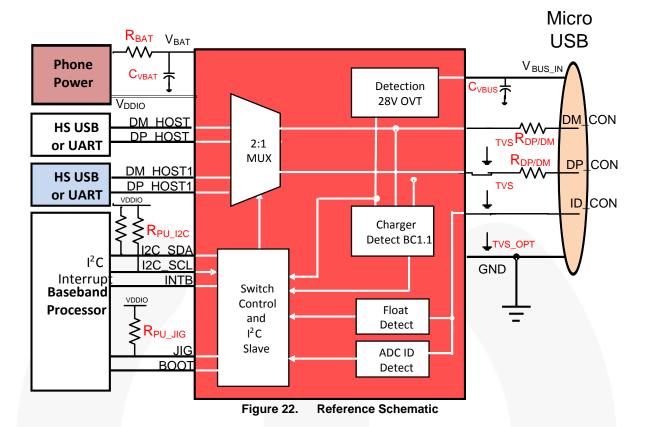


Table 17. Reference Schematic Component Values

| Symbol | Parameter | Recommended Value | | | Unit | Notes |
|---------------------|---|-------------------|------|------|-------|---|
| | i di dilictoi | Min. | Тур. | Max. | Oilit | 140103 |
| C _{VBUS} | V _{BUS_IN} Decoupling | 1.0 | 4.7 | 10.0 | μF | This is the recommended capacitance in the USB standard (for the downstream port V _{BUS} capacitance specification). |
| C _{VBAT} | V _{BAT} Decoupling Capacitance | | 1 | 10 | μF | Increasing this capacitance can help reduce GSM / TDMA noise. |
| R _{BAT} | V _{BAT} Series Resistance | | 50 | 100 | Ω | Adding series resistance can help reduce GSM / TDMA noise. Ensure that resistance is small enough to not reduce V _{BAT} levels under normal operation. |
| R _{PU_I2C} | I ² C Pull-up Resistance | | 4.7 | | kΩ | The actual value used must allow compliance to I ² C specification based on V _{DDIO} and bus capacitance. |
| R _{PU_JIG} | JIG Pull-up Resistance (FSA880 ONLY) | | 100 | | kΩ | Pull-up resistance for open-drain JIG pin. |
| R _{DP/DM} | DP_CON/DM_CON Series Resistance | | 2.2 | | Ω | Series resistance to improve surge performance of high-speed USB path. |
| TVS | High-Speed TVS Diodes | | 1 | | pF | Recommended high-speed TVS diodes to improve ESD performance. |
| TVS_OPT | Optional High-Speed TVS Diodes | | 1 | | pF | Optional high-speed TVS diodes to improve ESD performance. |

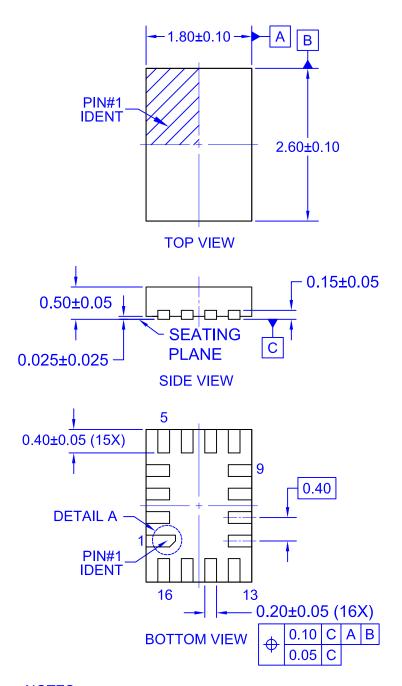

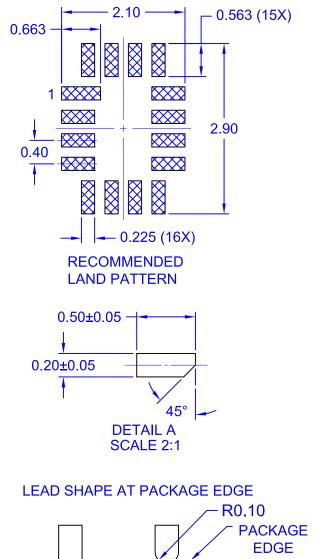

LEAD

OPTION 2

SCALE 2:1

NOTES:

- A. PACKAGE DOES NOT FULLY CONFORM TO JEDEC STANDARD.
- B. DIMENSIONS ARE IN MILLIMETERS.
- C. LAND PATTERN RECOMMENDATION IS EXISTING INDUSTRY LAND PATTERN.
- D DRAWING FILENAME: MKT-UMLP16ArevG.
- E. TERMINAL SHAPE MAY VARY ACCORDING TO PACKAGE SUPPLIER, SEE TERMINAL SHAPE VARIANTS.

ON Semiconductor

LEAD

OPTION 1

SCALE 2:1



ON Semiconductor and in are trademarks of Semiconductor Components Industries, LLC dba ON Semiconductor or its subsidiaries in the United States and/or other countries. ON Semiconductor owns the rights to a number of patents, trademarks, copyrights, trade secrets, and other intellectual property. A listing of ON Semiconductor's product/patent coverage may be accessed at www.onsemi.com/site/pdt/Patent-Marking.pdf. ON Semiconductor reserves the right to make changes without further notice to any products herein. ON Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation special, consequential or incidental damages. Buyer is responsible for its products and applications using ON Semiconductor products, including compliance with all laws, regulations and safety requirements or standards, regardless of any support or applications information provided by ON Semiconductor. "Typical" parameters which may be provided in ON Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. ON Semiconductor does not convey any license under its patent rights nor the rights of others. ON Semiconductor products are not designed, intended, or authorized for use as a critical component in life support systems or any FDA Class 3 medical devices or medical devices with a same or similar classification in a foreign jurisdiction or any devices intended for implantation in the human body. Should Buyer purchase or use ON Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold ON Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and exp

PUBLICATION ORDERING INFORMATION

LITERATURE FULFILLMENT:

Literature Distribution Center for ON Semiconductor 19521 E. 32nd Pkwy, Aurora, Colorado 80011 USA Phone: 303-675-2175 or 800-344-3860 Toll Free USA/Canada Fax: 303-675-2176 or 800-344-3867 Toll Free USA/Canada Email: orderlit@onsemi.com N. American Technical Support: 800-282-9855 Toll Free USA/Canada
Europe, Middle East and Africa Technical Support:
Phone: 421 33 790 2910
Japan Customer Focus Center
Phone: 81-3-5817-1050

ON Semiconductor Website: www.onsemi.com

Order Literature: http://www.onsemi.com/orderlit

For additional information, please contact your local Sales Representative

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

ON Semiconductor: FSA880UMX



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: <u>org@eplast1.ru</u>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.