

# nRF24AP2

nRF24AP2-USB

Single-chip ANT™ ultra-low power  
wireless network solution

## Product Specification v1.0

### Key Features

- Second generation single chip ANT solution
- Bridge from ANT networks and devices to computers, Macs, and the internet
- nRF24AP2- USB supports up to eight ANT (logic) channels – ideal for hubs
- World wide 2.4 GHz ISM band operation
- USB v2.0 interface
- Fully embedded, enhanced ANT protocol stack
- Built-in device search and pairing
- Built-in timing and power management
- Built-in interference handling
- Configurable channel period 5.2 ms - 2 s
- Broadcast, Acknowledged and Burst communication modes
- Burst data rate up to 20 kbps
- Simple to complex network topologies: Peer-to-peer, star, tree and practical mesh
- Supports public, private and managed networks
- Support for ANT+ device profile implementations enabling multivendor interoperability
- Fully interoperable with nRF24AP1, Dynastream ANT chipset / module based products and other nRF24AP2 variants
- RoHS compliant 5x5 mm 32-pin QFN package
- Low cost external 16 MHz crystal

### Applications

- Sports
- Wellness
- Home health monitoring
- Home/industrial automation
- Environmental sensor networks
- Active RFID
- Logistics/goods tracking
- Audience-response systems

## Liability disclaimer

Nordic Semiconductor ASA reserves the right to make changes without further notice to the product to improve reliability, function or design. Nordic Semiconductor ASA does not assume any liability arising out of the application or use of any product or circuits described herein.

All application information is advisory and does not form part of the specification.

## Limiting values

Stress above one or more of the limiting values may cause permanent damage to the device. These are stress ratings only and operation of the device at these or at any other conditions above those given in the specifications are not implied. Exposure to limiting values for extended periods may affect device reliability.

## Life support applications

Nordic Semiconductor's products are not designed for use in life support appliances, devices, or systems where malfunction of these products can reasonably be expected to result in personal injury. Nordic Semiconductor ASA customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Nordic Semiconductor ASA for any damages resulting from such improper use or sale.

| Datasheet status                  |   |
|-----------------------------------|---|
| Objective product specification   | This product specification contains target specifications for Nordic Semiconductor's product development.   |
| Preliminary product specification | This product specification contains preliminary data; supplementary data may be published from Nordic Semiconductor ASA later.  |
| Product specification             | This product specification contains final product specifications. Nordic Semiconductor ASA reserves the right to make changes at any time without notice in order to improve design and supply the best possible product. |

## Contact details

For your nearest dealer, please see [www.nordicsemi.com](http://www.nordicsemi.com).

### Main office:

Otto Nielsens veg 12  
7004 Trondheim  
Phone: +47 72 89 89 00  
Fax: +47 72 89 89 89  
[www.nordicsemi.com](http://www.nordicsemi.com)



---

## RoHS statement

This product meets the requirements of Directive 2002/95/EC of the European Parliament and of the Council on the Restriction of Hazardous Substances (RoHS). Complete hazardous substance reports as well as material composition reports for all active Nordic products can be found on our web site [www.nordicsemi.com](http://www.nordicsemi.com).

## Revision History

| Date       | Version | Description           |
|------------|---------|-----------------------|
| April 2010 | 1.0     | Product Specification |

## Contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Introduction .....</b>              | <b>6</b>  |
| 1.1      | Prerequisites .....                    | 6         |
| 1.2      | Writing conventions .....              | 6         |
| <b>2</b> | <b>Product overview .....</b>          | <b>7</b>  |
| 2.1      | Features .....                         | 8         |
| 2.2      | Block diagram .....                    | 9         |
| 2.3      | Pin Assignments .....                  | 10        |
| 2.4      | Pin Functions .....                    | 10        |
| 2.4.1    | Power supply pins .....                | 11        |
| 2.4.2    | Reset pin .....                        | 11        |
| <b>3</b> | <b>RF transceiver .....</b>            | <b>12</b> |
| 3.1      | Features .....                         | 12        |
| 3.2      | Block diagram .....                    | 12        |
| <b>4</b> | <b>ANT overview .....</b>              | <b>13</b> |
| 4.1      | Block diagram .....                    | 13        |
| 4.2      | Functional description .....           | 13        |
| 4.2.1    | ANT nodes .....                        | 14        |
| 4.2.2    | ANT channels .....                     | 14        |
| 4.2.3    | ANT channel configuration .....        | 15        |
| 4.2.4    | Proximity search .....                 | 17        |
| 4.2.5    | Continuous scanning mode .....         | 18        |
| 4.2.6    | ANT network topologies .....           | 18        |
| 4.2.7    | ANT message protocol .....             | 19        |
| <b>5</b> | <b>Host interface .....</b>            | <b>21</b> |
| 5.1      | Features .....                         | 21        |
| 5.2      | Block diagram .....                    | 21        |
| 5.3      | Functional description .....           | 21        |
| 5.3.1    | Physical USB connection .....          | 22        |
| 5.3.2    | USB enumeration .....                  | 22        |
| 5.3.3    | USB descriptors .....                  | 22        |
| 5.3.4    | String descriptors .....               | 25        |
| 5.3.5    | Customize descriptors .....            | 25        |
| 5.3.6    | Control transfer .....                 | 26        |
| 5.3.7    | Host Command flow .....                | 28        |
| <b>6</b> | <b>On-chip oscillator .....</b>        | <b>30</b> |
| 6.1      | Features .....                         | 30        |
| 6.2      | Block diagram .....                    | 30        |
| 6.3      | Functional description .....           | 30        |
| 6.3.1    | 16 MHz crystal oscillator .....        | 30        |
| 6.3.2    | External 16 MHz clock .....            | 31        |
| <b>7</b> | <b>Operating conditions .....</b>      | <b>32</b> |
| <b>8</b> | <b>Electrical specifications .....</b> | <b>33</b> |
| 8.1      | USB interface .....                    | 34        |
| 8.2      | DC Electrical characteristics .....    | 35        |

---

|           |                                       |           |
|-----------|---------------------------------------|-----------|
| 8.3       | Current consumption .....             | 36        |
| <b>9</b>  | <b>Absolute maximum ratings .....</b> | <b>37</b> |
| <b>10</b> | <b>Mechanical specification .....</b> | <b>38</b> |
| <b>11</b> | <b>Reference circuitry .....</b>      | <b>39</b> |
| 11.1      | PCB guidelines .....                  | 39        |
| 11.2      | Schematics .....                      | 40        |
| 11.3      | Layout .....                          | 41        |
| 11.4      | Bill Of Materials (BOM) .....         | 42        |
| <b>12</b> | <b>Ordering information .....</b>     | <b>43</b> |
| 12.1      | Package marking .....                 | 43        |
| 12.1.1    | Abbreviations .....                   | 43        |
| 12.2      | Product options .....                 | 43        |
| 12.2.1    | RF silicon .....                      | 43        |
| 12.2.2    | Development tools .....               | 43        |
| <b>13</b> | <b>Glossary .....</b>                 | <b>44</b> |

## 1 Introduction

The nRF24AP2 components belong to Nordic Semiconductor's low-cost, high-performance family of 2.4 GHz ISM Connectivity-on-Chip devices with the ANT protocol stack embedded. nRF24AP2 offers the market's most efficient, single chip, transceiver solution for Ultra Low Power (ULP) networks, through the integration of the extremely power efficient ANT protocol stack, the world leading Nordic Semiconductor 2.4 GHz RF technology as well as critical low-power oscillator and timing features.

This document covers the product nRF24AP2-USB, which is a single-chip implementation of an ANT USB bridge.

### 1.1 Prerequisites

In order to fully understand the product specification, a good knowledge of electronics and software engineering is necessary. Please also refer to the document *ANT Message Protocol and Usage* when reading this product specification. You can download the document from Nordic's web site [www.nordicsemi.com](http://www.nordicsemi.com) or from [www.thisisant.com](http://www.thisisant.com).

### 1.2 Writing conventions

This product specification follows a set of typographic rules to ensure that the document is consistent and easy to read. The following writing conventions are used:


- Commands, bit state conditions, and register names are written in `Courier New`.
- Pin names and pin signal conditions are written in **Courier New bold**.
- Cross references are [underlined and highlighted in blue](#).

## 2 Product overview

ANT is a demonstrably superior Wireless Sensor Network (WSN) RF protocol for almost all practical ultra-low power networking applications – from simple point-to-point links to complex networks. Embedded in nRF24AP2 devices, it is paired up with Nordic Semiconductor's market leading 2.4 GHz radio technology. The combination gives you a high performance-, ultra-low-power network connectivity to applications.

The nRF24AP2-USB, with its USB v2.0 compatible serial interface, is made specifically to act as a bridge between an ANT wireless network and backbone infrastructure. Backbone infrastructure can be advanced user interfaces, storage on a computer or other USB enabled equipment.

[Figure 1. on page 7](#) shows a network in which a network node with nRF24AP2-USB embedded, communicates with up to eight ANT nodes. An example might be a computer collecting data from a hub (a watch) in a portable ANT sensor network containing several sensors (like heart rate-, speed and distance sensors). The 8-channel nRF24AP2-USB node can of course also set up ANT channels with other nodes (gym equipment, for instance). The information collected through nRF24AP2-USB can then be used either locally or shared with others over local networks or internet.

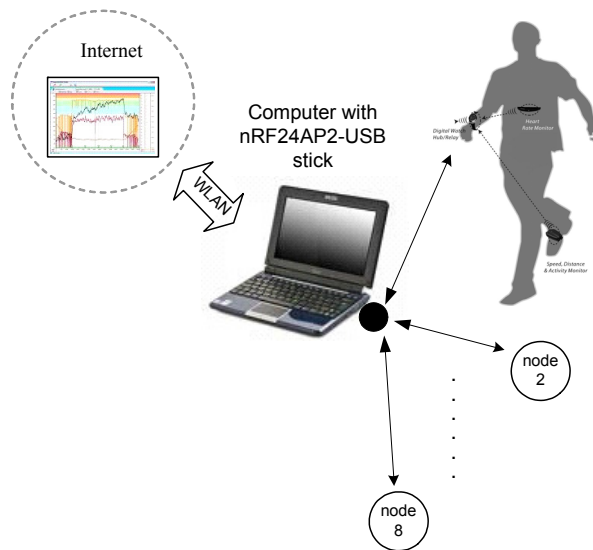

*Figure 1. Simple setup with nRF24AP2-USB*

See [Figure 10. on page 19](#) for more complex ANT-network topologies.

## 2.1 Features

Features of the nRF24AP2-USB include:

- Ultra low power 2.4 GHz transceiver
  - World wide 2.4 GHz ISM band operation
  - Based on nRF24L01+ transceiver
  - GFSK modulation
  - 1 Mbps on-air data rate
  - 1 MHz frequency resolution
  - 78 RF channels
  - -85 dBm sensitivity
  - Up to 0 dBm output power
- ANT protocol stack
  - Full implementation of the physical, data link, network- and transport OSI layers
  - Packet-based communication – 8 byte payload per packet
  - Optimized for ultra-low power operation
- ANT channels
  - Logic communication channel between ANT nodes
  - nRF24AP2USB support up to 8 channels—ideal for hubs
  - Built-in timing and power management
  - Built-in interference handling
  - Configurable channel period 5.2 ms - 2 s
  - Broadcast, acknowledged and burst communication modes
  - Burst data rate up to 20 kbps
- Device search and pairing
  - Wild-card searches
  - Proximity searches
  - Specific searches
  - Automatic link establishment if correct device is found
  - Automatic re-link attempt if link is lost
  - Configurable search timeout
- Network topologies
  - Point-to-point and star networks using independent ANT channels
  - Shared networks: Polled data collection (N:1) by using ANT shared channel option
  - Broadcast networks: Mass distribution of data (1:N)
- Network management / ANT+
  - Supports public and private (managed) networks
  - Support for ANT+ system implementations enabling multi-vendor interoperability
- ANT core stack enhancements
  - Background scanning channel
  - Continuous scanning mode
  - High density node support
  - Improved channel search
  - Channel ID management
  - Improved transmission power control on a per channel basis
  - Frequency agility
  - Proximity search
- Power Management
  - Fully controlled by ANT protocol stack
  - On-chip voltage regulator
  - USB supply operation
  - 4.0 to 5.25V supply range
- On-chip oscillators and clock inputs
  - 16 MHz crystal oscillator supporting low-cost crystals
- Host interface
  - USB v2.0 compatible
  - On-chip pull-up resistor on D+
  - Two control endpoints and two bulk endpoints
  - Suspend and resume power management functions
  - USB drivers and ANT command libraries supported by ANT



2.2 Block diagram

nRF24AP2 is composed of five main blocks as shown in [Figure 2](#). The blocks indicate the interface, power management, the ANT protocol engine, on-chip oscillators and the RF transceiver.

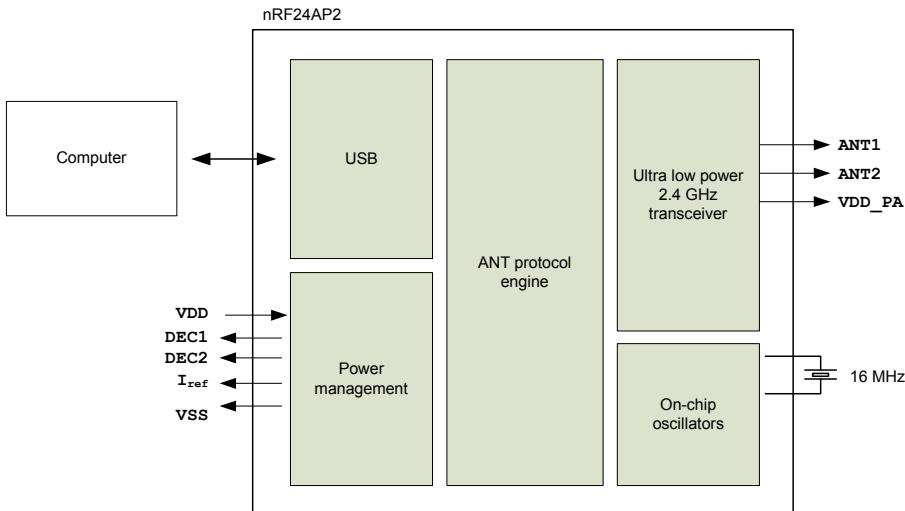


Figure 2. Block diagram of nRF24AP2 solution

To find more information about each block in the diagram, see [Table 1](#).

| Name                | Reference                            |
|---------------------|--------------------------------------|
| RF transceiver      | <a href="#">Chapter 3 on page 12</a> |
| ANT protocol engine | <a href="#">Chapter 4 on page 13</a> |
| USB interfaces      | <a href="#">Chapter 5 on page 21</a> |
| On-chip oscillators | <a href="#">Chapter 6 on page 30</a> |
| Power management    | <a href="#">Chapter 8 on page 33</a> |

Table 1. Block diagram cross references

## 2.3 Pin Assignments

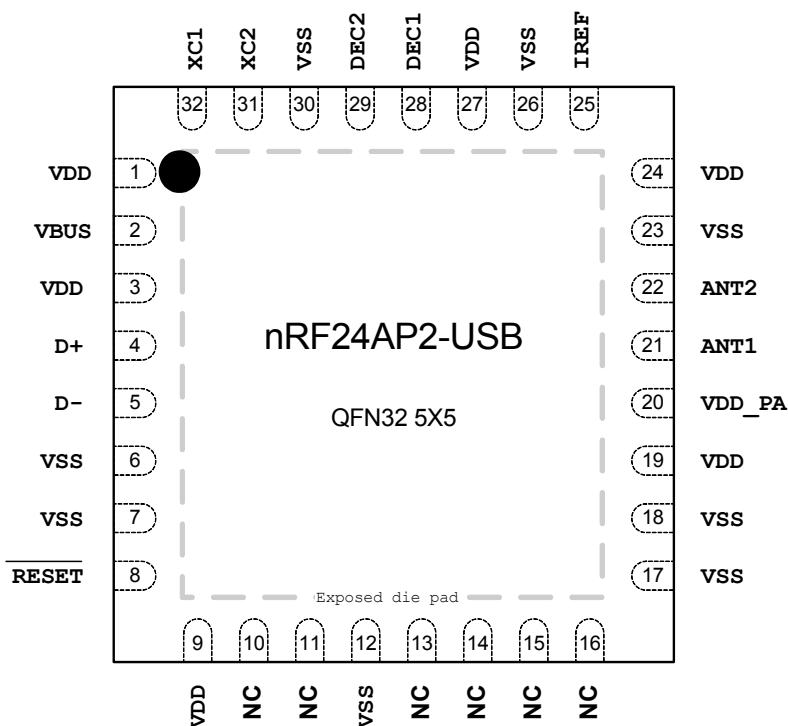


Figure 3. nRF24AP2-USB pin assignment (top view) for a QFN32 5x5 mm package

## 2.4 Pin Functions

| Pin                          | Name            | Type              | Description   |
|------------------------------|-----------------|-------------------|---|
| 21, 22                       | ANT1, ANT2      | RF                | Differential antenna connection (TX and RX)   |
| 5, 4                         | D-, D+          | Digital I/O       | Differential USB connection   |
| 28, 29                       | DEC1, DEC2      | Power             | Power supply outputs for de-coupling purposes   |
| 25                           | IREF            | Analog Input      | Device reference current output. To be connected to reference resistor on PCB                   |
| 10, 11, 13, 14, 15, 16       | NC              | NC                | Not connected   |
| 8                            | RESET           | Digital Input     | Reset, active low. Connect to VDD if not used   |
| 2                            | VBUS            | Power             | USB power supply  |
| 1, 3, 9, 19, 24, 27          | VDD             | Power             | Alternative power supply pins. The VDD pins must always be connected and de-coupled externally. |
| 20                           | VDD_PA          | Power Output      | Power supply output (+1.8V) for on-chip RF Power amplifier                                      |
| 6, 7, 12, 17, 18, 23, 26, 30 | VSS             | Power             | Ground (0V)   |
| 32, 31                       | XC1, XC2        | Analog Input      | Connection for 16 MHz crystal   |
|                              | Exposed die pad | Power/heat relief | Not connected   |

Table 2. nRF24AP2-USB pin functions

### 2.4.1 Power supply pins

**V<sub>BUS</sub>** and **V<sub>SS</sub>** are the power supply and ground pins. The nRF24AP2-USB can operate from a single power supply.

The nRF24AP2-USB contains an on-chip regulator that produces +3.3V on the **V<sub>DD</sub>** pins, from the **V<sub>BUS</sub>** supply line (4.0 – 5.25V). Alternatively, the **V<sub>BUS</sub>** pin can be left open and the **V<sub>DD</sub>** pins may be fed from an external 3.3V supply. In this case, the on-chip 3.3V regulator is switched off.

### 2.4.2 Reset pin

The **RESET** pin provides an optional reset when the nRF24AP2-USB is placed in a system that has a master reset source, this pin is not needed for normal application. Pull **RESET** pin low for minimum 0.2  $\mu$ s and return to high, this will reset the nRF24AP2-USB to the default state. Connect **RESET** pin to **V<sub>DD</sub>** if not used in the application.

### 3 RF transceiver

All transceiver operations are controlled solely by the ANT protocol stack. Configuration of the ANT protocol stack occurs through a serial interface by issuing ANT commands to nRF24AP2-USB.

#### 3.1 Features

Features of the RF transceiver include:

- General
  - Worldwide 2.4 GHz ISM band operation
  - Common antenna interface in transmit and receive
  - GFSK modulation
  - 1 Mbps on air data rate
- Transmitter
  - Programmable output power: 0, -6, -12 or -18 dBm
- Receiver
  - Integrated channel filters
  - -85 dBm sensitivity
- RF Synthesizer
  - Fully integrated synthesizer
  - 1 MHz frequency programming resolution
  - 78 RF channels in the 2.4 GHz ISM band
  - Accepts low cost  $\pm 50$  ppm 16 MHz crystal
  - 1 MHz non-overlapping channel spacing

#### 3.2 Block diagram

[Figure 4. on page 12](#) shows a block diagram of the RF transceiver in nRF24AP2-USB.


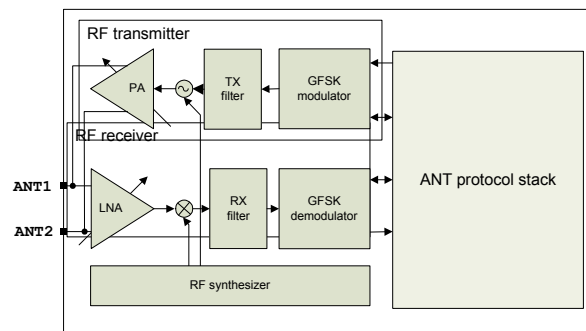


Figure 4. Internal circuitry of RF transceiver relative to ANT

## 4 ANT overview

The ANT protocol has been engineered for simplicity and efficiency. In operation, this results in ultra-low power consumption, maximized battery life, a minimal burden on system resources, simpler network designs and lower implementation costs.

### 4.1 Block diagram

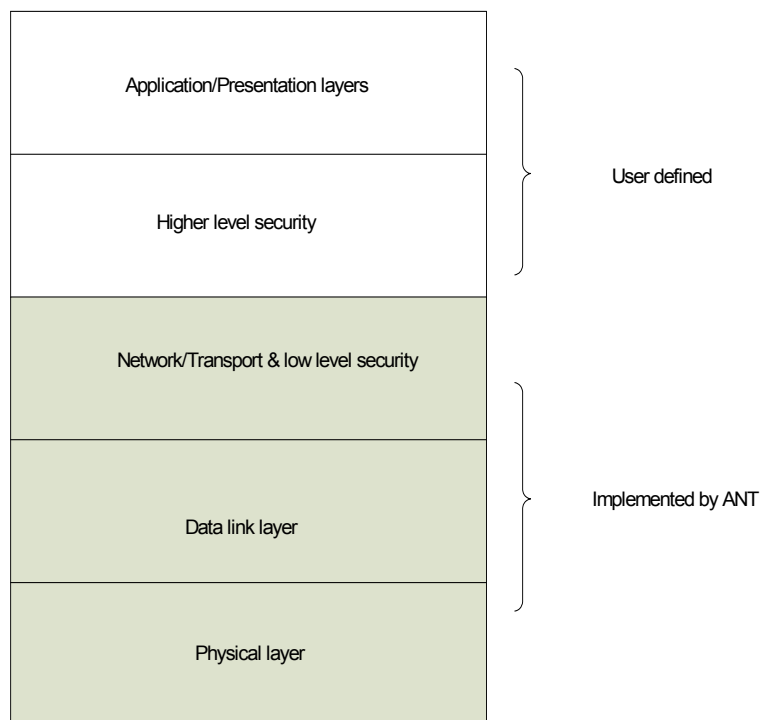

*Figure 5. OSI layer model of ANT protocol stack*

ANT provides carefree handling of the Physical, Data Link, Network, and Transport OSI layers. Please see [Figure 5. on page 13](#). In addition, it incorporates key, low-level security features that form the foundation for user-defined, sophisticated, network-security implementations. ANT ensures adequate user control while considerably easing the computational burden, by providing a simple yet effective wireless networking solution.

### 4.2 Functional description

A brief overview of the ANT concept is presented here for convenience. A complete description of the ANT protocol is found in the document *ANT Message Protocol and Usage* available at [www.nordicsemi.com](http://www.nordicsemi.com) or [www.thisisant.com](http://www.thisisant.com).

### 4.2.1 ANT nodes

All ANT networks are built up of nodes. See the ANT node represented in [Figure 6. on page 14](#). A node can be anything from a simple sensor to a complex, collection unit like a watch or computer. Common to all nodes is that they contain an ANT engine (nRF24AP2) handling all connectivity to other nodes and a host processor handling the application features. nRF24AP2 interfaces to the host processor through a serial interface, and all configuration and control are performed using a simple command library.

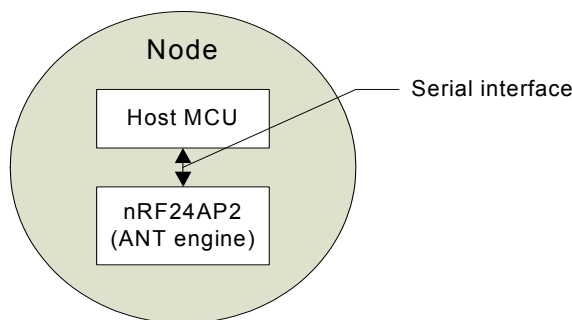


Figure 6. The ANT node

### 4.2.2 ANT channels

nRF24AP2 can establish one or up to eight logic channels, called ANT channels, to other ANT nodes. The number of ANT channels available depends on the nRF24AP2 variant being used.

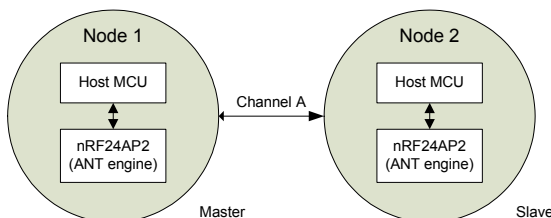


Figure 7. ANT nodes and the channel between them

The simplest ANT channel is called an independent channel and consists of two nodes, one acting as master, the other as slave for this channel. For each ANT channel opened, nRF24AP2 will set up and manage a synchronous wireless link, exchanging data packets with other ANT nodes at preset time intervals called channel periods. See [Figure 8. on page 15](#). The master controls the timing of a channel, that is to say, it will always initiate communication between the nodes. The slave locks on to the timing set by the master, receives the transmissions from the master and can then (if configured so) send acknowledge and/or data (if any) back to the master.

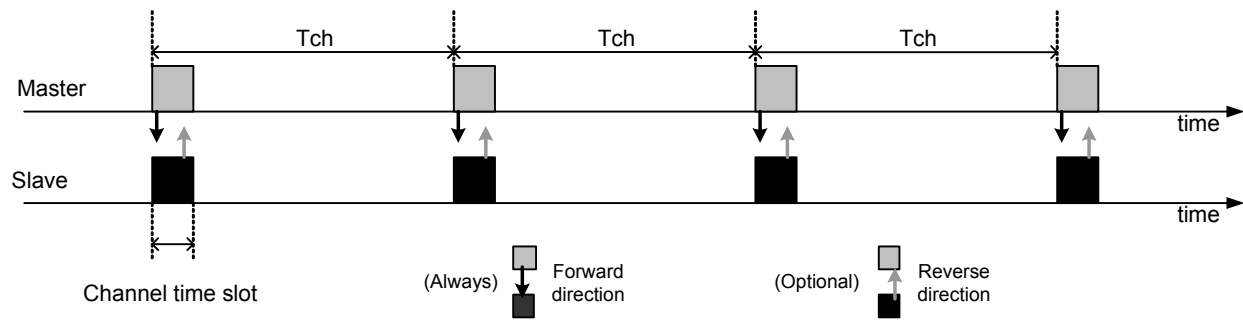


Figure 8. Channel communication showing forward and reverse directions. Not to scale

At each time slot an ANT channel can transfer user data (8 bytes) both ways as simple broadcasts, broadcast with acknowledgement from the receiver, or transfer data as bursts (this will extend the time slot used) to accommodate transfer of larger blocks of user data. The total available payload bandwidth (20 kbps) in an ANT node is shared between active ANT channels through a Time Division Multiple Access (TDMA) scheme. If a channel time slot comes up, but there is no new data from the master, the master will still send the last packet to keep the timing of the channel and enable the slave to send data back if needed.

Each ANT channel available in the nRF24AP2 can for example be configured as a simple unidirectional (broadcast), or bi-directional independent channel; or as a more complex, shared channel where a master interfaces to multiple slaves (1:N topologies). Please see the *ANT Message Protocol and Usage* document for further details on shared ANT channels.

### 4.2.3 ANT channel configuration

Unique to ANT is that the setup of each ANT channel is independent from all the other ANT channels in the network, including other channels in the same node. This means that one ANT node can act as master on one ANT channel while being a slave to another. Since there is no overall 'network master' present in ANT networks, ANT allows you to configure and run each ANT channel solely based on the needs of the nodes on that channel. Search- and pairing algorithms in ANT let you easily set up and shut down ANT channels in an ad-hoc fashion. This gives you ultimate flexibility in adjusting ANT channel parameters like data rate and latency versus power consumption. Moreover, you only make the network as complex as it needs to be at any given time. In order for two ANT nodes to set up an ANT channel, they must share a common channel configuration and channel ID. The necessary configuration parameters are summarized in [Table 3. on page 16](#).

| Parameter                    | Comment   |
|------------------------------|---|
| <b>Channel configuration</b> |   |
| Channel period               | Time interval between data exchanges on this channel (5.2 ms - 2 s)   |
| RF frequencies               | Which of the 78 available RF frequencies is used by this channel  |
| Channel type                 | Bi-directional slave, bi-directional master, shared bi-directional slave, Slave Receive only  |
| Network type                 | Decides if this ANT channel is going to be generally accessible (public) to all ANT nodes, or if it shall limit its connectivity to devices belonging to a managed or private network |
| <b>Channel ID</b>            |   |
| Transmission type            | 1 byte – Identifying characteristics of the transmission, can for instance contain codes on how payload is to be interpreted  |
| Device type                  | 1 byte - ID to identify the device type of the channel master (Ex: heartrate belt, temperature sensor etc.)   |
| Device number                | 2 byte - Unique ID for this channel   |

Table 3. ANT channel ID

The channel configuration parameters are static system parameters that must match in the master and slave, and the channel ID is included in all transmissions identifying the two nodes for each other. For in-depth details on each parameter please refer to *ANT Message Protocol and Usage*.

## Network

In addition to setting the content of the channel ID, which is the primary ID of an ANT node, ANT nodes can limit their connectivity to a selection of other ANT nodes by defining a network for each ANT channel. The limited access to certain networks is managed through unique network keys

The defined ANT networks are:

1. **Public networks:** These are open ANT networks with no limitation on connectivity. All ANT nodes sharing the same channel configuration (by design or by accident) will be able to connect. This is the default setting in nRF24AP2.
2. **Managed networks:** These are ANT networks managed by special interest groups or alliances. An example is the ANT+ alliance for sport and wellness products. To join the ANT+ alliance, please visit [www.thisisant.com](http://www.thisisant.com). By joining the ANT+ alliance and complying with the ANT+ device profiles set by the alliance, you achieve two goals:
  - ▶ Limited connectivity: Only other ANT+ compliant devices can connect on this channel.
  - ▶ Interoperability: Your node can connect to ANT+ compliant products from other vendors.
3. **Private networks:** Your own protected networks, and no other devices, will be able to connect to your ANT nodes unless you share the network key with someone outside the network. Please note that this requires purchase of a unique network key from ANT, see [www.thisisant.com](http://www.thisisant.com).

Since the network parameter can be chosen independently for each ANT channel, one ANT node can have up to eight ANT channels, operating on different networks at the same time.

**Note:** The network parameter has no impact on the network topologies you can build. It is merely a tool to protect your ANT network and prevent accidental or deliberate access from other ANT nodes.



### Channel ID, search and pairing

The primary parameters which two ANT nodes use to identify each other make up the **channel ID**. Once an ANT channel is established, the **channel ID parameters** must of course match; but they don't have to be known by both nodes (pre-configured) to be able to establish an ANT channel.

When an nRF24AP2 configured as a master (set in channel type) opens an ANT channel, it will broadcast its entire **channel ID**. Hence you must configure all three **channel ID parameters** before opening an ANT channel as a master.

On the other hand, in a slave you can configure nRF24AP2 to search for and connect with both known and unknown masters. To connect with a known master you must configure the **Transmission type**, **Device type** and **Device number** in nRF24AP2 before opening the ANT channel.

You can also configure the nRF24AP2 to conduct wild-card searches on one or more of the three parameters in the **channel ID** to enable it to pair up with unknown masters. You can for instance set only the **Device type** of the masters you want to link up with, and set wild cards on the **Transmission type** and **Device number**. If a new master with a matching **Device type** is found, the slave device will connect and store the unknown parts of the **channel ID**. The new parts of the **channel ID** can then be stored in the host MCU to enable specific searches for this master later.

#### 4.2.4 Proximity search

When using the basic search and pairing algorithm a slave will automatically identify and connect to the first master it finds matching the search criteria. In areas where you either have a high density of similar master nodes or high density of independent ANT networks, there is always the chance that multiple masters are found within the coverage area. This presents the risk that it is not the master you want to connect to that is found first. The proximity search feature in ANT designates 'bins' of proximity from 1 (closest) to 10 (furthest) as shown in [Figure 9. on page 17](#).

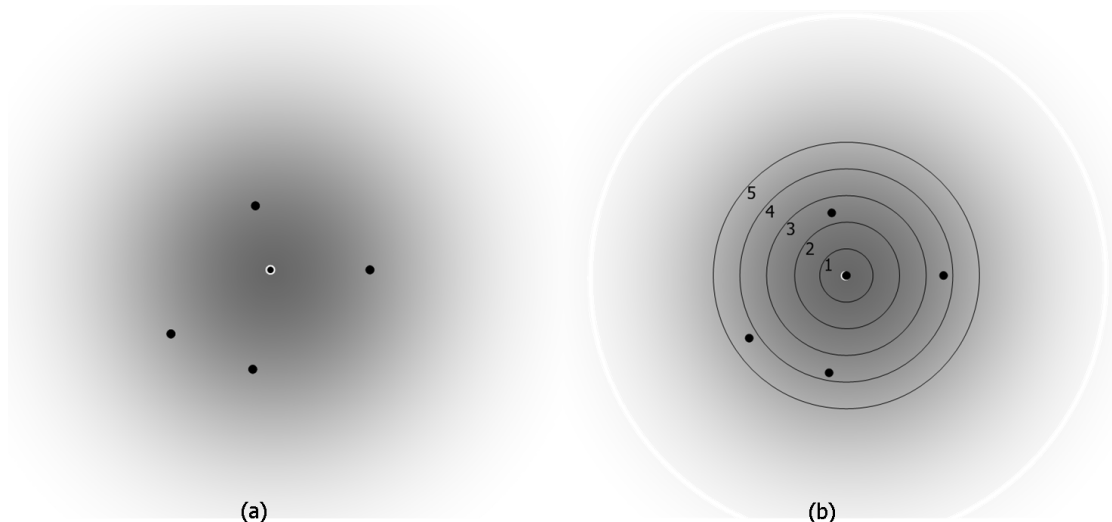


Figure 9. Standard search (a), Proximity search (b), showing bins 1-5 (of maximum 10)

This 'binning' enables you to further control your search, for example by only accepting the master that is closest (only accepting masters that fall in bin 1-2). This makes it easy for a user to pair up network nodes and prevent accidental connection to nodes possibly belonging to another network close by.

#### **4.2.5 Continuous scanning mode**

Continuous scanning mode allows for fully asynchronous communication between an ANT node using continuous scanning mode, and any other ANT node using a standard master channel. This has two main advantages over only using standard ANT channels. The first is that the latency to initiate communication with the scanning node is reduced to zero and every message sent by a master channel in proximity will be received by the scanning device. Secondly, the requirement to maintain communication for the purpose of synchronization while in proximity is removed. This means that it is possible for nodes to come and go very quickly or to turn off for long periods of time in between communication events. This saves power on the transmitting node.

The disadvantage of continuous scanning mode is that it consumes much more power than standard ANT channels. Therefore, continuous scanning mode will typically be used only on devices that are plugged in and not mobile such as a computer (USB dongle). Another disadvantage is that a node in scanning mode can no longer be configured to have discoverable master channels because scanning mode disables standard ANT channel functionality. It is worth noting that two ANT nodes in scanning mode cannot communicate with one another because neither will be able to spontaneously generate communication.

Standard ANT channels are recommended over scanning channels, even in dynamic systems where devices are coming and going. This is because scanning channels are not recommended for a mobile network, which is the primary use case for ANT. Scanning channels will typically be used in statically located networks where the scanning channel node is plugged in and not mobile.

#### **4.2.6 ANT network topologies**

By combining ANT channels with different features depending on local needs, you can build anything from very simple peer-to-peer links and star networks to complex networks as shown in [Figure 10. on page 19](#).

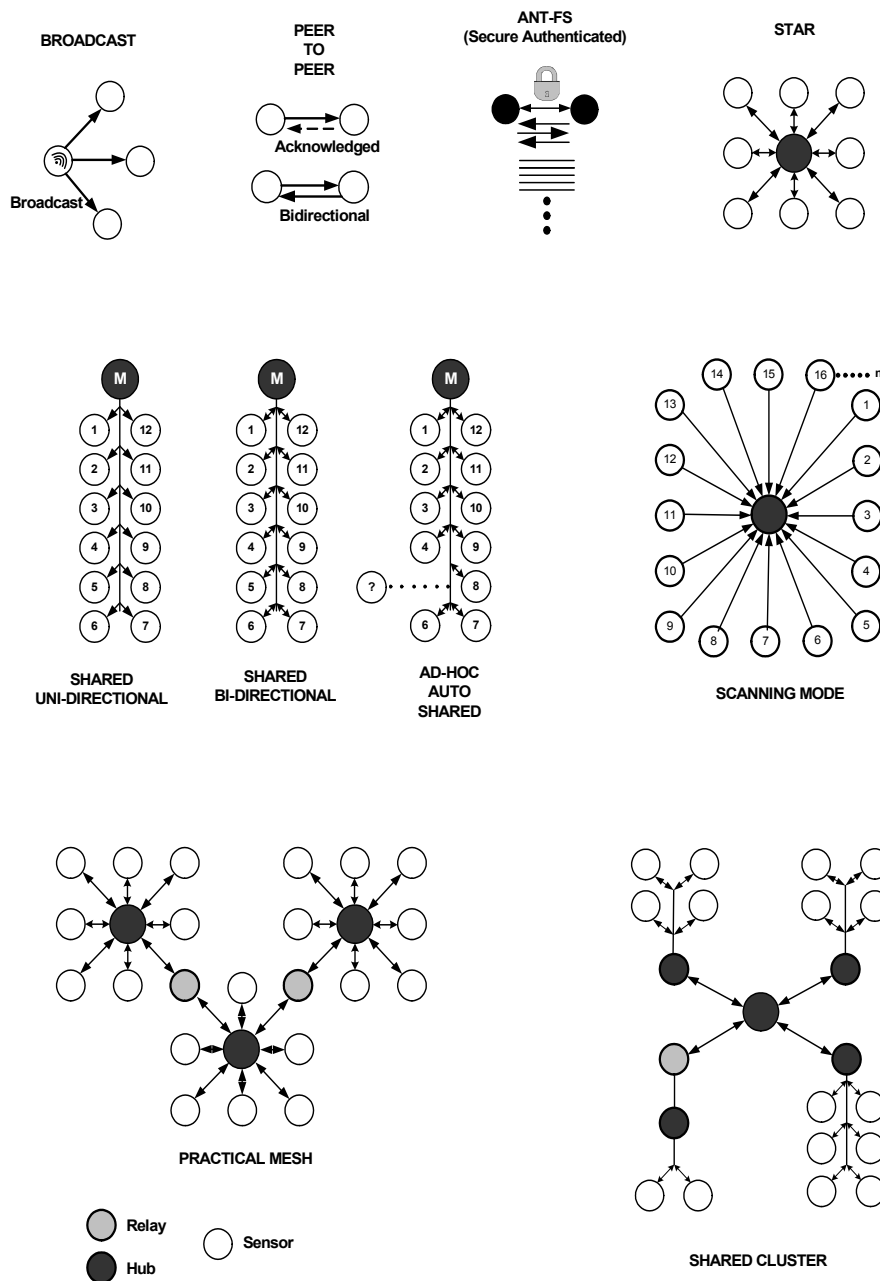


Figure 10. Network topology examples supported by ANT

#### 4.2.7 ANT message protocol

The host microcontroller handles all the configuration and control of the various ANT node and channel parameters in nRF24AP2 over a simple serial interface, by using the command library. See the document *ANT Message Protocol and Usage* for further details on the command library.

| Class                       | Type                        | Commands in ANT command library   | Reply | From         |
|-----------------------------|-----------------------------|---|-------|--------------|
| Config. messages            | Unassign Channel            | ANT_UnassignChannel()   | Yes   | Host         |
|                             | Assign Channel              | ANT_AssignChannel()   | Yes   | Host         |
|                             | Channel ID                  | ANT_SetChannelId()  | Yes   | Host         |
|                             | Channel Period              | ANT_SetChannelPeriod()  | Yes   | Host         |
|                             | Search Timeout              | ANT_SetChannelSearchTimeout()   | Yes   | Host         |
|                             | Channel RF Frequency        | ANT_SetChannelRFFreq()  | Yes   | Host         |
|                             | Set Network                 | ANT_SetNetworkKey()   | Yes   | Host         |
|                             | Transmit Power              | ANT_SetTransmitPower()  | Yes   | Host         |
|                             | ID List Add                 | ANT_AddChannelID()  | Yes   | Host         |
|                             | ID List Config              | ANT_ConfigList()  | Yes   | Host         |
|                             | Channel Transmit Power      | ANT_SetChannelTxPower()   | Yes   | Host         |
|                             | Low Priority Search Timeout | ANT_SetLowPriorityChannelSearchTimeout()                                      | Yes   | Host         |
|                             | Enable Ext RX Mesgs         | ANT_RxExtMesgsEnable()  | Yes   | Host         |
|                             | Frequency Agility           | ANT_ConfigFrequencyAgility()  | Yes   | Host         |
|                             | Proximity Search            | ANT_SetProximitySearch()  | Yes   | Host         |
| Notifications               | Startup Message             | → ResponseFunc( -, 0x6F)  | -     | ANT          |
| Control Messages            | SystemReset                 | ANT_ResetSystem()   | No    | Host         |
|                             | Open Channel                | ANT_OpenChannel()   | Yes   | Host         |
|                             | Close Channel               | ANT_CloseChannel()  | Yes   | Host         |
|                             | Open Rx Scan Mode           | ANT_OpenRxScanMode()  | Yes   | Host         |
|                             | Request Message             | ANT_RequestMessage()  | Yes   | Host         |
| Data Messages               | Broadcast Data              | ANT_SendBroadcastData()<br>→ ChannelEventFunc(Chan, EV)                       | No    | Host/<br>ANT |
|                             | Acknowledge Data            | ANT_SendAcknowledgedData()<br>→ ChannelEventFunc(Chan, EV)                    | No    | Host/<br>ANT |
|                             | Burst Transfer Data         | ANT_SendBurstTransferPacket()<br>→ ChannelEventFunc(Chan, EV)                 | No    | Host/<br>ANT |
| Channel Event Messages      | Channel Response/Event      | → ChannelEventFunc(Chan, MessageCode) or<br>→ ResponseFunc(Chan, MsgID)       | -     | ANT          |
| Requested Response Messages | Channel Status              | → ResponseFunc(Chan, 0x52)  | -     | ANT          |
|                             | Channel ID                  | → ResponseFunc(Chan, 0x51)  | -     | ANT          |
|                             | ANT Version                 | → ResponseFunc(Chan, 0x51)  | -     | ANT          |
|                             | Capabilities                | → ResponseFunc(Chan, 0x3E)  | -     | ANT          |
| Test Mode                   | CW Init                     | ANT_InitCWTestMode()  | Yes   | Host         |
|                             | CW Test                     | ANT_SetCWTestMode()   | Yes   | Host         |
| Ext Data messages           | Extended Broadcast Data     | ANT_SendExtBroadcastData() <sup>a</sup><br>→ ChannelEventFunc(Chan, EV)       | No    | Host         |
|                             | Extended Ack. Data          | ANT_SendExtAcknowledgedData() <sup>a</sup><br>→ ChannelEventFunc(Chan, EV)    | No    | Host         |
|                             | Extended Burst Data         | ANT_SendExtBurstTransferPacket() <sup>a</sup><br>→ ChannelEventFunc(Chan, EV) | No    | Host         |

a. nRF24AP2 does not send these ChannelEventFunctions() to the host. nRF24AP2 will send extended messages by appending the additional bytes to standard broadcast, acknowledged and burst data.

Table 4. ANT message summary supported by nRF24AP2

## 5 Host interface

The nRF24AP2-USB has a USB v2.0 compliant host interface. This enables direct connection from the nRF24AP2-USB to a computer or hubs in other USB enabled equipment. Together with the command libraries and USB drivers available from ANT the nRF24AP2-USB enables ANT connectivity for applications in computers and other advanced hosts.

### 5.1 Features

USB serial interface of nRF24AP2-USB:


- Serial interface engine:
  - USB v2.0 compliant
  - On-chip pull-up resistor on D+
- Two control endpoints and two bulk endpoints
- Suspend and resume power management functions
- USB drivers and ANT command libraries supported by ANT

The following USB features are necessary to declare when your product undergoes USB compliance testing:

- Full speed peripheral
- Microcontroller with USB drivers on same chip
- Bus powered
- No remote wakeup

### 5.2 Block diagram

[Figure 11](#) shows a USB block with external signals **VBUS**, **D+**, **D-**, **GND**, on-chip pull up resistor on **D+** on one side and connection to the RF transceiver on the other.

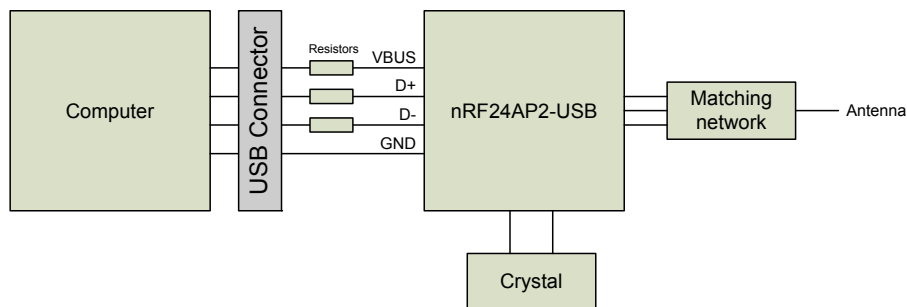

**Note:** The serial resistors on VBUS, D+ and D- are for ESD protection and USB v2.0 compliance

*Figure 11. USB block connected to ANT engine*

### 5.3 Functional description

When the nRF24AP2-USB is plugged into a USB the first thing that needs to take place is for the nRF24AP2-USB to identify itself for the USB hub. This process is called enumeration and is handled automatically by the nRF24AP2-USB. Once the device is enumerated, applications on the host can access the nRF24AP2-USB using ANT command libraries.

This section outlines the enumeration process, user configurable USB parameters, and message exchanges that take place on the nRF24AP2-USB host interface.

### 5.3.1 Physical USB connection

The physical connection between nRF24AP2-USB and the host must follow the USB standard v2.0 (for instance, use USB approved connectors) in order for your nRF24AP2-USB based application to go through USB compliance testing.

### 5.3.2 USB enumeration

The USB enumeration process is handled by the nRF24AP2-USB. During the enumeration the host reads out the USB descriptors and strings to determine which device has been connected to the bus. After the host has received the parameters it will then assign the device an address and allowing it to transfer data on the bus.

A typical enumeration process consists of the following steps:

1. The host detects a new device on the bus via the pull up resistor on D+.
2. The host issues a reset to place the nRF24AP2-USB to the default state. This will enable the device to respond to the default address zero requests.
3. The host requests the Device Descriptor on address 0.
4. The host issues another bus reset.
5. The host issues a set address command, placing the nRF24AP2-USB in an addressed state.
6. The host requests the Device Descriptor again.
7. The host requests the Configuration, Interface and Endpoint Descriptors.
8. The host requests the String Descriptors.

After the enumeration process the nRF24AP2-USB can transfer ANT messages on the bus. A complete summary of ANT messages supported are listed in [Table 4. on page 20](#).

### 5.3.3 USB descriptors

The nRF24AP2-USB has a set of USB descriptors which describe to the host information about manufacturer, product, USB version, the number of endpoints and their types.

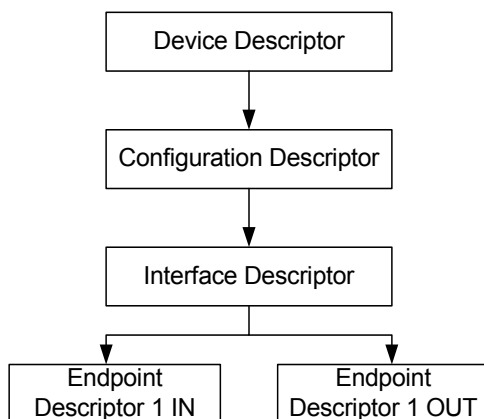


Figure 12. Organization of USB descriptors

The device descriptor contains basic information about the device such as the supported USB version, maximum packet size, vendor and product IDs.

| Field              | Notes | Value  | Description                         |
|--------------------|-------|--------|-------------------------------------|
| bLength            |       | 0x12   | 18                                  |
| bDescriptorType    |       | 0x01   | DEVICE                              |
| bcdUSB             |       | 0x0200 | 2.0                                 |
| bDeviceClass       |       | 0x00   | Class defined at interface level    |
| bDeviceSubClass    |       | 0x00   | Subclass defined at interface level |
| bDeviceProtocol    |       | 0x00   | None                                |
| bMaxPacketSize0    |       | 0x20   | 32                                  |
| idVendor           | a     | 0x0FCF | Dynastream Innovations, Inc.        |
| idProduct          | a     | 0x1008 | 0x1008                              |
| bcdDevice          |       | 0x0100 | 1.0                                 |
| iManufacturer      |       | 0x01   | 1                                   |
| iProduct           |       | 0x02   | 2                                   |
| iSerialNumber      |       | 0x03   | 3                                   |
| bNumConfigurations |       | 0x01   | 1                                   |

a. These fields can be customized with your own value

*Table 5. Device descriptors*

The configuration descriptor specifies how the device is powered, the maximum power consumption, and the number of interfaces used.

| Field                      | Notes | Value  | Description     |
|----------------------------|-------|--------|-----------------|
| bLength                    |       | 0x09   | Valid           |
| bDescriptorType            |       | 0x02   | CONFIGURATION   |
| wTotalLength               |       | 0x0020 | 32 bytes        |
| bNumInterface              |       | 0x01   | 1               |
| bConfigurationValue        |       | 0x01   | 1               |
| iConfiguration             |       | 0x02   | 2               |
| bmAttributes. Reserved     |       | 0x00   | Zero            |
| bmAttributes. RemoteWakeup |       | 0x0    | Not supported   |
| bmAttributes. SelfPowered  |       | 0x0    | No, Bus powered |
| bmAttributes. Reserved7    |       | 0x1    | One             |
| bMaxPower                  |       | 0x32   | 100 mA          |

*Table 6. Configuration descriptor*

The interface descriptor contains information about the number of endpoints and their class.

| Field              | Notes | Value | Description     |
|--------------------|-------|-------|-----------------|
| bLength            |       | 0x09  | Valid           |
| bDescriptorType    |       | 0x04  | INTERFACE       |
| bInterfaceNumber   |       | 0x00  | 0               |
| bAlternateSetting  |       | 0x00  | 0               |
| bNumEndpoints      |       | 0x02  | 2               |
| bInterfaceClass    |       | 0xFF  | Vendor-specific |
| bInterfaceSubClass |       | 0x00  | Vendor-specific |
| bInterfaceProtocol |       | 0x00  | None            |
| iInterface         |       | 0x02  | 2               |

Table 7. Interface descriptor

Endpoint descriptors contain information about the transfer type, interval and the packet size. The host will use the information to decide on the requirements for the bus. The nRF24AP2-USB uses two endpoints for communication with the host, one configured as IN and the other as OUT.

| Field                         | Notes | Value  | Description                               |
|-------------------------------|-------|--------|---|
| bLength                       |       | 0x07   | Valid                                     |
| bDescriptorType               |       | 0x05   | ENDPOINT                                  |
| bEndpointAddress              |       | 0x81   | 1 IN                                      |
| bmAttributes.<br>TransferType |       | 0x2    | Bulk                                      |
| bmAttributes. Reserved        |       | 0x00   | Zero                                      |
| wMaxPacketSize                |       | 0x0040 | 64 bytes                                  |
| bInterval                     |       | 0x01   | Ignored for full speed,<br>Bulk endpoints |

Table 8. Endpoint descriptor 1 IN

| Field                         | Notes | Value  | Description                               |
|-------------------------------|-------|--------|---|
| bLength                       |       | 0x07   | Valid                                     |
| bDescriptorType               |       | 0x05   | ENDPOINT                                  |
| bEndpointAddress              |       | 0x01   | 1 OUT                                     |
| bmAttributes.<br>TransferType |       | 0x2    | Bulk                                      |
| bmAttributes. Reserved        |       | 0x00   | Zero                                      |
| wMaxPacketSize                |       | 0x0040 | 64 bytes                                  |
| bInterval                     |       | 0x01   | Ignored for full speed,<br>Bulk endpoints |

Table 9. Endpoint descriptor 1 OUT



### 5.3.4 String descriptors

String descriptors provide information about the manufacturer, product and serial number for the nRF24AP2-USB. These strings can be modified, see section [5.3.5 on page 25](#).

String Index 0 returns a list of supported languages.

| Field           | Notes | Value  | Description  |
|-----------------|-------|--------|--------------|
| bLength         |       | 0x04   | 4            |
| bDescriptorType |       | 0x03   | STRING       |
| wLANGID[0]      |       | 0x0409 | English (US) |

Table 10. String index 0 (language identifier)

| Field           | Notes | Value                    | Description |
|-----------------|-------|--------------------------|-------------|
| bLength         |       | 0x30                     | 48          |
| bDescriptorType |       | 0x03                     | STRING      |
| bString         | a     | "Dynastream Innovations" |             |

a. This field can be customized with your own manufacturer string

Table 11. String index 1 (manufacturer string)

| Field           | Notes | Value           | Description |
|-----------------|-------|-----------------|-------------|
| bLength         |       | 0x1E            | 30          |
| bDescriptorType |       | 0x03            | STRING      |
| bString         | a     | "ANT USBStick2" |             |

a. This field can be customized with your own product string

Table 12. String index 2 (product string)

| Field           | Notes | Value | Description |
|-----------------|-------|-------|-------------|
| bLength         |       | 0x2A  | 42          |
| bDescriptorType |       | 0x03  | STRING      |
| bString         | a     | "123" |             |

a. This field can be customized with your own serial number

Table 13. String index 3 (serial number string)

### 5.3.5 Customize descriptors

The nRF24AP2-USB is programmed with default VID/PID values which allow it to function with the drivers and libraries provided by ANT. However, it is possible to customize the nRF24AP2-USB. You can customize the following values and string descriptors:

- Vendor ID (VID)
- Product ID (PID)
- Manufacturer string
- Product string
- Serial number

Use the Set\_Descriptor\_String(0xC7) command to configure USB descriptor strings. This command is an extension to the ANT command interface and is sent in the same manner as the other ANT serial commands. The descriptor strings can be set up to three times. See the document *ANT Message Protocol and Usage* for further details on the command library.

**Note:** Do not remove power supply while updating the VID, PID or USB descriptors.

### 5.3.6 Control transfer

Control transfers are used for all commands and queries during the USB device enumeration process. The nRF24AP2-USB allows a maximum data packet size of 32 bytes for the control transfers. All control transfers can have up to three stages, and are handled automatically by the nRF24AP2-USB.

#### 5.3.6.1 Control write transfer



Figure 13. Setup stage

The setup stage starts with a SETUP token packet, followed by a DATA packet detailing the type of request. Finally an ACK handshake packet is sent back by the nRF24AP2-USB if the setup data has been received correctly, otherwise nothing is sent back.


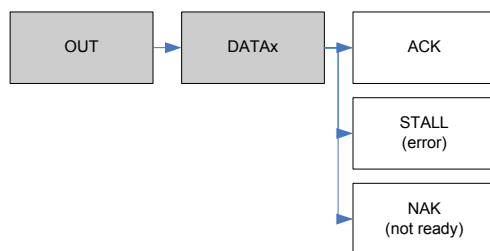


Figure 14. Data stage (optional)

When the request indicates that the host wants to send control data, the data stage will be made up of one or more OUT transfers. Each OUT transfer will start with an OUT token packet followed by a DATA packet. The nRF24AP2-USB will reply with an ACK handshake packet if everything was received correctly. A NAK will be returned if the previous packet from the host is still being processed. If any part of the token or data packet was corrupted or missing, nothing will be sent back. A STALL will be returned if the token and data were received but another error occurred.

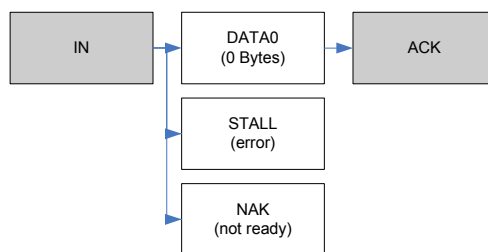

*Figure 15. Status stage*


The status stage is used to verify the status of the overall request. For a control write transfer the status stage will start with an IN token packet. The nRF24AP2-USB will reply with a DATA packet of zero length if the overall request was successful. A STALL will be returned if an error occurred at any point during the processing of the transfer. A NAK will be returned if the nRF24AP2-USB is still busy processing the transfer. Finally the host will send an ACK handshake packet to indicate that it received the status.

#### 5.3.6.2 Control read transfer



*Figure 16. Setup stage*

The setup stage starts with a SETUP token packet, followed by a DATA packet detailing the type of request. Finally an ACK handshake packet is sent back by the nRF24AP2-USB if the setup data has been received correctly, otherwise nothing is sent back.

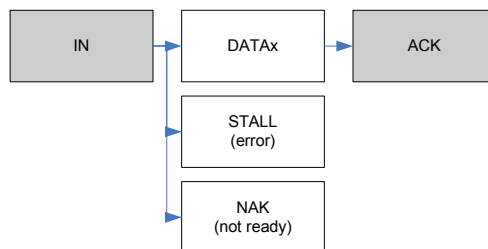

*Figure 17. Data stage (optional)*

When the request indicates that the host wants to receive control data, the data stage will be made up of one or more IN transfers. Each IN transfer will start with an IN token packet. The nRF24AP2-USB can reply with a DATA packet, a STALL indicating an error has occurred or a NAK indicating that the data is not

yet ready. Finally, when the DATA is received successfully by the host it will send an ACK handshake packet.

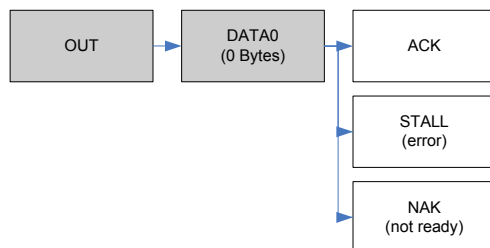


Figure 18. Status stage

For a control read transfer the status stage is used by the host to acknowledge that it has received the data successfully. The status stage will start with an OUT token packet followed by a DATA packet of zero length. The nRF24AP2-USB will reply with an ACK handshake packet if it received the status packets successfully. A STALL will be returned if an error occurred at any point during the processing of the transfer. A NAK will be returned if the nRF24AP2-USB is busy and requires the host to repeat the status stage.

### 5.3.7 Host Command flow

All other communication between the host and nRF24AP2 USB will be handled through USB drivers and libraries available from ANT. These USB libraries interact with the device through two bulk endpoints (EP1IN and EP1OUT). The use of the host interface is documented in *ANT Message Protocol and Usage* which is available as a PDF file from [www.nordicsemi.com](http://www.nordicsemi.com) and [www.thisisant.com](http://www.thisisant.com). The serial messages detailed in that document are passed between the host and the nRF24AP2-USB inside the data packet portion of USB bulk transfers.

| USB parameters               | Value  |
|------------------------------|--------|
| VID (Vendor Identification)  | 0x0FCF |
| PID (Product Identification) | 0x1008 |
| IN endpoint address          | 0x81   |
| OUT endpoint address         | 0x01   |

Table 14. Driver/application USB parameters for communication with nRF24 AP2-USB

#### 5.3.7.1 Bulk transfers

Bulk transfers will be used to transport the serial messages specified by the ANT command interface. The nRF24AP2-USB supports a maximum bulk data packet size of 64 bytes.

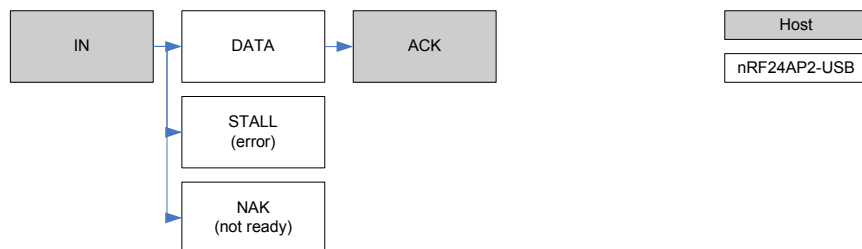


Figure 19. Bulk IN transfer

When the host is ready to receive bulk data it will send an IN token packet to the IN endpoint (0x81). The nRF24AP2-USB will either send a DATA packet if one is ready, send a STALL if an error occurred, send a NAK if no data is ready yet or do nothing if the IN token was not received properly. Finally the host will send an ACK handshake packet if it successfully received the DATA packet.

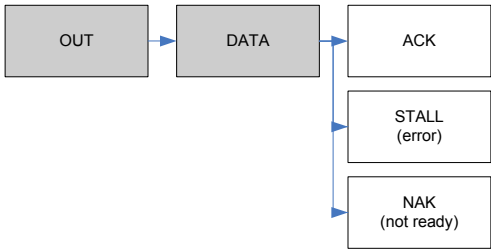


Figure 20. Bulk OUT transfer

When the host wants to send bulk data to the nRF24AP2-USB it will send an OUT token packet to the OUT endpoint (0x01). This will be followed by a DATA packet containing the bulk data. If the nRF24AP2-USB received the data successfully it will return an ACK handshaking packet. If an error occurred during processing, the nRF24AP2-USB will return a STALL. If the nRF24AP2-USB is still busy processing the previous DATA packet, a NAK will be returned. If any part of the OUT token or DATA packet was corrupted or missing the nRF24AP2-USB will do nothing.

5.3.7.2 Bulk transfer example

The libraries available from ANT contain all the supported messages to configure and use the nRF24AP2-USB. [Figure 21](#). shows an example of a serial message passing between the host and device.

In this example the host issues an ANT\_RequestMessage() in the data packet to read the ANT version of the device. We have included hexadecimal values to help you should you need to debug the host serial interface.

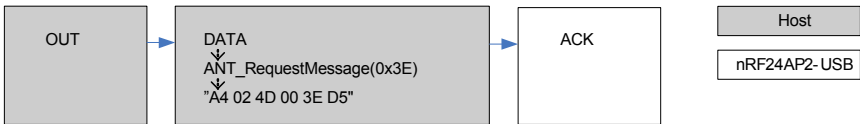


Figure 21. Example of OUT transfer (with varying level of detail)

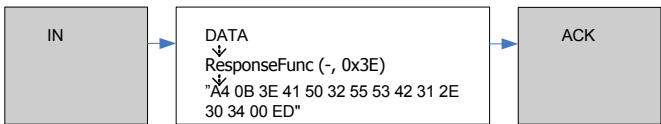


Figure 22. Example of IN transfer (with varying level of detail)

## 6 On-chip oscillator

In order to provide the necessary clocks for the ANT protocol stack, nRF24AP2 contains one high frequency oscillator used by the RF transceiver. The high frequency clock source must be a 16 MHz crystal oscillator.

### 6.1 Features

- Low-power, amplitude regulated 16 MHz crystal oscillator

### 6.2 Block diagram

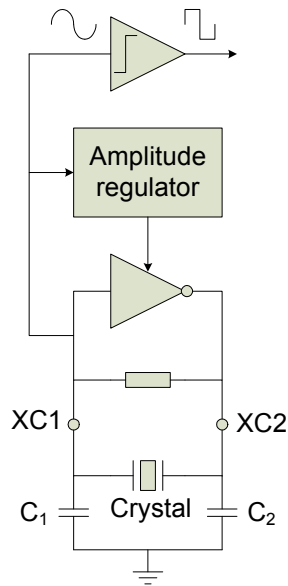


Figure 23. Block diagram of 16 MHz crystal oscillator

### 6.3 Functional description

#### 6.3.1 16 MHz crystal oscillator

The 16 MHz crystal oscillator is designed to be used with an AT-cut quartz crystal in parallel resonant mode. To achieve correct oscillation frequency it is very important that the load capacitance matches the specification in the crystal datasheet. The load capacitance is the total capacitance from the perspective of the crystal across its terminals:

$$C_{LOAD} = \frac{C'_1 \cdot C'_2}{C'_1 + C'_2}$$

$$C'_1 = C_1 + C_{PCB1} + C_{PIN}$$

$$C'_2 = C_2 + C_{PCB2} + C_{PIN}$$

$C_1$  and  $C_2$  are ceramic SMD capacitors connected between each crystal terminal and VSS.  $C_{PCB1}$  and  $C_{PCB2}$  are stray capacitances on the PCB.  $C_{PIN}$  is the input capacitance on the **xc1** and **xc2** pins of nRF24AP2 (typically 1pF).  $C_1$  and  $C_2$  should be of the same value, or as close as possible.

To ensure a functional radio link the frequency accuracy must be  $\pm 50$  ppm or better. The initial tolerance of the crystal, drift over temperature, aging and frequency pulling due to incorrect load capacitance must all be taken into account. For reliable operation the crystal load capacitance, shunt capacitance, equivalent series resistance (ESR) and drive level must comply with the specifications in [Table 17. on page 34](#). It is recommended to use a crystal with lower than maximum ESR if the load capacitance and/or shunt capacitance is high. This will give faster start-up and lower current consumption.

### 6.3.2 External 16 MHz clock

nRF24AP2 may be used with an external 16 MHz clock applied to the **xc1** pin. The input signal must be analog, coming from the crystal oscillator of a microcontroller, for example. An input amplitude of 0.8V peak-to-peak or higher is recommended to achieve low current consumption and a good signal-to-noise ratio. The DC level is not important as long as the applied signal never rises above VDD or drops below VSS. The **xc1** pin will load the microcontroller's crystal with approximately 1pF in addition to PCB routing. **xc2** shall not be connected.

**Note:** A frequency accuracy of  $\pm 50$  ppm or better is required to get device performance as outlined in chapter [8 on page 33](#).

## 7 Operating conditions

| Symbol | Parameter (condition)      | Notes | Min. | Typ. | Max. | Units |
|--------|----------------------------|-------|------|------|------|-------|
| VBUS   | Supply voltage             |       | 4.0  | 5    | 5.25 | V     |
| VDD    | Alternative supply voltage |       | 3.05 | 3.27 | 3.5  | V     |
| TEMP   | Operating Temperature      |       | -40  | +27  | +85  | °C    |

Table 15. Operating conditions

| Symbol                                 | Parameter (condition)                 | Notes | Min. | Typ.   | Max. | Unit |
|--|---------------------------------------|-------|------|--------|------|------|
| <b>16 MHz crystal</b>                  |                                       |       |      |        |      |      |
| $f_{\text{NOM}}$                       | Nominal frequency (parallel resonant) |       |      | 16.000 |      | MHz  |
| $f_{\text{TOL}}$                       | Frequency tolerance                   | a     |      |        | ±50  | ppm  |
| $C_L$                                  | Load capacitance                      |       |      | 9      | 16   | pF   |
| $C_0$                                  | Shunt capacitance                     |       |      | 3      | 7    | pF   |
| ESR                                    | Equivalent series resistance          |       |      | 50     | 100  | Ω    |
| $P_D$                                  | Drive level                           |       |      |        | 100  | μW   |
| <b>Bias resistor (IREF pin to GND)</b> |                                       |       |      |        |      |      |
| $R_{\text{ref}}$                       | Resistance                            |       |      | 22     |      | kΩ   |
| $R_{\text{refacc}}$                    | Tolerance                             |       |      |        | 1    | %    |

a. Includes initial accuracy, stability over temperature, aging and frequency pulling due to incorrect load capacitance

Table 16. External circuitry specification



## 8 Electrical specifications

This section contains electrical and timing specifications.

Conditions: VDD = 3.0V, T<sub>A</sub> = -40°C to +85°C (unless otherwise noted)

| Symbol  | Parameter (condition)  | Notes | Min. | Typ.      | Max.   | Units |
|---|--|-------|------|-----------|--------|-------|
| <b>General RF conditions</b>  |  |       |      |           |        |       |
| f <sub>OP</sub>   | Operating frequency  | a     | 2400 | 2403-2480 | 2483.5 | MHz   |
| PLL <sub>res</sub>  | PLL Programming resolution   |       |      | 1         |        | MHz   |
| f <sub>XTAL</sub>   | Crystal frequency  |       |      | 16        |        | MHz   |
| Δf  | Frequency deviation  |       |      | ±160      |        | kHz   |
| R <sub>GFSK</sub>   | Air data rate  | b     |      | 1000      |        | kbps  |
| F <sub>CHANNEL</sub>  | Non-overlapping channel spacing  | c     |      | 1         |        | MHz   |
| <b>Transmitter operation</b>  |  |       |      |           |        |       |
| P <sub>RF</sub>   | Maximum output power   | d     |      | 0         | +4     | dBm   |
| P <sub>RFC</sub>  | RF power control range   |       | 16   | 18        | 20     | dB    |
| P <sub>RFCR</sub>   | RF power accuracy  |       |      |           | ±4     | dB    |
| P <sub>BW1</sub>  | 20dB bandwidth for modulated carrier                                     |       |      | 950       | 1100   | kHz   |
| P <sub>RF1.1</sub>  | 1 <sup>st</sup> Adjacent Channel Transmit Power 1 MHz                    |       |      |           | -20    | dBc   |
| P <sub>RF2.1</sub>  | 2 <sup>nd</sup> Adjacent Channel Transmit Power 2 MHz                    |       |      |           | -40    | dBc   |
| <b>Receiver operation</b>   |  |       |      |           |        |       |
| RX <sub>MAX</sub>   | Maximum received signal at < 0.1% BER                                    |       |      | 0         |        | dBm   |
| RX <sub>SENS</sub>  | Sensitivity (0.1% BER)   |       |      | -85       |        | dBm   |
| <b>RX selectivity according to ETSI EN 300 440-1 V1.3.1 (2001-09) page 27</b>   |  |       |      |           |        |       |
| C/I <sub>CO</sub>   | C/I co-channel   |       |      | 9         |        | dBc   |
| C/I <sub>1ST</sub>  | 1 <sup>st</sup> ACS, C/I 1 MHz   |       |      | 8         |        | dBc   |
| C/I <sub>2ND</sub>  | 2 <sup>nd</sup> ACS, C/I 2 MHz   |       |      | -20       |        | dBc   |
| C/I <sub>3RD</sub>  | 3 <sup>rd</sup> ACS, C/I 3 MHz   |       |      | -30       |        | dBc   |
| C/I <sub>Nth</sub>  | N <sup>th</sup> ACS, C/I f <sub>i</sub> > 6 MHz                          |       |      | -40       |        | dBc   |
| C/I <sub>Nth</sub>  | N <sup>th</sup> ACS, C/I f <sub>i</sub> > 25 MHz                         |       |      | -47       |        | dBc   |
| <b>RX selectivity with nRF24AP2 equal modulation on interfering signal (Pin = -67dBm for wanted signal)</b>                   |  |       |      |           |        |       |
| C/I <sub>CO</sub>   | C/I co-channel   |       |      | 12        |        | dBc   |
| C/I <sub>1ST</sub>  | 1 <sup>st</sup> ACS, C/I 1 MHz   |       |      | 8         |        | dBc   |
| C/I <sub>2ND</sub>  | 2 <sup>nd</sup> ACS, C/I 2 MHz   |       |      | -21       |        | dBc   |
| C/I <sub>3RD</sub>  | 3 <sup>rd</sup> ACS, C/I 3 MHz   |       |      | -30       |        | dBc   |
| C/I <sub>Nth</sub>  | N <sup>th</sup> ACS, C/I f <sub>i</sub> > 6 MHz                          |       |      | -40       |        | dBc   |
| C/I <sub>Nth</sub>  | N <sup>th</sup> ACS, C/I f <sub>i</sub> > 25 MHz                         |       |      | -50       |        | dBc   |
| <b>RX intermodulation performance in line with Bluetooth specification version 2.0, 4<sup>th</sup> November 2004, page 42</b> |  |       |      |           |        |       |
| P <sub>IM(3)</sub>  | Input power of IM interferers at 3 and 6 MHz distance from wanted signal | e     |      | -36       |        | dBm   |

| Symbol  | Parameter (condition)   | Notes | Min. | Typ. | Max. | Units |
|---------|---|-------|------|------|------|-------|
| P_IM(4) | Input power of IM interferers at 4 and 8 MHz distance from wanted signal  | 9     |      | -36  |      | dBm   |
| P_IM(5) | Input power of IM interferers at 5 and 10 MHz distance from wanted signal | 9     |      | -36  |      | dBm   |

- Usable band is determined by local regulations.
- Data rate in each burst on-air.
- The minimum channel spacing is 1 MHz.
- Antenna load impedance =  $15 \Omega + j88 \Omega$ .
- Wanted signal level at Pin = 64 dBm. Two interferers with equal input power are used. The interferer closest in frequency is unmodulated, the other interferer is modulated equal to the wanted signal. The input power of interferers where the sensitivity equals BER=0.1% is presented.

Table 17. Transceiver characteristics

## 8.1 USB interface

The USB interface electrical performance is compliant with the USB specification 2.0.

| Characteristic  | Symbol           | Conditions         | Min. | Typ. | Max  | Unit     |
|---|------------------|--------------------|------|------|------|----------|
| <b>Electrical characteristics</b>                                 |                  |                    |      |      |      |          |
| Input high voltage (driven)                                       | VIH              |                    | 2.0  |      |      | V        |
| Input low voltage   | VIL              |                    |      |      | 0.8  | V        |
| Differential input sensitivity                                    | VDI              | $ (D+) - (D-) $    | 0.2  |      |      | V        |
| Differential common mode range                                    | VCM              | Includes VDI range | 0.8  |      | 2.5  | V        |
| Single ended receiver threshold                                   | VSE              |                    | 0.8  |      | 2.0  | V        |
| Single ended receiver hysteresis                                  | VSEH             |                    |      | 200  |      | mV       |
| Output low voltage  | VOL              |                    | 0    |      | 0.3  | V        |
| Output high voltage   | VOH              |                    | 2.8  |      | 3.6  | V        |
| Differential output signal cross-point voltage                    | VCRS             |                    | 1.3  |      | 2.0  | V        |
| Internal pull-up resistor (Standby mode)                          | R <sub>PU1</sub> |                    | 900  | 1100 | 1575 | $\Omega$ |
| Internal pull-up resistor (Active mode)                           | R <sub>PU2</sub> |                    | 1425 | 2100 | 3090 | $\Omega$ |
| Termination voltage connected to R <sub>PU</sub>                  | VTRM             |                    | 3.05 |      | 3.5  | V        |
| Output driver resistance (does not include the series resistance) | ZDRV             | Steady state drive |      | 15   |      | $\Omega$ |
| <b>Timing characteristics</b>                                     |                  |                    |      |      |      |          |
| Driver rise time  | TFR              | CL=50pF            | 4    |      | 20   | ns       |
| Driver fall time  | TFF              | CL=50pF            | 4    |      | 20   | ns       |
| Rise/fall time matching   | TFRFF            | TRF / TFF          | 90   |      | 111  | %        |
| Transceiver pad capacitance                                       | CIN              | Pad to ground      |      |      | 20   | pF       |

Table 18. USB interface characteristics

| Symbol                    | Parameter (condition)   | Notes | Min. | Typ. | Max. | Units |
|---------------------------|---|-------|------|------|------|-------|
| $t_{\text{Suspend}}$      | Idle to suspend time  |       |      |      | 3.25 | ms    |
| $t_{\text{Reset}}$        | Power on reset time, software reset, and reset pin            |       |      |      | 2.0  | ms    |
| $t_{\text{Response-Max}}$ | The time the nRF24AP2-USB uses to respond to an input command |       |      |      | 1.0  | ms    |

Table 19. Serial timing

## 8.2 DC Electrical characteristics

| Symbol | Parameter (condition)      | Notes | Min. | Typ. | Max. | Units |
|--------|----------------------------|-------|------|------|------|-------|
|        | On-chip voltage regulators |       |      |      |      |       |
| VDD    | Output voltage             | a     | 3.05 | 3.27 | 3.5  | V     |
| IVDD   | External load current      |       |      |      | 2    | mA    |

a. Also valid for VDD input voltage

Table 20. DC characteristics

| Symbol          | Parameter (condition) | Notes | Min.                      | Typ. | Max.                      | Units |
|-----------------|-----------------------|-------|---------------------------|------|---------------------------|-------|
| $V_{\text{IH}}$ | Input high voltage    |       | $0.7 \cdot V_{\text{DD}}$ |      | VDD                       | V     |
| $V_{\text{IL}}$ | Input low voltage     |       | VSS                       |      | $0.3 \cdot V_{\text{DD}}$ | V     |

Table 21. Digital inputs/outputs

## 8.3 Current consumption

The power nRF24AP2 consumes depends on the configuration of nRF24AP2.

**Note:** The nRF24AP2-USB is not intended for battery power application. Use the nRF24AP2-1CH or nRF24AP2-8CH for ultra low power applications.

[Table 22.](#) shows peak- and base current consumption for typical applications.

Conditions: TA = +25°C

| Symbol                 | Parameter (condition)                | Notes | Min. | Typ. | Max. | Units |
|------------------------|--------------------------------------|-------|------|------|------|-------|
| I <sub>Idle</sub>      | No active channels—no communications |       |      | 9.3  |      | mA    |
| I <sub>Suspend</sub>   | Suspend control activated            |       |      | 500  |      | μA    |
| I <sub>PeakRX</sub>    | Peak RX Current                      | a     |      | 22   |      | mA    |
| I <sub>PeakTX</sub>    | Peak TX Current at 0 dBm             | b     |      | 20   |      | mA    |
| I <sub>PeakTX-6</sub>  | Peak TX Current at -6 dBm            | b     |      | 18   |      | mA    |
| I <sub>PeakTX-12</sub> | Peak TX Current at -12 dBm           | b     |      | 17   |      | mA    |
| I <sub>PeakTX-18</sub> | Peak TX Current at -18 dBm           | b     |      | 16   |      | mA    |

- a. Time of Maximum Current consumption in RX is typical 500 μs and maximum 1 ms.  
b. Time of maximum TX Only Current is typical 300 μs and maximum 350 μs.

*Table 22. Peak- and base current consumption for nRF24AP2*

## 9 Absolute maximum ratings

Maximum ratings are the extreme limits to which nRF24AP2 can be exposed without permanently damaging it. Exposure to absolute maximum ratings for prolonged periods of time may affect device reliability.

**Note:** For operating conditions see [Table 15. on page 32](#).

| Operating conditions             | Minimum | Maximum | Units |
|----------------------------------|---------|---------|-------|
| <b>Supply voltages</b>           |         |         |       |
| V <sub>BUS</sub>                 | -0.3    | +5.75   | V     |
| V <sub>SS</sub>                  |         | 0       | V     |
| V <sub>DD</sub>                  | -0.3    | +3.6    | V     |
| <b>Input voltage</b>             |         |         |       |
| V <sub>I</sub>                   | -0.3    | +3.6    | V     |
| <b>Temperatures</b>              |         |         |       |
| Operating Temperature            | -40     | +85     | °C    |
| Storage Temperature <sup>a</sup> | -40     | +85     | °C    |

a. The device can withstand up to 125°C for short periods without damage. Recommended long-time storage temperature <65°C.

Table 23. Absolute maximum ratings

**Note:** Stress exceeding one or more of the limiting values may cause permanent damage to the device.

### Attention!

Observe precaution for handling  
Electrostatic Sensitive Device.

HBM (Human Body Model): Class 1C



## 10 Mechanical specification

nRF24AP2-USB is packaged in the following QFN-package:

- QFN32 5 x 5 x 0.85 mm, 0.5 mm pitch.

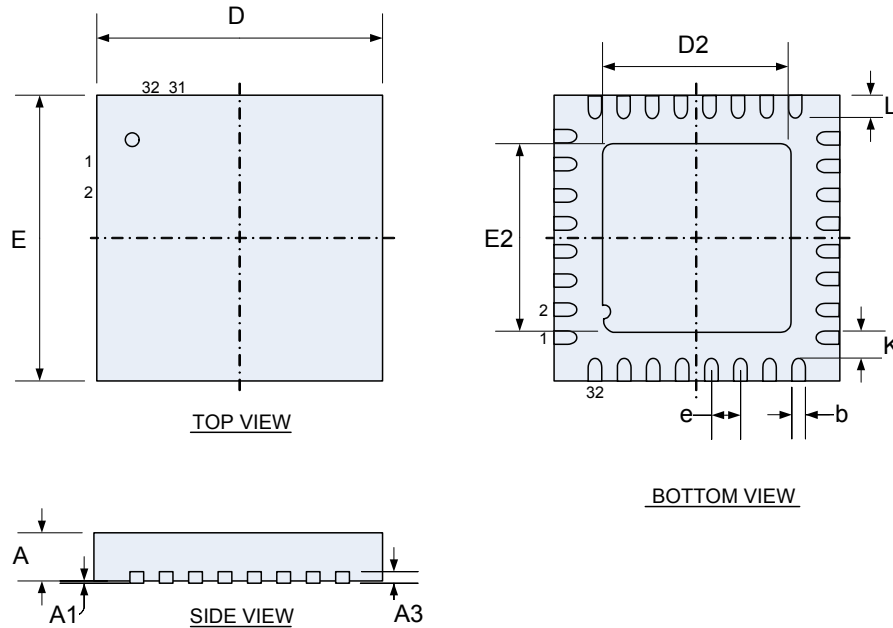


Figure 24. QFN32 pin 5x5mm

| Package | A    | A1   | A3   | b    | D, E | D2, E2 | e   | K    | L    |     |
|---------|------|------|------|------|------|--------|-----|------|------|-----|
| QFN32   | 0.80 | 0.00 |      | 0.18 | 4.9  | 3.20   |     | 0.20 | 0.35 | Min |
|         | 0.85 | 0.02 | 0.20 | 0.23 | 5.0  | 3.30   | 0.5 |      | 0.40 | Typ |
|         | 0.90 | 0.05 |      | 0.30 | 5.1  | 3.40   |     |      | 0.45 | Max |

Table 24. QFN32 dimensions in mm

## 11 Reference circuitry

To ensure optimal performance it is essential that you follow the schematics- and layout references closely. Especially in the case of the antenna matching circuitry (components between device pins **ANT1**, **ANT2**, **VDD\_PA** and the antenna), any changes in the layout can change the behavior, resulting in degradation of RF performance or a need to change component values. All the reference circuits are designed for use with a 50Ω single end antenna.

### 11.1 PCB guidelines

A well designed PCB is necessary to achieve good RF performance. A poor layout can lead to loss in performance or functionality. A fully qualified RF-layout for the nRF24AP2 and its surrounding components, including matching networks, can be downloaded from [www.nordicsemi.com](http://www.nordicsemi.com).

A PCB with a minimum of two layers including a ground plane is recommended for optimal performance. The nRF24AP2 DC supply voltage should be decoupled as close as possible to the VDD pins with high performance RF capacitors. See the schematics in [section 11.2 on page 40](#) for recommended decoupling capacitor values. The nRF24AP2 supply voltage should be filtered and routed separately from the supply voltages of any digital circuitry.

Long power supply lines on the PCB should be avoided. All device grounds, VDD connections and VDD bypass capacitors must be connected as close as possible to the nRF24AP2 IC. For a PCB with a top-side RF ground plane, the **VSS** pins should be connected directly to the ground plane. For a PCB with a bottom ground plane, the best technique is to have Via holes as close as possible to the VSS pads. A minimum of one Via hole should be used for each **VSS** pin.

Full-swing digital data or control signals should not be routed close to the crystal or the power supply lines.

## 11.2 Schematics


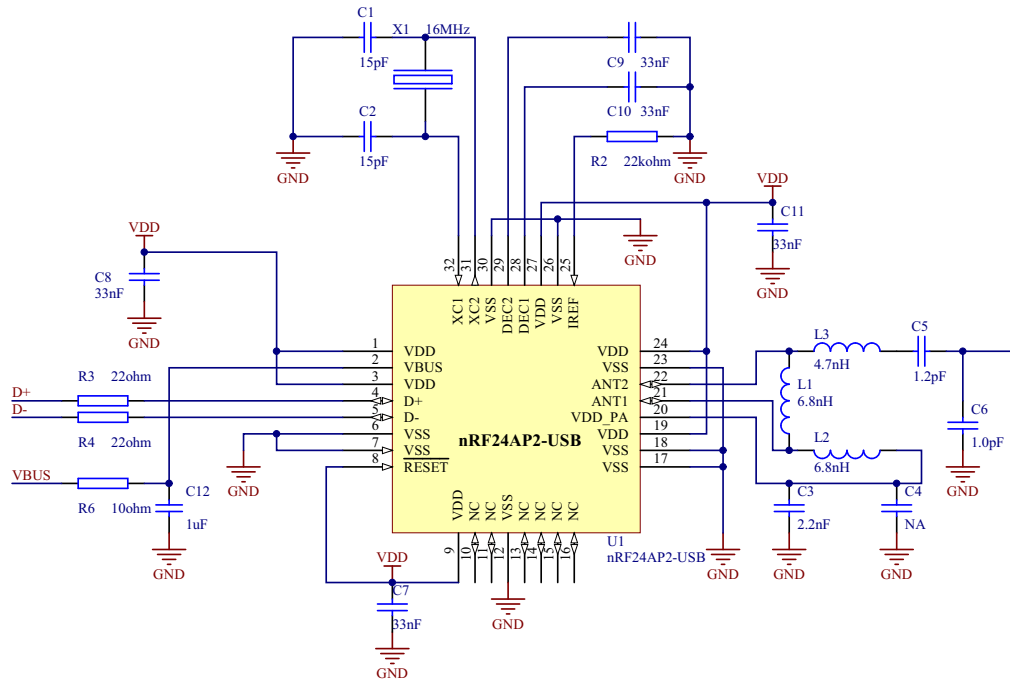


Figure 25. Schematic nRF24AP2-USB




## 11.3 Layout

A double sided FR-4 board of 1.6 mm thickness is used. This PCB has a ground plane on the bottom layer. There are ground areas on the component side of the board to ensure sufficient grounding of critical components. A large number of Via holes connect the top layer ground areas to the bottom layer ground plane.

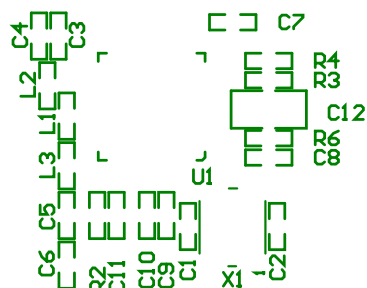


Top silk screen

No components  
in bottom layer

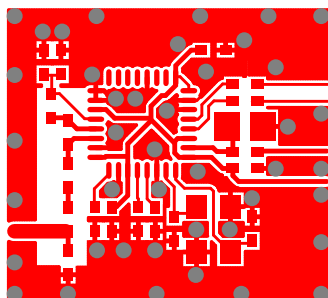

Top view

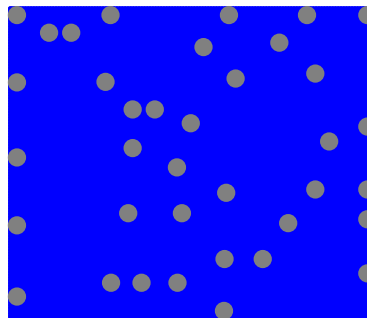

Bottom view



## 11.4 Bill Of Materials (BOM)

| Designator       | Value        | Footprint      | Comment                              |
|------------------|--------------|----------------|--------------------------------------|
| C1               | 15pF         | 0402           | NP0 ±2%                              |
| C2               | 15pF         | 0402           | NP0 ±2%                              |
| C3               | 2.2nF        | 0402           | X7R ±10%                             |
| C4               | Not mounted  | 0402           |                                      |
| C5               | 1.2pF        | 0402           | NP0 ±0.1pF                           |
| C6               | 1.0pF        | 0402           | NP0 ±0.1pF                           |
| C7               | 33nF         | 0402           | X7R ±10%                             |
| C8               | 33nF         | 0402           | X7R ±10%                             |
| C9               | 33nF         | 0402           | X7R ±10%                             |
| C10              | 33nF         | 0402           | X7R ±10%                             |
| C11              | 33nF         | 0402           | X7R ±10%                             |
| C12              | 1uF          | 0805           | X7R ±10%                             |
| L1               | 6.8nH        | 0402           | High frequency chip inductor<br>±5%  |
| L2               | 6.8nH        | 0402           | High frequency chip inductor<br>±5%  |
| L3               | 4.7nH        | 0402           | High frequency chip inductor<br>±5%  |
| R2               | 22kΩ         | 0402           | ±1%                                  |
| R3               | 22Ω          | 0402           | ±1%                                  |
| R4               | 22Ω          | 0402           | ±1%                                  |
| R6               | 10Ω          | 0402           | ±5%                                  |
| U1               | nRF24AP2-USB | QFN32          | nRF24AP2-USB                         |
| X1               | 16 MHz       | 3.2 x 2.5 mm   | SMD-3225, 16 MHz,<br>CL=9pF, ±50 ppm |
| PCB<br>substrate | FR4 laminate | 16.9 x 15.4 mm | 2 layer, thickness 1.6 mm            |

Table 25. Bill Of Materials

## 12 Ordering information

### 12.1 Package marking

|   |   |   |   |   |   |
|---|---|---|---|---|---|
| N | R | F |   | B | X |
| 2 | 4 | A | P | 2 | U |
| Y | Y | W | W | L | L |

#### 12.1.1 Abbreviations

| Abbreviation | Definition  |
|--------------|---|
| B            | Build Code variable. Unique code for production sites, package type and test platform |
| X            | "X" grade, that is, Engineering Samples (optional)                                    |
| 24AP2U       | Product number  |
| YY           | Two-digit year number   |
| WW           | Two-digit week number   |
| LL           | Two-letter wafer-lot number code  |

Table 26. Abbreviations

### 12.2 Product options

#### 12.2.1 RF silicon

| Ordering code      | Product   | Package          | Container     | MOQ  |
|--------------------|---|------------------|---------------|------|
| nRF24AP2-USBQ32-T  | nRF24AP2-USB<br>Single chip ANT solution with USB | 5x5mm 32-pin QFN | Tray          | 490  |
| nRF24AP2-USBQ32-R7 | nRF24AP2-USB<br>Single chip ANT solution with USB | 5x5mm 32-pin QFN | Tape-and-reel | 1500 |
| nRF24AP2-USBQ32-R  | nRF24AP2-USB<br>Single chip ANT solution with USB | 5x5mm 32-pin QFN | Tape-and-reel | 4000 |
| nRF24AP2-USBQ32-S  | nRF24AP2-USB<br>Single chip ANT solution with USB | 5x5mm 32-pin QFN | Sample box    | 5    |

Table 27. nRF24AP2 RF silicon options

#### 12.2.2 Development tools

| Type Number | Description                              |
|-------------|--|
| nRF6910     | nRFready ANT USB dongle reference design |

Table 28. nRF24AP2-USB reference design

## 13 Glossary

| Term                | Description   |
|---------------------|---|
| ANT™                | Ultra-low power network protocol stack from Dynastream Innovations Inc.   |
| ANT+                | Alliance of companies making ANT based products. The ANT+ alliance develops and maintains device profiles for sports and wellness applications, enabling interoperability between products from the alliance members. |
| BER                 | Bit Error Rate  |
| GFSK                | Gaussian Frequency-Shift Keying   |
| Independent channel | An ANT channel between two ANT devices that has a unique setup of RF frequency, timing and channel configuration  |
| ISM                 | Industrial-Scientific-Medical   |
| MCU                 | MicroController Unit  |
| MOQ                 | Minimum Order Quantity  |
| OSI                 | Open Systems Interconnection  |
| PA                  | Power Amplifier   |
| PCB                 | Printed Circuit Board   |
| QFN                 | Quad Flat package. No leads   |
| RFID                | Radio Frequency Identification  |
| Shared channel      | ANT channel between two or more ANT devices that share RF frequency, timing and channel configuration   |
| TDMA                | Time Division Multiple Access   |
| USB                 | Universal Serial Bus  |

Table 29. Glossary



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.