

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 518

SLIC POSITIVE INPUT TO NEGATIVE OUTPUT DC/DC CONVERTER

LTC3704

DESCRIPTION

Demonstration circuit 518 is a positive input to negative output SLIC (Subscriber Line Interface Circuit) converter featuring the LTC3704 switching controller. DC518 converts 4.5V to 15V input to -24V and -70V output and provides over 200mA of output current from a 5V input. The converter operates at 200kHz with high efficiency of up to 92%. The DC518 is set to operate with current sense resistor RS1 and input voltages up to 15V. However, DC518 can be modified for No-Rsense™ operation with a 5V input voltage, provided that MOSFET drain voltage does not exceed 36V (main output set between 0V and -24V). The

circuit features an optional soft-start circuit that can be enabled or disabled with a single jumper. DC518 has a jumper to program either continuous or Burst-Mode operation and can be synchronized to an external clock of up to 400kHz. Please refer to the LTC3704 data sheet for design details and applications information.

The DC518 can produce up to 200mA at both outputs from a 5V input source.

**Design files for this circuit board are available.
Call the LTC factory.**

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		4.5V
Maximum Input Voltage		15V
V _{OUT1}	V _{IN} = 5V to 15V, I _{OUT1} = 0A to 0.2A	-24V ±3%
V _{OUT2}	V _{IN} = 5V to 15V, I _{OUT2} = 0A to 0.2A	-70V ±10%
Typical Output Ripple V _{OUT1}	V _{IN} = 5V to 15V, I _{OUT1} = 0A to 0.2A	200mV _{P-P}
Typical Output Ripple V _{OUT2}	V _{IN} = 5V to 15V, I _{OUT2} = 0A to 0.2A	500mV _{P-P}
Nominal Switching Frequency		200kHz

QUICK START PROCEDURE

Demonstration circuit 518 is easy to set up to evaluate the performance of the LTC3704. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

1. Place jumper JP1 in the Vin position. The “Pre Reg” position is an optional bias source for applications modified for Vin higher than 36V. A bias circuit including Q4 and D5 is installed on the board in order to facilitate modifications for higher Vin.
2. With power off, connect the input power supply to Vin and GND. Make sure that the input power supply has sufficient current rating at minimum input voltage for the required output load.
3. Turn on the power at the input.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 518

SLIC POSITIVE INPUT TO NEGATIVE OUTPUT DC/DC CONVERTER

NOTE: Make sure that the input voltage does not exceed 15V.

- Check for the proper output voltages. $V_{OUT1} = -24V$ and $V_{OUT2} = -70V$

If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

- Once the proper output voltage is established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameter

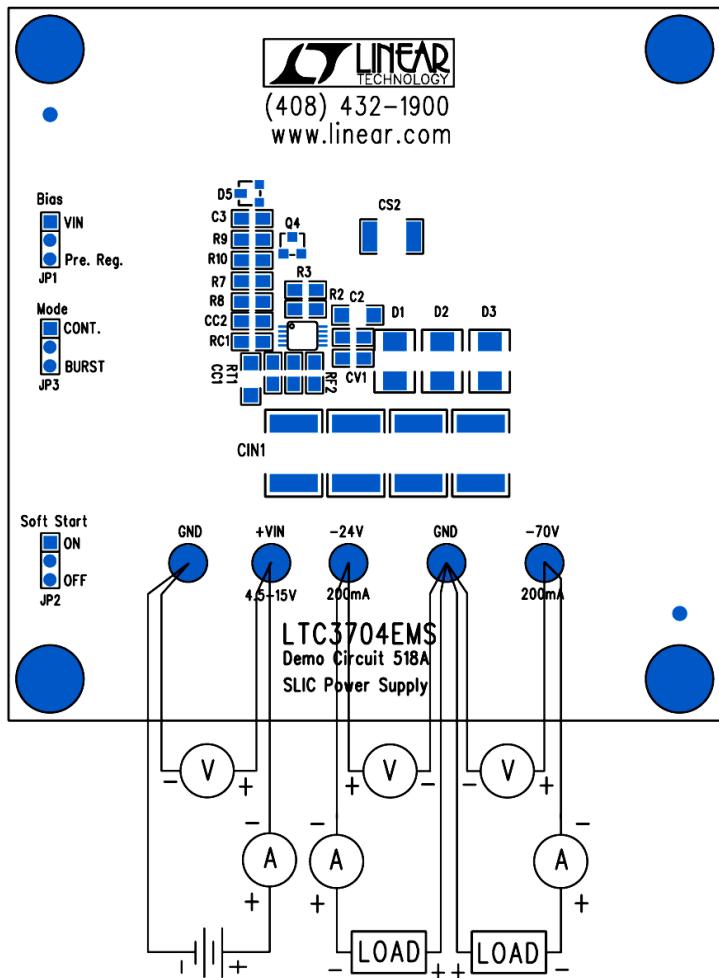


Figure 1. Proper Measurement Equipment Setup

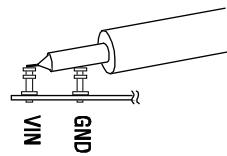


Figure 2. Scope Probe Placement for Measuring Input or Output Ripple

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 518

SLIC POSITIVE INPUT TO NEGATIVE OUTPUT DC/DC CONVERTER

EXTERNAL CLOCK CONNECTION

1. To use an external clock source, turn the input power source Off and remove the Burst Mode jumper.
2. Set the clock source pulse amplitude to 5V and set the frequency between 220kHz and 300kHz.
3. Turn the clock source off.
4. Connect the clock source (pulse generator with TTL output) to the middle pin of the Burst Mode jumper.
5. Apply input power and observe the switching frequency of 200kHz.
6. Turn the clock source ON and observe the switching frequency go up to the switching frequency of the external clock.

USING NO-RSENSE MODE OF OPERATION

1. No-RsenseTM mode of operation can be used with an input voltage of 5V. The 5V input voltage combined with the -24V main output will result in a sense pin voltage of 29V, which is within the maximum rating of the sense pin of the LTC3704 controller. To use No -RsenseTM Mode of operation, the current sense resistor RS1 should be shorted out. Resistor R8 must be removed and resistor R7 should be installed.
2. Short out current sense resistor RS1.
3. Remove resistor R8.
4. Install 0Ω resistor R7.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 518


SLIC POSITIVE INPUT TO NEGATIVE OUTPUT DC/DC CONVERTER

MONITORING MOSFET CURRENT

1. To monitor the MOSFET current through resistor RS1, connect a 50Ω coaxial cable across RS1 with the shield connected to the ground connection of RS1.
2. Connect the center conductor of the coaxial cable to the RS1 terminal that is connected to the source of MOSFET Q1. Use a 50Ω surface mount resistor in series with the center conductor.
3. Set the scope input to 50Ω and connect the coaxial cable to the scope.
4. Set the scope to 5mV/division or less. The current scale with $15\text{m}\Omega$ for RS1 and 5mV/div will be $.66\text{A/div}$ (50Ω resistor at the input of coaxial cable forms a 2:1 divider with the 50Ω input impedance of scope).

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 518

SLIC POSITIVE INPUT TO NEGATIVE OUTPUT DC/DC CONVERTER

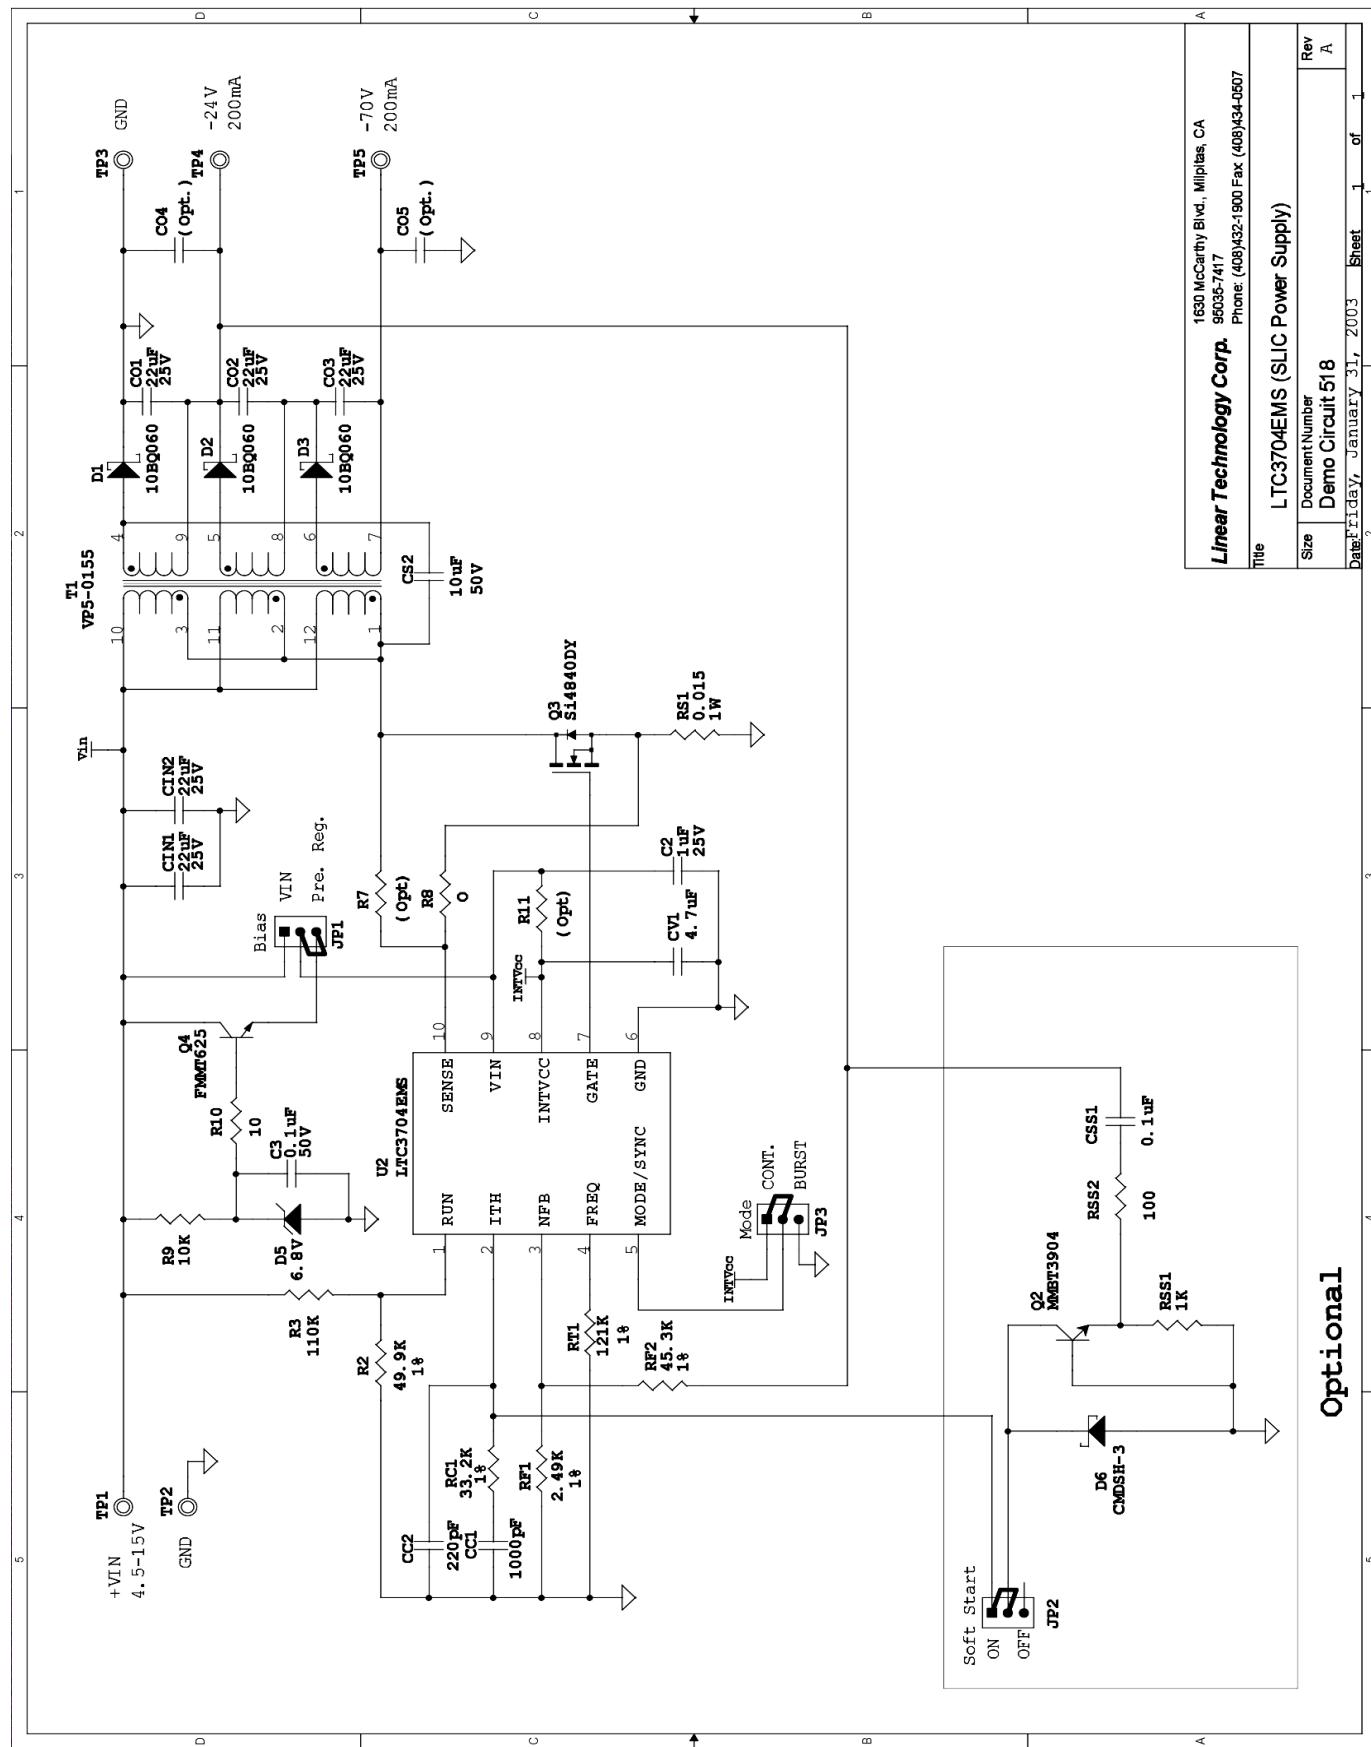

Optional

Linear Technology Corp.	
1630 McCarthy Blvd., Milpitas, CA	A
95035-1417	
Phone: (408)432-1900 Fax: (408)434-4607	
Title LTC3704EMS (SLIC Power Supply)	
Size Document Number	
Demo Circuit 518	
Date Friday, January 31, 2003	Sheet 1 of 1
2	
3	
4	
5	



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.