


Installation Guide Smart-UPS[™]On-Line SRTRK4 Tower to Rack-Mount Conversion

Package Contents

Inspect the contents upon receipt. Notify the carrier and dealer if the unit is damaged.

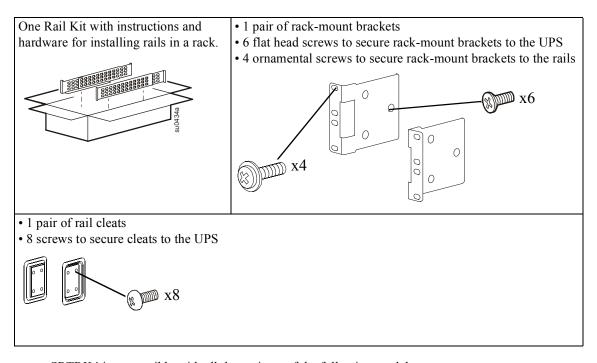

SRTRK4 is compatible with all the variants of the following models:

- SRT1000
- SRT1500
- SRT2200
- SRT3000

Note: UPS and External Battery Pack (XLBP) models may differ in appearance from those depicted in these graphics. The installation process is identical for all models.


Tower to Rack-Mount Conversion of UPS


A CAUTION

DAMAGE TO EQUIPMENT OR PERSONNEL

- The equipment is heavy. Each APCRBC152 battery module weighs 16.4 kg (36.2 lbs) and each APCRBC141 battery module weighs 12.5 kg (27.6 lb). Each APCRBC155 battery module weighs 11 kg (24.25 lb).
- Always practice safe lifting techniques adequate for the weight of the equipment.
- · Remove the battery modules before installing the UPS.
- · Use the battery module handle to carefully slide the battery module in or out of the unit.
- Do not use the battery module handle to lift or carry the battery module.
- · Place the UPS on a table to remove the stabilizer brackets.
- · Always install the UPS at the bottom of the rack.
- · Always install the XLBP below the UPS in the rack.

Failure to follow these instructions can result in equipment damage and minor or moderate injury.

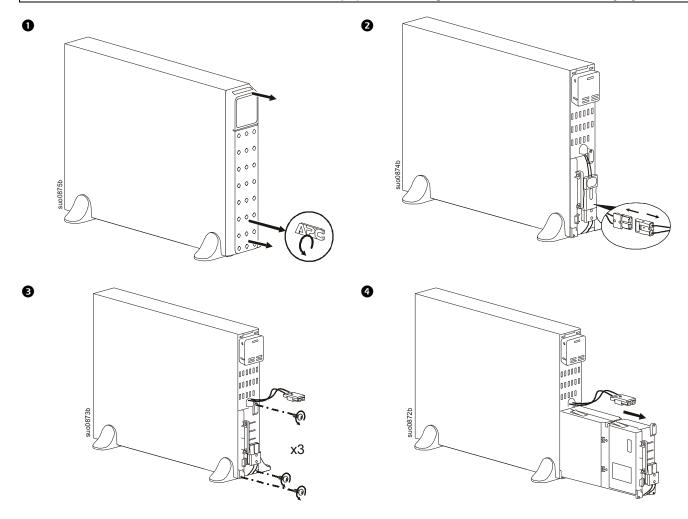

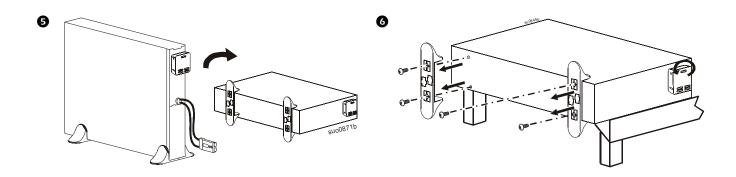

Install UPS in Rack


Refer to the Rail Kit Installation Guide for instructions on rail installation.


A CAUTION

DAMAGE TO EQUIPMENT OR PERSONNEL


- The equipment is heavy. Always practice safe lifting techniques adequate for the weight of the equipment.
- · Always use the recommended number of screws to secure brackets to the UPS.
- · Always use the recommended number of screws to secure the UPS to the rack.
- · Always install the UPS at the bottom of the rack.
- · Always install the XLBP below the UPS in the rack.


Failure to follow these instructions can result in equipment damage and minor or moderate injury

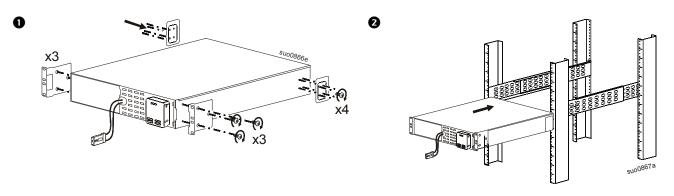

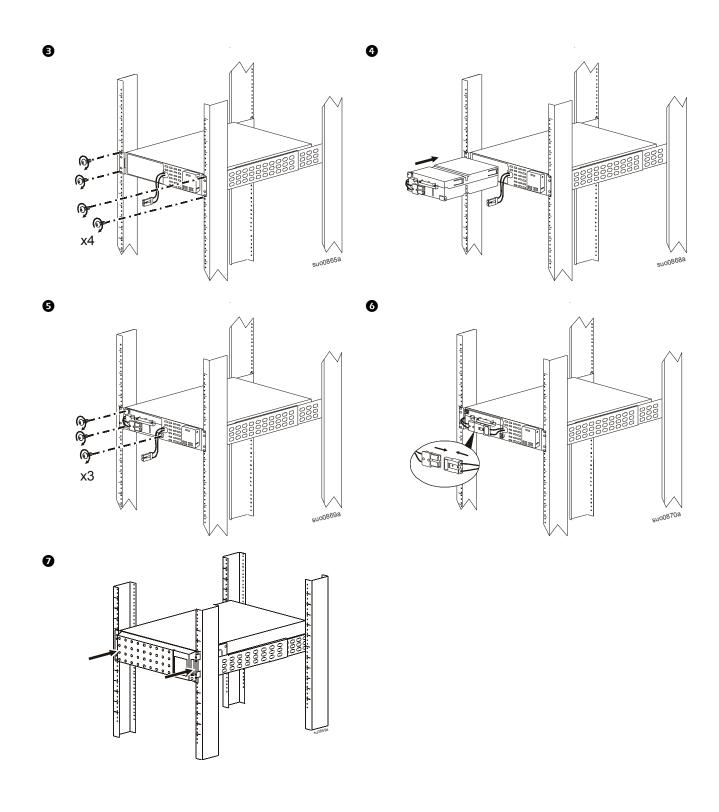

Tower to Rack-Mount Conversion of UPS with one External Battery Pack

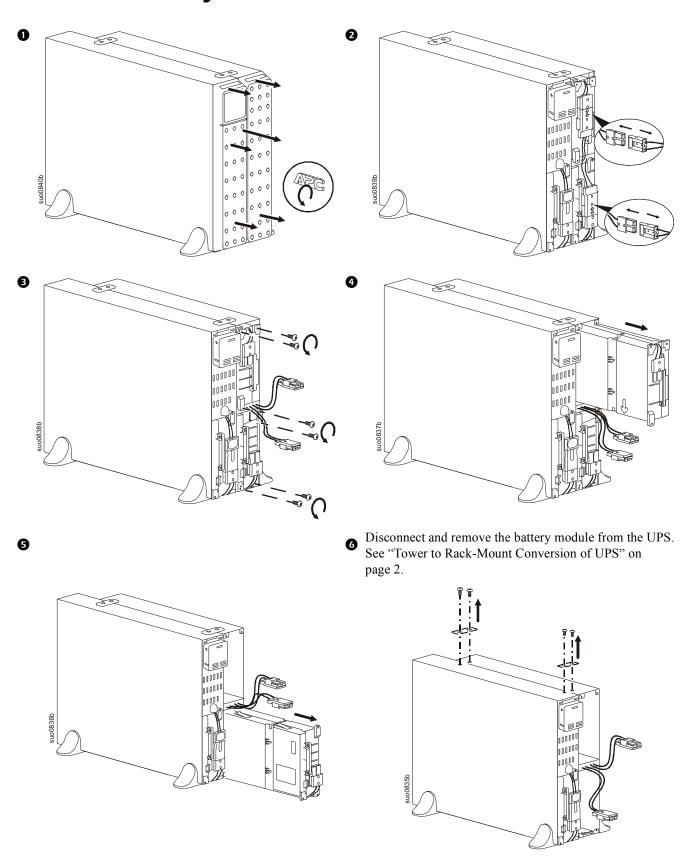

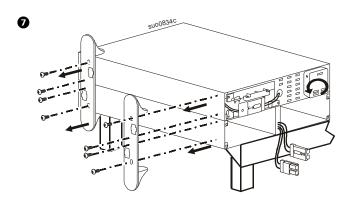

Install UPS with one External Battery Pack in a Rack

UPS model may differ in appearance from those depicted in these graphics. The XLBP installation process is identical for all models.

Refer to the rail kit Installation Guide for instructions on rail installation.


A CAUTION


DAMAGE TO EQUIPMENT OR PERSONNEL

- The equipment is heavy. Always practice safe lifting techniques adequate for the weight of the equipment.
- · Always use the recommended number of screws to secure brackets to the XLBP.
- · Always use the recommended number of screws to secure the XLBP to the rack.
- · Always install the XLBP at the bottom of the rack.
- · Always install the XLBP below the UPS in the rack.
- · Use the battery module handle to slide the battery modules in or out of the XLBP.
- Do not use the battery module handle to lift or carry the battery module.


Failure to follow these instructions can result in equipment damage and minor or moderate injury.

- Secure two brackets to the XLBP. Use three screws for each bracket.
 - Secure the cleat to the XLBP. Use four screws for each cleat.
- Rest the XLBP on the rail shelves. Slide the XLBP into the rack.

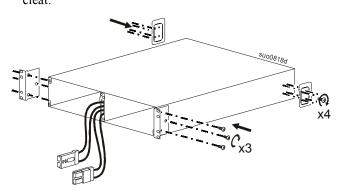


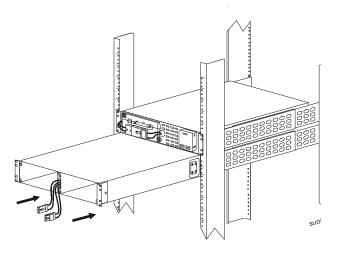


Secure the XLBP to the rack.
Use two screws in each bracket.

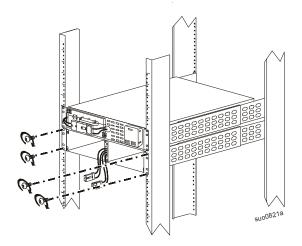


Slide the right hand side battery module into the XLBP.

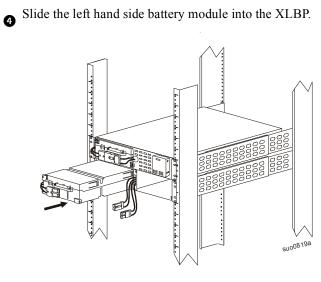


Secure the RBCs to the enclosure. Use three screws on each RBC.

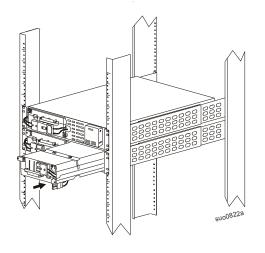


Connect the two XLBP connectors from the enclosure to the two RBCs. See "XLBP Connectors Installation" on page 8.

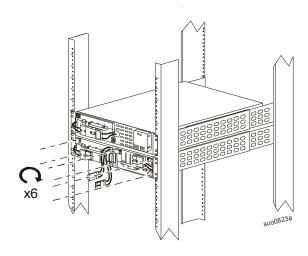

3 Install one XLBP bezel and one UPS bezel.

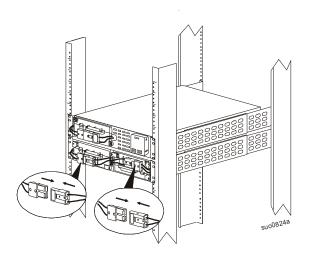

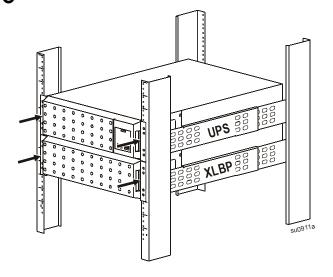


XLBP Connectors Installation


Connect the XLBP connector, labeled RBC 1, to the right hand side (RHS) RBC in rack-mount installation and to the top RBC in tower installation, when viewed from front.

Connect the XLBP connector, labeled RBC 2, to the left hand side (LHS) RBC in rack-mount installation and to the bottom RBC in tower installation, when viewed from front.

SRT1000/SRT1500

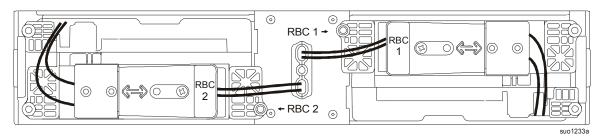

SRT2200/SRT3000

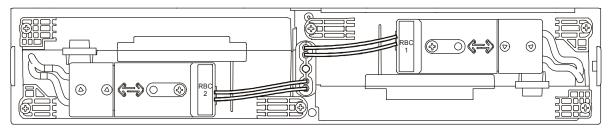

suo1097a

Customer support and warranty information is available at the APC by Schneider Electric web site, www.apc.com.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.