

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 799

## SYNCHRONOUS BUCK-BOOST CONVERTER WITH AUTOMATIC BURST MODE

LTC3442EDE

## DESCRIPTION

Demonstration Circuit 799 is a high efficiency synchronous Buck-Boost converter using the LTC3442. The input range is from 2.4V to 5.5V, making it ideal for single-cell Lithium-Ion or three-cell NiCd/NiMH battery applications. This converter provides up to 95% efficiency, much higher than traditional Buck-Boost converters. For 2.7V minimum input voltage, this converter can provide up to 1.2A load current.

The output voltage is set at 3.3V. A different output voltage in the range of 2.4V to 5.25V can be obtained by changing one of the feedback resistors. The switching frequency is set at 1MHz, which is a good trade-off between efficiency and size. Adjusting RT can program the frequency between 300kHz to 2MHz. In shutdown, the IC itself draws less than 1 $\mu$ A.

**Table 1. Performance Summary ( $T_A = 25^\circ\text{C}$  unless otherwise noted)**

PARAMETER	CONDITION	VALUE
Minimum Input Voltage	-40°C to 85°C	2.4V
Maximum Input Voltage	-40°C to 85°C	5.5V
Output Voltage $V_{\text{OUT}}$	$V_{\text{IN}} = 2.5\text{V to } 5.5\text{V}, I_{\text{OUT}} = 0\text{A to } 1.1\text{A}$	3.3V $\pm 4\%$
Maximum Output Current	$V_{\text{IN}} = 2.5\text{V}$	1.1A
Maximum Output Current	$V_{\text{IN}} = 2.7\text{V}$	1.2A
Typical Output Ripple $V_{\text{OUT}}$	$V_{\text{IN}} = 3.6\text{V}, I_{\text{OUT}} = 1.1\text{A}$ (20MHz BW)	45mV <sub>PP</sub>
Typical Switching Frequency	$RT=43.2\text{K}$	1MHz
Efficiency (Fixed Frequency Mode)	$V_{\text{IN}} = 4.2\text{V}, I_{\text{OUT}} = 0.2\text{A}$	93% Typical
	$V_{\text{IN}} = 4.2\text{V}, I_{\text{OUT}} = 1.0\text{A}$	90% Typical
On/Off Control	Off (40°C to 85°C)	0.4V MAX
	On (-40°C to 85°C)	1.4V MIN

## QUICK START PROCEDURE

Demonstration circuit 799 is easy to set up to evaluate the performance of the LTC3442. Refer to Figure 1

The LTC3442 has manual or programmable Automatic Burst Mode operation and programmable average input current limit.

When using long wire connections to the input source (such as wall adaptors), there can be input over voltage transients during initial plug-in. C2 is installed on DC799 to damp the possible voltage transients. C2 is not needed for any application when the input source is close to the regulator. Please refer to Application Note 88 for details.

**Design files for this circuit board are available. Call the LTC factory.**

LTC is a trademark of Linear Technology Corporation

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 799 SYNCHRONOUS BUCK-BOOST CONVERTER WITH AUTOMATIC BURST MODE

**NOTE:** When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

1. Place jumpers in the following positions:

**JP1** RUN  
**JP2** DISABLE  
**JP3** AUTO ON

2. With power off, connect the input power supply to Vin and GND.

3. Turn on the power at the input.

**NOTE:** Make sure that the input voltage does not exceed 5.5V.

4. Check for the proper output voltage.  $V_{out} = 3.17V$  to  $3.43V$ .

**NOTE:** If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

5. Once the proper output voltage is established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

## GRAPHICS

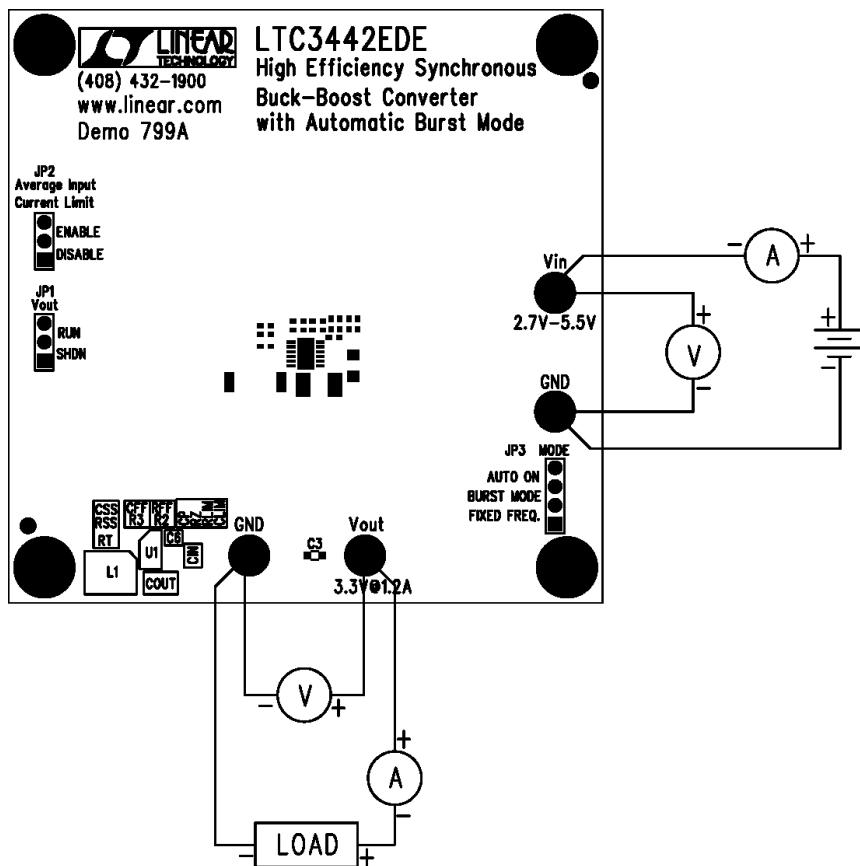


Figure 1. Proper Measurement Equipment Setup

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 799

## SYNCHRONOUS BUCK-BOOST CONVERTER WITH AUTOMATIC BURST MODE

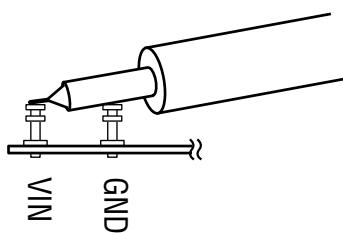


Figure 2. Measuring Input or Output Ripple

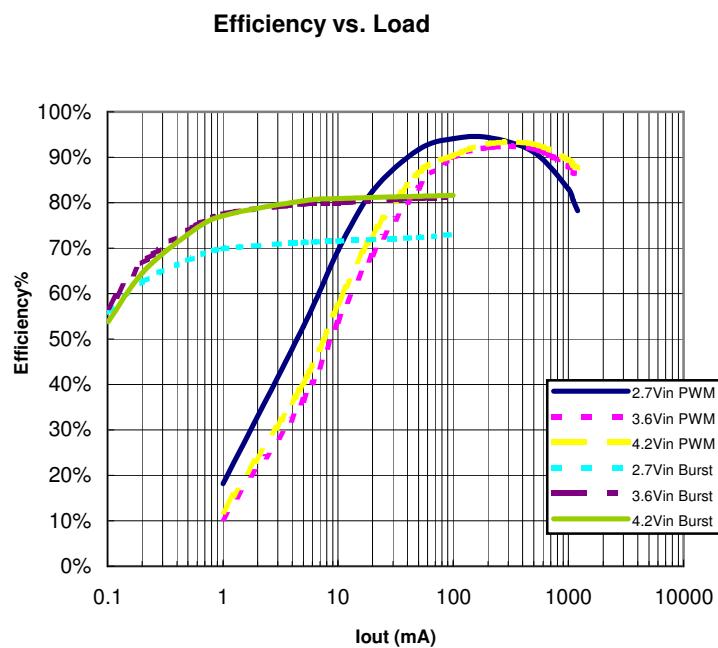


Figure 3. Efficiency of DC799

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 799

## SYNCHRONOUS BUCK-BOOST CONVERTER WITH AUTOMATIC BURST MODE


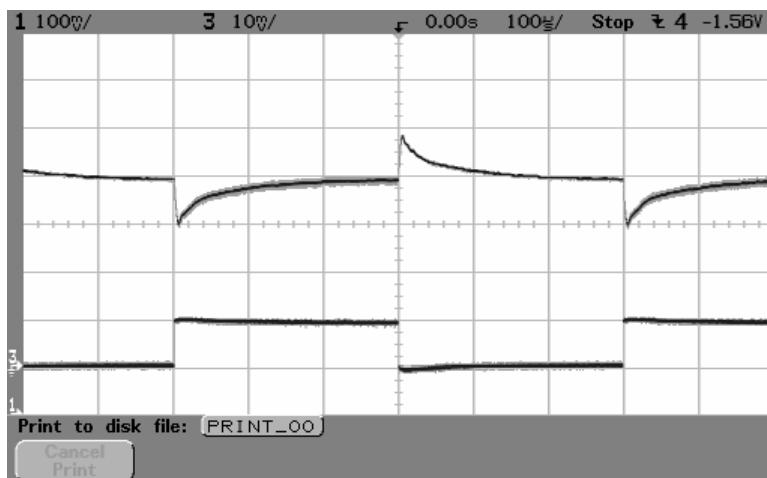


Figure 4. Load Transient Response ( $V_{in}=3.6V$ ; top trace:  $V_{out}$ , 100mV/div; bottom trace:  $I_{out}$  load step: 200mA to 1.2A)

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 799

## SYNCHRONOUS BUCK-BOOST CONVERTER WITH AUTOMATIC BURST MODE



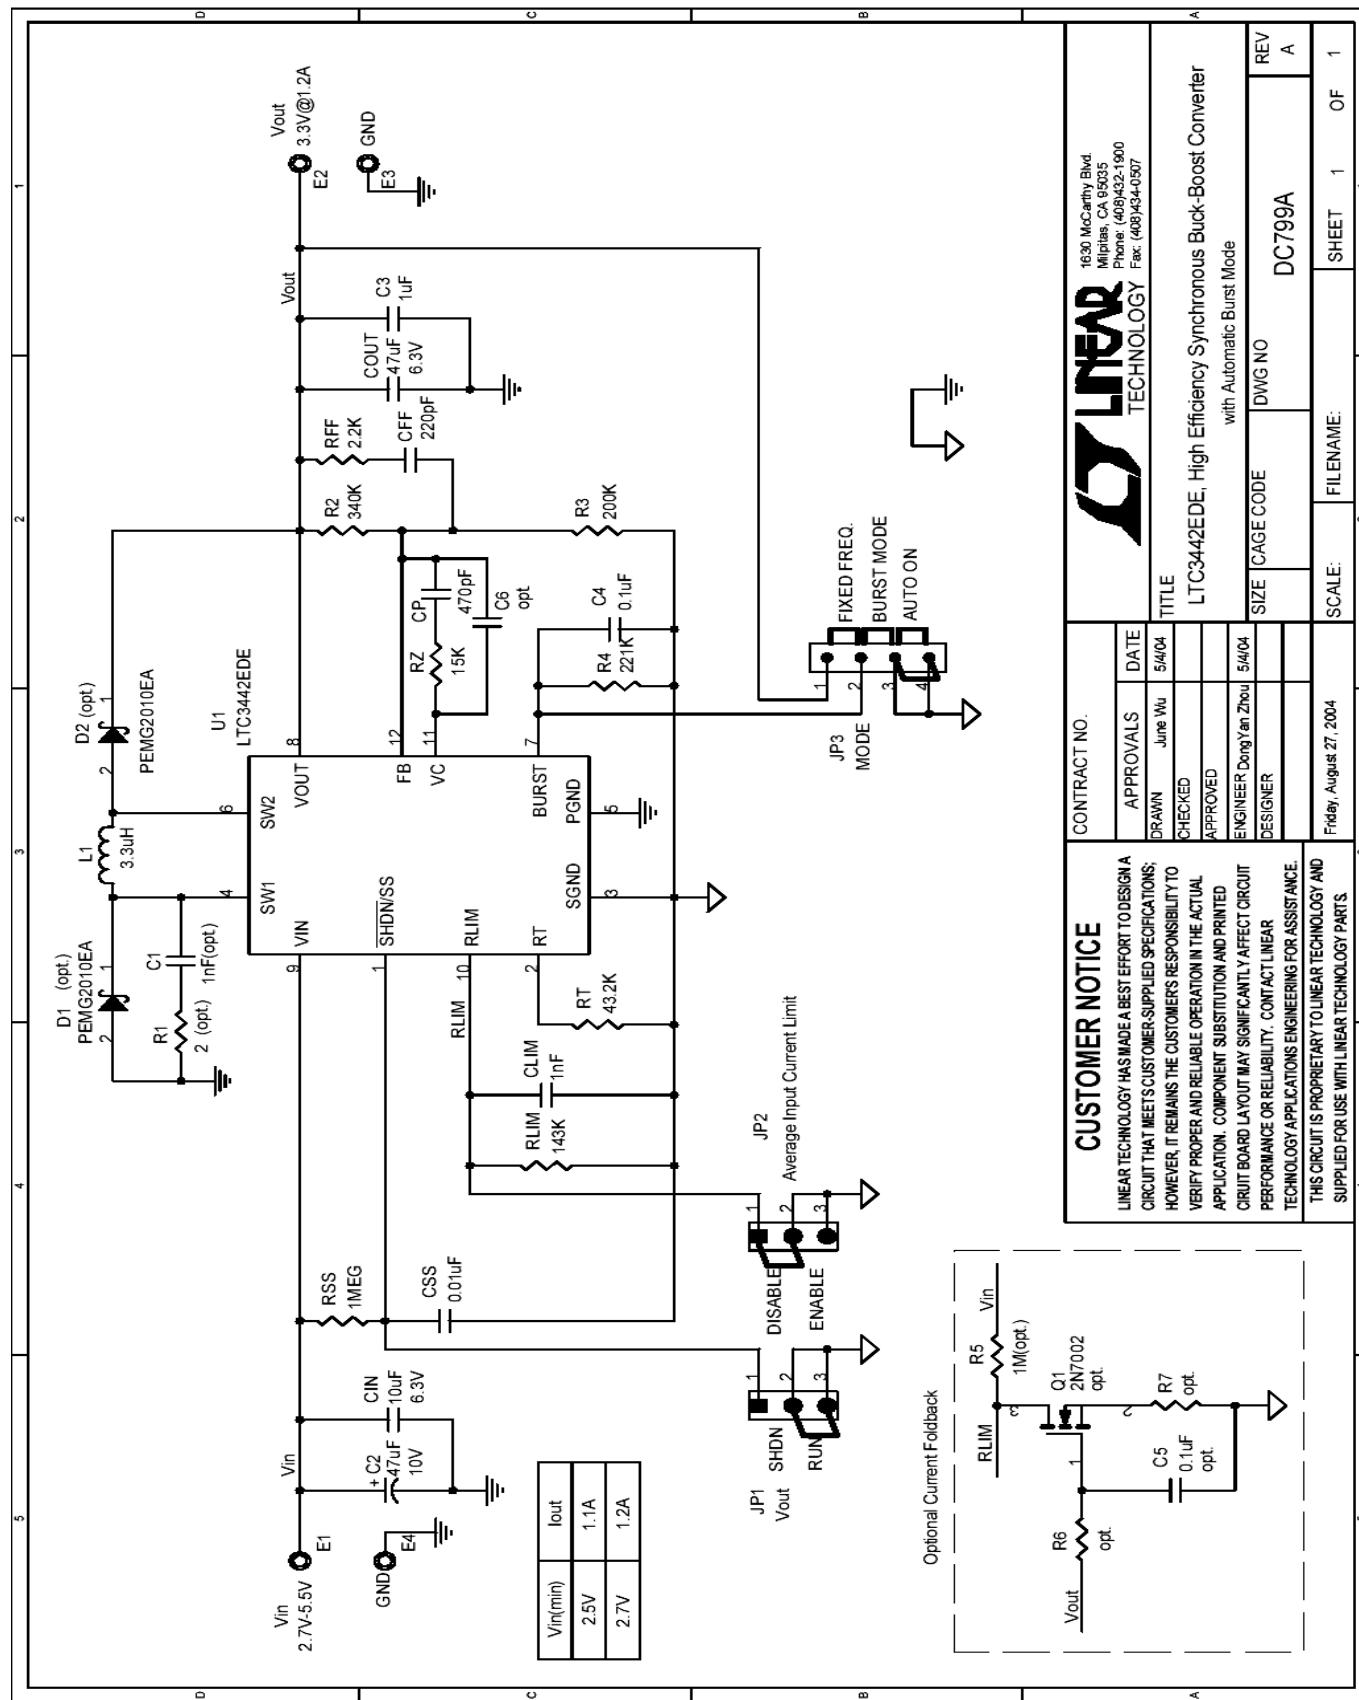

Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: [org@eplast1.ru](mailto:org@eplast1.ru)

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.