

### **General Description**

The MAX1300A evaluation kit (EV kit) is a fully assembled and tested PCB that evaluates the MAX1300A family of 16-bit ADCs. The EV kit uses Windows XP®-, Windows Vista®-, and Windows® 7-compatible software to provide a simple graphical user interface (GUI) to simplify evaluation of the IC's features. The EV kit comes with the MAX1300AEUG+ installed.

The EV kit has an on-board Xilinx FPGA for evaluating the IC. The EV kit GUI allows different sample sizes, adjustable sampling rates, internal or external reference options, and graphing software that includes the FFT of the sampled signals.

Contact the factory for free samples of the pin-compatible MAX1300BEUG+ to evaluate this device.

### Features

- Windows XP-, Windows Vista-, and Windows 7-Compatible Software
- On-Board Transformers for Power-Supply Isolation
- Various Sample Sizes and Sample Rates
- Time Domain, Frequency Domain, and Histogram Plotting
- Frequency, RMS, Min, Max, and Average DC Calculations
- Collects Up to One Million Samples
- Eight Analog Input Channels
- ♦ +4.096V On-Board Reference
- Proven PCB Layout

C166, C168

Fully Assembled and Tested

DESIGNATION	QTY	DESCRIPTION		TY DESCRIPTION DESIG		DESIGNATION	QTY	DESCRIPTION
C1–C4, C16, C17, C20–C24, C27, C28, C31, C37				C29	1	0.1µF ±5%, 50V C0G ceramic capacitor (1206) Murata GRM31C5C14104J		
C100, C101, C104–C108, C111, C112, C125, C127,	32	0.1µF ±10%, 16V X7R ceramic capacitors (0603) TDK C1608X7R1C104K		C103, C170	2	1μF ±10%, 16V X5R ceramic capacitors (0603) Murata GRM188R61C105K		
C143, C144, C145, C171, C173, C174				C109, C110, C142	3	10pF ±5%, 50V C0G ceramic capacitors (0603) Murata GRM1885C1H100J		
C5, C6, C15	3	220pF ±5%, 50V C0G ceramic capacitors (0805) Murata GRM2165C1H221J 0.1µF ±10%, 16V X7R ceramic capacitors (0805) Murata GRM219R71C104K		C113, C114	2	22pF ±5%, 50V C0G ceramic capacitors (0603) Murata GRM1885C1H220J		
C7–C13	7			C115	1	0.033µF ±10%, 16V X7R ceramic capacitor (0603) Murata GRM188R71C333K		
C18, C19, C102, C117, C119, C123, C124, C126, C128	9	10μF ±10%, 25V X5R ceramic capacitors (1206) Murata GRM31CR61E106K		C120, C121	2	47μF ±20%, 6.3V capacitors (B1) SANYO 6TPC47MB		
C25, C26, C116, C118, C122, C175	6	4.7μF ±10%, 25V X5R ceramic capacitors (1206) Murata GRM31CR71E475M		C129, C131, C133, C135, C139, C146, C148, C150, C152, C154, C156, C158, C160, C162, C164	17	47nF ±10%, 16V X7R ceramic capacitors (0603) Murata GRM188R71C473K		

Ordering Information appears at end of data sheet.

Windows, Windows XP, and Windows Vista are registered trademarks of Microsoft Corp.

### **Component List**

For pricing, delivery, and ordering information, please contact Maxim Direct at
1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

### **Component List (continued)**

DESIGNATION	QTY	DESCRIPTION
C130, C132, C134, C136, C147, C149, C151, C153, C155, C157, C159, C161, C163, C165, C167, C169	16	1nF ±10%, 50V X7R ceramic capacitors (0603) Murata GRM188R71H102K
C137, C138	2	39pF ±5%, 50V C0G ceramic capacitors (0603) Murata GRM1885C1H390J
C140, C172	2	0.01µF ±10%, 50V X7R ceramic capacitors (0603) Murata GRM188R71H103K
C141	1	15pF ±5%, 50V C0G ceramic capacitor (0603) Murata GRM1885C1H150J
D1, D2	2	50V, 1A general-purpose diodes (SMA)
D3	1	Green LED (0603)
D4	1	15V zener diode (DO35) Diodes Inc 1N5245B-T
D5–D8	4	30V, 1A Schottky diodes (SOD123) Diodes Inc. B130LAW
J100	0	Not installed, dual-row 24-pin (2 x 12) header
J101	1	20-pin (2 x 10) header
JSPI	0	Not installed, 6-pin header
JTAG1	1	6-pin header
JTAG2	1	10-pin (2 x 5) header
JU1–JU8, JU10, JU11, JU12	11	3-pin headers
JU9, JU101–JU104	5	2-pin headers
JU105	0	Not installed, 3-pin header
JU107–JU110	0	Not installed, 2-pin headers
L100	1	Ferrite bead (0603) TDK MMZ1608R301A
L101	1	22μH, 0.11Ω, 300mA inductor Coilcraft DS1608C-223ML
LED1, LED2, LED3	3	Red LEDs (0603) Panasonic LNJ208R8ARA
P100	1	USB type-B right-angle PC-mount receptacle
PGND, VIN	2	Uninsulated banana panel jacks

DESIGNATION	QTY	DESCRIPTION
Q100	0	Not installed, p-channel FET (SOT223) Fairchild NDT456P
R1, R2	2	$100\Omega \pm 1\%$ resistors (0603)
R3–R8	6	21Ω ±1% resistors (0603)
R9	1	$0\Omega \pm 5\%$ resistor
R10–R13, R101–R105	0	Not installed, resistors (0603) R10–R13 are open; R101–R105 are short (PC trace)
R14, R151	2	$390\Omega \pm 5\%$ resistors (0603)
R15–R19, R154, R157	7	$330\Omega \pm 5\%$ resistors (0603)
R20, R21, R22	3	51Ω ±5% resistors (0603)
R100, R133	2	1k $\Omega$ ±5% resistors (0603)
R106, R128, R129, R130, R132	5	10k $\Omega$ ±5% resistors (0603)
R107	1	2.2kΩ ±5% resistor (0603)
R108	1	1.5k $\Omega$ ±5% resistor (0603)
R109, R110	2	$27\Omega \pm 5\%$ resistors (0603)
R111, R114, R120	3	100k $\Omega$ ±5% resistors (0603)
R112	1	18.7k $\Omega$ ±1% resistor (0603)
R113, R115, R116, R119, R122, R123	6	10k $\Omega$ ±1% resistors (0603)
R117	1	$1M\Omega \pm 5\%$ resistor (0603)
R118	1	$34k\Omega \pm 1\%$ resistor (0603)
R121	1	$30k\Omega \pm 1\%$ resistor (0603)
R124	1	20k $\Omega$ ±1% resistor (0603)
R125, R126, R127	3	$200\Omega \pm 5\%$ resistors (0603)
R131, R140	2	$680\Omega \pm 5\%$ resistors (0603)
R134, R136, R144, R145	4	$10\Omega \pm 5\%$ resistors (0603)
R135, R137, R138, R139, R141, R149, R150, R153	8	4.7k $\Omega$ ±5% resistors (0603)
R142	1	56 $\Omega$ ±5% resistor (0603)
R143	1	150 $\Omega$ ±5% resistor (0603)
R146, R147, R148, R152	4	$100\Omega \pm 5\%$ resistors (0603)
R155, R156, R158	3	$180\Omega \pm 5\%$ resistors (0603)
R159	1	$47k\Omega \pm 5\%$ resistor (0603)
S100	1	4-position DIP switch
T1	1	198µH, 1:1:2.6:2.6, 400kHz transformer (8 Gull Wing) HALO Electronics TGM-H281NF

### **Component List (continued)**

DESIGNATION	QTY	DESCRIPTION
TP1, TP3, TP5, TP101	4	Red multipurpose test points
TP2, TP4, TP6, TP100	4	Black multipurpose test points
U1	1	16-bit ADC (24 TSSOP) Maxim MAX1300AEUG+
U2, U3	0	Not installed, input buffers (8 SO) Maxim MAX9632ASA+
U4	1	4.096V reference (8 SO) Maxim MAX6126AASA41+
U5, U6, U7	3	High-speed optocouplers (8 DIP) Vishay VO2631
U8, U9	2	5V linear regulators (8 SO) Maxim MAX1659ESA+
U10	1	H-bridge driver (8 SO-EP) Maxim MAX256ASA+
U100	1	Low-power microcontroller (68 QFN-EP) Maxim MAXQ2000-RAX+
U101	1	USB-to-UART converter (32 TQFP)
U102	1	93C46A 3-wire EEPROM (8 SO)

DESIGNATION	QTY	DESCRIPTION
U103, U104. U106	3	LDOs (16 TSSOP-EP) Maxim MAX1793EUE33+
U105	1	Step-up regulator (8 µMAX®) Maxim MAX1795EUA+
U107	1	LDO (6 SOT23) Maxim MAX1983EUT+
U108	1	SRAM (48 TSOP)
U109	0	Not installed, flash PROM (20 VO)
U110	1	Atmel SPI™ flash (8 SO)
U111	1	Spartan 3A FPGA (144-TQFP) Xilinx XC3S50A-4TQG144I
Y100	1	16MHz crystal Hong Kong X'tals SSM16000N1HK188F0-0
Y101	0	Not installed, 32.768kHz crystal
Y102	1	6MHz crystal Hong Kong X'tals SSL60000N1HK188F0-0
Y103	1	50MHz oscillator
	1	USB high-speed A-to-B cables, 5ft (1.5m)
	16	Shunts
_	1	PCB: MAX1300A EVALUATION KIT

### **Component Suppliers**

SUPPLIER	PHONE	WEBSITE
Coilcraft, Inc.	847-639-6400	www.coilcraft.com
Diodes Incorporated	805-446-4800	www.diodes.com
Fairchild Semiconductor	888-522-5372	www.fairchildsemi.com
HALO Electronics, Inc.	650-903-3800	www.haloelectronics.com
Hong Kong X'tals Ltd.	+852-35112388	www.hongkongcrystal.com
Murata Electronics North America	770-436-1300	www.murata-northamerica.com
Panasonic Corp.	800-344-2112	www.panasonic.com
SANYO Electric Co., Ltd.	619-661-6835	www.sanyo.com
TDK Corp.	847-803-6100	www.component.tdk.com
Vishay	402-563-6866	www.vishay.com

Note: Indicate that you are using the MAX1300A when contacting these component suppliers.

 $\mu\text{MAX}$  is a registered trademark of Maxim Integrated Products, Inc.

SPI is a trademark of Motorola, Inc.

### **MAX1300A EV Kit Files**

FILE	DESCRIPTION
INSTALL.EXE	Installs the EV kit files on your computer
MAX1300A.EXE	Application program
CDM20600.EXE	Installs the USB device driver
UNINSTALL.EXE	Uninstalls the EV kit software
USB_Driver_Help_200.PDF	USB driver installation help file

### **Quick Start**

### **Recommended Equipment**

- MAX1300A EV kit (USB cable included)
- Windows XP, Windows Vista, or Windows 7 PC with a spare USB port
- Signal generator
- +5V (500mA) power supply

**Note:** In the following sections, software-related items are identified by bolding. Text in **bold** refers to items directly from the EV kit software. Text in **bold and under-lined** refers to items from the Windows operating system.

#### Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation:

- Visit <u>www.maximintegrated.com/evkitsoftware</u> to download the latest version of the EV kit software, 1300ARxx.ZIP. Save the EV kit software to a temporary folder and uncompress the ZIP file.
- 2) Install the EV kit software and USB driver on your computer by running the INSTALL.EXE program inside the temporary folder. The program files are copied to your PC and icons are created in the Windows Start I Programs menu. During software installation, some versions of Windows may show a warning message indicating that this software is from an unknown publisher. This is not an error condition and it is safe to proceed with installation. Administrator privileges are required to install the USB device driver on Windows.
- 3) Verify that all jumpers are in their default positions, as shown in Tables 1 and 2.
- 4) Connect the USB cable from the PC to the EV kit board. A Windows message appears when connecting the EV kit board to the PC for the first time. Each version of Windows has a slightly different message. If you see a Windows message stating

<u>ready to use</u>, then proceed to the next step. Otherwise, open the USB\_Driver\_Help\_200.PDF document in the Windows <u>Start I Programs</u> menu to verify that the USB driver was installed successfully.

- 5) Connect the positive terminal of the +5V power supply to the VIN banana jack and the GND terminal to the PGND banana jack.
- 6) Set the signal generator to output a 1kHz sine wave with an amplitude of 1VP-P.
- 7) Connect the negative terminal of the signal generator to the AGND PCB pad and the positive terminal of the signal generator to the AIN0 PCB pad.
- 8) Start the EV kit software by opening its icon in the <u>Start I Programs</u> menu. The EV kit software main window appears, as shown in Figure 1. The GUI indicates whether the USB hardware is connected in the lower-left status bar.
- 9) Press the **Start Conversion** button in the **Data Logging** group box.
- Verify that a 1kHz sine wave with an amplitude of 1VP-P is displayed. The FFT and histogram of the signal can be viewed by clicking on the Frequency Domain and Histogram tab sheets.

### **Detailed Description of Software**

The MAX1300A EV kit software main window is shown in Figure 1. The main window of the GUI contains a **Device Configuration** group box, a **Data Logging** group box, and four tab sheets to display the sampled data. The EV kit software allows various sample sizes and sample rates for use with the **Scope** plot in the **Time Domain** tab sheet. The **FFT** spectral energy is displayed in the **Frequency Domain** tab sheet. The **Histogram** tab sheet displays the distribution of the sampled ADC codes. The **Single Conversion** tab sheet displays the ADC codes and the corresponding voltage values of one data sample for all ADC input channels.



Figure 1. MAX1300A EV Kit Software (Main Window)

### **Device Configuration**

The **Device Configuration** group box is used to configure the IC. The configurable settings are: reference voltage, clock, analog input settings, and power-down state.

The **Reference Voltage and AIN\_/REF Setting** group box selects between the internal reference, on-board reference (default), and user-applied reference. If the source of the voltage reference is set to an external reference, enter the precise voltage value in the **Reference Voltage** edit box. This value is used to calculate the voltage from the ADC code.

The **Clock Mode** group box selects one of the three different conversion methods (**External Clock, External Acquisition**, or **Internal Clock**). The **External Clock** mode is the default. This mode allows the fastest throughput. The SCLK is used as the external clock; no external clock needs to be provided. Selecting between the different modes affects the sample rate.

The **Input Type** group box selects the settings for the ADC inputs. The input channels are configurable for singleended or differential inputs in unipolar or bipolar mode. The four tabs select the settings for the four pair of analog inputs that can be driven differentially. For maximum accuracy, select the minimum input range that covers the sampled signal.

In the **Command** group box, press the **Reset** button to reset the ADC to its default condition. Press the **Partial Power Down** button to place the ADC into partial powerdown mode. Press the **Full Power Down** button to place the ADC into full power-down mode. The **Power Status** group box displays the power state of the ADC device.

#### **Data Logging**

In the **Data Logging** group box, the user can select the **Channel** and the desired number of conversions from the **Number of Samples** drop-down list. Enter the desired sampling rate in the **Sample Rate (ksps)** edit box. The actual sampling rate is displayed at the right of the **Sample Rate (ksps)** edit box. Press the **Start Conversion** button to start sampling. After sampling is finished, the user can save the data to a file by pressing the **Save To File** button. The **Save To File** button is not active until the sampling is done.

Time Domain/Frequency Domain/Histogram/Single Conversion Tabs

After the **Start Conversion** button in the **Data Logging** group box is pressed, the sampled data in the time domain is plotted in the **Time Domain** tab sheet. The sampled data in the frequency domain is plotted in the **Frequency Domain** tab sheet. The histogram of the sampled signal is plotted in the **Histogram** tab sheet.

When the **Single Conversion** tab sheet is selected, press the **Start Conversion** button to read one sample data for all ADC input channels.

Check the **Auto Convert** checkbox to automatically and repeatedly do the ADC conversions and update the active tab sheet.

#### Time Domain Tab

In the **Time Domain** tab sheet (Figure 2), check the **Remove DC** checkbox to remove the DC component of the sampled signal. In the **Scope Display Control Vertical** group box, when the **Auto Scale** checkbox is checked, the software automatically scales the vertical axis in the plot. If the **Auto Scale** checkbox is unchecked, enter the appropriate values into the **Y-MAX** and **Y-MIN** edit boxes and press the **Set** button to set the boundaries for the vertical axis. The software automatically calculates the **Frequency, RMS, MIN, MAX**, and **Avg DC** of the sampled signal, and displays the calculated values in the **Calculation** group box.

#### Frequency Domain Tab

The **Frequency Domain** tab sheet (Figure 3) displays the FFT plot of the signal shown in the **Time Domain** tab sheet.

#### Histogram Tab

The **Histogram** tab sheet (Figure 4) displays the histogram of the signal shown in the **Time Domain** tab sheet. The software automatically calculates the **Mean** and the **Std Dev** (standard deviation, sigma), and displays the calculated values in the **Calculation** group box.

The **Histogram Display Control** radio group box provides three options to scale the horizontal axis on the histogram. The options are:

- 1) (Mean 3 sigma) to (Mean + 3 sigma)
- 2) (Mean 6 sigma) to (Mean + 6 sigma)
- 3) User Define range

Histograms can be taken for DC or AC signal sources. Figure 4 shows the histogram of a 5kHz sine-wave signal while Figure 5 shows the histogram of a 1V DC signal.

#### Single Conversion Tab

The ADC Value Display for Single Conversion group box in the Single Conversion tab sheet (Figure 6) displays the ADC Code and the calculated Voltage values for a single sample of all the ADC input channels. Pressing the Start Conversion button in the Data Logging group box updates the status of the ADC Value Display for Single Conversion group box.



Figure 2. MAX1300A EV Kit Software (Time Domain Tab)



Figure 3. MAX1300A EV Kit Software (Frequency Domain Tab)

#### - **I** × 35500 Mean: 32802.897 (0x8023) 35000 Std Dev: 936.747 Calculation 34500 34000 33500 O [Mean - 6 sigma] to [Mean + 6 sigma] (Mean - 3 sigma) to (Mean + 3 sigma) 65536 ADC Code (Decimal) 33000 Histogram MAX -Histogram Display Control-32500 Time Domain Frequency Domain Histogram Single Conversion User Define-MIN 0 32000 0 31500 Remove DC 31000 30500 🔲 Auto Convert 30000 **Occurrence** 35.0-30.0-60.0 55.0 -50.0-20.0 -15.0 -10.0-5.0 -0.0 65.0 -45.0 -25.0 -MAX1300A Evaluation Kit 8-channel, SPI, 16-bit ADC F Normal Partial Power Down Full Power Down MAX = 114 ksps MIN = 1 ksps Þ AIN1: Bipolar -12V to +12V 🗸 Maximum: 1048576 P. Actual Rate: 114.89 ksps Bipolar -12V to +12V -Input Range for Single-Ended Inputs -Input Range for Differential Inputs Save To File Bipolar -6V to +6V Power Status -Input Type AIN0 / AIN1 AIN2 / AIN3 AIN4 / AIN5 AIN5 / AIN7 ⊡ AINO ⊡ Sample Rate (ksps) 114 Number of Samples 8192 -Reference Voltage and AIN\_/REF Setting-> ⊵ Start Conversion Reference Voltage 4.096 Internal Voltage Reference ion Kit Soft Partial Power Down Full Power Down Single-Ended Inputs Channel Reset O Differential Inputs External Clock Device MAX1300A -Device Configuration-W MAX1300A Eval Hardware: Connected -Clock Mode -Data Logging -Command <u>File</u> <u>H</u>elp

Figure 4. MAX1300A EV Kit Software (Histogram Tab-5kHz Sine-Wave Signal)



Figure 5. MAX1300A EV Kit Software (Histogram Tab—1V DC Signal)

X1300A Evaluation Kit 8-Channel, SPI, 16-bit ADC MAX1300A			
Ti ference Voltage and AIN_/REF Setting	Time Domain   Frequency Domain   Histogram 🤶	Single Conversion	
Interinar voiage treatence Reference Volage (4.056 V			
ick Mode External Clock			
ut Type NN 7 AIN1 AIN2 / AIN3 AIN4 / AIN5 AIN5 AIN5 AIN7			
Input Range for Single-Ended Inputs AIN0: Bipolar 12V to +12V	ADC Value Display for Single Conversion		
Single-Ended Inputs AIN1: Bipolar -12V to +12V ▼	Channel 0	Code: 0x7FEE	Voltage: -0.0067
Linput Range for Differential Inputs	Channel 1	Code: 0x99E5	Voltage: 2.4859
O Differential Inputs Bipolar -6V to +6V 🔍	Channel 2 Channel 3	Code: 0x99D2 Code: 0x99CE	Voltage: 2.4788 Voltage: 2.4773
	Channel 4	Code: 0x99CF	Voltage: 2.4776
ommand Power Status	Channel 5	Code: 0x99CD	Voltage: 2.4769
Reset	Channel 6	Code: 0x99CD	Voltage: 2.4769
Partial Power Down Full Power Down Full Power Down	Channel 7	Code: 0x99CE	Voltage: 2.4773
Loging	C Auto Convert		
Channel 0			
Number of Samples 256  Maximum: 1048576			
Sample Rate (ksps) 114 Actual Rate: 114.89 ksps MAX = 114 ksps MIN = 7 ksps			
Start Conversion Save To File			

Figure 6. MAX1300A EV Kit Software (Single Conversion Tab)

### Table 1. Master-Side Jumper Settings (JU101–JU104)

JUMPER	SHUNT POSITION	DESCRIPTION
	Installed*	The on-board LDO (U103) provides 3.6V to the EV kit for internal use.
JU101	Not installed	Disconnects the output of the on-board LDO (U103).
Installed*		The on-board LDO (U104) provides 2.5V to the EV kit for internal use.
JU 102	Not installed	Disconnects the output of the on-board LDO (U104).
11102	1-2*	The on-board LDO (U106) provides 5V to the EV kit for internal use.
30103	2-3	Disconnects the output of the on-board LDO (U106).
11104	Installed*	The on-board LDO (U107) provides 1.2V to the EV kit for internal use.
30104	Not installed	Disconnects the output of the on-board LDO (U106).

\*Default position.

### Table 2. IC-Side Jumper Settings (JU1–JU12)

JUMPER	SHUNT POSITION	DESCRIPTION
11.14	1-2*	On-board SPI. Connects the $\overline{CS}$ signal to the internal interface.
JUT	2-3	User-supplied SPI. Apply the $\overline{CS}$ signal to the $\overline{CS}$ PCB pad.
	1-2*	On-board SPI. Connects the DIN signal to the internal interface.
JUZ	2-3	User-supplied SPI. Apply the DIN signal to the DIN PCB pad.
11.12	1-2*	On-board SPI. Connects the SSTRB signal to the internal interface.
003	2-3	User-supplied SPI. Apply the SSTRB signal to the SSTRB PCB pad.
11.1.4	1-2*	On-board SPI. Connects the SCLK signal to the internal interface.
504	2-3	User-supplied SPI. Apply the SCLK signal to the SCLK PCB pad.
11.15	1-2*	On-board SPI. Connects the DOUT signal to the internal interface.
005	2-3	User-supplied SPI. Apply the DOUT signal to the DOUT PCB pad.
Ше	1-2	AIN0 uses the input buffer (U2).
J06	2-3*	AIN0 bypasses the input buffer.
11 17	1-2	AIN1 uses the input buffer (U3).
307	2-3*	AIN1 bypasses the input buffer.
JU8	1-2*	Connects the on-board external reference (U4) to the ADC reference input of U1.
	2-3	Connects the ADC reference input pin to the VREF PCB pad.
11.10	Installed*	Uses the external ADC reference.
109	Not installed	Uses the internal ADC reference.
11.10	1-2*	DVDD powered by the on-board supply.
5010	2-3	DVDD powered by the user-supplied voltage on the EXT_DVDD test point.
11 14 4	1-2*	AVDD powered by the on-board supply.
JUTT	2-3	AVDD powered by the user-supplied voltage on the EXT_AVDD test point.
	1-2*	DVDDO powered by the on-board supply.
JU12	2-3	DVDDO powered by the user-supplied voltage on the EXT_DVDDO test point. Change this setting only for user-supplied SPI.

\*Default position.

### **Detailed Description of Hardware**

The MAX1300A EV kit board provides a proven layout for evaluating the MAX1300A. The EV kit comes with a MAX1300AEUG+ installed. The EV kit isolates the control-side circuit from the IC circuitry to reduce the noise level in order to evaluate the IC over its full dynamic range.

### **Control Side**

The EV kit has an on-board Xilinx FPGA for testing the IC's maximum throughput (115ksps) and acquiring mega-sample sizes (1Ms) for detailed precision.

#### Input Power

The EV kit is powered through the VIN and PGND banana jacks. Apply +5V (500mA) on the VIN banana jack. The VIN input supplies power to the whole board, including the IC circuitry.

#### **Isolated Power Supply**

The EV kit requires both analog and digital power supplies. An on-board transformer and two LDOs generate the analog and digital power supplies.

There are two digital supplies (DVDD and DVDDO). DVDD and DVDDO are set to +5V by default. DVDDO is set to +5V because optocouplers are driving the interface signals coming from the control side. To apply a user-supplied DVDDO voltage, place a shunt across pins 2-3 of jumper JU12, as shown in Table 2, and apply the DVDDO voltage on the EXT\_DVDDO test point. Only change the DVDDO supply for user-supplied SPI. To apply a user-supplied DVDD voltage, place a shunt across pins 2-3 of jumper JU10, as shown in Table 2, and apply the DVDD voltage on the EXT\_DVDD test point.

The analog supply (AVDD) is set to +5V by default, and powers the IC and the on-board reference. AVDD is separated from DVDD in the layout to reduce cross-

coupling. To apply a user-supplied AVDD voltage, place a shunt across pins 2-3 on jumper JU11, as shown in Table 2, and apply the AVDD voltage on the EXT\_AVDD test point.

If the user wants to use the input buffers for analog inputs AINO and AIN1, the U2 and U3 (MAX9632) buffers need to be installed and powered. Apply a +15V supply on the +15V PCB pad. Apply a -15V supply on the -15V PCB pad. Apply the grounds to the AGND PCB pads.

#### Voltage Reference

An on-board +4.096V voltage reference (U4) is provided on the EV kit. To use a user-supplied reference voltage, change the shunt on jumper JU8 to the 2-3 position and apply the reference voltage to the VREF PCB pad. Connect the negative terminal of the reference voltage to the AGND PCB pad nearest the VREF pad. By default, JU8 is in the 1-2 position for the on-board reference.

### **Isolated Interface (SPI)**

The interface from the control side requires SPI plus the strobe signal. On the IC side, the interface signals are referenced to +5V from the default DVDDO supply.

### User-Supplied Interface (SPI)

To use the EV kit with a user-supplied SPI, place a shunt across pins 2-3 on jumpers JU1–JU5. Connect the SSTRB, CS, SCLK, DOUT, DIN, and DGND lines from the user-supplied SPI interface to the corresponding PCB pads on the EV kit. The user-supplied SPI interface is referenced to +5V by default. If the user-supplied master requires a lower voltage, apply an external voltage to the DVDDO supply.

The SSTRB signal is used to indicate to the digital interface that data is ready to be read from the IC. The SSTRB signal is used for internal clock mode. If additional pins are not available or standard SPI is required, do not use the internal clock mode.



Figure 7a. MAX1300A EV Kit Schematic (Sheet 1 of 5)



Figure 7b. MAX1300A EV Kit Schematic (Sheet 2 of 5)



Figure 7c. MAX1300A EV Kit Schematic (Sheet 3 of 5)



Figure 7d. MAX1300A EV Kit Schematic (Sheet 4 of 5)



Figure 7e. MAX1300A EV Kit Schematic (Sheet 5 of 5)



Figure 8. MAX1300A EV Kit Component Placement Guide—Component Side



Figure 9. MAX1300A EV Kit PCB Layout—Component Side



Figure 10. MAX1300A EV Kit PCB Layout—Layer 2



Figure 11. MAX1300A EV Kit PCB Layout—Layer 3



Figure 12. MAX1300A EV Kit PCB Layout—Solder Side



Figure 13. MAX1300A EV Kit Component Placement Guide—Solder Side

### **Ordering Information**

PART	ТҮРЕ
MAX1300AEVKIT#	EV Kit

#Denotes RoHS compliant

### **Revision History**

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	2/12	Initial release	—



Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.

#### Maxim Integrated 160 Rio Robles, San Jose, CA 95134 USA 1-408-601-1000

© 2012 Maxim Integrated Products, Inc.

Maxim Integrated and the Maxim Integrated logo are trademarks of Maxim Integrated Products, Inc.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.