

TOOLSTICK C8051F850 DAUGHTER CARD USER'S GUIDE

1. Handling Recommendations

To enable development, the ToolStick Base Adapter and daughter cards are distributed without any protective plastics. To prevent damage to the devices and/or the host PC, consider the following recommendations when using the ToolStick:

- Never connect or disconnect a daughter card to or from the ToolStick Base Adapter while the Base Adapter is connected to a PC.
- Always connect and disconnect the ToolStick Base Adapter from the PC by holding the edges of the boards.



Figure 1. Proper Method of Holding the ToolStick

• Avoid directly touching any of the other components.



Figure 2. Improper Method of Holding the ToolStick

 Manipulate mechanical devices on the daughter cards, such as potentiometers, with care to prevent the Base Adapter or daughter card from accidentally dislodging from their sockets.

2. Contents

The C8051F850 ToolStick Daughter Card kit (TOOLSTICK850-B-DC) contains the following items:

■ ToolStick C8051F850 Daughter Card (TOOLSTICK850DC)

A ToolStick daughter card requires a ToolStick Base Adapter to communicate with the PC. ToolStick Base Adapters can be purchased at www.silabs.com/toolstick.

The C8051F850 ToolStick Starter Kit (TOOLSTICK850-B-SK) contains the following items:

- ToolStick C8051F850 Daughter Card (TOOLSTICK850DC)
- ToolStick Base Adapter (TOOLSTICKBA)
- USB extension cable

3. ToolStick Overview

The purpose of the ToolStick is to provide a development and demonstration platform for Silicon Labs microcontrollers and to demonstrate the Silicon Labs Simplicity Studio software tools.

The ToolStick development platform consists of two components: the ToolStick Base Adapter and a daughter card. The ToolStick Base Adapter provides a USB debug interface and data communications path between a Windows PC and a target microcontroller.

The target microcontroller and application circuitry are located on the daughter card. Some daughter cards, such as the C8051F850 Daughter Card, are used as general-purpose development platforms for the target microcontrollers and some are used to demonstrate a specific feature or application.

The C8051F850 Daughter Card includes a pair of GPIO-controlled LEDs, a potentiometer, two switches connected to GPIO, and a small prototyping area which provides access to all of the pins of the device. This prototyping area can be used to connect additional hardware to the microcontroller and use the daughter card as a development platform.

Figure 3 shows the ToolStick C8051F850 Daughter Card and identifies the various components.



Figure 3. ToolStick C8051F850 Daughter Card



4. Getting Started

The necessary software to download, debug, and communicate with the target microcontroller must be downloaded from www.silabs.com/toolstick. The following software is necessary to build a project, download code to, and communicate with the target microcontroller:

- Simplicity Studio
- Keil C51 Tools
- ToolStick Development Tools

The software described above is provided in the Simplicity Studio and 8-bit microcontroller studio download packages. The **ToolStick Development Tools** selection includes example code specifically for the ToolStick daughter card, documentation including user's guides and data sheets, and the ToolStick Terminal application. After downloading and installing these packages, see the following sections for information regarding the software and running one of the demo applications.

5. Software Overview

Simplicity Studio greatly reduces development time and complexity with Silicon Labs EFM32 and 8051 MCU products by providing a high-powered IDE, tools for hardware configuration, and links to helpful resources, all in one place.

Once Simplicity Studio is installed, the application itself can be used to install additional software and documentation components to aid in the development and evaluation process.

🥶 Simplicity - Simplicity Studio File Help						[- • ×
SILICON LABS	Simplici	ty Studio	D			o i 2	± *
Product	✓ Tools						
C8051F850-B-GU		2 ⁰⁰ 2					
Q Use Parametric Search		202					
🖞 Detect Connected Device	Simplicity IDE	Configurator					
C8051F850-B-GU	✓ Software and Kits						
Core 8051 Flash 8 kB							
MHz 25		\$					
Digital I/O 18	Software Examples	Application Notes	Kit Documentation				
ADC YES DAC NO	✓ Resources						
Buy Sample Kit		÷.	\$	×		•NEW	
Documentation	Silicon Labs	Presentations and Brochures	Silicon Labs Community	Technical Support	University	News	

Figure 4. Simplicity Studio



The following Simplicity Studio components are required for the C8051F850 ToolStick Starter Kit:

- 8051 Products Part Support
- Simplicity Developer Platform

Download and install Simplicity Studio from www.silabs.com/8bit-software or www.silabs.com/simplicity-studio. Once installed, run Simplicity Studio by selecting Start→Silicon Labs→Simplicity Studio→Simplicity Studio from the start menu or clicking the Simplicity Studio shortcut on the desktop. Follow the instructions to install the software and click Simplicity IDE to launch the IDE.

The first time the project creation wizard runs, the **Setup Environment** wizard will guide the user through the process of configuring the build tools and SDK selection.

In the **Part Selection** step of the wizard, select from the list of installed parts only the parts to use during development. Choosing parts and families in this step affects the displayed or filtered parts in the later device selection menus. Choose the C8051F85x family by checking the **C8051F85x/86x** check box. Modify the part selection at any time by accessing the **Part Management** dialog from the **Window**—**Preferences**—**Simplicity Studio**—**Part Management** menu item.

Simplicity Studio can detect if certain toolchains are not activated. If the **Licensing Helper** is displayed after completing the **Setup Environment** wizard, follow the instructions to activate the toolchain.

5.1. Running Blinky

Each project has its own source files, target configuration, SDK configuration, and build configurations such as the **Debug** and **Release** build configurations. The IDE can be used to manage multiple projects in a collection called a workspace. Workspace settings are applied globally to all projects within the workspace, and can include settings such as key bindings, window preferences, and code style and formatting options. Project actions such as build and debug are context sensitive. For example, the user must select a project in the **Project Explorer** view in order to build that project.

To create a project based on the Blinky example:

- 1. Click the Simplicity IDE tile from the Simplicity Studio home screen.
- 2. Click the **Create new project** link from the welcome screen or go to **File**→**New**→**Silicon Labs MCU Project**.
- 3. In the Kit drop-down, select C8051F850 ToolStick Starter Kit, in the Part drop-down, select C8051F850, and in the SDK drop-down, select the desired SDK. Click Next.
- 4. Select Example and click Next.
- 5. Under C8051F850 ToolStick Starter Kit in the Blinky folder, select F85x-86x Blinky and click Finish.
- 6. Click on the project in the **Project Explorer** and click **Build**, the hammer icon in the top bar. Alternatively, go to **Project**→**Build Project**.
- 7. Click **Debug** to download the project to the hardware and start a debug session.
- 8. Press the **Resume** button to start the code running. The LED should blink.

9. Press the **Suspend** button to stop the code.

00

10. Press the **Reset the device** button to reset the target MCU.

& ▼

11. Press the **Disconnect** button to return to the development perspective.

19



5.2. Simplicity Studio Help

Simplicity Studio includes detailed help information and device documentation within the tool. The help contains descriptions for each dialog window. To view the documentation for a dialog, click the question mark icon in the window:

/ m
<u> </u>

This will open a pane specific to the dialog with additional details.

The documentation within the tool can also be viewed by going to $Help \rightarrow Help Contents$ or $Help \rightarrow Search$.

5.3. Simplicity Configurator

The Simplicity Configurator is a configuration and code generation tool. This utility helps accelerate development by automatically generating initialization source code to configure and enable the on-chip resources needed by most design projects. In just a few steps, the wizard creates complete startup code for a specific Silicon Labs MCU.

To create a new Simplicity Configurator project:

- Click the Create new project link from the welcome screen or go to File→New→Silicon Labs MCU Project.
- In the Kit drop-down, select C8051F850 ToolStick Starter Kit or None, in the Part drop-down, select C8051F850, and in the SDK drop-down, select the desired SDK. Click Next.
- 3. Select Simplicity Configurator Program and click Next.
- 4. Fill in the **Project name** and select the desired device. The **C8051F850-C-GU-QSOP** device is on the C8051F850 ToolStick. Click **Finish**.

The Simplicity Configurator project displays properties for each peripheral. To configure a peripheral, click on the **DefaultMode Peripherals** tab at the bottom and click on a peripheral. Checking the box for a peripheral will add it to code generation. Once a peripheral is selected, configure the registers using the **Properties** view. Select a new value for a property with either an input box or a drop-down menu and press **Enter** to set it.

ile Edit Navigate Search Project Run	Window Help						
					m Q	eng.	
	**** = T = * *						
C Project Explorer 🛛 📃	myProject_main.c	Project.hwconf 🛛 🔪				🗄 Outline 🔀	-
□ 🚖 ▽	D.C. MALL D. L.L.					4 🥕 Mode Transitions	
4 C and Depine a Mail 2001 2.01 Defended March	DefaultMode Periphe	erais				RESET → DefaultN	/lode
 MyProject [Keir adds 9:51 * Debug] [Cade - M Includes 	Other				* *	4 🙀 DefaultMode	
A CO						Peripherals	
siu handraite a						4 🞊 Port I/O	
p ic intravier	CRC					CROSSBAR0	
ic myProject_main.c						🗲 PB2	
SILABS_SIARTUPASI							
4 🔁 inc							
D initDevice.h	+						
B = myProject.hwconf	Power				\$	🗖 Pronerties 🛞 🗰 Pe	rinheral Ma
				<u>ר</u>		🛃 Re:	store Default Value
	PMU Supply	Monitor 📃 🔲 Vo	tage Regulators			Properties of TIMER 3	
				J		TIMER16	
					_	Property	Value
	()					Control	
	Timers				\$	Clock Source	SYSCLK / 12
						Clock Source Frequ	ancy 0.000 Hz
						Llock Source Period	Uns
	PCA 0 TIMER	.0/1 📃 🔲 TIMER :	2 📝 TIMI	SR 3 📄 🔲 TIMER Seti	ip E	Enable Low system	Castimer 1
						Run Control	One timer, 1
					_	Timer Running State	a Stonned
	Watchdog Timer					Init and Reload Value	. stopped
						Target Overflow Fre	quen 0 (0x0)
						Timer Init Overflow	After 0 nS
					-	Timer Init Value	0 (0x0)
e III +	Ande Transitions 😫 DefaultM	lode Port I/O 🛛 🛒	DefaultMode P	Aeripherals 🔀		Timer Reload Overfi	ow F 0 Hz
						Timer Reload Overfl	ow F 0 nS
🗄 Problems 🛛 📃 📮 Console						Timer Reload Value	0 (0:40)
error, 2 warnings, 0 others						a Timer Overflow for Pe	riphe
Dens sinting	Resource Dath	Institut	Trees			ADC0 Conversion St	art S O Hz
	resource Path	cocation	type			SMBus0 SCL Low Ti	meoi 0 nS
Errors (1 itern)							
Warnings (2 items)							
						٠ III	
						· (

Figure 5. Simplicity Configurator – Configuring Peripheral Properties



To configure pins, click on the **DefaultMode Port I/O** tab at the bottom of main window. Clicking on a pin brings up a property window for the pin. Clicking anywhere else in the main window opens a property window for the crossbar. Select multiple pins with **Ctrl + left click** or mouse dragging over the desired set of pins. The package diagram displays the configured peripherals on the pins, including non-crossbar signals (i.e., ADC inputs).

Code generation updates every time the configuration project saves. After configuring the device, add any non-initialization code, build, and debug the same as with any other project.

More information on Simplicity Configurator can be found in **AN0823**: *Simplicity Configurator User's Guide* and **AN0821**: *Simplicity Studio C8051F85x Walkthrough*. Application notes can be found on www.silabs.com/8bit-appnotes.

Configurator - myProject/myProject.hwconf - Si	mplicity Studio						
File Edit Navigate Search Project Run	Window Help					_	
🚹 📬 🖬 🕼 🖨 🛛 🗞 🕶 🗍	参 📲 🕂 🖷	🗙 💱 昆 🤇	🂛 😜 Fit Page	-	E		
Project Explorer 🛛 🗖 🗖	💼 myProject_main.c	Sing *myProject.hv	wconf 🛛		- 8	🗄 Outline 🔀	- 8
	DefaultMode Port I/O: CROSSBAR0				✓ Mode Transitions RESET → DefaultMode		
Includes Src InitDevice.c	N	C 1 (0	24	NC	Ear DerabilityCole Ear DerabilityCole Ear DerabilityCole Fort I/O Fort I/O	
myProject_main.c SILABS_STARTUPA51	P0.2	2 2	~	23	SPI0_SCK	▷ 🗰 CROSSB <i>挙</i> PB2	ARO
⊿ 🦳 inc ▷ InitDevice.h	P0.1	L <u>3</u>		22	SPI0_MISO		
B = myProject.hwconf	ADC_IN			21	SPI0_MOSI	Properties 🛛 🗍	Peripheral Ma
				20		<u> </u>	Restore Default Value 🗢
	VDL		24-pin QSOP	19	PU.7	Properties of P1.0	
	/RST / C2CK	. 7		18	_P1.0	Demost	Value
	C2D / P2.0	8		17]P1.1	Settings	value
	D1 -	,		4.5	 	IOMode	Digital OpenDrain I/O
	P1.7			16	_P1.Z	Latch Mask Value	High Ignored
	P1 6	5 10		15	P1 3	Match Value	High
	1 1.0					Skip	Not skipped
	P1.5	5 11		14	_P1.4		
	P2.1	L 12		13	NC		
4	Ande Transitions 😂	DefaultMode Port	I/O 🔀 🖷 Defai	ItMode Peripheral	zl		
Problems 🕱 📮 Console					~ - 8		
2 errors, 2 warnings, 0 others							
Description	Resource	Path	Location	Туре	*		
8 TIMER Setup is needed by TIMER2/3	myProject.hw	/myProject	DefaultMode	Simplicity Co			
Carget SPI clock of 1531250 Hz can n Marnings (2 items)	ot be obtai myProject.hw	/myProject	DefaultMode	Simplicity Co	E		
Image: Provide a static st							

Figure 6. Simplicity Configurator – Configuring Port I/O



5.4. Legacy 8-bit IDE

Note: Using the Simplicity Studio tools with the C8051F850 ToolStick is recommended. See "5. Software Overview," on page 3 for more information.

Download the 8-bit software from the website (www.silabs.com/8bit-software) to install the software tools for the ToolStick-F850DC devices. After installation, examples can be found in ...\Examples\C8051F85x_86x in the installation directory. At a minimum, the C8051F850 ToolStick requires:

- **Silicon Labs IDE**—Software enabling initial evaluation, development, and debugging.
- Keil C51 Tools—Keil 8051 Compiler/Assembler/Linker toolchain.
- ToolStick Development Tools—Software and examples for the ToolStick development platform. More information on this platform can be found at www.silabs.com/toolstick.

Other software available includes:

- Keil µVision Driver—Driver for the Keil µVision IDE that enables development and debugging on C8051Fxxx MCUs.
- Flash Programming Utilities and MCU Production Programmer—Programming utilities for the production line. More information on the available programming options can be found on the website: www.silabs.com/products/mcu/Pages/ProgrammingOptions.aspx.

The development kit includes the latest version of the C51 Keil 8051 toolset. This toolset is initially limited to a code size of 2 kB and programs start at code address 0x0800. After registration, the code size limit is removed entirely and programs will start at code address 0x0000.

To register the Keil toolset:

- 1. Register on the Silicon Labs website (www.silabs.com/8bit-software) to obtain the serial number.
- 2. Open the Keil μ Vision4 IDE from the installation directory with administrative privileges.

Customer Information - Name: Company: Email:	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	Computer ID CID: CCI4Q-QSAH6 Get LIC via Internet
Product PK51 Prof. Develpers I	License ID Code Gt Evaluation Version	Support Period	
New License ID Code	(LIC):		Add LIC Uninstall

Figure 7. Keil µVision4 IDE License Management Window

- 4. Click on the Get LIC via Internet... button to open the Obtaining a License IDE Code (LIC) window.
- 5. Press **OK** to open a browser window to the Keil website. If the window doesn't open, navigate to www.keil.com/license/install.htm.
- 6. Enter the Silicon Labs Product Serial Number, along with any additional required information.
- 7. Once the form is complete, click the **Submit** button. An email will be sent to the provided email address with the license activation code.



- 8. Copy the License ID Code (LIC) from the email.
- Paste the LIC into the New License ID Code (LIC) text box at the bottom of the License Management window in µVision4.
- 10. Press the Add LIC button. The window should now list the PK51 Prof. Developers Kit for Silabs as a licensed product.
- 11. Click the **Close** button.

5.5. ToolStick Terminal

The ToolStick Terminal program provides the standard terminal interface to the target microcontroller's UART. However, instead of requiring the usual RS-232 and COM port connection, ToolStick Terminal uses the USB interface of the ToolStick Base Adapter to provide the same functionality. The software is available on the ToolStick webpage (www.silabs.com/toolstick).

In addition to the standard terminal functions (send file, receive file, change baud rate), two GPIO pins on the target microcontroller can be controlled using the Terminal for either RTS/CTS handshaking or software-configurable purposes.

To use the ToolStick Terminal program:

- Download an example to the ToolStick device that uses UART communication. One example of this type is the F85x-86x STDIO example in the UART folder from the Simplicity Studio example project creation wizard.
- 2. Disconnect from the device in the Simplicity IDE. The IDE and the ToolStick Terminal cannot communicate with the daughter card simultaneously.
- 3. Open ToolStick Terminal from the Start \rightarrow Programs \rightarrow Silicon Labs menu.

🥶 Silicon Laboratories ToolStick Termin	al				
<u>T</u> erminal T <u>o</u> olStick <u>H</u> elp					
Connection TS00002A41	Current Pin State GPI00 GPI01 C2 Reset		Pin State Configuration Do Not Set GPI00 Do Not Set GPI01 Do Not Set C2 Reset	v	Set Selected Pin States
Transfer Data:		×	Data Format	Capture Data Receive File: receive_data Capture Re	to File
NOT CONNECTED					Clear Receive Data

- 4. In the top, left-hand corner of the Terminal application, available devices are shown in the drop-down Connection menu. Click **Connect** to connect to the device.
- 5. If using the **F85x-86x STDIO** example, text printed from the device will appear in the **Receive Data** window.
- 6. Type in a value in the **Transfer Data** window and press the **Send Data** button. The firmware will echo the value entered, print the value in hexidecimal, and prompt for a new value.

In addition to the standard two UART pins (TX and RX), there are two GPIO/UART handshaking pins on the ToolStick Base Adapter that are connected to two port pins on the target microcontroller. ToolStick Terminal is used to configure and read/write these pins. Under **Pin State Configuration** area in ToolStick Terminal, select the



desired state from the drop-down menu and click the Set Selected Pin States button.

The firmware on the C8051F850 target microcontroller does not need to be customized to use the UART and communicate with ToolStick Terminal. The firmware on the microcontroller should write to the UART as it would in any standard application, and all of the translation is handled by the ToolStick Base Adapter.

6. Using the C8051F850 Daughter Card as a Development Platform

The prototyping area on the ToolStick C8051F850 Daughter Card makes it easy to interface to external hardware. All of the digital I/O pins are available, so it is possible to create a complete system.

6.1. C8051F850 Pin Connections

It is important to note that if external hardware is being added, some of the existing components on the board can interfere with the signaling. The following is a list of port pins on the C8051F850 that are connected to other components:

MCU Pin	ToolStick Daughter Card Function
P0.0	
P0.1	
P0.2	
P0.3	
P0.4	UART TX
P0.5	UART RX
P0.6	
P0.7	
P1.0	red LED DS1
P1.1	red LED DS2
P1.2	potentiometer R10
P1.3	
P1.4	
P1.5	GPIO0/RTS
P1.6	GPIO1/CTS
P1.7	Switch S1
P2.0	C2D Pin Sharing
P2.1	Switch S2

Table 1. ToolStick Daughter Card Pin Functions

See the daughter card schematic in Section 7 for more information.

6.2. C2 Pin Sharing

On the C8051F850, the C2CK and C2D debug pins are shared with the /RST and P2.0 pins respectively. The daughter card includes the resistors necessary to enable pin sharing, which allows the /RST and P2.0 pins to be used normally while simultaneously debugging the device. See Application Note "AN124: Pin Sharing Techniques for the C2 Interface" at www.silabs.com/products/mcu/Pages/ApplicationNotes.aspx for more information regarding pin sharing.



7. Schematic



Figure 8. C8051F850 ToolStick Daughter Card Schematic Rev 1.0 (1 of 1)



8. Bill of Materials

Reference	Part Number	Source	Description
C1	C0603X7R100-105K	Venkel	1 uF 10 V ±10% X7R 0603
C2	C0603X7R100-104K	Venkel	0.1 uF 10 V ±10% X7R 0603
DS1 DS2	SML-LX0603IW	Lumex Inc	RED 30mA LED 0603
DS3	SML-LX0603SUGW	Lumex Inc	GREEN 25mA LED 0603
JP1	TSW-102-07-T-S	Samtec	0.1 in. 1x2 Header
JS1	SNT-100-BK-T	Samtec	Jumper Shunt
R1 R2 R13	CR0603-16W-7500F	Venkel	750 Ω 1/10W ±1% ThickFilm 0603
R10	RV100F-30-4K1B-B10K- B301	Alpha (Taiwan)	10 kΩ 0.03 W 30% Thumbwheel Potentiometer
R3 R4 R11 R12 R14 R15	CR0603-10W-1001F	Venkel	1 kΩ 1/10W ±1% ThickFilm 0603
R5 R6 R7 R8 R9	CR0603-16W-000	Venkel	0 Ω 1A ThickFilm 0603
S1 S2	EVQ-PAD04M	Panasonic Corp	Momentary Tactile Switch
U1	C8051F850-A-GU	Silicon Labs	C8051F850 MCU QSOP-24

 Table 2. C8051F850 ToolStick Daughter Card Bill of Materials (Rev 1.0)



CONTACT INFORMATION

Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701 Tel: 1+(512) 416-8500 Fax: 1+(512) 416-9669 Toll Free: 1+(877) 444-3032

Please visit the Silicon Labs Technical Support web page: https://www.silabs.com/support/pages/contacttechnicalsupport.aspx and register to submit a technical support request.

The information in this document is believed to be accurate in all respects at the time of publication but is subject to change without notice. Silicon Laboratories assumes no responsibility for errors and omissions, and disclaims responsibility for any consequences resulting from the use of information included herein. Additionally, Silicon Laboratories assumes no responsibility for the functioning of undescribed features or parameters. Silicon Laboratories reserves the right to make changes without further notice. Silicon Laboratories makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Silicon Laboratories assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. Silicon Laboratories products are not designed, intended, or authorized for use in applications intended to support or sustain life, or for any other application in which the failure of the Silicon Laboratories product could create a situation where personal injury or death may occur. Should Buyer purchase or use Silicon Laboratories products for any such unintended or unauthorized application, Buyer shall indemnify and hold Silicon Laboratories harmless against all claims and damages.

Silicon Laboratories and Silicon Labs are trademarks of Silicon Laboratories Inc.

Other products or brandnames mentioned herein are trademarks or registered trademarks of their respective holders.





Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный) Факс: 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.