

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 860

1.5A, 1MHZ SYNCHRONOUS BOOST CONVERTER

LTC3422EDD

DESCRIPTION

Demonstration circuit 860 is a 1.5A, 1MHz Synchronous Boost Converter featuring the LTC3422EDD. It produces 3.3V at 600mA from 1.8 to 3Vin.

The LTC3422 is a high efficiency, current mode, fixed frequency, step up DC/DC converter with true output disconnect and inrush current limiting. The device includes a 0.20Ω N-channel MOSFET switch and a 0.24Ω P-channel MOSFET synchronous rectifier. The output voltage, switched frequency, soft-start time, Burst Mode threshold and loop compensation are all simply programmed using tiny external passive components.

The LTC3422 quiescent current is only 25uA during Burst Mode® operation, maximizing battery life in portable applications. The oscillator can be programmed up to 3MHz and can be synchronized to an external clock applied to the SYNC pin.

For further details about the operation of the LTC3422EDD, please refer to the LTC3422 data sheet.

Design files for this circuit board are available. Call the LTC factory.

LTC, LTC, LT, and Burst Mode are registered trademarks of Linear Technology Corporation.

Table 1. Performance Summary ($T_A = 25^\circ\text{C}$)

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		1.8V
Maximum Input Voltage		3.0V
Output Voltage V _{OUT}	$V_{IN} = 1.8 \text{ to } 3.0\text{V}$, $I_{OUT} = 0 \text{ to } 600\text{mA}$	3.3V
Maximum Output Current	$V_{IN} = 1.8 \text{ to } 3.0\text{V}$	600mA
Typical Output Ripple V _{OUT}	$V_{IN} = 1.8\text{V}$, $I_{OUT} = 600\text{mA}$, 20MHz BWL	20mV _{P-P}
Nominal Switching Frequency		1 MHz

QUICK START PROCEDURE

Demonstration circuit 860 is easy to set up to evaluate the performance of the LTC3422EDD. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the VIN or VOUT and GND terminals. See Figure 2 for proper scope probe technique.

1. Set JP1 (VOUT ENABLE) to the OFF position.
2. Set JP2 (Mode selector) to the AUTO ON position.

3. With power off, set the output of the external power supply to its minimum positive value. Connect the external power supply to Vin (E1) and GND (E3) terminals.
4. Turn on the power at the input, taking care to ensure that the voltage does not exceed 3.0V.
5. Verify that the output power is off.
6. Set JP1 (VOUT ENABLE) to the ON position.
7. Check for the proper output voltages. VOUT should be 3.3V.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 860

1.5A, 1MHZ SYNCHRONOUS BOOST CONVERTER

NOTE: If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

- Once the proper output voltages are established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

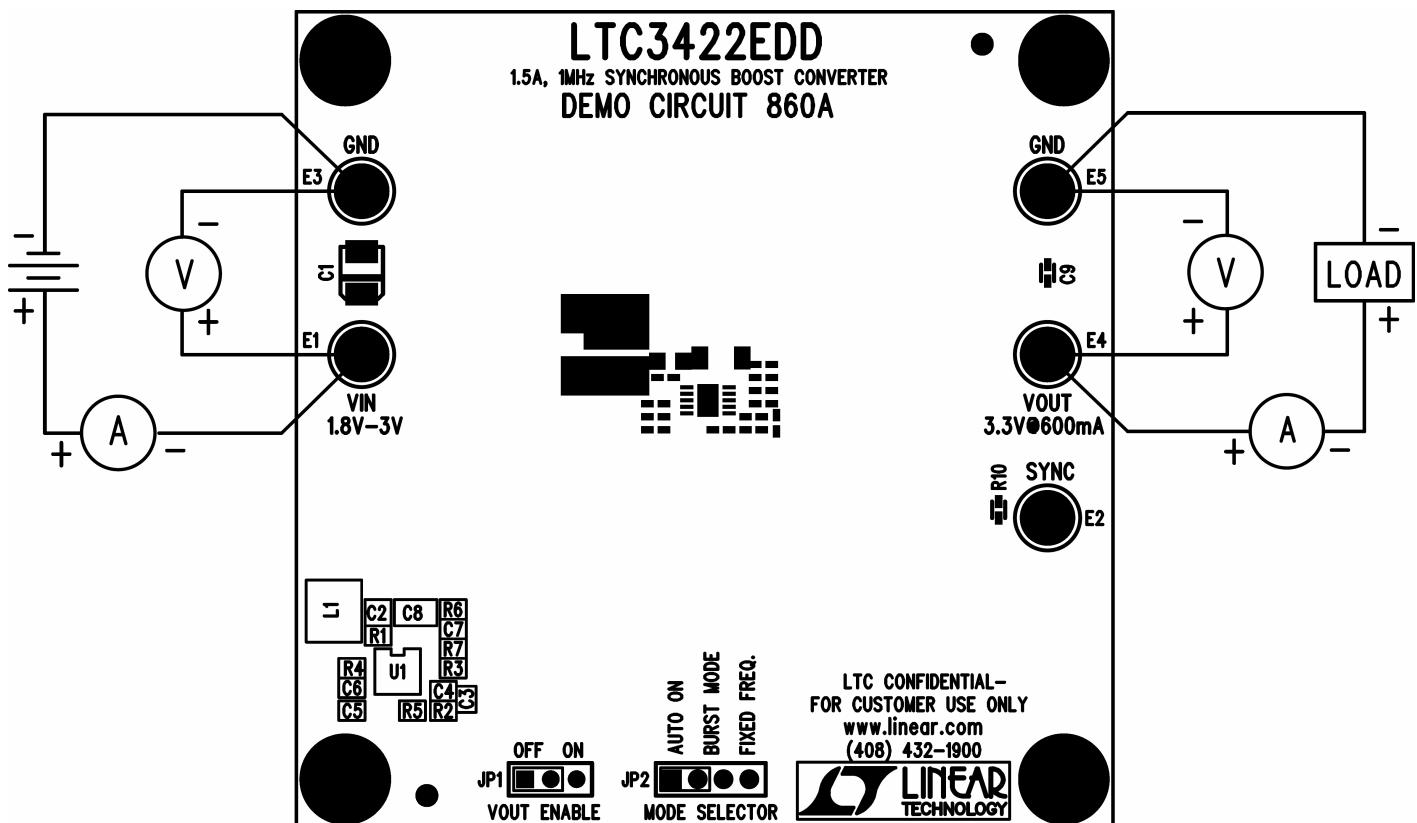


Figure 1. Proper Measurement Equipment Setup


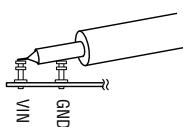


Figure 2. Measuring Input or Output Ripple

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 860

1.5A, 1MHZ SYNCHRONOUS BOOST CONVERTER

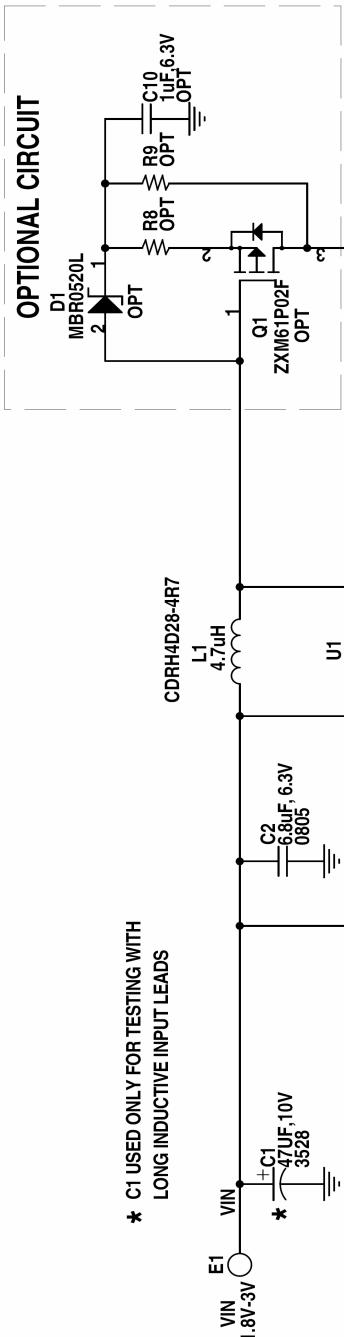

CUSTOMER NOTICE

LINEAR TECHNOLOGY HAS MADE A BEST EFFORT TO DESIGN A CIRCUIT THAT MEETS CUSTOMER-SUPPLIED SPECIFICATIONS; HOWEVER, IT REMAINS THE CUSTOMER'S RESPONSIBILITY TO VERIFY PROPER AND RELIABLE OPERATION IN THE ACTUAL APPLICATION. COMPONENT SUBSTITUTION AND PRINTED CIRUIT BOARD LAYOUT MAY SIGNIFICANTLY AFFECT CIRCUIT PERFORMANCE OR RELIABILITY. CONTACT LINEAR TECHNOLOGY APPLICATIONS ENGINEERING FOR ASSISTANCE.

THIS CIRCUIT IS PROPRIETARY TO LINEAR TECHNOLOGY AND SUPPLIED FOR USE WITH LINEAR TECHNOLOGY PARTS.

NOTES: UNLESS OTHERWISE SPECIFIED

- ALL RESISTORS ARE IN OHMS, 0402.
- ALL CAPACITORS ARE IN MICROFARADS, 0402.
- INSTALL SHUNT ON JP1-JP2 PIN 1 AND 2.

1630 McCarthy Blvd.
Milpitas, CA 95035
Phone: (408)432-1900
Fax: (408)434-0507
LTC Confidential For Customer Use Only



TECHNOLOGY

1.5A, 1MHZ SYNCHRONOUS BOOST CONVERTER

SCHEMATIC

A

DC860A-1 * LTC3422EDD

REV A

SHEET 1 OF 1

SIZE	DWG NO.	
A		
DATE: Wednesday, July 27, 2005		



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.