

FIGURE 1

© 1967 by AMP Incorporated. All international rights reserved. AMP products covered by U. S. and foreign patents and/or patents pending.

1. These instructions cover the A-MP 160 Position Series "M" Connector (see Figure 1) and its Accessories. Assembly instructions for Accessories are packaged with the items. Read these instructions and those packaged with the Accessories before assembling Connectors.

## 2. CONTACT SELECTION

- (a) Size 16 Type II, III and III Plus Pin and Socket Contacts may be used in either Block of this Connector. Select and crimp these Contacts for use in an M-DM (Deep Male Block) combination according to AMP Instruction Sheet No. 1379.
- (b) Subminiature COAXICON\* Pin and Socket Contacts may be used in either Block of this Connector. Select and crimp these Contacts according to AMP Instruction Sheet No. 7318.

## 3. ENGAGEMENT ACCESSORIES

The following Accessories may be used to help engage a pair of Connector Blocks.


- (a) GUIDE PINS AND SOCKETS are used to align Connector Blocks during engagement, to polarize Connector Blocks and to attach other Accessories to Connectors. They may be used in both Blocks. See Figure 2.

- (b) KEYING PLUGS, when inserted into Contact Cavities in a Connector Block, key this block to mate only with another Block in which the opposite Cavities have been left vacant. See Figure 3.

## 4. PROTECTIVE ACCESSORIES

Each of the following Accessories protects the Connector Blocks, the Contacts or the Wire.

- (a) STRAIN RELIEF CLAMPS relieve strain on Contacts caused by free-hanging Wires. These clamps may be used for both straight and right angle Cable routing. See Figure 4. The Clamps may be used only on Female Blocks (Part No. 202800) and should be attached to Blocks using either guide pins and sockets or two 6-32 x 3/8" machine screws, nuts and lock-washers.
- (b) SHIELDS protect the Wires where they protrude from the rear of the Connector Block and relieve strain on the Contacts caused by free-hanging Wires. A 45° two-piece Shield for use with Male Blocks (Part No. 202799) is available. See Figure 5. These Shields should be attached to Blocks using either guide pins and sockets or four 6-32 x 3/8" machine screws.

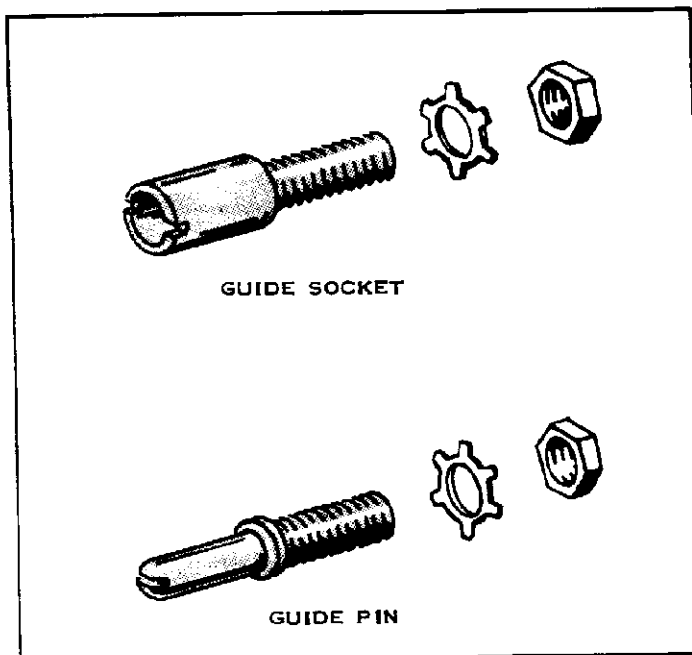

GUIDE PINS	GUIDE SOCKETS	INSTRUCTION SHEET NO.
201046-□	201047-□	IS 7056
201397-□†	201401-□†	

† THESE ASSEMBLIES CONTAIN A LOCK NUT IN PLACE OF A NUT AND LOCKWASHER.

FIGURE 2

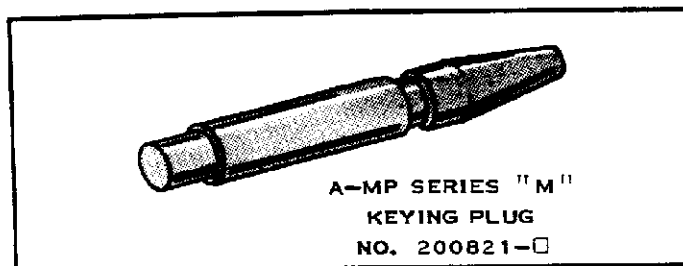


FIGURE 3

(c) BUSHINGS may be used with the 45° Shield. The Bushings protect the Wires where they protrude from the rear of the Shield and they allow small diameter Wires to fit snugly into the Clamp portion of the Shield. See Figure 6.


**5. CONNECTOR ASSEMBLY**

The following steps show the proper sequence for attaching the Accessories to the Connector Blocks.

(a) If Bushings are used, slide them over Wires (preferably before crimping the Contacts onto the Wires), with Flange toward Connector Block.

(b) Push Crimped Contacts all the way into Connector Block. Pull back lightly on Wires to make sure Contacts are properly inserted.

NOTE: When inserting Contacts which are crimped to small flexible Wire, use A-MP Insertion Tool No. 91002-

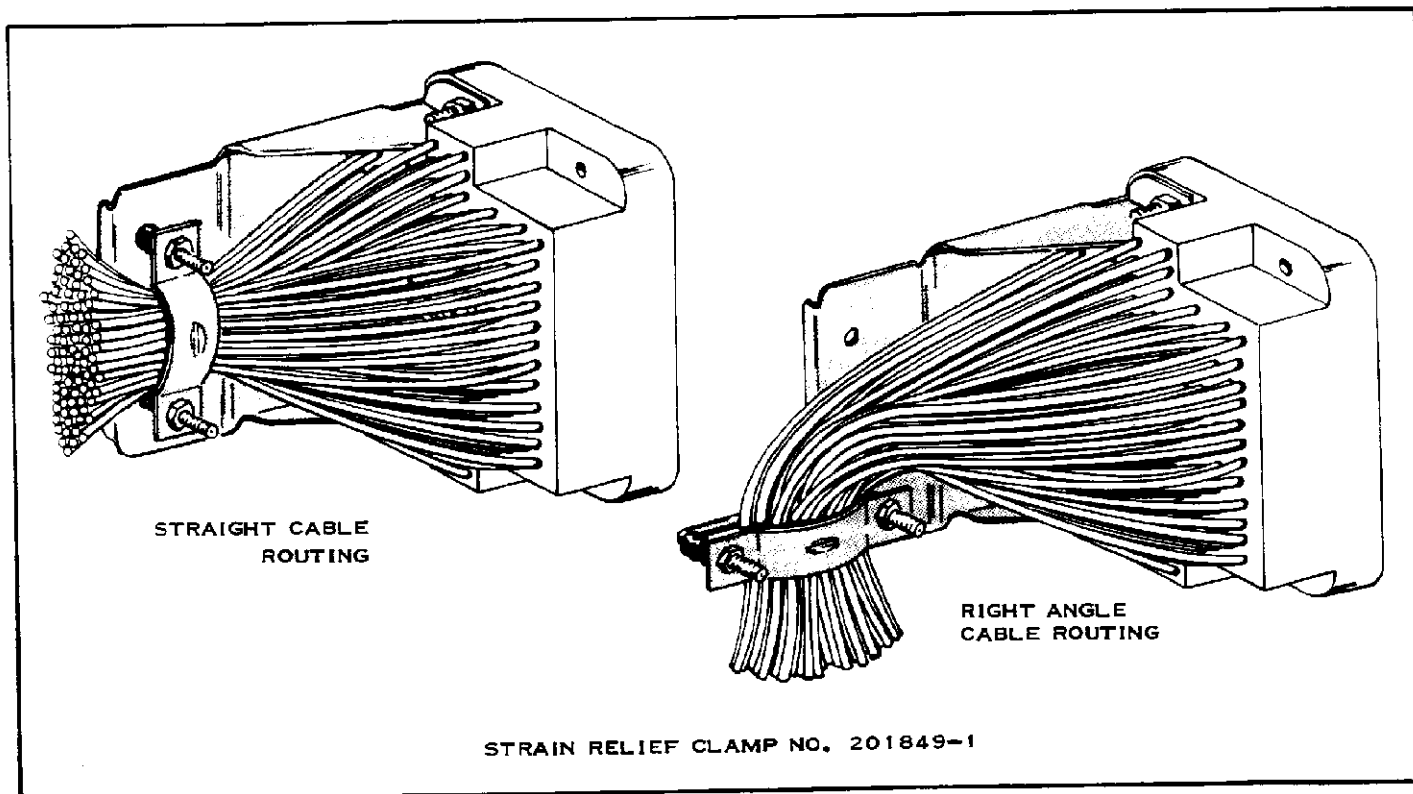

STRAIN RELIEF CLAMP NO. 201849-1

FIGURE 4

- (c) Attach Strain Relief Clamp to Female Block and Shield to Male Block using machine screws or guide pins and sockets.
- (d) Mate the Connector Blocks by tightening the Jackscrew.

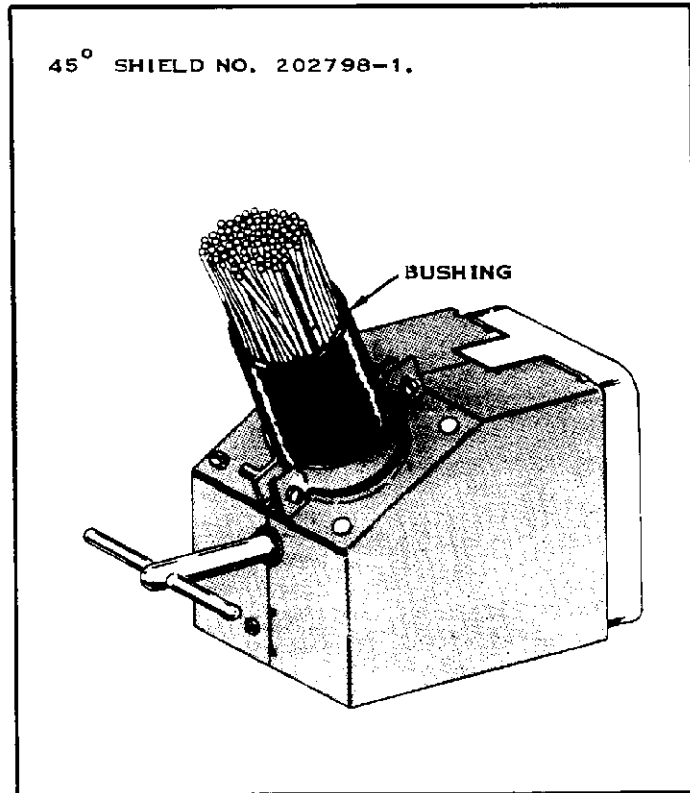



FIGURE 5

6. PANEL MOUNTING

- (a) Make a cutout in the Panel using the dimensions in Figure 7.
- (b) Mount Block to Panel using #4-40 machine screws or guide pins and sockets. A panel mounted Connector Block is shown in Figure 8.

7. CONTACT EXTRACTION

To remove Contacts from Connector Block, use A-MP Extraction Tool No. 305183.

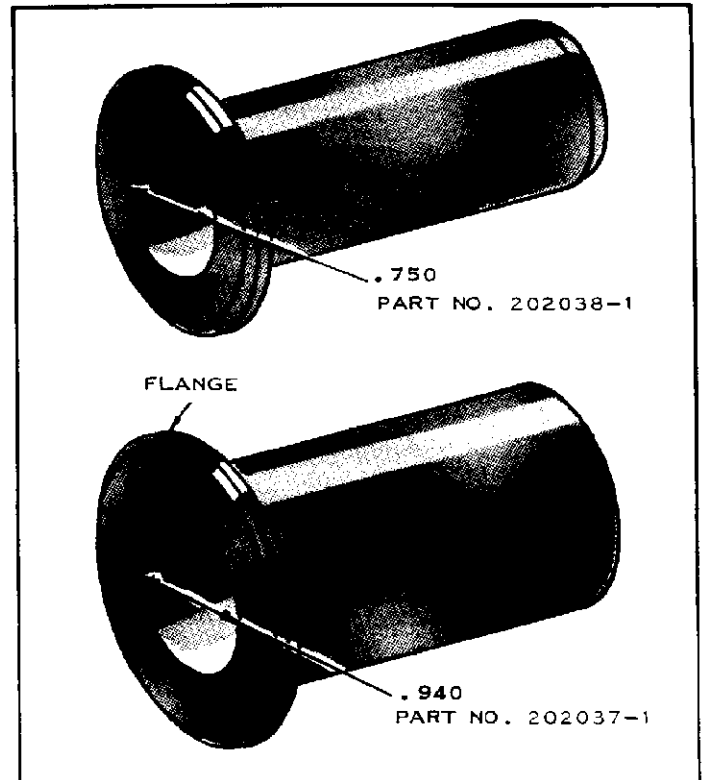

DIAMETER OF WIRE BUNDLE		BUSHING USED
SHEATHED CABLE	LOOSE WIRES	
MORE THAN .940	MORE THAN .940	NONE
.940-.750	.940-.750	202037-1
.750-.425	.750-.490	BOTH

FIGURE 6

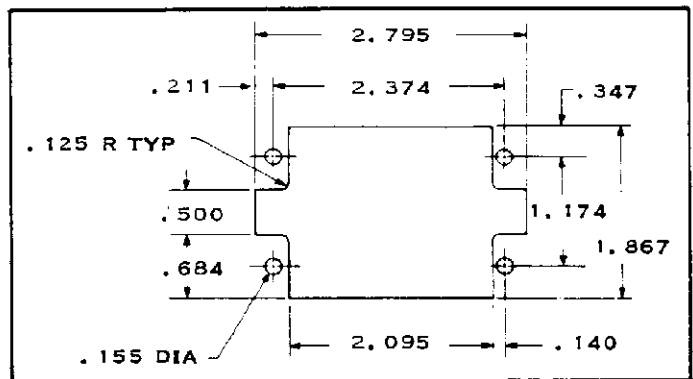


FIGURE 7

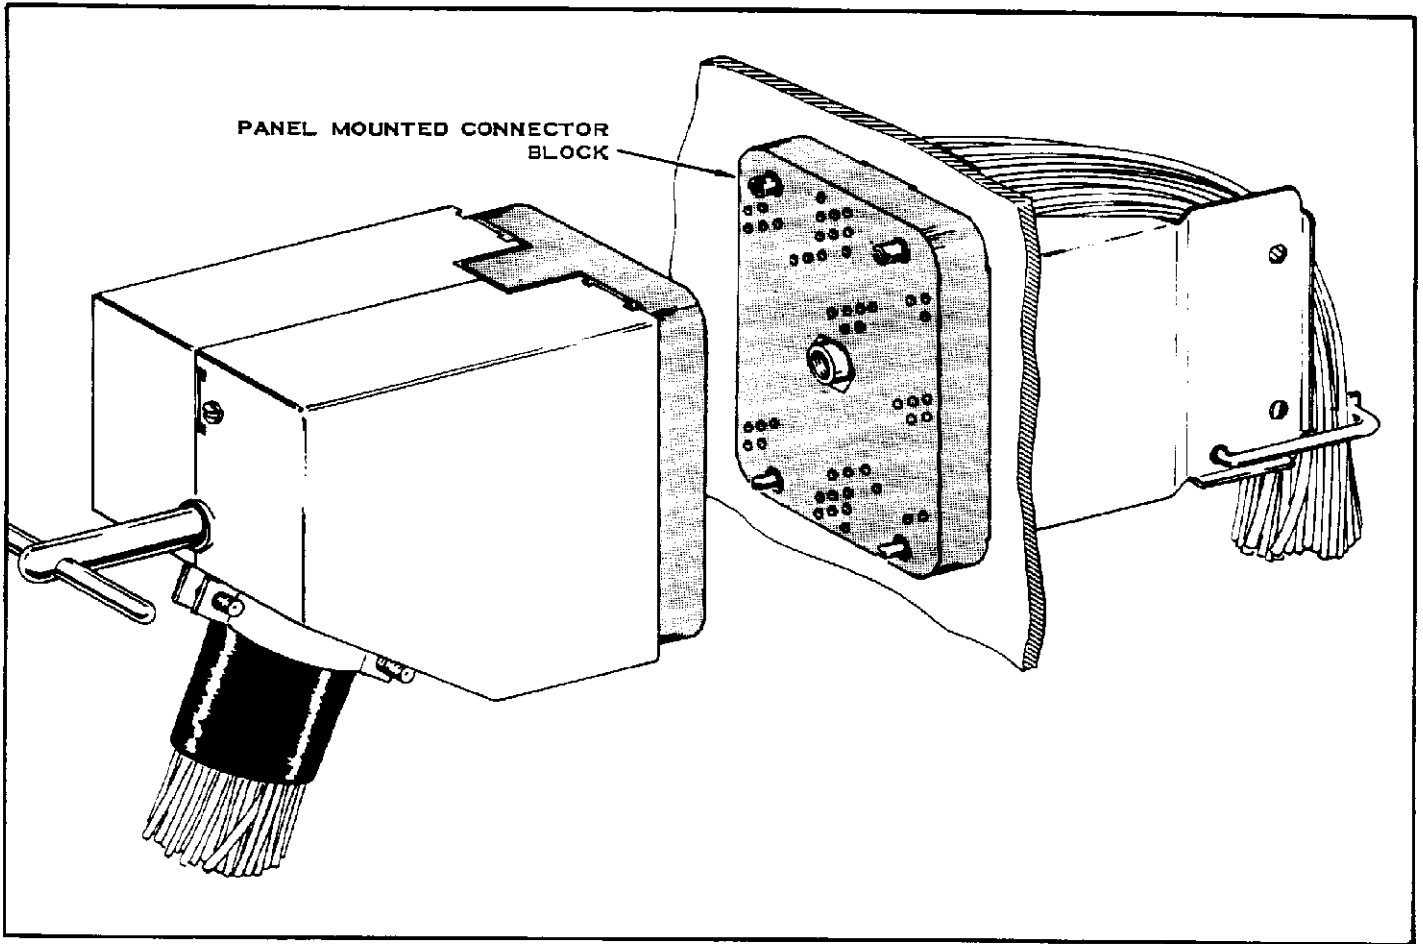


FIGURE 8



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.