

## MP8125

550mA, 8-14V Input, LNB Power Supply and Control Voltage Regulator

The Future of Analog IC Technology

## DESCRIPTION

The MP8125 is a voltage regulator designed to provide efficient, low noise power to the Satellite receiver's RF LNB (Low Noise Block) converter via coaxial cable through a DiSEqC 1.x compatible link that receives instructions from a dedicated controller.

The MP8125 integrates a current mode boost regulator followed by a tracking linear regulator. The boost regulator provides a clean and quiet power source that will not contaminate the low noise RF signal down converted to the receiver. The tracking linear regulator protects the output against overload or short.

The MP8125 provides a number of features described the European EUTELSAT in (DiSEqC) including: voltage specification selection of horizontal or vertical polarization directions of LNB and a selectable V<sub>OUT</sub> compensation for voltage drop on the long coaxial cable. In accordance with DiSEqC standard, a tone signal of 22kHz is generated by an internal oscillator and can be activated or deactivated onto output by EXTM pin.

The MP8125 is available in thermally enhanced TSSOP16 and 24-pin QFN (4 x 4mm) packages.


## FEATURES

- DiSEqC 1.x Compatibility
- Up to 550mA Output Current
- 8V to 14V Input Voltage
- Boost Converter with Internal Switch
- Low Noise LDO Output
- Built-in 22kHz Tone Signal Generator
- Programmable Current Limit
- 1V Line Drop Compensation
- Adjustable Soft-start Time
- POK Indicator
- Short Circuit Protection
- Over Temperature Protection
- TSSOP16 Exposed Pad and 24-pin QFN (4 x 4mm) Packages

## APPLICATIONS

 LNB Power Supply and Control for Satellite Set Top Boxes

All MPS parts are lead-free and adhere to the RoHS directive.For MPS green status, please visit MPS website under Quality Assurance. "MPS" and "The Future of Analog IC Technology" are Registered Trademarks of Monolithic Power Systems, Inc.

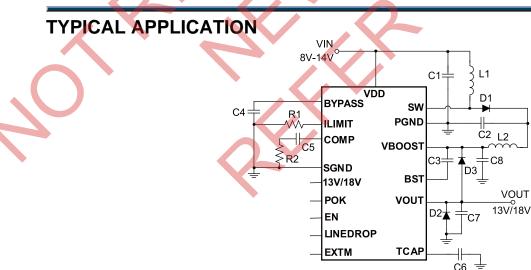




## **ORDERING INFORMATION**

Part Number	art Number Package Top Marking		Free Air Temperature (T <sub>A</sub> )	
MP8125EF*	TSSOP-16	MP8125	-20°C to +85°C	
MP8125DR	QFN24(4x4mm)	MP8125	-40°C to +85°C	

\* For Tape & Reel, add suffix -Z (e.g. MP8125EF-Z) For RoHS compliant packaging, add suffix -LF (e.g. MP8125EF-LF-Z)

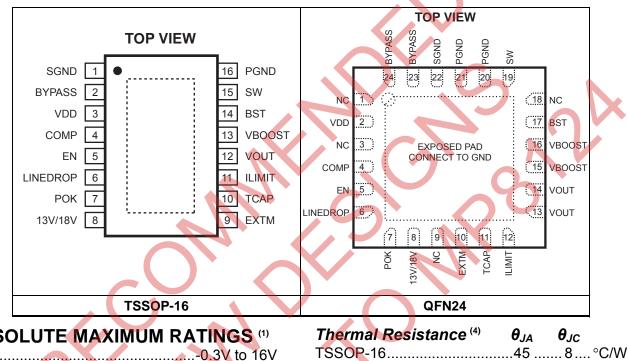

## PACKAGE REFERENCE

ABSOLUTE	MAXIMUM	RATINGS <sup>(1)</sup>

VDD	0.3V to 16V
VOUT, SW, VBOOST	0.3V to 25V
BST	V <sub>SW</sub> +7V
All Other Pins	0.3V to 6.5 V
Continuous Power Dissipation	(T <sub>A</sub> =+25°C) <sup>(2)</sup>
TSSOP-16	2.8W
QFN24(4x4mm)	2.9W
Junction Temperature	150°C
Lead Temperature	
Storage Temperature	65°C to 150°C
Barris and all Original	(3)

Recommended Operating Conditions <sup>(3)</sup> Maximum Junction Temp. (T<sub>J</sub>).....+125°C

Thermal Resistance (4)	$\boldsymbol{\theta}_{JA}$	$\boldsymbol{\theta}_{JC}$	
TSSOP-16	45	8	.°C/W
QFN24(4x4mm)			

#### Notes:

- 1) Exceeding these ratings may damage the device.
- The maximum allowable power dissipation is a function of the 2) maximum junction temperature T<sub>J</sub>(MAX), the junction-toambient thermal resistance  $\theta_{JA}$ , and the ambient temperature T<sub>A</sub>. The maximum allowable continuous power dissipation at any ambient temperature is calculated by P<sub>D</sub>(MAX)=(T<sub>J</sub>(MAX)- $T_A$ )/  $\theta_{JA}$ . Exceeding the maximum allowable power dissipation will cause excessive die temperature, and the regulator will go into thermal shutdown. Internal thermal shutdown circuitry protects the device from permanent damage.
- The device is not guaranteed to function outside of its 3) operating conditions.
- Measured on JESD51-7 4-layer PCB 4)



## **ELECTRICAL CHARACTERISTICS**

Parameter	Symbol	Condition	Min	Тур	Max	Units
General		· · · · · ·				-
Input Voltage Range	V <sub>IN</sub>		8	12	14	V
Input Supply Current (5)	I <sub>IN</sub>	EN=High, no load		5		mA
Under Voltage Lockout	UVLO	V <sub>IN</sub> rising	7		8	V
UVLO Hysteresis			$\langle \rangle$	350		mV
EN Input Logic Threshold	$V_{\text{EN}_{\text{High}}}$	V <sub>EN</sub> rising			2	V
En input Eogle Threshold	$V_{\text{EN}\_\text{Low}}$	V <sub>EN</sub> falling	0.8			V
13V/18V Input Logic	V <sub>13/18_High</sub>	V <sub>13V/18V</sub> rising		(	2	V
Threshold	V <sub>13/18_Low</sub>	V <sub>13V/18V</sub> falling	0.8			V
LINEDROP Input Logic	$V_{LD\_High}$	V <sub>LINEDROP</sub> rising			2	V
Threshold	$V_{LD\_Low}$	V <sub>LINEDROP</sub> falling	0.8			V
TCAP pin current	I <sub>CHA</sub>	TCAP capacitor charging		7		μA
Output Backward Leakage Current <sup>(6)</sup>	I <sub>BKLK</sub>	EN=Low, V <sub>OUT</sub> is clamped to 24V, VBOOST is float	5	0.7	7	mA
Voltage on BYPASS pin	V <sub>BYP</sub>			5		V
SWITCHING REGULATOR						
Boost Switch On Resistance	R <sub>DSON</sub>	I <sub>OUT</sub> =500mA		500		mΩ
Boost Frequency				352		kHz
LINEAR REGULATOR						
Dropout Voltage (5)	1	V <sub>BOOST</sub> -V <sub>OUT</sub> , I <sub>OUT</sub> =500mA		0.9		V
OUTPUT						
		LINEDROP=Low, 13V/18V=Low, I <sub>OUT</sub> =10-100mA	12.8	13.2	13.6	V
Output Voltage	Vout	LINEDROP=Low, 13V/18V=High, l <sub>out</sub> =10-100mA	17.6	18.14	18.7	V
Output Voltage	Vout	LINEDROP=High, 13V/18V=Low, I <sub>OUT</sub> =10-100mA	13.72	14.2	14.58	V
		LINEDROP=High, 13V/18V=High, I <sub>OUT</sub> =10-100mA	18.57	19.14	19.73	V
Output Line Regulation		8V≤V <sub>IN</sub> ≤14V; I <sub>OUT</sub> =100mA		4	40	mV
		10mA≤I <sub>OUT</sub> ≤500mA, 13V/18V=Low		20		mV
Output Load Regulation (5)				30		mV

## ELECTRICAL CHARACTERISTICS (continued)

Parameter	Symbol	Condition	Min	Тур	Max	Units
TONE Signal						
Tone Signal Frequency	<b>f</b> <sub>TONE</sub>	T <sub>A</sub> = 25°C	20	22	24	kHz
EXTM Input Logic Threshold	$V_{\text{EXTM}\_\text{High}}$	V <sub>EXTM</sub> rising			2	V
EXTIMITIPUL LOGIC THESHOLU	$V_{\text{EXTM}\_\text{Low}}$		0.8			V
Delay Time of Tone Signal Activated or Deactivated <sup>(5)</sup>	t <sub>DELAY</sub>	Delay time after EXTM goes high or low	$\bigcirc$	$\frac{1.5}{f_{\text{TONE}}}$		
Peak-to-Peak Amplitude	V <sub>PP</sub>	I <sub>LOAD</sub> = 0 to 100mA	0.55	0.65	0.9	V
Rise and Fall Time		R <sub>L</sub> =1kΩ, C <sub>L</sub> =0.1μF		8		μs
<b>Over-Current Protection</b>						
Output Current Limit	I <sub>LIMIT</sub>	R <sub>LIMIT</sub> =10kΩ	600	850	1100	mA
Dynamic Overload Protection Off Time	T <sub>OFF</sub>	Time of attempt to restart		2	5	s
Dynamic Overload Protection On Time	T <sub>ON</sub>	Time to onset of shutdown	う	50		ms
РОК						
POK Upper Trip Threshold		V <sub>FB</sub> with Respect to Nominal		12		%
POK Lower Trip Threshold		V <sub>FB</sub> with Respect to Nominal		-12		%
POK Output Lower Voltage		I <sub>SINK</sub> = 5mA	$\mathcal{O}$		0.3	V
Thermal Protection						
Over Temperature Shutdown <sup>(5)</sup>				150		°C
OTP Hysteresis				20		°C

#### ν, م**ا 4** م .....

5) Guaranteed by design.6) Shall withstand the back voltage for an indefinite period of time. On removal of the fault condition the device returns to normal operation




## **PIN FUNCTIONS**

5       5       EN       disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100kΩ pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.         6       6       LINEDROP       This pin provides selectable V <sub>OUT</sub> compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.         7       7       POK       Power OK. A high output indicates that LDO output is within ±12% of nominal value. A low output means that LDO output is outside this window.         8       8       13V/18V       Select 13V or 18V for output voltage. High level for 18V while low leve for 13V. This pin cannot be left floating.         9       10       EXTM       External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.         10       11       TCAP       Internal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.         11       12       11.MIT       The ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.         12       13, 14       VOUT       Output voltage.         14       17       BST       Supply for the internal LDO	Pin # TSSOP-16	Pin # QFN24	Name	Description
3       2       VDD       Input supply pin.         4       4       COMP       Compensation pin for Boost regulator (47nF & 19.6kΩ is suggested).         5       5       EN       Regulator On/Off Control Input. When this pin is low, the output is disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100kQ pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.         6       6       LINEDROP       This pin provides selectable Vour compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 10 increased. LINEDROP cannot be left floating.         7       7       POK       Power OK. A high output indicates that LDO output is outside this window.         8       8       13V/18V       Select 13V or 18V for output voltage. High level for 18V while low leve for 13V This pin cannot be left floating.         9       10       EXTM       External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.         10       11       TCAP       Internal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should keeps far away from any noise like SW copper.         11       12       13, 14       VOUT       Output voltage.         13       15, 16       VBOOST       Input of the internal LDO.       Extresof from	1	22	SGND	Analog ground.
4       4       COMP       Compensation pin for Boost regulator (47nF & 19.6kΩ is suggested).         5       5       EN       Regulator On/Off Control Input. When this pin is low, the output is disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100kQ pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.         6       6       LINEDROP       This pin provides selectable Vour compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.         7       7       POK       Power OK. A high output indicates that LDO output is within ±12% of nominal value. A low output means that LDO output is outside this window.         8       8       13V/18V       Select 13V or 18V for output voltage. High level for 18V while low leve for 13V This pin cannot be left floating.         9       10       EXTM       External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.         11       12       ILIMIT       The ILIMIT is used to set the value of the output voltage. The output voltage. The output voltage. The output voltage.         13       15, 16       VBOOST       Input voltage.         14       17       BST       Supply for the internal LDO         14       17       BST       Supply for the internal LDO driver.         16	2	23, 24	BYPASS	Connect a bypass capacitor for the internal regulator.
5       5       EN       Regulator On/Off Control Input. When this pin is low, the output is disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100kQ pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.         6       6       LINEDROP       This pin provides selectable Vour compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.         7       7       POK       Power OK. A high output indicates that LDO output is within ±12% of nominal value. A low output means that LDO output is outside this window.         8       8       13V/18V       Select 13V or 18V for output voltage. High level for 18V while low leve for 13V This pin cannot be left floating.         9       10       EXTM       External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.         10       11       TCAP       Internal voltage reference for LDO output. A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.         11       12       13. 14       VOUT       Output voltage.         13       15. 16       VBOOST       Input of the internal LDO       Inmit of LDO. A resistor from ILIMIT to GND programs the limit.         14       17       BST <t< td=""><td>3</td><td>2</td><td>VDD</td><td>Input supply pin.</td></t<>	3	2	VDD	Input supply pin.
5       5       EN       disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100k0 pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.         6       6       LINEDROP       This pin provides selectable Vour compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.         7       7       POK       Power OK. A high output indicates that LDO output is within ±12% of nominal value. A low output means that LDO output is outside this window.         8       8       13V/18V       Select 13V or 18V for output voltage. High level for 18V while low level for 13V. This pin cannot be left floating.         9       10       EXTM       External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.         10       11       TCAP       Internal voltage reference for LDO output, A soft-start capacitor can be capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.         11       12       13       15, 16       VBOOST         14       17       BST       Supply for the internal LDO.         14       17       BST       Supply for the internal LDO.         16       20, 21       PGND       Power ground.	4	4	COMP	Compensation pin for Boost regulator (47nF & 19.6k $\Omega$ is suggested).
66LINEDROPlong coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.77POKPower OK. A high output indicates that LDO output is within ±12% of nominal value. A low output means that LDO output is outside this window.8813V/18VSelect 13V or 18V for output voltage. High level for 18V while low level for 13V. This pin cannot be left floating.910EXTMExternal modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.1011TCAPInternal voltage reference for LDO output, A soft-start capacitor can be 	5	5	EN	Regulator On/Off Control Input. When this pin is low, the output is disabled. A high level at EN turns on the converter. Connect EN to the input source (through a 100k $\Omega$ pull-up resistor if VIN > 6V) for automatic startup. EN cannot be left floating.
77POKnominal value. A low output means that LDO output is outside this window.8813V/18VSelect 13V or 18V for output voltage. High level for 18V while low level for 13V. This pin cannot be left floating.910EXTMExternal modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.1011TCAPInternal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.1112ILIMITThe ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.1213, 14VOUTOutput voltage.1315, 16VBOOSTInput of the internal LDO SW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	6	6	LINEDROP	This pin provides selectable $V_{OUT}$ compensation for voltage drop on the long coaxial cable. When the LINEDROP is high, the LDO output is 1V increased. LINEDROP cannot be left floating.
6613V/16Vfor 13V. This pin cannot be left floating.910EXTMExternal modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.1011TCAPInternal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.1112ILIMITThe ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.1213, 14VOUTOutput voltage.1417BSTSupply for the internal LDO SW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	7	7	РОК	Power OK. A high output indicates that LDO output is within $\pm 12\%$ of nominal value. A low output means that LDO output is outside this window.
910EXTMturns on 22kHz signal and a low level disables it. EXTM cannot be left floating.1011TCAPInternal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the routed should keeps far away from any noise like SW copper.1112ILIMITThe ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.1213, 14VOUTOutput voltage.1315, 16VBOOSTInput of the internal LDO.1417BSTSupply for the internal LDO driver.1519SWSW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	8	8	13V/18V	Select 13V or 18V for output voltage. High level for 18V while low level for 13V. This pin cannot be left floating.
1011TCAPconnected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.1112ILIMITThe ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.1213, 14VOUTOutput voltage.1315, 16VBOOSTInput of the internal LDO.1417BSTSupply for the internal LDO driver.1519SWSW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	9	10	EXTM	External modulation input for 22kHz signaling. A high level at EXTM turns on 22kHz signal and a low level disables it. EXTM cannot be left floating.
1112ILIMITresistor from ILIMIT to GND programs the limit.1213, 14VOUTOutput voltage.1315, 16VBOOSTInput of the internal LDO.1417BSTSupply for the internal LDO driver.1519SWSW is the drain of the internal MOSFET switch of Boost stage.1620, 21PGNDPower ground.	10	11	ТСАР	Internal voltage reference for LDO output, A soft-start capacitor can be connected to this pin to set rise time of the output voltage. The capacitor should be very close to this pin and SGND, and the route should keeps far away from any noise like SW copper.
1315, 16VBOOSTInput of the internal LDO.1417BSTSupply for the internal LDO driver.1519SWSW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	11	12	ILIMIT	The ILIMIT is used to set the value of the output current limit of LDO. A resistor from ILIMIT to GND programs the limit.
1417BSTSupply for the internal LDO driver.1519SWSW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	12	13, 14	VOUT	Output voltage.
1519SWSW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.1620, 21PGNDPower ground.	13	15, 16	VBOOST	Input of the internal LDO.
15     19     SW     Connect the power inductor and output rectifier to SW.       16     20, 21     PGND     Power ground.	14	17	BST	Supply for the internal LDO driver.
	15	19	SW	SW is the drain of the internal MOSFET switch of Boost stage. Connect the power inductor and output rectifier to SW.
1, 3, 9, 18 NC Not Connect.	16	20, 21	PGND	Power ground.
		1, 3, 9, 18	NC	Not Connect.




#### **TYPICAL PERFORMANCE CHARACTERISTICS** Performance waveforms are tested on the evaluation board of the DESIGN EXAMPLE section. $V_{IN} = 12V$ , $V_{LINEDROP} = 5V$ , $V_{EXTM} = 0V$ , $T_A = +25^{\circ}C$ , unless otherwise noted. Efficiency Curve @ Efficiency Curve @ Current Limit vs. V<sub>OUT</sub>=19V V<sub>OUT</sub>=14V RUMIT 100 100 0.9 V<sub>IN</sub>= V<sub>IN</sub>=14∖ 0.8 0.7 90 90 RENT LIMIT (A) EFFICIENCY (%) EFFICIENCY (%) 0.6 VIN V<sub>IN</sub>=12\ 0.5 V<sub>IN</sub>=8V .V<sub>IN</sub>=8V 80 80 0.4 0.3 70 70 0.2 0.1 60 60 0 0.01 0.1 0.01 1 0.1 25 20 15 30 10 I<sub>OUT</sub> (A) I<sub>OUT</sub> (A) R<sub>LIMIT</sub> (kΩ)



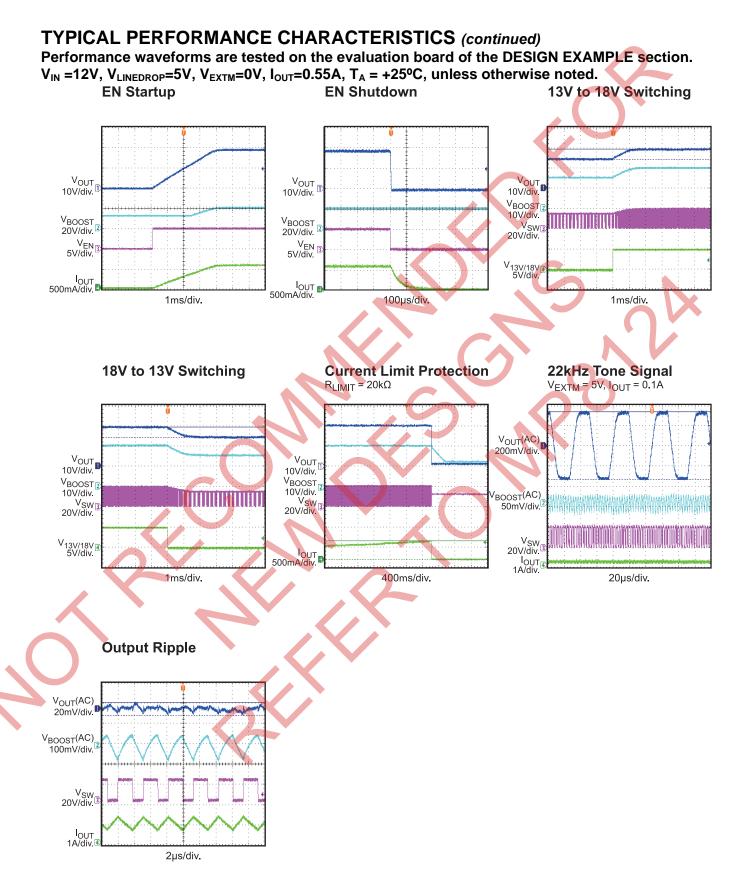



**BLOCK DIAGRAM** 

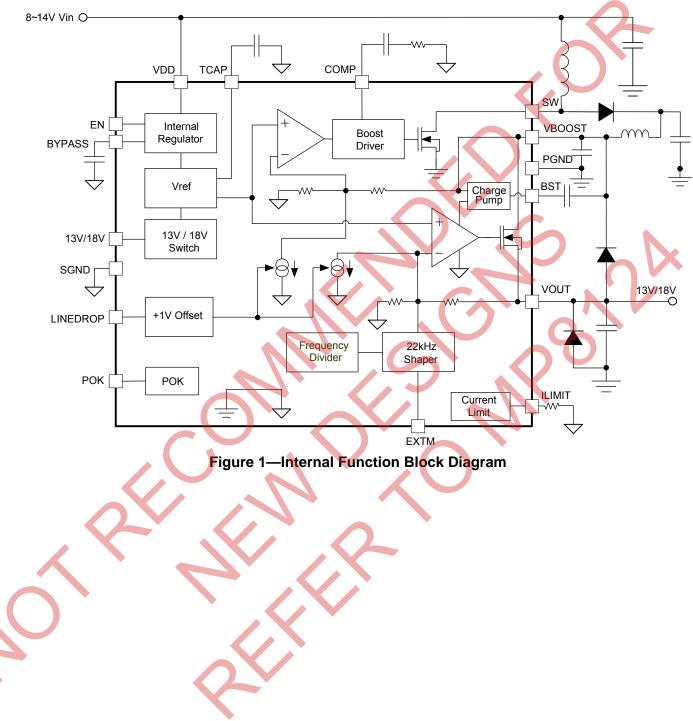



## **OPERATION**

The MP8125 is a single output voltage regulator for providing both supply voltage and control signal from satellite set-top box modules to LNB (low noise block) of the antenna port.

The MP8125 has an integrated boost converter that, from a single supply source between 8V and 14V, generates the voltage to enable the linear post-regulator to work at a minimum dissipated power.

#### **Boost Converter/Linear Regulator**

The boost converter is a fixed frequency, nonsynchronous voltage regulator with peak current mode control. The operating frequency is 352kHz typically, which is 16 times the 22kHz internal tone frequency.

To reduce power dissipation, the boost converter operates in a pulse-skipping mode at light load.

The output voltage of boost converter tracks the requested output voltage to allow the linear regulator to work with minimum drop-out voltage.

#### 13V/18V Switching

With the logic input pin 13V/18V, the output voltage can be set to 13V or 18V to select different polarization directions of LNB. A logic high level on this pin will set the output to 18V while a low level set it to 13V.

#### LINEDROP Control

In order to compensate the excess of voltage drop along the coaxial cable, a voltage compensation function is integrated. If set a high level on LINEDROP pin, the output voltage can be increased by 1 V. A low level will disable the function.

#### Soft Start

Soft start is implemented via external capacitor  $(C_{SS})$ . With the required slew rate (k) of the output voltage, the value of  $C_{SS}$  can be obtained using the following formula:

$$C_{SS} = (15 \times I_{CHA})/k$$

Where  $I_{CHA}$  is 7  $\mu$ A typ.

#### Current Limit



The output current is limited dynamically and the threshold can be programmed by an external resistor connected to the ILIMIT pin according to the following formula:

## $I_{\text{LIMIT}} = 8500 / R_{\text{LIMIT}}$

When an overload is detected, the output current will be regulated at the current limit level for 50 ms. After this time period, if the overload is still detected, the output will be shut down for 2s before the output is resumed.

For the boost converter, it integrates cycle-bycycle over current limit function, which can guarantee the part works with full load.

#### Power Good (POK)

POK is connected to an internally open-drain device. When output voltage is out of +/- 12% of normal value, POK will be pulled down. Otherwise, it will be pulled high.

#### Tone Generation

In accordance with DiSEqC standards, a tone signal of 22kHz is generated by an internal oscillator and activated/deactivated by EXTM pin. A high level on EXTM activates the internal tone signal and modulates it onto the output to provide the LNB control information. A low level will deactivate the 22kHz signal.

The tone signal will be activated or deactivated onto the output within 1.5 periods after EXTM goes high or low. Please refer to the Figure 2 (T is the period of tone signal.).




Figure 2—Tone Signal on Output

#### **Thermal Protection**

When the junction temperature exceeds +150°C, the part will be shut down. Once the junction temperature is cooled enough, typically 130°C, the part will re-start automatically.

www.MonolithicPower.com MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited. © 2013 MPS. All Rights Reserved.



### APPLICATION INFORMATION COMPONENT SELECTION

#### Selecting the Input Capacitor

The input capacitor (C1) is required to maintain the DC input voltage. Ceramic capacitors with low ESR/ESL types are recommended. The input voltage ripple can be estimated by the below formula. Typically, a  $10\mu$ F X7R ceramic capacitor is recommended.

$$\Delta V_{IN} = \frac{V_{IN}}{8f_s^2 \cdot L \cdot C1} \cdot \left(1 - \frac{V_{IN}}{V_{OUT}}\right)$$

## Setting the Output Capacitor of Boost Converter

The output current to the step-up converter is discontinuous, therefore a capacitor is essential to supply the AC current to the load. Use low ESR capacitors for the best performance. The output voltage ripple can be estimated by the below formula.

$$\Delta V_{\text{OUT}} = \frac{V_{\text{OUT}}}{f_{\text{s}} \cdot R_{\text{L}} \cdot C2} \cdot \left(1 \frac{V_{\text{IN}}}{V_{\text{OUT}}}\right)$$

Where  $R_{L}$  is the value of load resistor.

Ceramic capacitors with X7R dielectrics are highly recommended because of their low ESR and small temperature coefficient. Typically, a 22µF X7R ceramic capacitor is recommended.

#### Selecting the Inductor of Boost Converter

An inductor with a DC current rating of at least 25% higher than the maximum load current is recommended. For most designs, the inductance value can be derived from the following equation.

$$L = \frac{V_{\text{IN}}(V_{\text{OUT}} - V_{\text{IN}})}{f_{s} \cdot V_{\text{OUT}} \cdot \Delta I_{L}}$$

Where  $\Delta I_{L}$  is the inductor ripple current. Choose inductor ripple current to be approximately 30% of the maximum load current.

# Selecting the Rectifier Diode of Boost Converter

The high switching frequency demands highspeed rectifiers. Schottky diodes are recommended for most applications because of the fast recovery time and low forward voltage. Typically, a 2A Schottky diode is recommended for the boost converter.

### **DESIGN EXAMPLE**

Below is a design example following the application guidelines for the specifications:

V <sub>IN</sub>	12V
VOUT	19V

The detailed application schematic is shown in Figure 3. The typical performance and circuit waveforms have been shown in the Typical Performance Characteristics section. For more possible applications of this device, please refer to related Evaluation Board Data Sheet.




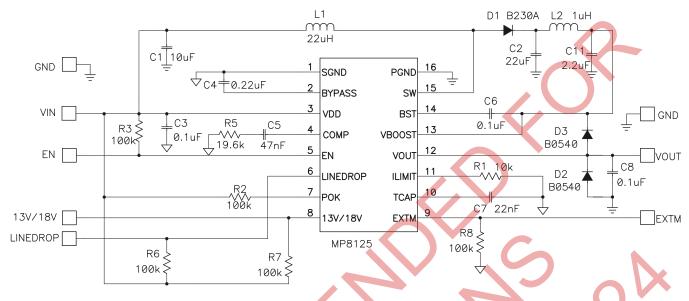



Figure 3—Detailed Application Schematic



## **PACKAGE INFORMATION**



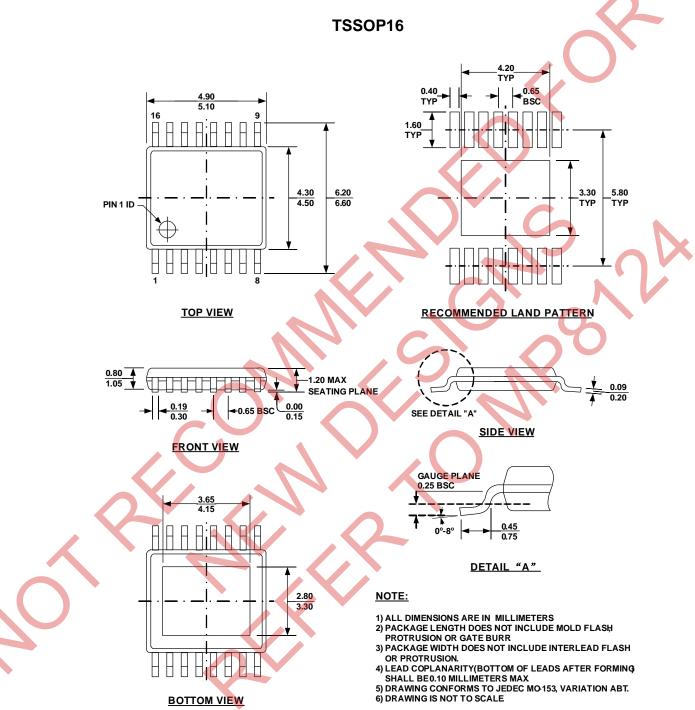

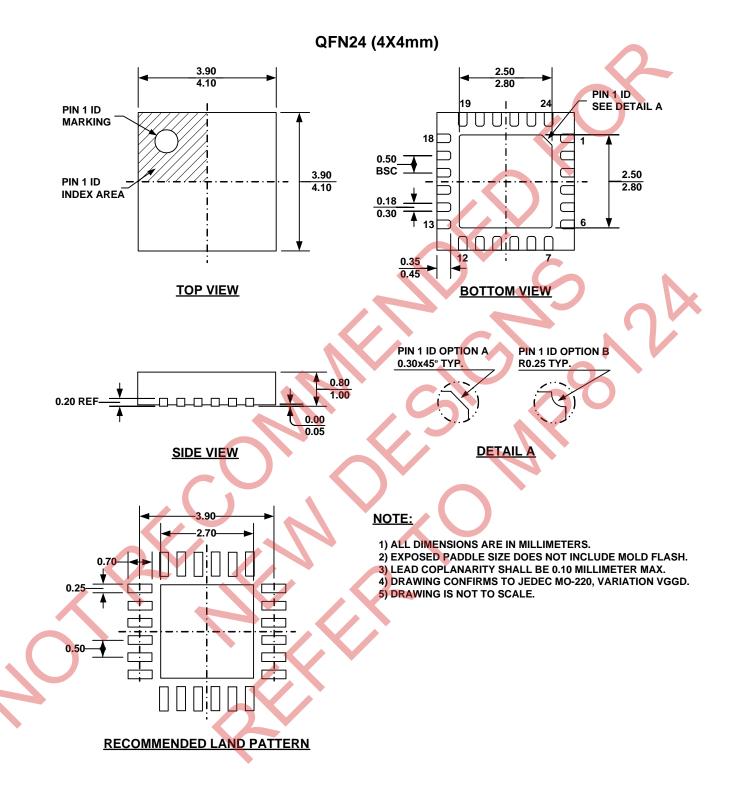

**NOTICE:** The information in this document is subject to change without notice. Please contact MPS for current specifications. Users should warrant and guarantee that third party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.