

## Model 13

### Subminiature Load Cell



#### DESCRIPTION

Model 13 (compression only) subminiature load cell is designed to measure load ranges from 150 g to 1000 lb. With subminiature dimensions, including diameters from 0.38 in to 0.75 in and heights of 0.13 in to 0.25 in, these units are easily incorporated into systems having limited space. Model 13 combines high

frequency response and low deflection to achieve a combined non-linearity and hysteresis of 0.25 % to 0.5 % full scale. A balance module is included in the load cell's lead wire cable for temperature compensation and should not be removed.

#### FEATURES

- 150 g to 1000 lb
- 0.7 % accuracy
- mV/V output
- Subminiature design
- Single diaphragm construction

# Model 13

## PERFORMANCE SPECIFICATIONS

Characteristic	Measure
Load ranges <sup>6</sup>	150 g, 250 g, 500 g, 1000 g, 5 lb, 10 lb, 25 lb, 50 lb, 100 lb, 250 lb, 500 lb, 1000 lb
Linearity	±0.5 % full scale
Hysteresis	±0.5 % full scale
Non-repeatability	±0.1 % full scale
Tolerance on output 150 g to 500 g	15 mV/V (nominal)
Tolerance on output 1000 g	1.5 mV/V (nominal)
Tolerance on output 5 lb to 1000 lb	2 mV/V (nominal)
Operation	Compression only
Resolution	Infinite

## ENVIRONMENTAL SPECIFICATIONS

Characteristic	Measure
Temperature, operating	-54 °C to 121 °C [-65 °F to 250 °F]
Temperature, compensated	15 °C to 71 °C [60 °F to 160 °F]
Temperature effect, zero	0.01 % full scale/°F
Temperature effect, span	0.02 % reading/°F

## ELECTRICAL SPECIFICATIONS

Characteristic	Measure
Strain gage type 150 g to 500 g	Semiconductor
Strain gage type 1000 g to 1000 lb	Bonded foil
Excitation (calibration)	5 Vdc
Insulation resistance	5000 mOhm @ 50 Vdc
Bridge resistance (tolerance) 150 g to 500 g	500 ohm (nominal)
Bridge resistance (tolerance) 1000 g to 1000 lb	350 ohm (nominal)
Zero balance (tolerance)	±3 % of full scale (nominal)
Shunt calibration data	Included
Electrical termination (std)	1,83 m [5 ft] integral cable with balance board <sup>3</sup>

## MECHANICAL SPECIFICATIONS

Characteristic	Measure
Maximum allowable load	See table
Weight	See table
Material	Stainless steel
Deflection @ full scale	See table

## RANGE CODES

Range codes	Range
<b>AL</b>	150 g
<b>AN</b>	250 g
<b>AP</b>	500 g
<b>AR</b>	1000 g
<b>AT</b>	5 lb
<b>AV</b>	10 lb
<b>BL</b>	25 lb
<b>BN</b>	50 lb
<b>BR</b>	100 lb
<b>CN</b>	250 lb
<b>CR</b>	500 lb
<b>CV</b>	1000 lb

## WIRING CODES


Cable	Unamplified
<b>Red</b>	(+) excitation
<b>Black</b>	(-) excitation
<b>Green</b>	(-) output
<b>White</b>	(+) output

## DEFLECTIONS AND RINGING FREQUENCIES

Capacity (lb)	Deflection at full scale (10 <sup>-3</sup> in)	Weight	Weight with cable	Max. allowable load <sup>1</sup> (% FS)
150 g	0.06	1 g [0.002 lb]	9 g [0.019 lb]	500
250 g	0.06	1 g [0.002 lb]	9 g [0.019 lb]	500
500 g	0.08	1 g [0.002 lb]	9 g [0.019 lb]	500
1000 g	0.05	1 g [0.002 lb]	9 g [0.019 lb]	150
5 lb	0.5	1 g [0.002 lb]	9 g [0.019 lb]	150
10 lb	0.4	1 g [0.002 lb]	9 g [0.019 lb]	150
25 lb	0.4	1 g [0.002 lb]	9 g [0.019 lb]	150
50 lb	0.4	1 g [0.002 lb]	9 g [0.019 lb]	150
100 lb	0.4	3 g [0.006 lb]	11 g [0.024 lb]	150
250 lb	0.5	3 g [0.006 lb]	11 g [0.024 lb]	150
500 lb	0.5	10 g [0.022 lb]	18 g [0.039 lb]	150
1000 lb	0.6	10 g [0.022 lb]	18 g [0.039 lb]	150

### MOUNTING DIMENSIONS

Ranges	D1	D2	H	B	SR
150, 250, 500, 1000 g; 5, 10, 25, 50 lb	2,29 mm [0.09 in]	9,65 mm [0.38 in]	3,3 mm [0.13 in]	0,69 mm [0.027 in]	6,35 mm [0.25 in]
100, 250 lb	3,05 mm [0.12]	12,7 mm [0.50 in]	3,81 mm [0.15 in]	0,51 mm [0.020 in]	12,7 mm [0.50 in]
500 lb, 1000 lb	6,35 mm [0.25 in]	19,05 mm [0.75]	6,35 mm [0.25 in]	0,64 mm [0.025 in]	12,7 mm [0.50 in]

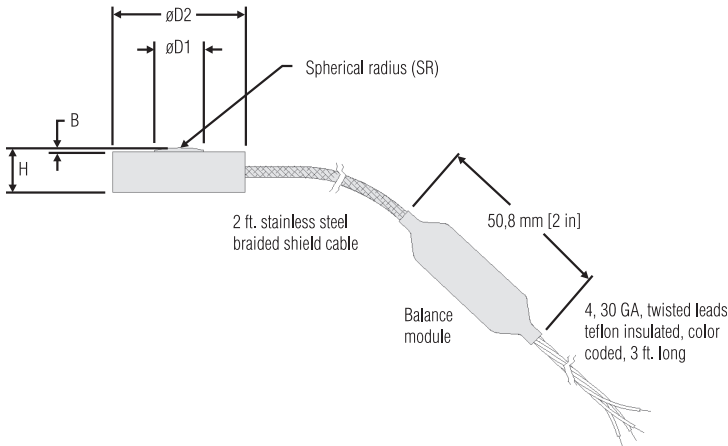

### OPTION CODES

	Many range/option combinations are available in our quick-ship and fast-track manufacture programs. Please see <a href="http://sensing.honeywell.com/TMsensor-ship">http://sensing.honeywell.com/TMsensor-ship</a> for updated listings.	
<b>Load range</b>	150, 250, 500 g, 1000 g; 5, 10, 25, 50, 100, 250, 500, 1000 lb	
<b>Temperature compensation</b>	1a. 60 °F to 160 °F 1b. 30 °F to 130 °F 1c. 0 °F to 185 °F 1d. -20 °F to 200 °F	1e. -20 °F to 200 °F 1j. 0 °C to 50 °C 1k. -20 °C to 85 °C 1m. -25 ° to 110 °C
<b>Internal amplifiers</b>	2u. Unamplified, mV/V output	
<b>Overload stops</b>	4a. Overload stops	
<b>Electrical termination</b>	5 ft integral cable with balance board <sup>3</sup> 6v. Phoenix connector on end of cable 15d. Connector on end of cable	
<b>Special calibration</b>	9a. 10 point (5 up/5 down) 20 % increments @ 68 °F 9b. 20 point (10 up/10 down) 10 % increments @ 68 °F	
<b>Shock and vibration</b>	44a. Shock and vibration resistance	

### TYPICAL SYSTEM DIAGRAM



## NOTES

1. Allowable maximum loads – maximum load to be applied without damage.<sup>2</sup> Loads described allow for 100 % full scale axial loading with the bending loads specified. Torque loading maximum is without axial or other load. For any other combination, consult factory.
2. Without damage - loading to this level will not cause excessive zero shift or performance degradation. The user must consider fatigue life for long term use and structural integrity. All structurally critical applications (overhead loading, etc.) should always be designed with safety redundant load paths.
3. A small, 2 in circuit board is included in the cable, 2 ft from the load cell. Do not remove this board.
4. Only for ranges greater-than-or-equal-to 1000 g.
5. Specifications may vary with this option.
6. This unit calibrated to Imperial (non-Metric) units.

## Find out more

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office. To learn more about Honeywell's test and measurement products, call **+1-614-850-5000**, visit **[www.honeywell.com/sensotec](http://www.honeywell.com/sensotec)**, or e-mail inquiries to **[info.tm@honeywell.com](mailto:info.tm@honeywell.com)**

Sensing and Control  
Honeywell  
1985 Douglas Drive North  
Golden Valley, MN 55422  
**[www.honeywell.com](http://www.honeywell.com)**

**Warranty.** Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

### **WARNING** **PERSONAL INJURY**

- DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

**Failure to comply with these instructions could result in death or serious injury.**

### **WARNING** **MISUSE OF DOCUMENTATION**

- The information presented in this datasheet is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

**Failure to comply with these instructions could result in death or serious injury.**

# Honeywell



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.