

## Evaluation Board for the **ADG5404F** Overvoltage Protected 4:1 Mux

### FEATURES

#### Supply voltages

Dual supply:  $\pm 5$  V to  $\pm 22$  V

Single supply: 8 V to 44 V

#### Protected against overvoltage on source pins

Signal voltages up to  $-55$  V and  $+55$  V

#### LED for visual overvoltage indication

#### Parallel interface compatible with 3 V logic

#### On-board low dropout (LDO) regulator for digital supply and control if required

### ONLINE RESOURCES

#### Evaluation Kit Contents

[EVAL-ADG5404F](#)

#### Documents Needed

[ADG5404F](#) data sheet

### EQUIPMENT NEEDED

#### DC voltage source

$\pm 22$  V for dual supply

44 V for single supply

#### Optional digital voltage source: 3 V to 5 V

#### Analog signal source

#### Method to measure voltage, such as digital multimeter (DMM)

### GENERAL DESCRIPTION

This user guide describes the evaluation board for the [ADG5404F](#), which is a 4-channel multiplexer. The [ADG5404F](#) has overvoltage detection and protection circuitry on the source pins and is protected against signals up to  $-55$  V and  $+55$  V in both the powered and unpowered state.

Figure 1 shows the [EVAL-ADG5404FEBZ](#) in a typical setup. The [ADG5404F](#) is soldered to the center of the board and wire screw terminals are provided to connect to each of the source and drain pins. Three screw terminals are used to power the device, with a fourth terminal used to provide a user defined digital voltage if required. Alternatively, an LDO regulator is provided for 5 V digital voltage control and to supply the LED, which is mounted to provide visual indication of the fault status of the switch.

### TYPICAL SETUP

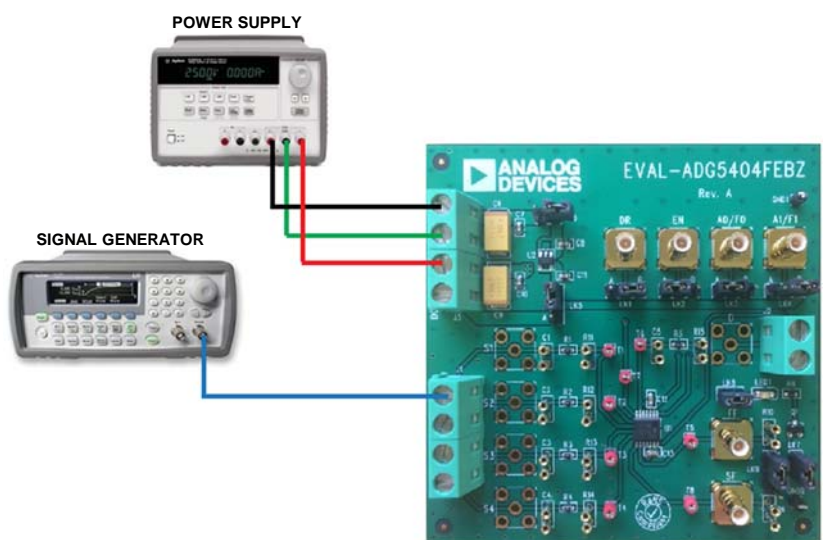


Figure 1. [EVAL-ADG5404FEBZ](#), Power Supply, and Signal Generator

TABLE OF CONTENTS

Features .....	1	Evaluation Board Hardware.....	4
Online Resources.....	1	Power Supplies.....	4
Equipment Needed.....	1	Input Signals.....	4
General Description .....	1	Output Signals .....	4
Typical Setup .....	1	Jumper Settings.....	5
Revision History .....	2	Link Headers.....	5
Getting Started .....	3	SMB Connectors.....	5
Evaluation Board Setup Procedure .....	3		

REVISION HISTORY

2/15—Revision 0: Initial Version



## EVALUATION BOARD HARDWARE

The operation of the [ADG5404F](#) is evaluated using the [EVAL-ADG5404FEBZ](#). Figure 1 shows a typical setup where only a power supply and signal generator are required. Figure 2 shows a block diagram of the main components of the evaluation board.

The connectors on the board pass signals through the [ADG5404F](#) switch. The source pins have fault detection circuitry that reacts to an overvoltage. During an overvoltage event, the switch is turned off and the FF pin is pulled low. The SF pin is pulled low when the source where the overvoltage occurs is the one selected by the A0/F0 and A1/F1 pins. See the [ADG5404F](#) data sheet for further details.

### POWER SUPPLIES

Connector J3 provides access to the supply pins of the [ADG5404F](#). VDD, GND, and VSS link to the appropriate pins on the [ADG5404F](#). For dual supply voltages, power the evaluation board from  $\pm 5$  V to  $\pm 22$  V. For single supply voltages, connect the GND and V<sub>SS</sub> terminals and power the evaluation board with 8 V to 44 V. Additionally, an on-board LDO regulator is provided for digital control voltage. If necessary, connect a secondary voltage source to DC\_V1 and use it as the digital control voltage. To use DC\_V1, place the header of LK5 into Position A.

### INPUT SIGNALS

Two screw connectors are provided to connect to both the source and drain pins of the [ADG5404F](#). Additional subminiature Version B (SMB) connector pads have been laid out if extra connections are required.

The [ADG5404F](#) is overvoltage protected on the source side, and the maximum voltage that can be applied to S1 to S4 is  $-55$  V or  $+55$  V. See the [ADG5404F](#) data sheet for more details.

Each trace on the source and drain side includes two sets of gold pin connectors that are used to place a load on the signal path to ground. A  $0\ \Omega$  resistor is placed in the signal path and

can be replaced with a user defined value. Use the resistor combined with the gold pin connectors to create a simple resistor/capacitor (RC) filter.

The [ADG5404F](#) uses parallel interface channels (A0/F0, A1/F1) to control the operation of the switches. Use the headers on LK2 to LK4 to manually control the operation of the switches, or connect an external controller directly to the control pins by using the SMB connectors, A0/F0, A1/F1, and EN, and removing the link headers on LK2 to LK4.

### OUTPUT SIGNALS

There are two outputs on the [ADG5404F](#). The FF pin indicates when the device is operating normally or whether there is an overvoltage fault on one of the source pins. The SF pin also indicates when an overvoltage occurs on one of the source pins and transitions low only when an overvoltage occurs on the channel selected by the A0/F0 and A1/F1 inputs. For visual indication, an LED is mounted on the evaluation board. Use LK8 to connect the LED circuit. When the device is operating normally, the FF pin remains high and the LED turns on. If an overvoltage occurs at any of the source pins, the FF pin is pulled low and the LED turns off.

The LK9 selector allows the user to choose which output controls the LED. Putting the header on Position A allows the FF pin to control the LED. On Position B, the SF pin controls the LED.

SMB connectors are provided to interface the evaluation board with external controllers, and two gold pin connectors are provided to connect a pull-up resistor between the FF and SF signals and the digital supply.

The DR pin allows the user to choose the state of the drain pin when the device is deactivated during an overvoltage. The LK1 selector allows the user to choose between open circuit and pulling to the rails.

## JUMPER SETTINGS

### LINK HEADERS

Use the link headers to control the [ADG5404F](#) manually, to configure the digital control voltage, and to isolate the LED from the system. Table 2 shows a summary of the link headers and how they are used on the evaluation board.

Use LK3 and LK4 to control the switches of the [ADG5404F](#). Use LK2 to enable or disable the device.

Position A is tied to GND and sets the logic low, whereas Position B is tied to DC\_V1 and sets the logic high.

**Table 1. [ADG5404F](#) Truth Table**

LK2 (EN)	LK3 (A0)	LK4 (A1)	Connected Sx
A	X <sup>1</sup>	X <sup>1</sup>	All switches off
B	A	A	S1
B	B	A	S2
B	A	B	S3
B	B	B	S4

<sup>1</sup> X = don't care.

LK1 allows the user to configure the state of the drain during an overvoltage condition.

LK6 connects the on-board LDO regulator to the  $V_{DD}$  supply. Remove the header to protect the LDO regulator from voltages higher than 28 V or to use an alternative digital control voltage. Change the header on LK5 to Position B to connect to DC\_V1.

LK8 connects the LED to the digital power supply, and LK7 connects the FF or SF pin of the [ADG5404F](#) to the LED.

### SMB CONNECTORS

Control the parallel interface of the [ADG5404F](#) manually using the link headers of LK2 to LK4, or access it using the SMB connectors, A0/F0, A1/F1, and EN. To use the SMB connectors, remove the link headers of LK2 to LK4. Use the FF/SF SMB connectors to access the FF/SF digital outputs from the [ADG5404F](#).

**Table 2. Link Header Descriptions**

Link Header	Position	Description
LK1	A	$V_{DD}$ or $V_{SS}$ during an overvoltage
	B	Open circuit during an overvoltage
LK2	A	All switches off (disabled)
	B	Device enabled (EN pin), switch function set by A0/F0 and A1/F1 pins
LK3	A	Logic 0 on A0/F0 pin
	B	Logic 1 on A0/F0 pin
LK4	A	Logic 0 on A1/F1 pin
	B	Logic 1 on A1/F1 pin
LK5	A	DC_V1 digital voltage
	B	On-board LDO regulator digital voltage
LK6	Inserted	LDO regulator powered up
	Removed	LDO regulator unpowered
LK7	Inserted	FF/SF pins connected to LED
	Removed	FF/SF pins disconnected from LED
LK8	Inserted	LED powered up
	Removed	LED unpowered
LK9	A	FF pin controls the LED
	B	SF pin controls the LED

## NOTES

**ESD Caution**

**ESD (electrostatic discharge) sensitive device.** Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

**Legal Terms and Conditions**

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. **CONFIDENTIALITY.** This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. **ADDITIONAL RESTRICTIONS.** Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. **TERMINATION.** ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. **LIMITATION OF LIABILITY.** THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100,000). **EXPORT.** Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. **GOVERNING LAW.** This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.