

# LTC3607EMSE

## Dual 600mA 15V Monolithic Synchronous Step-Down Regulator Board

### DESCRIPTION

Demonstration circuit 1847 is a dual output regulator based on the **LTC<sup>®</sup>3607** monolithic dual channel synchronous buck regulator. The DC1847 has an input voltage range of 4.5V to 15V, with each regulator capable of delivering up to 600mA of output current. The DC1847 can operate in either Burst Mode<sup>®</sup> or pulse-skipping mode. In shutdown, the DC1847 can run off of less than 1 $\mu$ A total. The DC1847 is a very efficient circuit: up to 90%. The DC1847 uses the 16 Pin MSOP LTC3607 package, which has an exposed pad

on the bottom-side of the IC for good thermal performance. These features, plus a set operating frequency of 2.25MHz, make the DC1847 demo board an ideal circuit for use in industrial, automotive, or distributed power applications.

**Design files for this circuit board are available at <http://www.linear.com/demo>**

LT, LT, LTC, LTM, Burst Mode, Linear Technology and the Linear logo are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

### PERFORMANCE SUMMARY

Specifications are at T<sub>A</sub> = 25°C

PARAMETER	CONDITIONS	VALUE
Minimum Input Voltages		4.5V
Maximum Input Voltages		15V
Run	RUN Pin = GND	Shutdown
	RUN Pin = V <sub>IN</sub>	Operating
Output Voltage V <sub>OUT1</sub> Regulation	V <sub>IN1</sub> = 4.5V to 15V, I <sub>OUT1</sub> = 0A to 600mA	1.2V $\pm$ 4% (1.152V to 1.148V)
		1.5V $\pm$ 4% (1.44V to 1.56V)
		1.8V $\pm$ 4% (1.728V to 1.872V)
Typical Output Ripple V <sub>OUT1</sub>	V <sub>IN1</sub> = 12V, I <sub>OUT1</sub> = 600mA (20MHz BW)	< 20mV <sub>p-p</sub>
Output Voltage V <sub>OUT2</sub> Regulation	V <sub>IN2</sub> = 4.5V to 15V, I <sub>OUT2</sub> = 0A to 600mA	2.5V $\pm$ 4% (2.425V to 2.6V)
		3.3V $\pm$ 4% (3.168V to 3.432V)
		5V $\pm$ 4% (4.8V to 5.2V)
Typical Output Ripple V <sub>OUT2</sub>	V <sub>IN2</sub> = 12V, I <sub>OUT2</sub> = 600mA (20MHz BW)	< 20mV <sub>p-p</sub>
Mode Setting	Mode Pin Floating	Burst Mode
	Mode Pin Grounded	Pulse-Skipping
Burst Mode Operation Output Current Thresholds	Channel 1: PV <sub>IN1</sub> = 12V, V <sub>OUT1</sub> = 1.8V	I <sub>OUT1</sub> < 480mA
	Channel 2: PV <sub>IN2</sub> = 12V, V <sub>OUT2</sub> = 3.3V	I <sub>OUT2</sub> < 360mA
Pulse-Skipping Operation Output Current Thresholds	Channel 1: PV <sub>IN1</sub> = 12V, V <sub>OUT1</sub> = 1.8V	I <sub>OUT1</sub> < 330mA
	Channel 2: PV <sub>IN2</sub> = 12V, V <sub>OUT2</sub> = 3.3V	I <sub>OUT2</sub> < 240mA
Switching Frequency		2.25MHz $\pm$ 20%

## QUICK START PROCEDURE

Demonstration circuit 1847A The DC1847 is easy to set up to evaluate the performance of the LTC3607. For a proper measurement equipment configuration, set up the circuit according to the diagram in Figure 1.

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the  $V_{IN}$  or  $V_{OUT}$  and GND terminals. See the proper scope probe technique in figure 2.

Please follow the procedure outlined below for proper operation.

1. Connect the input power supply to the  $PV_{IN1}/PV_{IN2}$  and GND terminals ( $V_{IN1}$  and  $V_{IN2}$  are separate nodes but are connected.). Connect the loads between the  $V_{OUT}$  and GND terminals. Refer to figure 1 for the proper measurement equipment setup.

Before proceeding to operation, insert jumper shunts xJP1 and xJP2 into the OFF positions of headers JP1 and JP2, shunt xJP3 into the pulse-skip position of MODE header JP3, and shunt xJP4 into the  $V_{OUT1}$  voltage options of choice of header JP4: 1.2V, 1.5V, or 1.8V, and shunt xJP5 into the  $V_{OUT2}$  voltage options of choice of header JP5: 2.5V, 3.3V, or 5V.

2. Apply 5.5V at  $PV_{IN1}$  or  $PV_{IN2}$  turret. Measure both  $V_{OUTS}$ ; they should read 0V. If desired, one can measure the shutdown supply current at this point. The supply current will be less than 1 $\mu$ A in shutdown.

3. Turn on  $V_{OUT1}$  and  $V_{OUT2}$  by shifting shunts xJP1 and xJP2 from the OFF positions to the ON positions. Both output voltages should be within a tolerance of  $\pm 2\%$ .
4. Vary the input voltages from 5.8V (the min.  $V_{IN}$  is dependent on  $V_{OUT}$ ) to 15V, and the load currents from 0 to 600 mA. Both output voltages should be within  $\pm 4\%$  tolerance.
5. Set the load current of both outputs to 600mA and the input voltages to 12V, and then measure each output ripple voltage (refer to figure 2 for proper measurement technique); they should each measure less than 20 mVAC. Also, observe the voltage waveform at either switch node (pin 5 for reg.1 and pin 8 for reg.2) of each regulator. The switching frequency should be about 2.25MHz  $\pm 20\%$  (period between 370ns and 555ns). Both switch node waveforms should be rectangular in shape, and 180° out-of-phase with each other.
6. For Burst Mode operation, change the shunt position of header JP3 to Burst Mode.
7. Regulators 1 ( $PV_{IN1}$ ) and 2 ( $PV_{IN2}$ ) are completely separated from each other; thus, they can be powered from different individual input supplies (if R11 is removed), as can the signal input supply,  $SV_{IN}$ . However,  $SV_{IN}$  must powered for either regulator to function ( $SV_{IN}$  is connected to  $PV_{IN1}$  through a filter on the demo board.).

When finished, insert shunts xJP1 and xJP2 to the OFF position(s) and disconnect the power.

**WARNING - IF THE POWER FOR THE DEMO BOARD IS CARRIED IN LONG LEADS, THE INPUT VOLTAGE AT THE PART COULD “RING”, WHICH COULD AFFECT THE OPERATION OF THE CIRCUIT OR EVEN EXCEED THE MAXIMUM VOLTAGE RATING OF THE IC. TO ELIMINATE THE RINGING, A SMALL TANTALUM CAPACITOR (FOR INSTANCE, AVX PART# TPSY226M035R0200) IS INSERTED ON THE PADS BETWEEN THE INPUT POWER AND RETURN TERMINALS ON THE BOTTOM OF THE DEMO BOARD. THE (GREATER) ESR OF THE TANTALUM CAPACITOR WILL DAMPEN THE (POSSIBLE) RINGING VOLTAGE CAUSED BY THE LONG INPUT LEADS. ON A NORMAL, TYPICAL PCB, WITH SHORT TRACES, THIS CAPACITOR IS NOT NEEDED.**

# QUICK START PROCEDURE

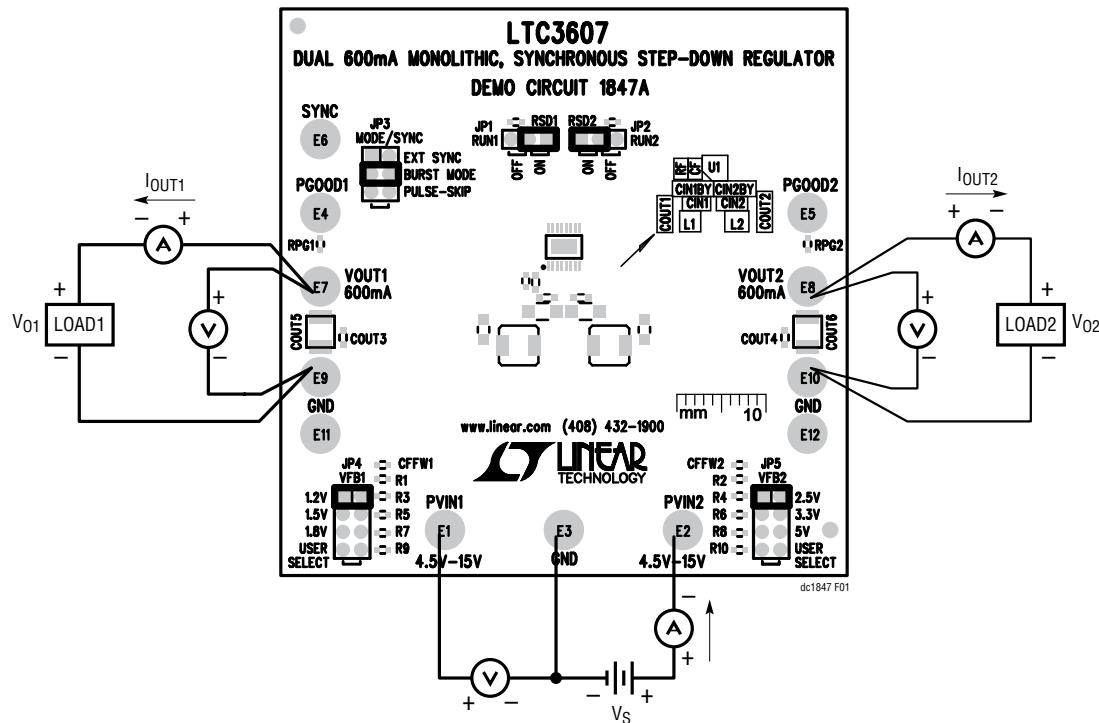


Figure 1. Proper Measurement Equipment Setup

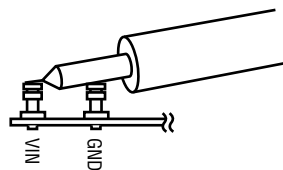


Figure 2. Measuring Input or Output Ripple

## QUICK START PROCEDURE

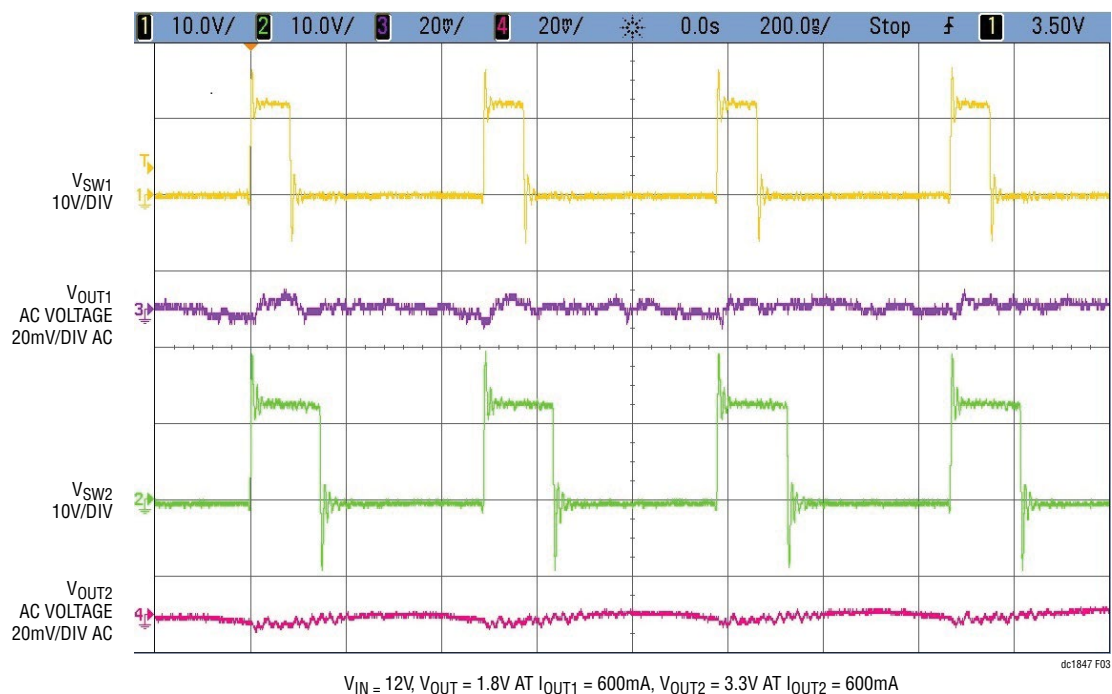


Figure 3. Switch Operation

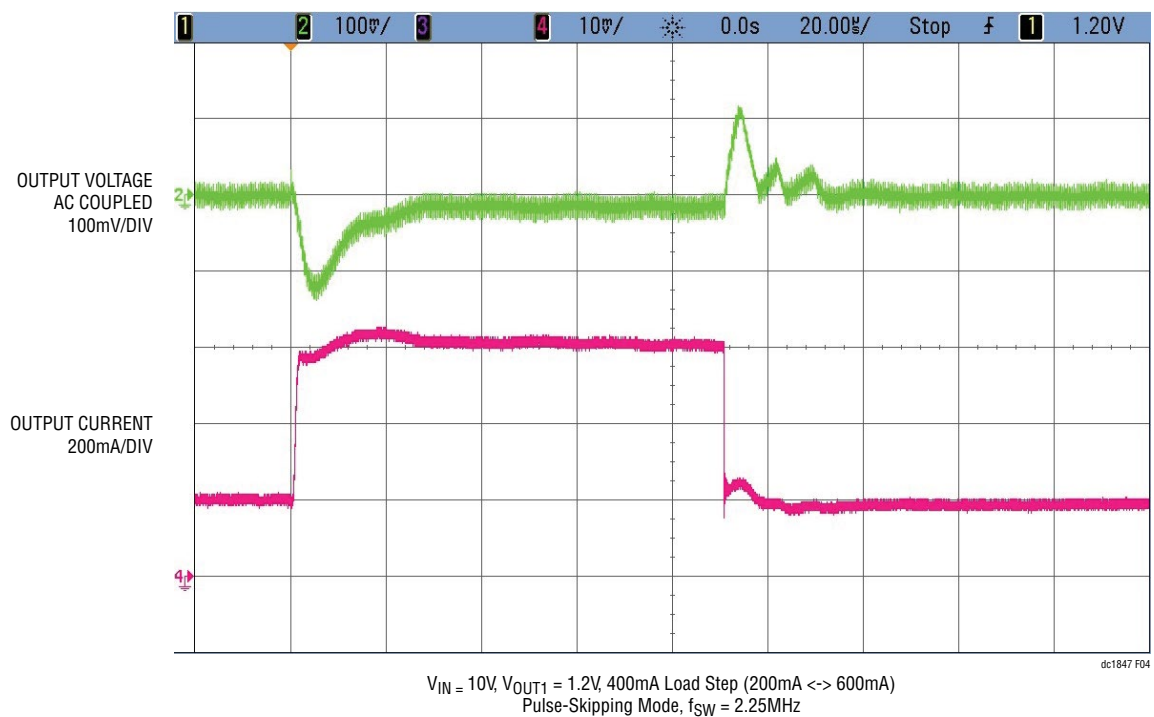


Figure 4. Load Step Response

## QUICK START PROCEDURE

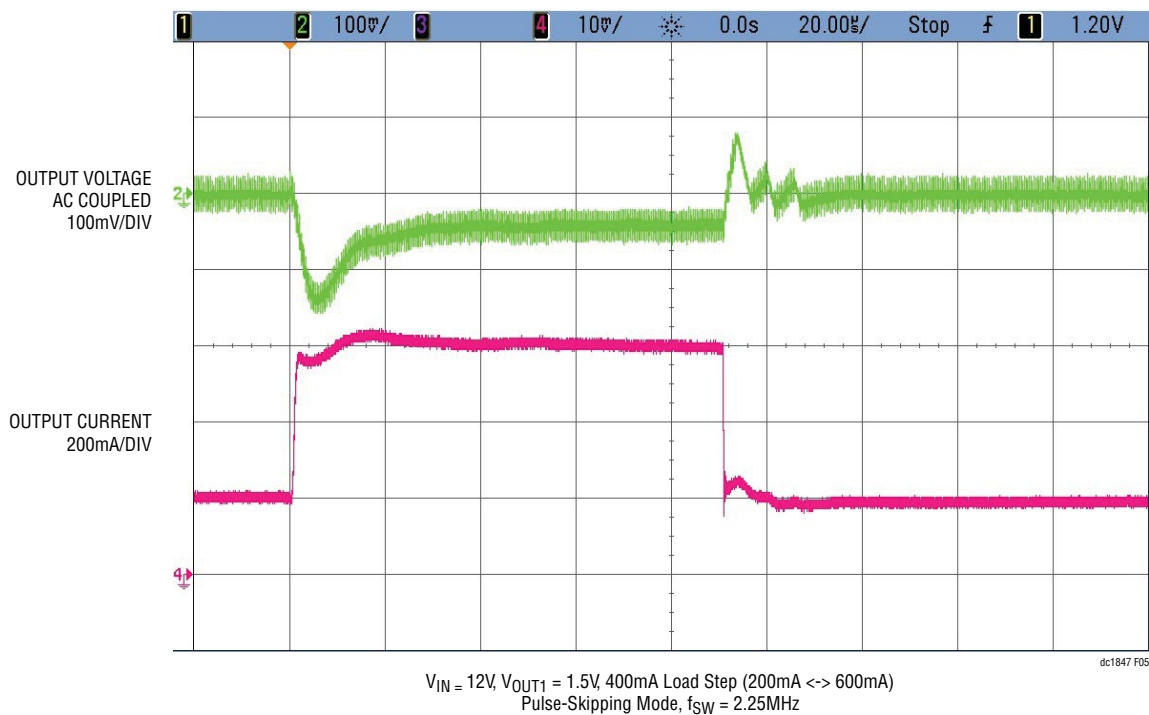


Figure 5. Load Step Response

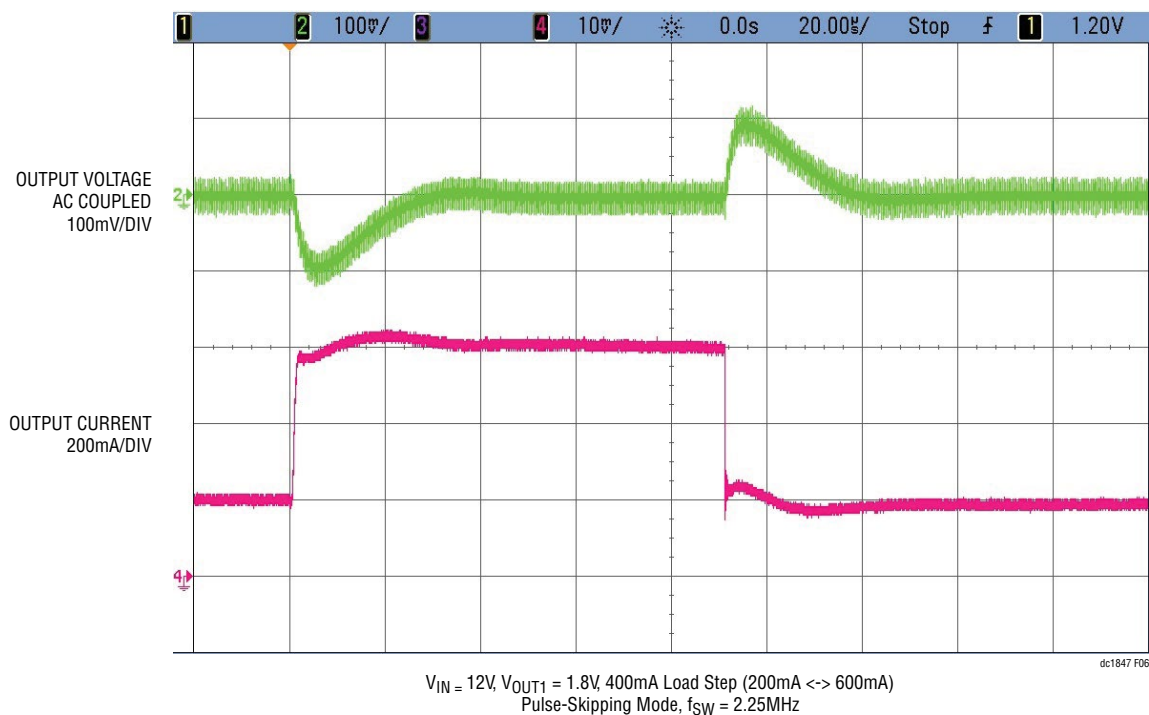


Figure 6. Load Step Response

## QUICK START PROCEDURE

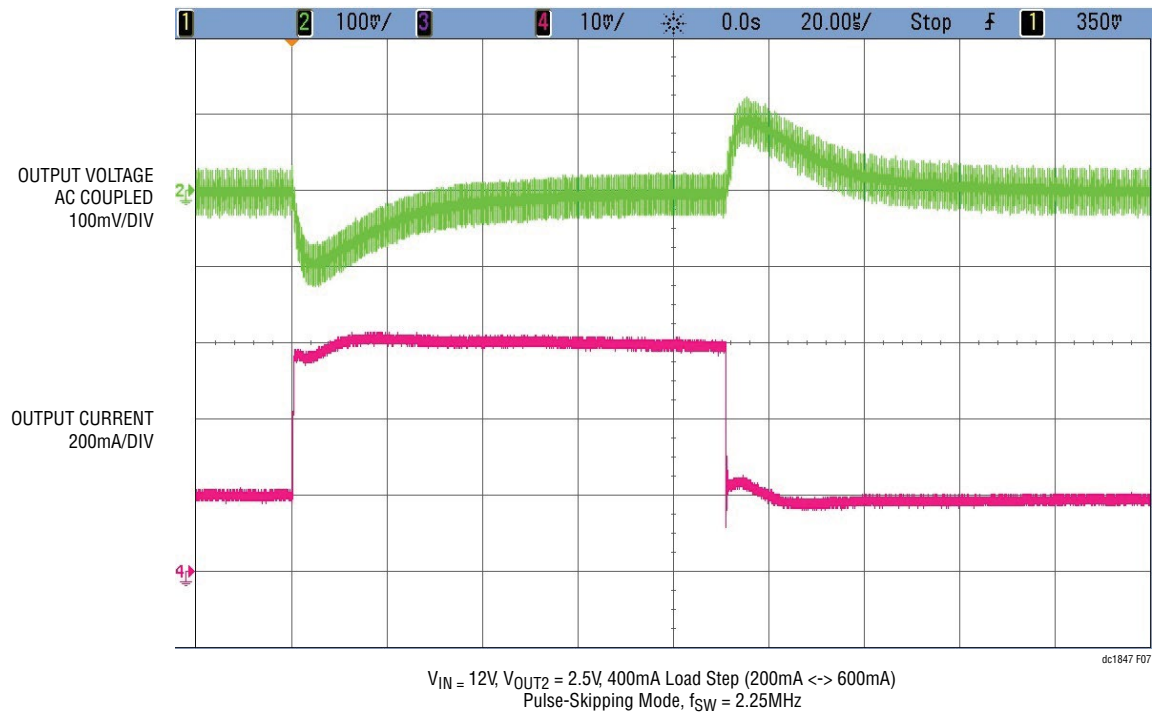


Figure 7. Load Step Response

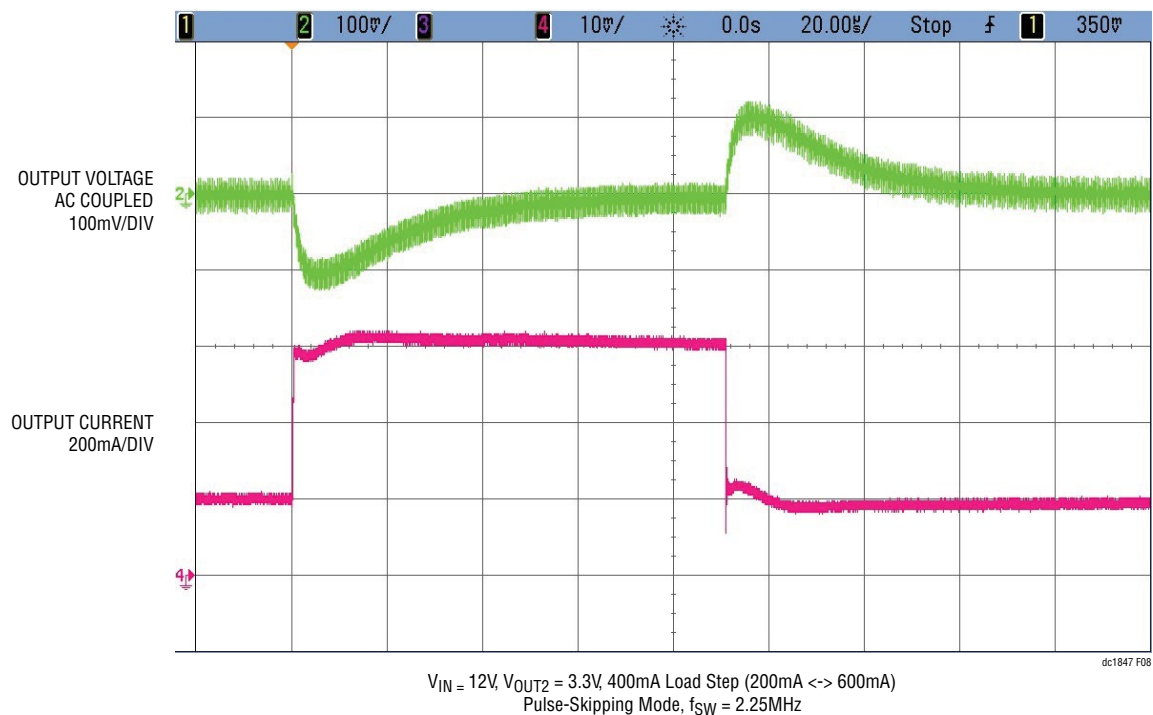


Figure 8. Load Step Response

## QUICK START PROCEDURE

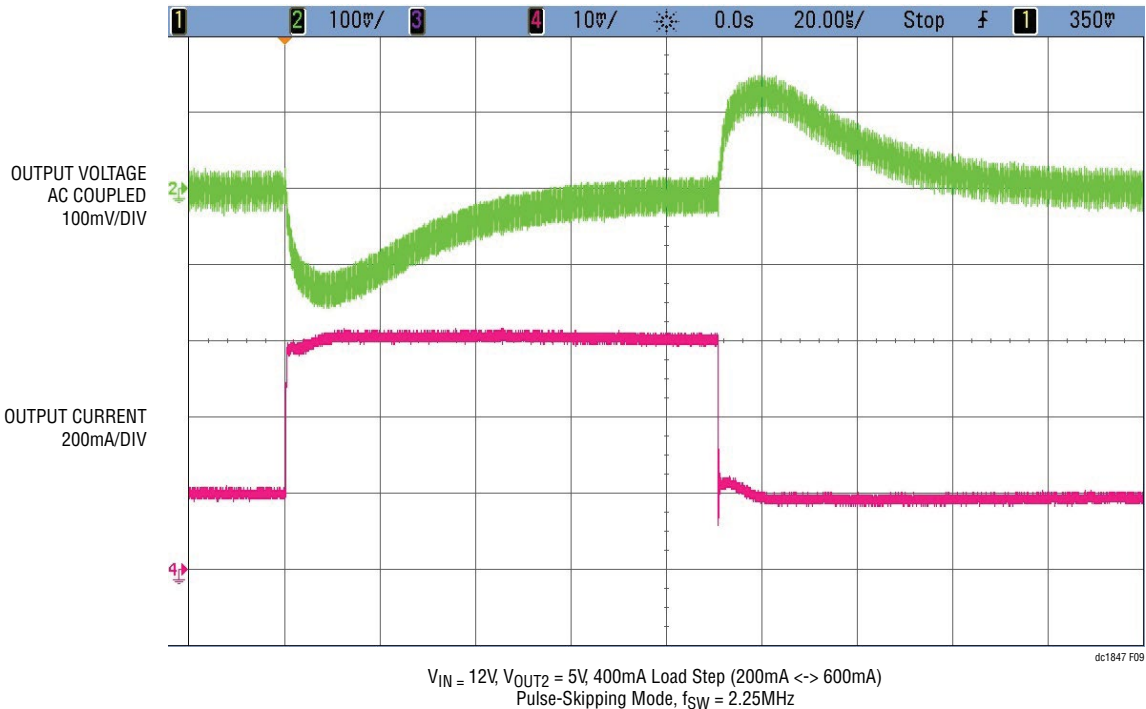


Figure 9. Load Step Response

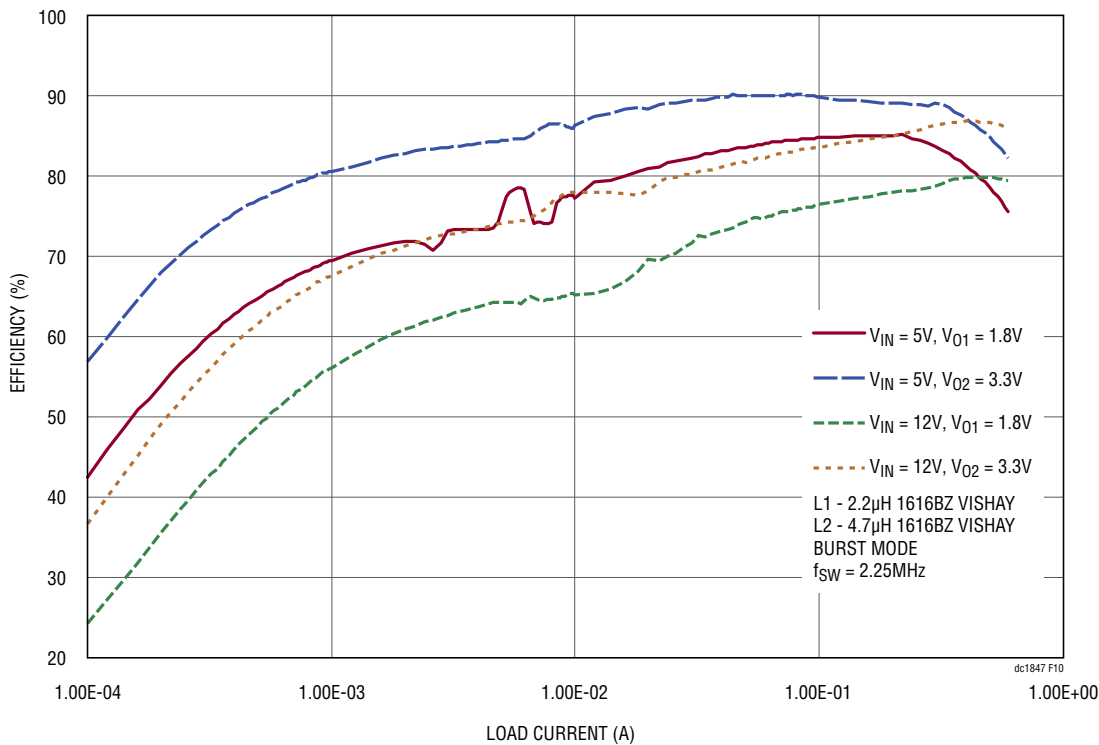


Figure 10. DC1847 Efficiency


# DEMO MANUAL DC1847A

## PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
<b>Required Circuit Components</b>				
1	2	CFFW1, CFFW2	CAP., NPO, 22pF, 25V, 5%, 0402	AVX, 04025A220JAT2A
2	2	CIN1BYP, CIN2BYP	CAP., X7R, 0.1μF, 16V, 10%, 0603	AVX, 0603YC104KAT2A
3	2	COUT1, COUT2	CAP., X5R, 10μF, 6.3V, 10%, 0805	AVX, 08056D106KAT2A
4	2	CIN1, CIN2	CAP., X5R, 10μF, 16V, 10%, 1206	AVX, 1206YD106KAT2A
5	1	L1	Inductor, 2.2μH	VISHAY, IHLP1616BZER2R2M11
6	1	L2	Inductor, 4.7μH	VISHAY, IHLP1616BZER4R7M11
7	1	R1	RES., CHIP, 210k, 1%, 0402	VISHAY, CRCW0402210KFKED
8	1	R2	RES., CHIP, 887k, 1%, 0402	VISHAY, CRCW0402887KFKED
9	1	R6	RES., CHIP, 196k, 1%, 0402	VISHAY, CRCW0402196KFKED
10	1	R7	RES., CHIP, 105k, 1%, 0402	VISHAY, CRCW0402105KFKED
11	1	U1	IC., LTC3607EMSE, 16 Pin QFM 3 × 3	Linear Tech., LTC3607EMSE
<b>Additional Demo Board Circuit Components</b>				
1	3	COUT3, COUT4, CF	CAP., X7R, 0.1μF, 16V, 10%, 0603	AVX, 0603YC104KAT2A
2	2	CIN3, CIN4	CAP., TANT, 22μF, 35V, 20%, CASE Y	AVX, TPSY226M035R0200
3	0	COUT5, COUT6 (OPT.)	CAP., X5R, 47μF, 6.3V, 10%, 1210	AVX, 12106D476KAQ2A
4	0	CIN5, CIN6 (OPT.)	CAP., X5R, 47μF, 20V, 10%, 1812	
5	1	RF	RES., CHIP, 100, 1/16W, 5%, 0402	VISHAY, CRCW0402100RJNED
6	1	R3	RES., CHIP, 210k, 1%, 0402	VISHAY, CRCW0402210KFKED
7	1	R4	RES., CHIP, 280k, 1%, 0402	VISHAY, CRCW0402280KFKED
8	1	R5	RES., CHIP, 140k, 1%, 0402	VISHAY, CRCW0402140KFKED
9	1	R8	RES., CHIP, 121k, 1%, 0402	VISHAY, CRCW0402105KFKED
10	0	R9, R10 (OPT.)	RES., 0402	
11	1	R11	RES., CHIP, 0, 1%, 0805	VISHAY, CRCW08050000Z0ED
12	2	RSD1, RSD2	RES., CHIP, 5.1M, 5%, 0402	VISHAY, CRCW04025M10JNED
13	2	RPG1, RPG2	RES., CHIP, 100k, 1%, 0402	VISHAY, CRCW0402100KFKED
<b>Hardware: For Demo Board Only</b>				
1	12	E1-E12	Testpoint, TURRET, .094"	MILL-MAX-2501-2-00-80-00-00-07-0
2	2	JP1, JP2	0.079 SINGLE ROW HEADER, 3 PIN	SAMTEC, TMM103-02-L-S
3	2	JP4, JP5	0.079, 2 × 4 HEADER	SAMTEC, TMM104-02-L-D
4	1	JP3	0.079, 2 × 3 HEADER	SAMTEC, TMM103-02-L-D
5	5	JP1-JP5	SHUNT, FOR JP1-JP5	SAMTEC, 2SN-BK-G



## SCHEMATIC DIAGRAM

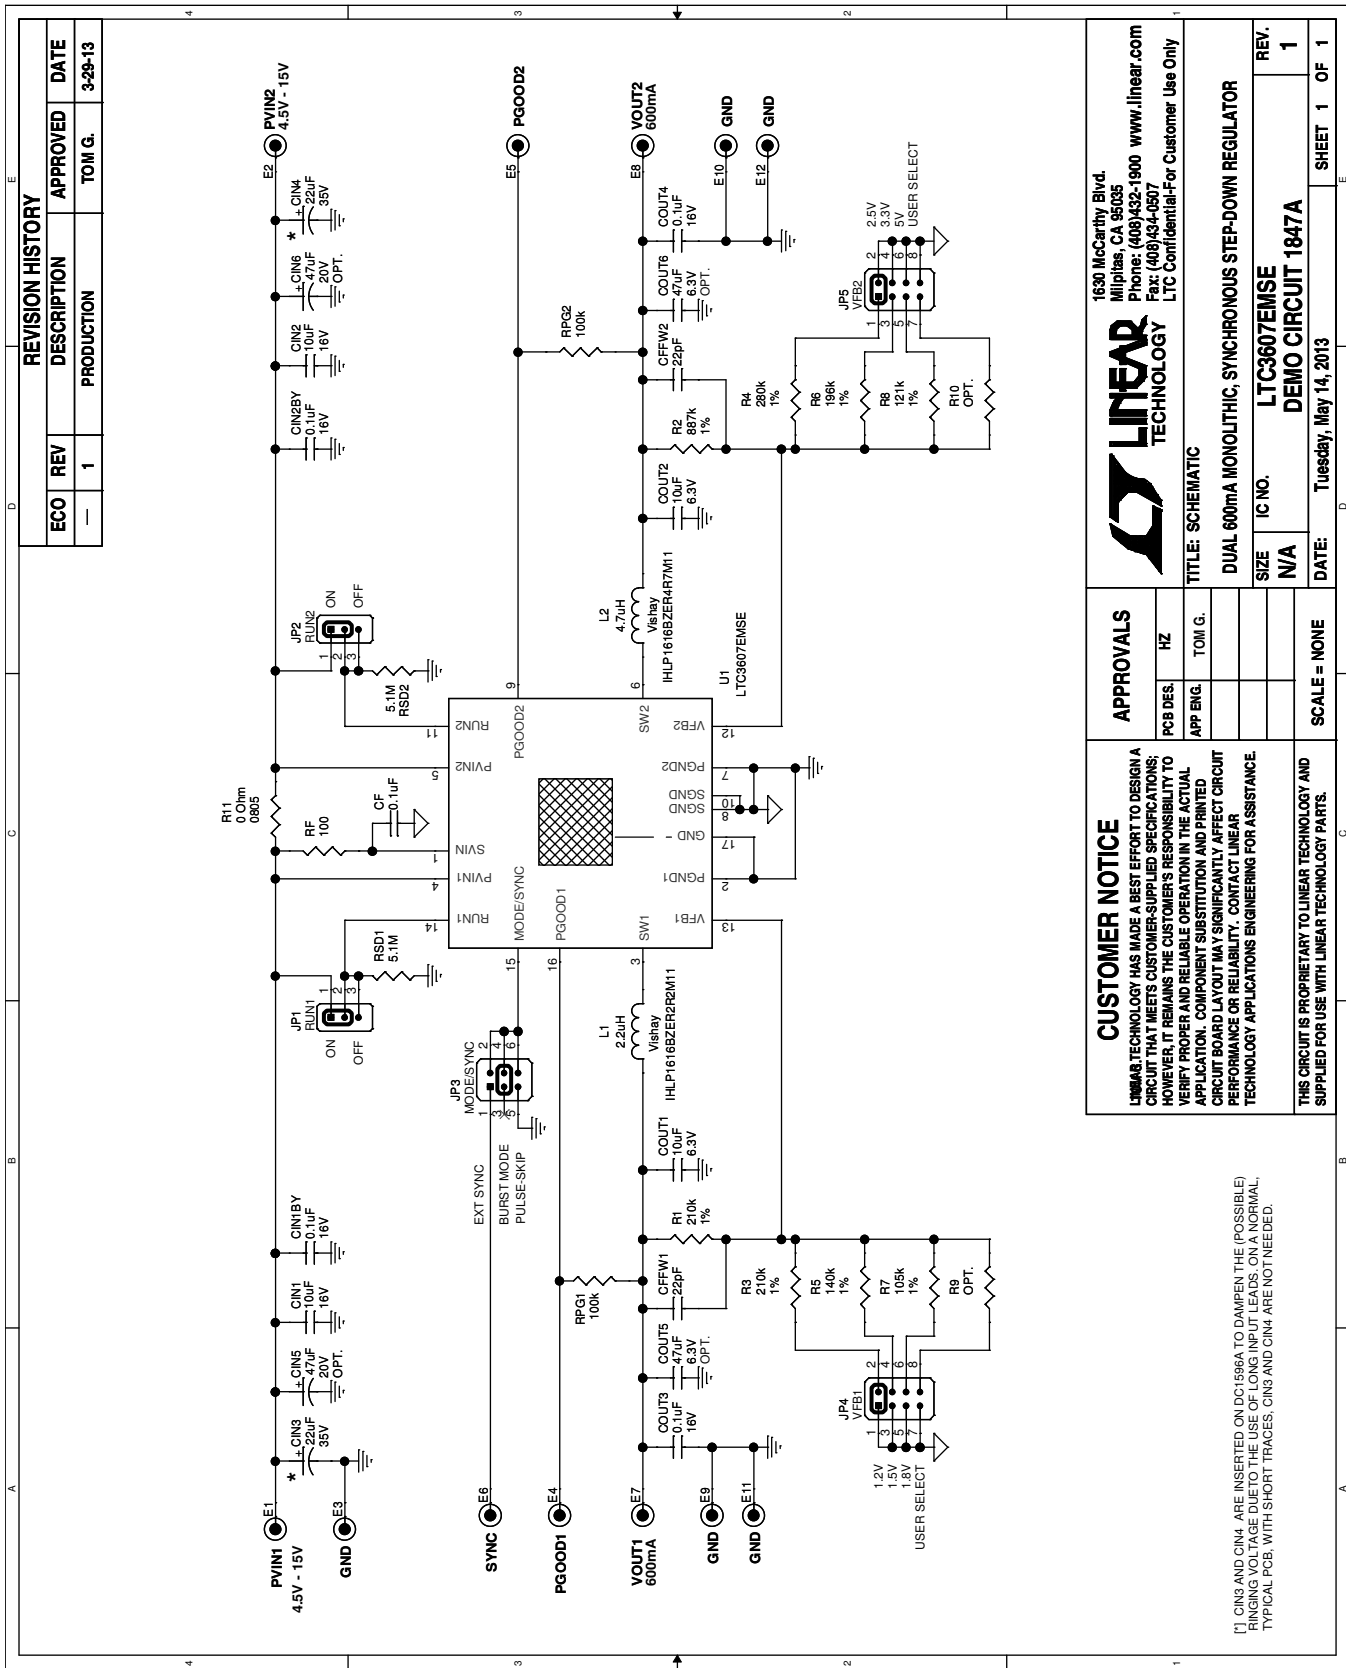

# DEMO MANUAL DC1847A

---

## DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. **LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.**

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**.

**Please read the DEMO BOARD manual prior to handling the product.** Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged.**

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology  
1630 McCarthy Blvd.  
Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

dc1847af



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.