

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

LTC3853EUJ

## DESCRIPTION

Demonstration circuit 1254A is a polyphase 3-output step-down supply with tracking featuring the LTC3853EUJ. The entire circuit, excluding the bulk output capacitors, fits within a 1.5" X 1" area on all layers. The package style for the LTC3853EUJ is a 6mm x 6mm plastic QFN.

The main features of the board include rail tracking, an internal 5V linear regulator for bias, RUN pins for each output, two PGOOD signals and a Mode selector that allow the converter to run in CCM, pulse skip or Burst Mode operation. Synchronization to an external clock is also possible through some minor component changes.

The board is configured for resistor current sensing, but optional DCR sensing is possible through some component changes.

The input voltage range is 6.5V to 24V. For applications with narrow,  $5V \pm 0.5V$  input range, the board has an optional resistor to tie the INTVCC pin to the VIN pin.

The LTC3853 datasheet gives a complete description of the part, operation and application information and must be read in conjunction with this quick start guide for demo circuit 1254A.

**Design files for this circuit board are available. Call the LTC factory.**

Burst Mode is a trademark of Linear Technology Corporation

**Table 1. Performance Summary ( $T_A = 25^\circ\text{C}$ )**

PARAMETER	CONDITION	VALUE
Input Voltage Range		6.5V - 24V
Output Voltage $V_{OUT1}$	$V_{IN} = 6.5V$ to 24V, $I_{OUT1} = 0A$ to 5A	$2.5V \pm 2\%$
Output Voltage $V_{OUT2}$	$V_{IN} = 6.5V$ to 24V, $I_{OUT2} = 0A$ to 5A	$1.8V \pm 2\%$
Output Voltage $V_{OUT3}$	$V_{IN} = 6.5V$ to 24V, $I_{OUT3} = 0A$ to 5A	$3.3V \pm 2\%$
Nominal Switching Frequency		500kHz
Efficiency See Figures 4, 5 and 6 for efficiency curves	$V_{OUT1} = 2.5V$ , $I_{OUT1} = 5A$ ; $V_{IN} = 12V$	89.2% Typical
	$V_{OUT2} = 1.8V$ , $I_{OUT2} = 5A$ ; $V_{IN} = 12V$	86.6% Typical
	$V_{OUT3} = 3.3V$ , $I_{OUT3} = 5A$ ; $V_{IN} = 12V$	91.7% Typical

## QUICK START PROCEDURE

Demonstration circuit 1254A is easy to set up to evaluate the performance of the LTC3853EUJ. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

**NOTE:** When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

1. Place jumpers in the following positions:

**JP1** On

**JP2** On

**JP3** On

**JP4** Pulse Skip

2. With power off, connect the input power supply to Vin and GND.

3. Turn on the power at the input.

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

**NOTE:** Make sure that the input voltage does not exceed 24V.

### 4. Check for the proper output voltages.

Vout1 = 2.450V to 2.550V,

Vout2 = 1.765V to 1.836V,

Vout3 = 3.234V to 3.366V

**NOTE:** If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

5. Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

6. Different operating modes can be evaluated by changing the position of jumper JP4.


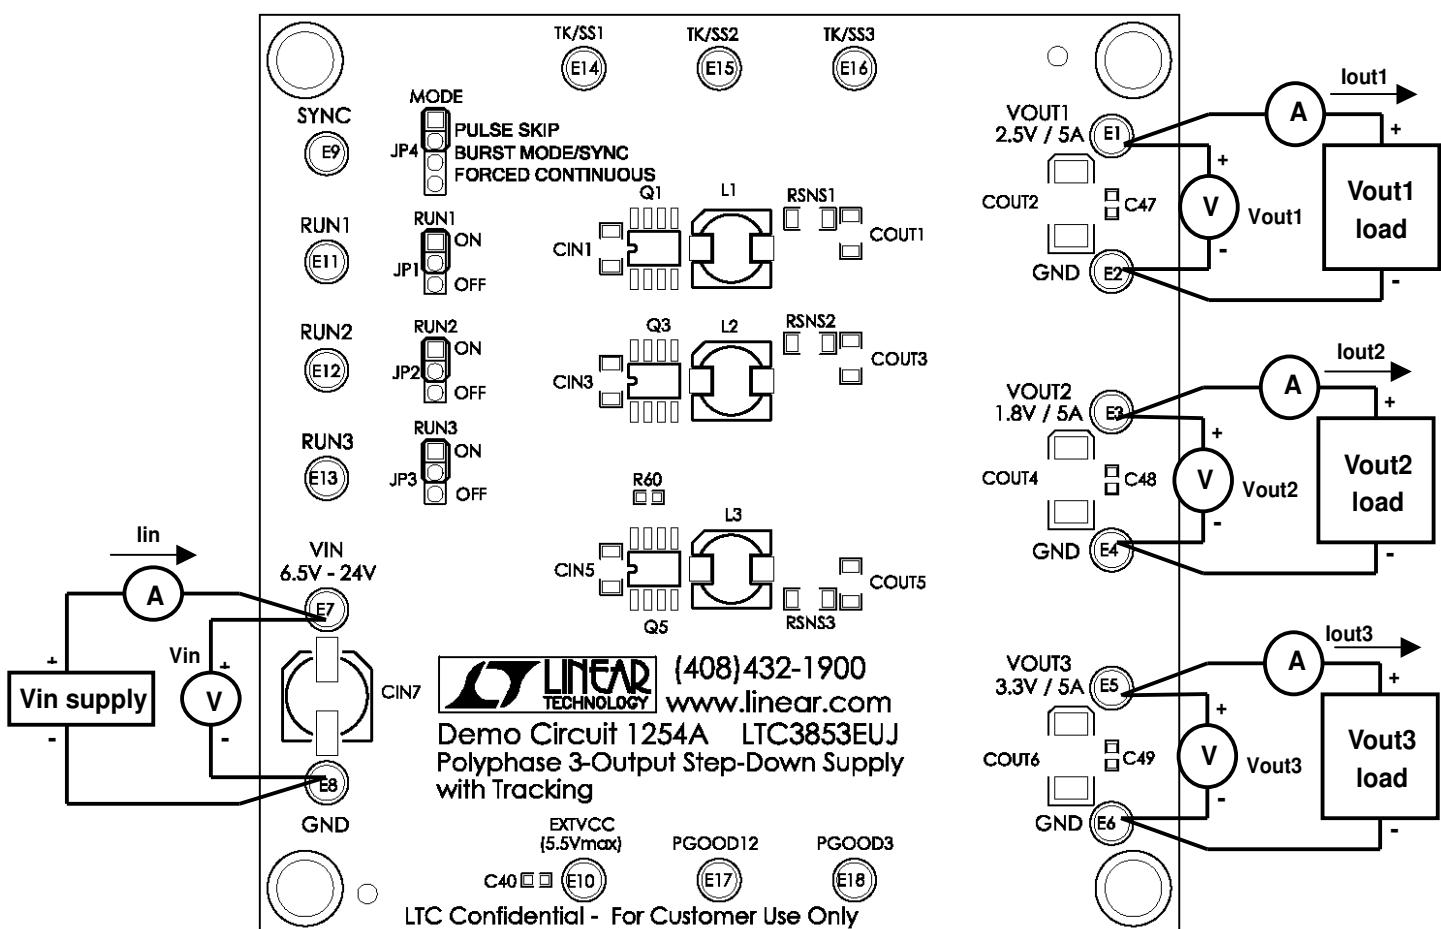


Figure 1. Proper Measurement Equipment Setup

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

---

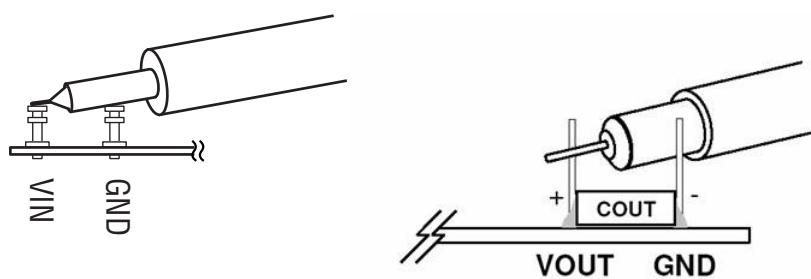

**Figure 2. Measuring Input or Output Ripple Across Terminals or Directly Across Bulk Capacitor**

## RAIL TRACKING

Demonstration circuit 1231 is setup for coincident rail tracking where VOUT1 and VOUT2 track VOUT3 and the ramp-rate for VOUT3 is determined by the value of the TK/SS3 capacitor at C46 - See Figure 3. Please note that turning channel 3 off, will also turn off the other two channels, as they track channels 3.

This board can be modified on the bench for external rail tracking or for independent turn-on of the rails. For the latter case, the ramp-rate for VOUT1 and VOUT2 will be determined by their respective TRK/SS capacitors. Refer to Table 2 for tracking options and to the data sheet for more details.

**Table 2. Output Tracking Options**

	TK/SS1 RESISTOR AND CAPACITORS			TK/SS2 RESISTOR AND CAPACITORS			TK/SS3 RESISTOR AND CAPACITORS		
CONFIGURATION	R31	R32	C44	R33	R34	C45	R35	R36	C46
Soft Start Without Tracking Vout1 (Default)	Open	Open	10nF	open	Open	10nF	X	Open	10nF
Vout2									
Vout3									
Vout3 equals External Ramp							0Ω	Open	Open
Ratiometric Tracking: Vout1 tracking Vout3	63.4kΩ	20.0kΩ	Open	63.4kΩ	20.0kΩ	Open			
Vout2 tracking Vout3									
Coincident Tracking (Default): Vout1 tracking Vout3	43.2kΩ	20.0kΩ	Open	24.9kΩ	20.0kΩ	Open			
Vout2 tracking Vout3									
Vout3 tracking ext. ramp							Resistor divider	Open	

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

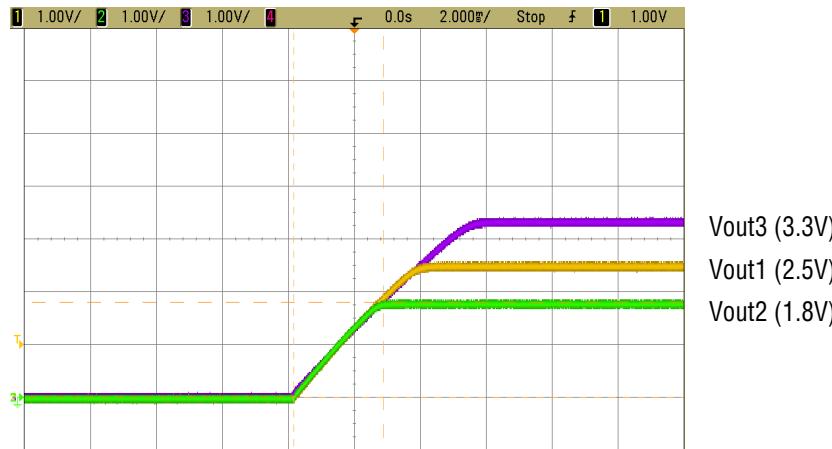


Figure 3. Default coincidental startup tracking

## FREQUENCY SYNCHRONIZATION

Demonstration circuit 1231's Mode selector allows the converter to run in CCM, pulse skip or Burst Mode operation by changing position of jumper JP4. For

synchronizing to an external clock source, however, some bench modification is needed. Refer to Table 3 and to the data sheet for more details.

Table 3. Free Running and Synchronized Operation Options

CONFIGURATION	FREQ PIN COMPONENTS	MODE SELECTOR	
R48	R63	R47	JP4
Free Running	10kΩ	0Ω	3.16kΩ
Synchronized to External Clock	open	10kΩ	0.01μF

## INDUCTOR DCR SENSING AND RESISTOR SENSING

The DCR sense circuit uses the resistive voltage drop across the inductor to estimate the current. In contrast to the traditional sense resistor current feedback, the DCR sensing circuit offers lower cost and higher efficiency, but results in less accurate current limit due to the large variation of the inductor DC resistance. For

modifying the demo board for DCR sensing, please refer to Table 4. An efficiency improvement of 1% or more is still possible for optional DCR sensing.

The typical efficiency versus load current for each of the outputs is given in Figures 4 to 6 respectively for a range of input voltages.


# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING


---

**Table 4. DCR sensing component selection**

REMOVE RSENSE NETWORK		ADD DCR SENSE NETWORK			
Vout1	R21, R22 = Open, RSNS1 = Short	R51 = 1.69kΩ	R52 = 22.6kΩ	R53 = 0Ω	C21 = 0.1μF
Vout2	R23, R24 = Open, RSNS2 = Short	R52 = 1.69kΩ	R55 = 22.6kΩ	R56 = 0Ω	C22 = 0.1μF
Vout3	R25, R26 = Open, RSNS3 = Short	R53 = 2.74kΩ	R58 = 7.5kΩ	R59 = 0Ω	C23 = 0.1μF

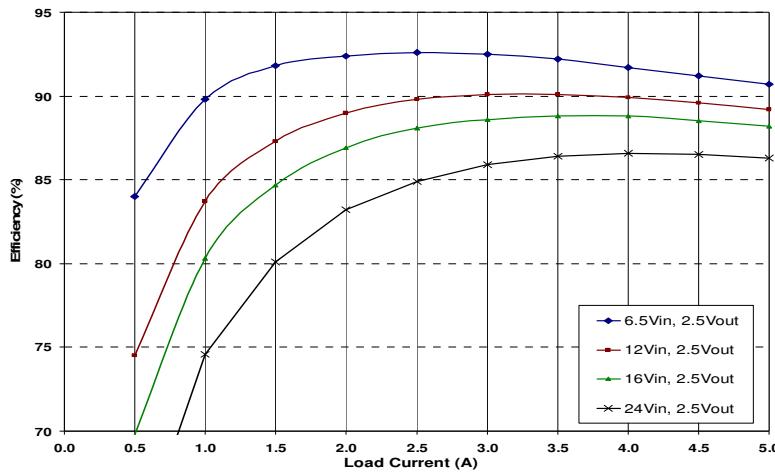

**Figure 4. Typical Efficiency vs. Load Current for Vout1 (2.5V) vs. Vin**

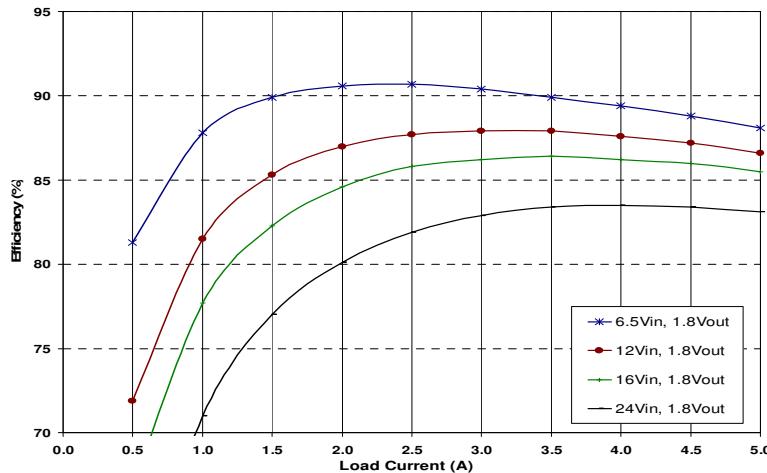

**Figure 5. Typical Efficiency vs. Load Current for Vout2 (1.8V) vs. Vin**

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

---


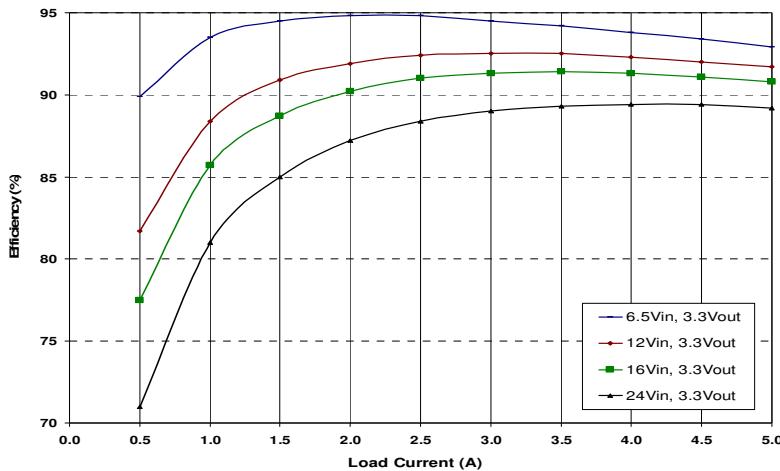


Figure 6. Typical Efficiency vs. Load Current for Vout3 (3.3V) vs. Vin

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A



## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

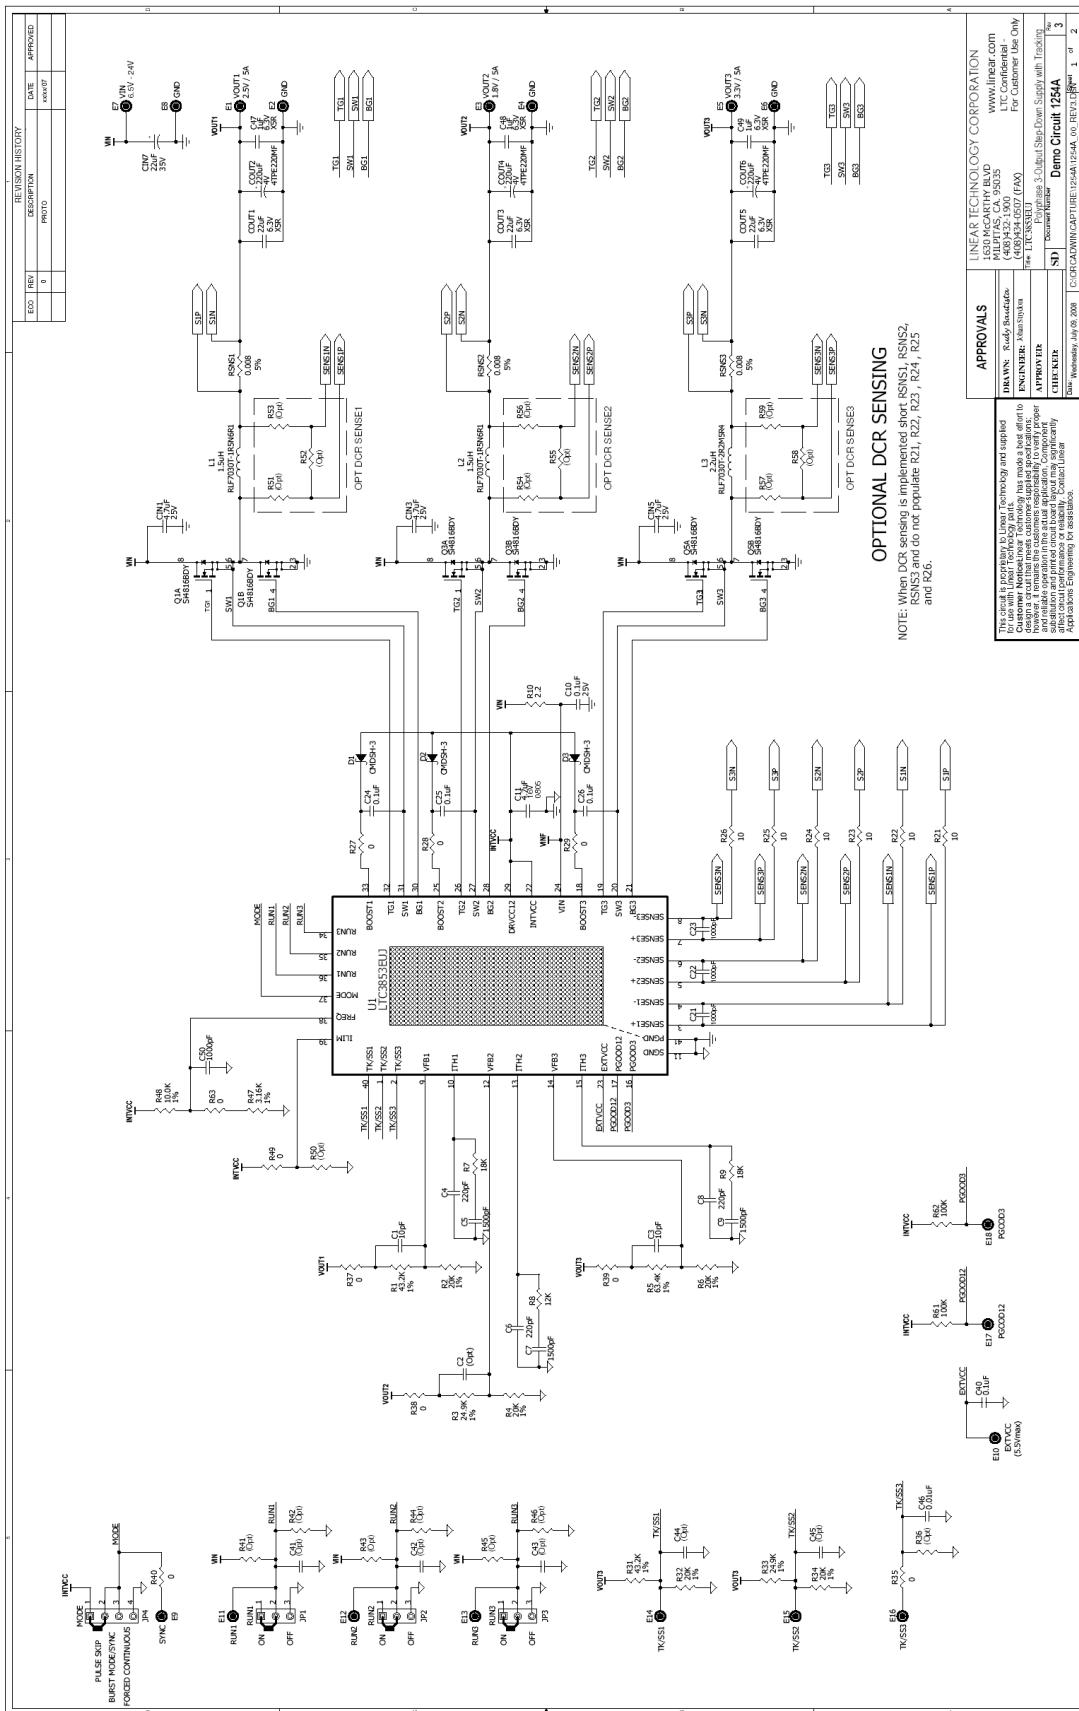

# QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1254A

## POLYPHASE 3-OUTPUT STEP-DOWN SUPPLY WITH TRACKING

### OPTIONAL MOSFETS

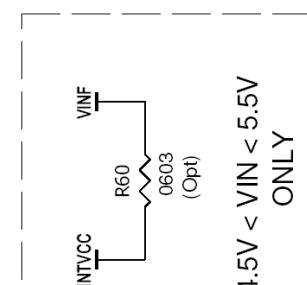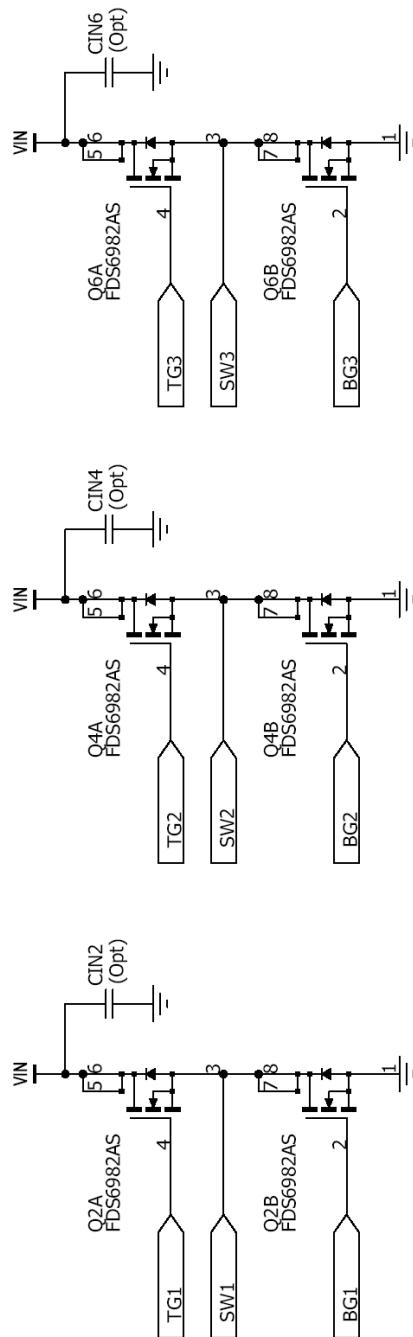

$4.5V < V_{IN} < 5.5V$   
ONLY

<b>APPROVALS</b>		LINEAR TECHNOLOGY CORPORATION	
DRAWN: Rudy Bautista		www.linear.com 1630 McCARTHY BLVD MILPITAS, CA 95035	
ENGINEER: Johan Syridom	(408)432-1900 (408)434-0507 (****)	Title: LTC3853EUJ	LTC Confidential - For Customer Use Only
APPROVED:		Polyphase 3-Output Step-Down Supply with Tracking	
CHECKED:	SD	Document Number	<b>Demo Circuit 1254A</b>
		Rev	3
Date: Wednesday, July 09, 2008	C:\ORCAD\WIN\CAPTURE\1254A\1254A_00_REV3.DSN	Sheet	2 of 2
			1
			2
			3
			4
			5



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: [org@eplast1.ru](mailto:org@eplast1.ru)

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.