


TERMINATION

- 1** Remove all but one twist per pair, smooth conductors and arrange in proper color sequence.

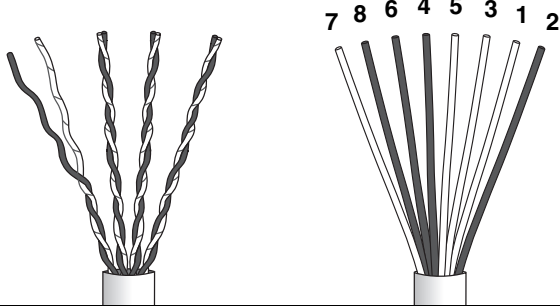


MINI-COM MINI-JACK Color-Coded Wire Positions


Part Numbers - CJ588, CJD588, MUAJC588					
T568A			T568B		
2	GREEN	R3	2	ORANGE	R2
1	WHITE/GREEN	T3	1	WHITE/ORANGE	T2
3	WHITE/ORANGE	T2	3	WHITE/GREEN	T3
5	WHITE/BLUE	T1	5	WHITE/BLUE	T1
4	BLUE	R1	4	BLUE	R1
6	ORANGE	R2	6	GREEN	R3
8	BROWN	R4	8	BROWN	R4
7	WHITE/BROWN	T4	7	WHITE/BROWN	T4

See Page 2 for CJ64/66/88 Series Wiring Sequences


2

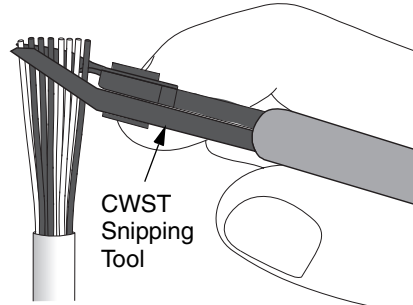


3

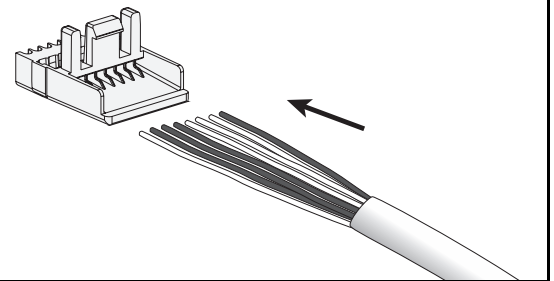


4

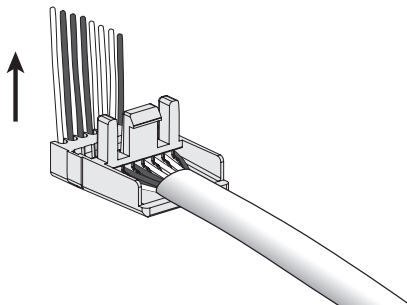


5

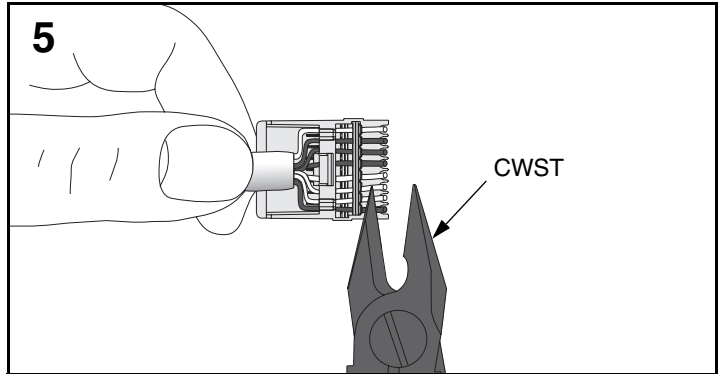


6

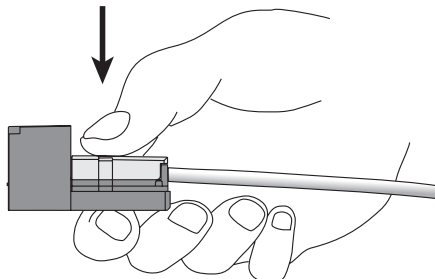

7

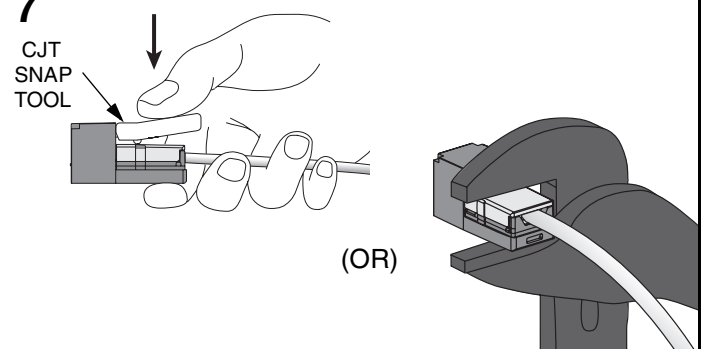




TERMINATION CAP REMOVAL

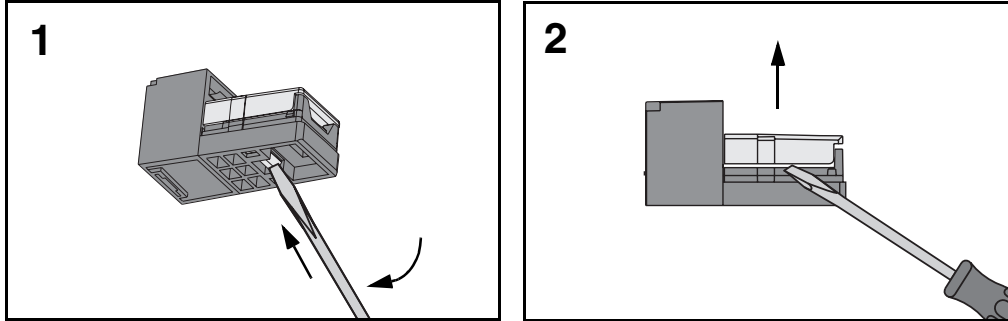

CATEGORY 3 *MINI-JACK* CJ64/66/88 SERIES WIRING SEQUENCES

10 Base-T	EIA/TIA 568A, ISDN	USOC 4-Wire (8 Pin Jack)	RJ45, USOC 8-Wire	EIA/TIA 568B, AT&T 258A, WECO	USOC 4-Wire, in 6 pin	USOC 6-Wire (8 Pin Jack)	USOC, RJ11/RJ25
1 WHT/GRN T3 2 GRN R3 3 WHT/BRN T4 4 NC NC 5 NC NC 6 BRN R4 7 NC NC 8 NC NC	1 WHT/GRN T3 2 GRN R3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 WHT/BRN T4 8 BRN R4	1 NC NC 2 NC NC 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 NC NC 8 NC NC	1 BRN R4 2 WHT/GRN T3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 GRN R3 8 WHT/BRN T4	1 WHT/ORG T2 2 ORG R2 3 WHT/GRN T3 4 BLU R1 5 WHT/BLU T1 6 GRN R3 7 WHT/BRN T4 8 BRN R4	1 WHT/ORG T2 2 BLU R1 3 WHT/BLU T1 4 ORG R2 5 6	1 NC NC 2 WHT/GRN T3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 GRN R3 8 NC NC	1 WHT/GRN T3 2 WHT/ORG T2 3 BLU R1 4 WHT/BLU T1 5 ORG R2 6 GRN R3

WIRING DIAGRAMS FOR CJ588, CJD588, MUAJC588, CJ64/66/88 SERIES

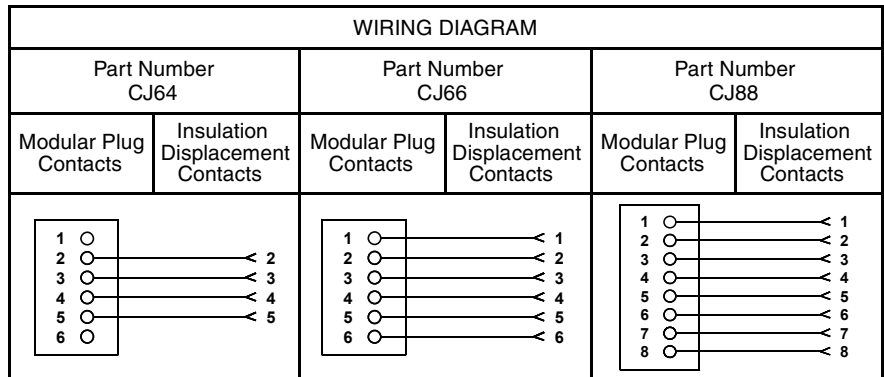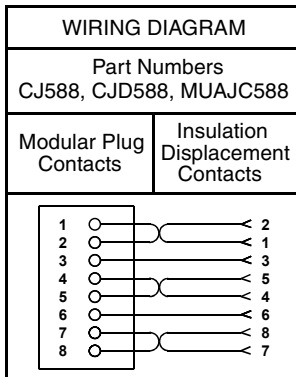

Notes:

- For specified performance, follow TIA/EIA 568-B installation guidelines.
- Jack Modules can terminate PVC or Plenum rated 22-24 AWG solid or stranded IWC cable with 0.048 inch (1.2 mm) maximum insulated conductor outside diameter.
- Jack Modules may be re-terminated a minimum of 10 times.
- For technical and performance information, consult *PANDUIT* Technical Support.
- MUAJC588 Jack Modules suit a standard switch mechanism pattern on various Australian faceplates.
- For *MINI-COM MINI-JACK* Shielded Jack Module instructions, refer to PN348*.

As with all Wiring Accessories, the following statements apply:

- Never install communications wiring during a lightning storm.
- Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
- Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- Use caution when installing or modifying communication wiring.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp



www.panduit.com

E-mail:
cs@panduit.com

Fax:
(708) 444-6993



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.