



# **SCANSTA112**

## **7-port Multidrop IEEE 1149.1 (JTAG) Multiplexer Evaluation Kit Documentation**



**Rev 2.0**  
**January 14, 2005**

## SCANSTA112 Evaluation Card

The purpose of the evaluation card is to provide the user with a simple method to evaluate the features of the SCANSTA112 device. In order to use the card, the user will need a method to generate, deliver, and diagnose test vectors using the IEEE 1149.1 interface. The user will also have to provide a target boundary scan chain (one or more devices) connected to one or more of the STA112 local ports.

The STA112 Evaluation card has been designed to either function as a standalone card, or may be plugged into National's SCAN STA Evaluation Kit backplane (available on our web site, p/n SCANSTAEVK). There are two differences between the two functions: 1) How the B0 backplane 1149.1 signals are connected to the STA112, and 2) how the power is provided to the board.

## Eval Card Features

### Address Selection

The card (STA112) address can be selected by switching the two hexadecimal switches (S14 and S15) to the desired position. S15 is the least significant hexadecimal digit, and S14 is the most significant digit (Example: for the address 1F, S14 should be in position "1", and S15 should be in position "F").

### Local Port Selection

The STA112 multiplexes the JTAG signals from the primary backplane B0 bus to up to 7 local scan ports (LSPB1, LSP1, LSP2, LSP3, LSP4, LSP5, LSP6) in accordance with the device datasheet. The local ports LSPB1, LSP1 and LSP2 are passed onto the J1 DIN connector. Three LED's indicate their functional operation. Diode LED1 lights up when LSPB1 is active, LED2 lights up when LSP1 is active, and LED3 lights up when LSP2 is active. LSP3 on connector J2 also has an LED4 to show it's active state - this LSP should be used as the primary LSP when not using LSP's on the J1 DIN connector.

### Control Switches

Switches are provided to manually set the state for the STA112 control inputs: TLR\_TRST6, TLR\_TRST, SB/S\*, TRAN, MPSEL, OE\*, and ADDMASK. Refer to the schematic and datasheet to determine the proper switch positions for the operating mode you are evaluating.

## Using the STA112 Evaluation Card in Standalone Mode

### External Power

When used in standalone mode, the STA112 does not receive power thru the J9 DIN connector; power must be supplied from an external source thru the connector block J8. The voltage should be  $3.3V \pm 5\%$ .

### Connecting a JTAG master to the STA112 Primary backplane B0 Port

In standalone mode, connector J6 must be used to connect the vector delivery tools/hardware to the STA112 Eval card. Refer to the schematic for the connector pin out.

## Using the STA112 Evaluation Card with the SCAN STA Evaluation Kit

Two 64-pin DIN connectors (J1 and J9) are provided which map to the pin-out of the connectors on the STA EVK backplane. The J9 connector of the card should be plugged in to the backplane, another multidrop card, or to a pass-through card. The J9 connector receives the B0 (primary backplane) JTAG bus and passes it to U1, which is a STA112 device.

The signals that are passed thru the multidrop card from J9 to J1 without going through the STA112 device are a spare "passthru" JTAG bus, the DATA, and the analog buses AT1 and AT2. The power and ground from J9

supply the STA112 and are also passed through to J1. All these features are used when the complete STA Eval Kit is used. Please refer to the schematic for a more detailed view of the multidrop card.

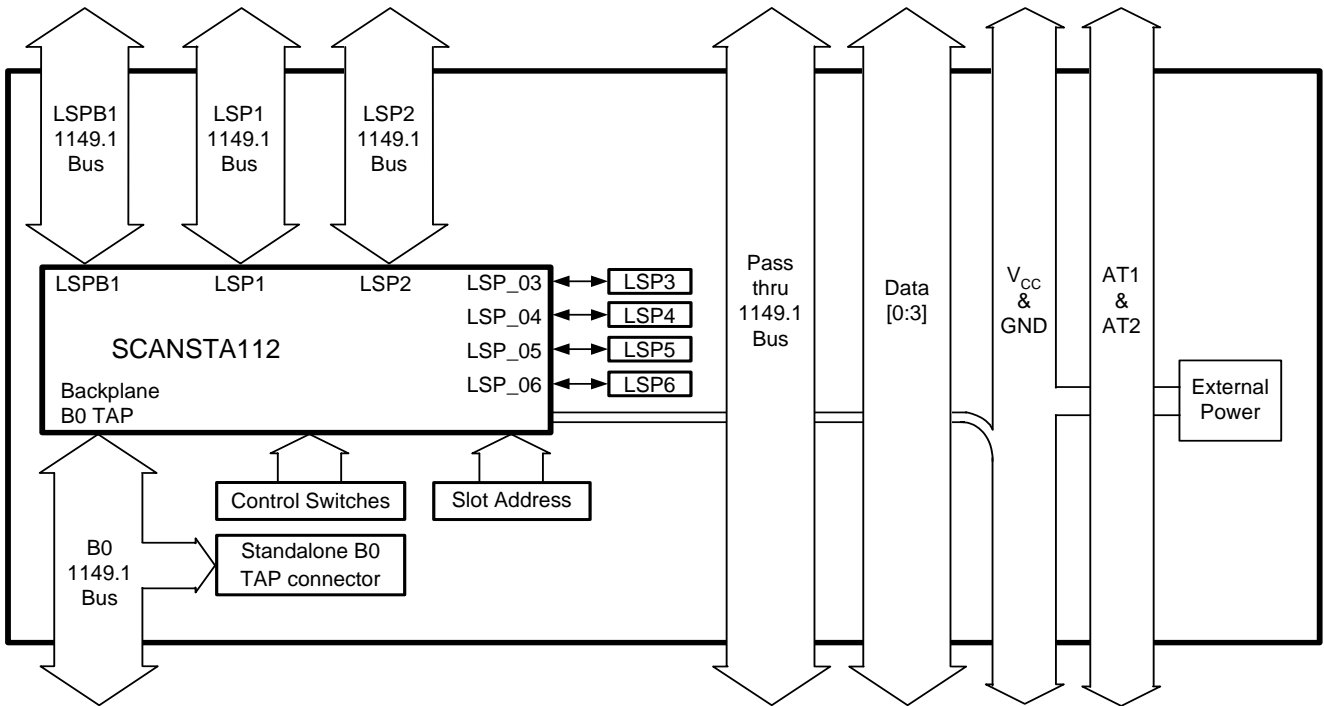


Figure 1, Basic block diagram of the STA112 Multidrop card





Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.