

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1320A

HIGH POWER DENSITY STEP-DOWN CONVERTER

LTC3608/9EWKG

DESCRIPTION

Demonstration circuit 1320A is a high power density step-down DC/DC converter featuring LTC3608EWKG/LTC3609EWKG high current, high input voltage monolithic DC/DC step-down converter. The input voltage of the demo board is from 5V to 20V for DC1320A-A with LTC3608EWKG and 5V to 28V for DC1320A-B with LTC3609EWKG. The output voltage is jumper-selectable [1.5V/1.8V/2.5V/3.3V@8A](#). The converter provides the main output with high efficiency, high power density and fast transient based on constant on-time valley current mode control.

The converter can be configured for discontinuous or forced continuous operation at light load. The converter switching frequency is compensated for variations in V_{in} and V_{out} . The LTC3608/9EWKG is in a compact 7mm X 8mm QFN package.

Design files for this circuit board are available. Call the LTC factory.

 , LTC and LT are registered trademarks of Linear Technology Corporation.

Table 1. Performance Summary ($T_A = 25^\circ\text{C}$)

PARAMETER		CONDITION	VALUE
Input Voltage		Typical	5V-20V for DC1320A-A 5V-28V for DC1320A-B
Output Voltage V _{OUT}		I _{OUT} = 0A to 8A	1.5V/1.8V/2.5V/3.3V ± 2%
Maximum Output Current		V _{IN} = 5V-20V (DC1320A-A)	8A
		V _{IN} = 5V-28V (DC1320A-B)	8A
Nominal switching frequency		V _{in} =5V-28V , V _{out} =1.5V/1.8V/2.5V/3.3V, I _{out} =0-8A	500kHz-700kHz
Full Load Efficiency	DC1320A-A	V _{IN} = 5V, V _{OUT1} = 1.8V, I _{OUT1} = 8A	89% Typical
		V _{IN} = 12V, V _{OUT1} = 1.8V, I _{OUT1} = 8A	87.5% Typical
		V _{IN} = 20V, V _{OUT1} = 1.8V, I _{OUT1} = 8A	85.5% Typical
	DC1320A-B	V _{IN} = 5V, V _{OUT2} = 1.8V, I _{OUT2} = 8A	87.5% Typical
		V _{IN} = 12V, V _{OUT1} = 1.8V, I _{OUT1} = 8A	83.2% Typical
		V _{IN} = 24V, V _{OUT1} = 1.8V, I _{OUT1} = 8A	82.2% Typical

QUICK START PROCEDURE

Demonstration circuit 1320 is easy to set up to evaluate the performance of the LTC3608/9EWKG. Refer to **Figure 1 for proper measurement equipment setup** and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long

1. With power off, connect the input power supply to VIN and GND. Connect the load between VOUT1, VOUT2 and GND. Preset the load current at 0A (minimum). Refer to Figure 1 for correct test set up. The RUN/SS1 and RUN/SS2 jumpers should be at "on" position.

2. Turn on the input power.

NOTE: Make sure that the input voltage does not exceed 20V for A-A and 28V for A-B.

3. Check for the proper output voltages:

$V_{out}=1.8V, \pm 2\%$

ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the Vin or Vout and GND terminals. See Figure 2 for proper scope probe technique.

NOTE: If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

4. Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

5. The output voltage can be programmed to other voltages 1.5V/2.5V/3.3V by selecting jumper. The output voltage deviations should be within $\pm 2\%$ of nominal voltages.

6. Typical efficiency curves are shown in Figure 3, Figure 4 and Figure 5.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1320A

HIGH POWER DENSITY STEP-DOWN CONVERTER

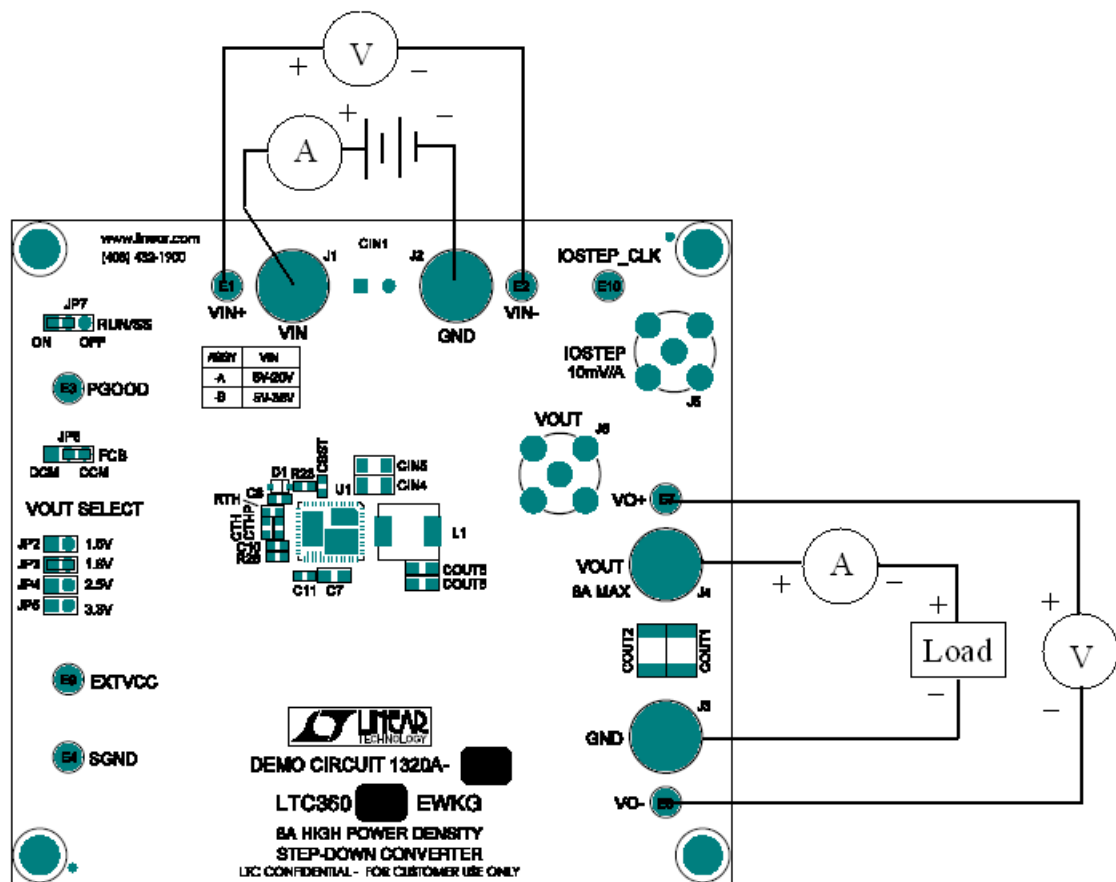


Figure 1. Proper Measurement Equipment Setup

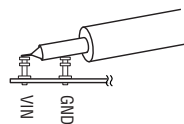


Figure 2. Measuring Input or Output Ripple

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1320A

HIGH POWER DENSITY STEP-DOWN CONVERTER

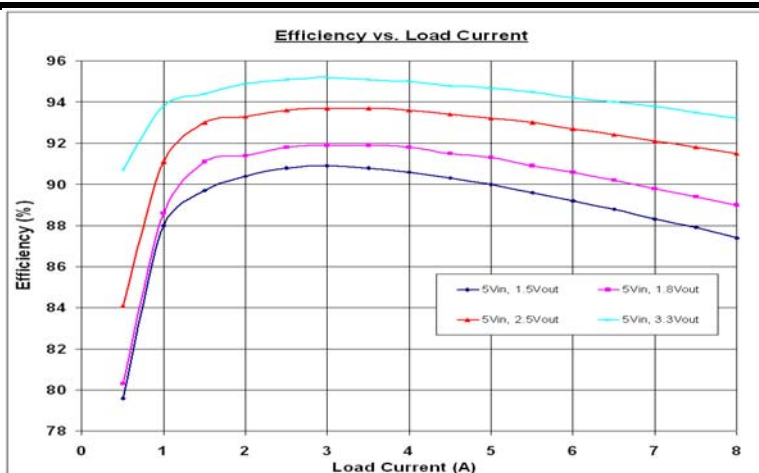


Figure 3. Typical Supply Efficiency vs Load Current of DC1320A-A at $V_{in}=5V$

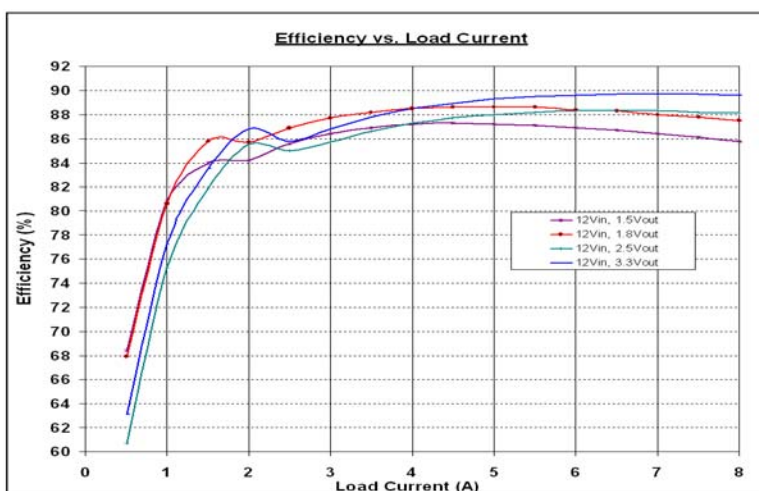


Figure 4. Typical Supply Efficiency vs Load Current of DC1320A-A at $V_{in}=12V$


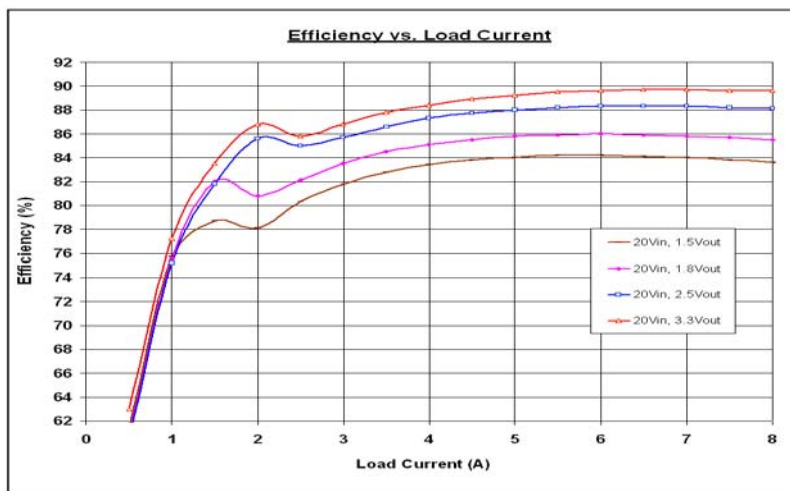


Figure 5. Typical Supply Efficiency vs Load Current of DC1320A-A at $V_{in}=20V$

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1320A

HIGH POWER DENSITY STEP-DOWN CONVERTER

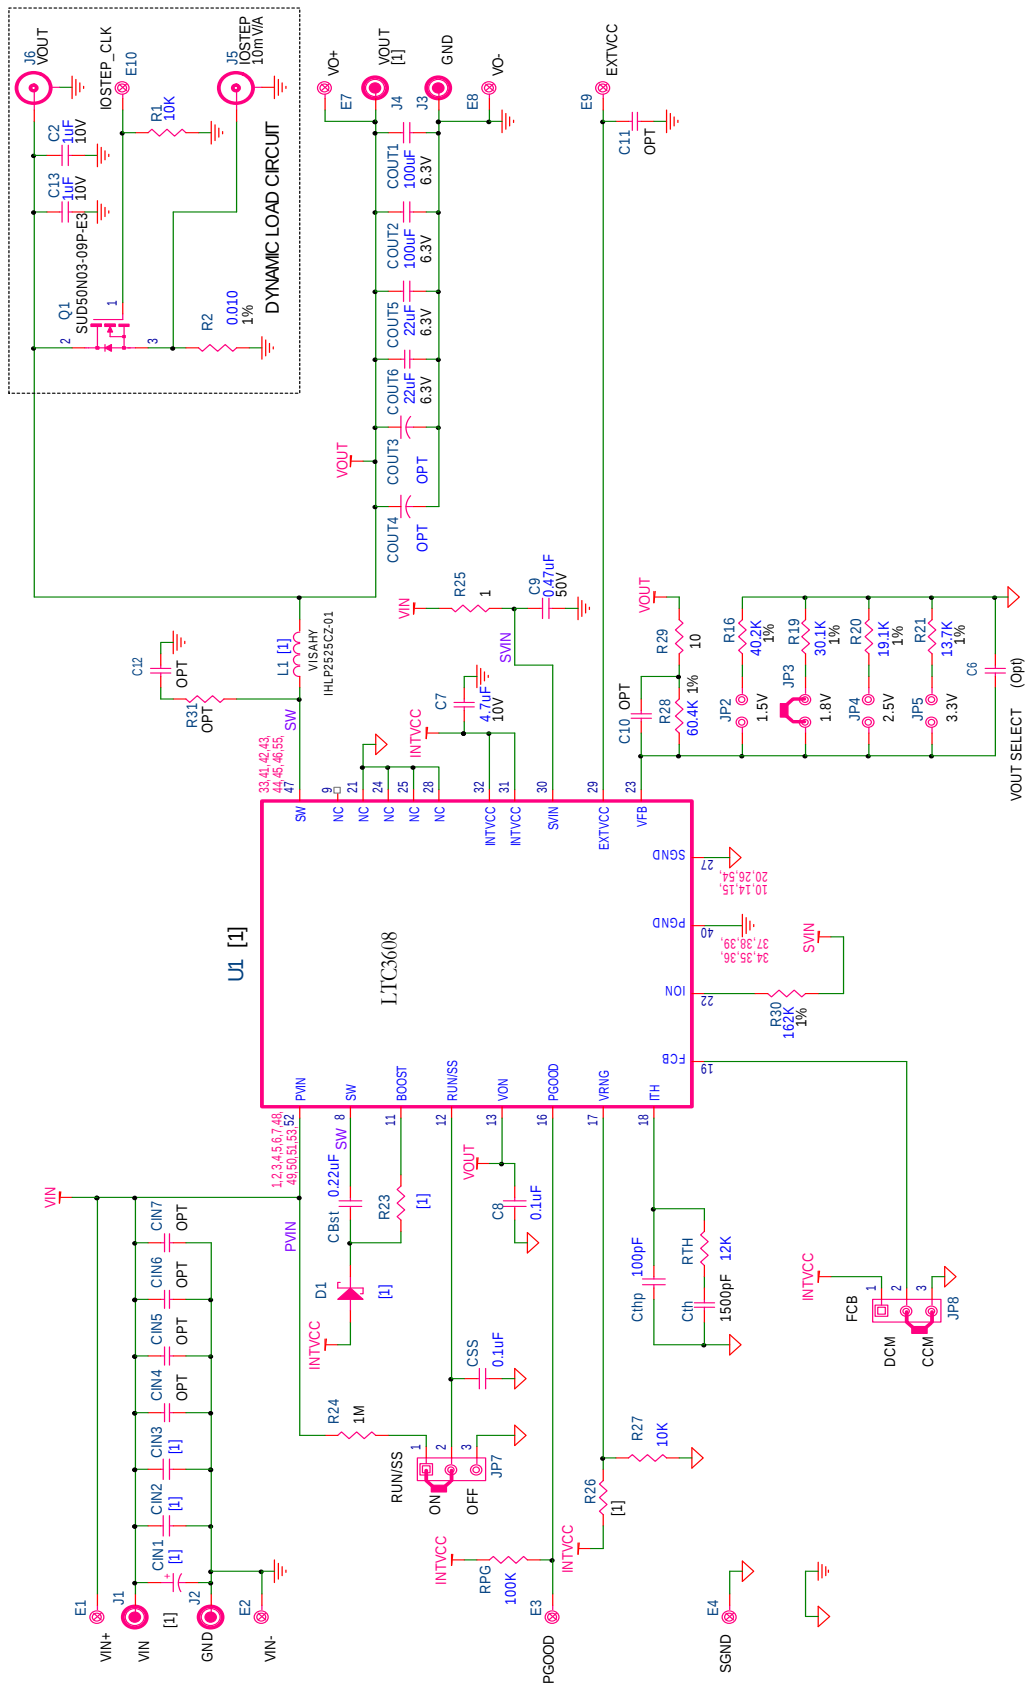

[1]

ASSY	VIN	VOUT	D1	CIN1	CIN2, CIN3	U1	R23	L1
- A	5V - 20V	8A MAX	CMOHS-3	150uF, 35V	10uF, 35V	LTC3608EWKG	OPT	3.3 10uH
- B	9V - 32V	6A MAX	SDML0K45	100uF, 50V	10uF, 50V	LTC3609EWKGHV	35.7K	4.7 1.5uH



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.