

PCE-5B13(7B14)-03 Backplane: 13(14)-slot BP for 14-Slot Chassis, 1 x PICMG 1.3, 9 (10) x PCIe, 3 x 32-bit/33-MHz PCI

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- One 2 port USB cable P/N: 1700002204
- PCE-5B13(7B14)-03 startup manual
- M4*6*0.7 round screws (20 pieces) P/N: 1939000410
- 2-year quality warranty card P/N: 2190000902

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Specifications

Standard functions

- **PICMG 1.3 Slot:**
PCE-5B13-03 supports PCE-5xxx CPU Cards
PCE-7B14-03 supports PCE-7xxx CPU Cards
- **PCIe Slots:**
PCE-5B13-03: 1 x PCIe x16, 8 x PCIe x4
PCE-7B14-03: 2 x PCIe x8, 3 x PCIe x4
- **32-bit PCI Slots:**
PCE-5B13-03: 3 32-bit/33-MHz PCI
PCE-7B14-03: 3 32-bit/33-MHz PCI
- **USB (2.0) Support:** Four Universal Serial Bus ports to Backplane

Note: Some add-on cards installed on this backplane may cause CPU card BIOS resource allocation problems, if this occurs please contact Advantech technical support staff for help in solving the problems.

Mechanical and Environment

- **Dimensions:** 327.66 x 315.45 mm
- **Power supply voltage:** +12 V, +5 V, -12 V, -5 V, +5 V SBY, +3.3 V
- **Power requirements:** Depends on the CPU board, add-on card & peripherals
- **Operating temperature:** 0 ~ 60° C

For more information on this and other Advantech products, please visit our website at:

<http://www.advantech.com>

<http://www.advantech.com/eplatform>

For technical support and service, please visit our support website at:

<http://www.advantech.com/support>

This manual is for the PCE-5B13-03A1E(PCE-7B14-03A1E) series.

Part No. 20015B1300
Printed in China

1st Edition,
Jan. 2018

Connectors and Jumpers

This table shows the function of each jumper and connector:

Connectors	
Label	Function
SHBA1~SHBD1	PICMG1.3 CPU board slot
PPCIE2	PCIe x 16 slot (Only on PCE-5B12-07)
PPCIE1, PPCIE2	PCIe x8 slots (Only on PCE-7B13-07)
P1PCIE1~P1PCIE3	PCIe x4 slots
PPC1~ PPC13	32 Bit / 33 MHz PCI Bus slots
EATXPWR1	ATX2.0 24-pin Power Connector
EATX12V1	ATX 12V Auxiliary 8-pin Power Connector
ATX12V1	ATX 12V 4-pin Power Connector
PWR3V1	3.3V Auxiliary Power Connector
PWR3V2	3.3V Auxiliary Power Connector
VOLT1	Alarm board / CMM Power Connector
FAN1~5	FAN Connector (Horizontal Type)
FAN6~7	FAN Connector (Vertical Type)
FANDEC1	FAN speed detector Connector (Optional)
SMBUS1~SMBUS2	System Management Bus (Optional)
JFP1	Power and Reset button Connector
IPMB1	IPMB Connector (Optional)
USB12	Two USB port pin header
USB34	Two USB port pin header

Note: In this backplane's default configuration, FAN-DEC1, SMBUS1~SMBUS3, IPMB1 pin-headers are NOT populated, those footprints are reserved for customization.

Jumpers	
Label	Function
PSON1	ATX / AT Mode Selection

Connectors and Jumpers (Cont.)

EATXPWR1

Pin	Name
1	3.3 V
2	3.3 V
3	GND
4	5 V
5	GND
6	5 V
7	GND
8	Power OK
9	5 V SBY
10	12 V
11	12 V
12	3.3 V
13	3.3 V
14	-12 V
15	GND
16	PSON#
17	GND
18	GND
19	GND
20	-5 V
21	-5 V
22	5 V
23	5 V
24	GND

ATX12V1

Pin	Name
1	GND
2	GND
3	12 V
4	12 V

Connectors and Jumpers (Cont.)

EATX12V1

Pin	Name
1	GND
2	GND
3	GND
4	GND
5	12 V
6	12 V
7	12 V
8	12 V

PWR3V1 & PWR3V2

Pin	Name
1	3.3V
2	3.3V
3	3.3V
4	GND
5	GND
6	GND

VOLT1

Pin	Name
1	5 V SBY
2	GND
3	GND
4	-5 V
5	5 V
6	3.3 V
7	-12 V
8	12 V

FAN1~FAN7

Pin	Name
1	GND
2	12 V
3	FANIO1~FANIO7

Connectors and Jumpers (Cont.)

FANDEC1

Pin	Name
1	FANIO1
2	FANIO2
3	FANIO3
4	FANIO4
5	FANIO5
6	FANIO6
7	FANIO7

SMBUS1~SMBUS3

Pin	Name
1	5 V
2	C-SMBBUS
3	C-SMBDAT
4	GND

IPMB1

Pin	Name
1	IPMB_CLK
2	IPMB_DAT
3	GND

USB12

Pin	Name
1	USBV0
2	USBV0
3	USBD0-
4	USBD1-
5	USBD0+
6	USBD1+
7	GND
8	GND
9	Null
10	GND

Connectors and Jumpers (Cont.)



USB34	
Pin	Name
1	USBV2
2	USBV2
3	USBD2-
4	USBD3-
5	USBD2+
6	USBD3+
7	GND
8	GND
9	Null
10	GND

Connectors and Jumpers (Cont.)

PS0N1: ATX / AT Mode Selection

Setting	Function
1-2	AT Mode
2-3*	ATX Mode

* Default



JFP1

Pin	Name
1	VCC
2	PWRBTN
3	RESET#
4	GND

Board Layout

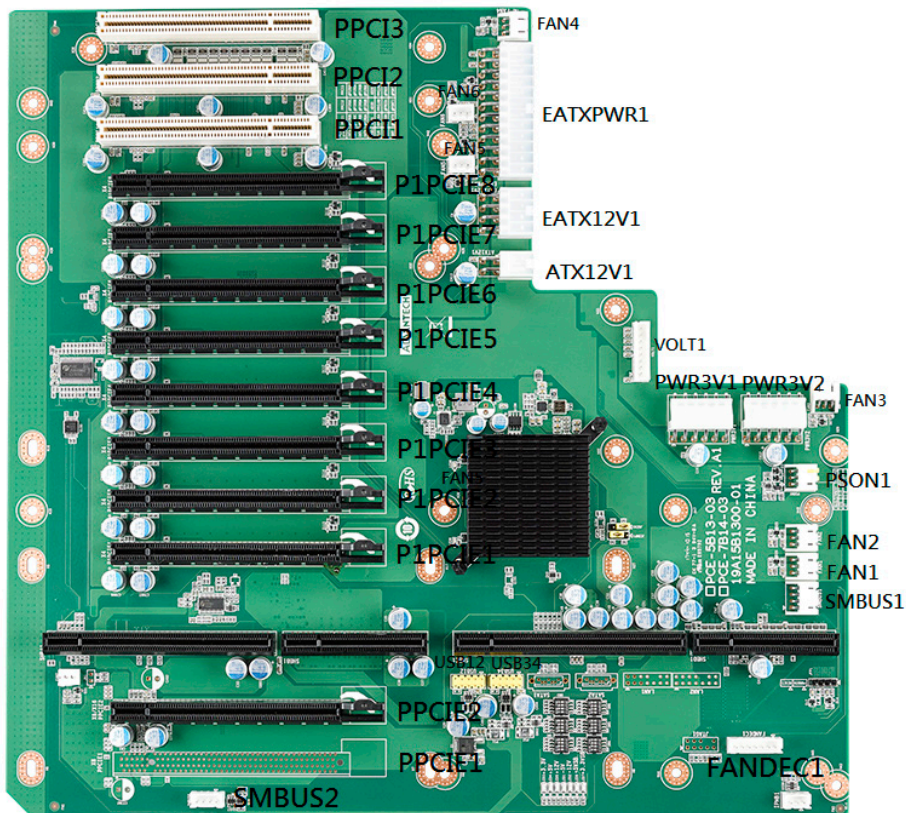


Figure 1: Board Layout

- Note:**
1. Some add-on cards installed on this backplane may cause CPU card BIOS resource allocation problems, if this occurs please contact Advantech technical support staff for help in solving the problems.
 2. In this backplane's default configuration, FANDECI, SMBUS1~SMBUS2, IPMB1 pin-headers are NOT populated, those footprints are reserved for customization.

Board Dimensions

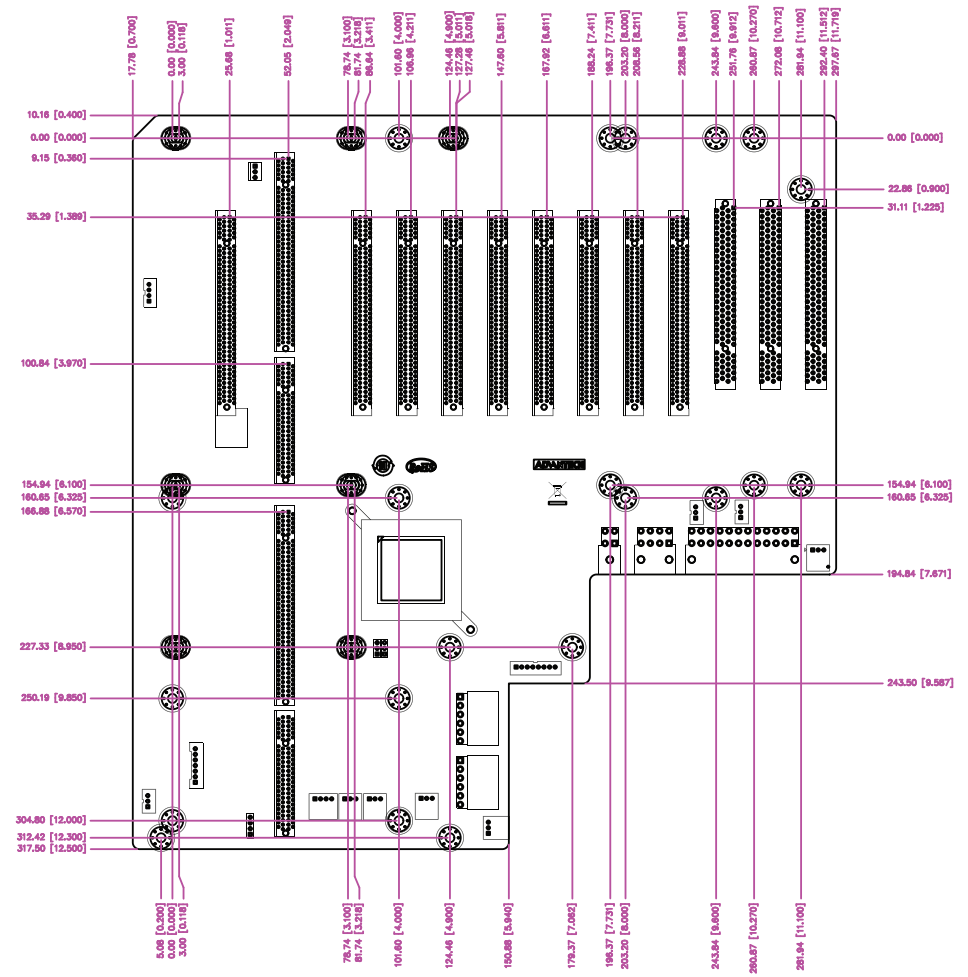


Figure 2: Board Dimensions

Board Diagram

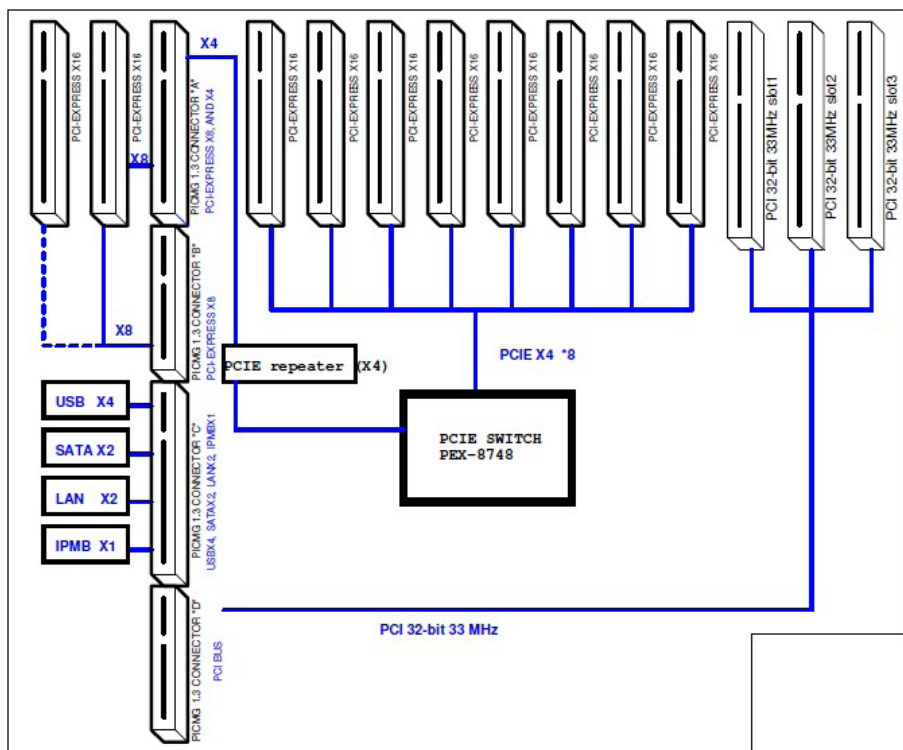


Figure 3: Board Diagram

PCI Routing Table

PCI 32-bit from ICH				
PCI Interrupt Pin Route	PCI Slot	PPCI1	PPCI2	PPCI3
	IDSEL	AD31	AD30	AD29
	INTA	INTB	INTC	INTD
	INTB	INTC	INTD	INTA
	INTC	INTD	INTA	INTB
	INTD	INTA	INTB	INTC



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.