

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 486B

DUAL-SMART BATTERY CHARGER/SELECTOR BOARD

LTC1760

DESCRIPTION

Demonstration circuit 486B is a dual Smart Battery PowerPath and charger controller featuring the LTC1760. The input voltage is 12 to 20V. The charger output voltage is programmed SMBus serial interface. The maximum charge current is 4A. The demoboard has been optimized to work with 2, 3 and 4-Cell Li-ion battery packs. A jumper is provided to select trip for low battery voltage (LOBAT), VLIMIT (VLIM), and ILIMIT (ILIM). The board will automatically charge any battery chemistry or cell configuration within the limits provided. By default, the board will power up in 3-Diode mode, which simply means all three power paths to the output (load) are on. The LTC1760 follows the Smart Battery Standards for the Smart Battery System Manager (SBSM) specification. The standard specifies that all PowerPath selection is automatically controlled exclusively by the LTC1760. There is no SMBUS interface command to control the

power paths. A user-selectable standalone mode is provided where the host SMBus lines become battery status output signals and can be monitored with the on-board LEDs.

OPTIONAL DC1223A-B Demoboard: The DC486B demoboard is populated with connectors that allow the use of an optional DC1223A-B SMBUS-to-USB port adapter and associated software to control the LTC1760 and monitor the batteries for demonstration purposes only. The software also supports data logging. Contact your LT representative for ordering a DC1223A-B.

Design files for this circuit board are available. Call the LTC factory.

PowerPath is a trademark of Linear Technology Corporation

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Maximum Input Voltage	Limited by input capacitor voltage rating	20V +/- 10 %
Recommended Minimum Input Voltage		12V +/- 10%
Low Battery Voltage Trip point at full discharge	0% capacity voltage. Set by DCLOW TRIP Jumper.	5.3V for 2-cell Li-ion 7.9 for 3-cell Li-ion 11V for 4-cell Li-ion.
Input Trip Voltage	Set by DCDIV divider network	10.7V +/- 3%
Maximum Charge Current	$V_{IN} > V_{BATmax} > 6V$	4A +/- 5% Adjustable to 1, 2 and 3A.
Short-Circuit Shutdown Trip Current	Static Load $T > 15ms$	8.33A +/- 5%
Input Current Limit	$IBAT + ILOAD$	3.57A +/- 5%


QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 486B

DUAL-SMART BATTERY CHARGER/SELECTOR BOARD

QUICK START PROCEDURE

1. Connect the input power source to J1 or DCIN and GND terminals using a power supply capable of handling 4A of current within the 11 to 20V range. The input supply MUST be greater than the full battery voltage to allow a full charge to take place.
2. Connect the load to DCOUT and GND terminals.
3. Turn on the input power supply.
4. Plug in one or two Smart Batteries of your choice to BATTERY 1 and/or BATTERY2. Industry standard 5-Pin AMP Smart Battery connectors are provided as well as test points.
5. Optionally use the provided DC1223A-B demonstration software to control and configure the DC486B.

Figure 1. Proper Measurement Equipment Setup

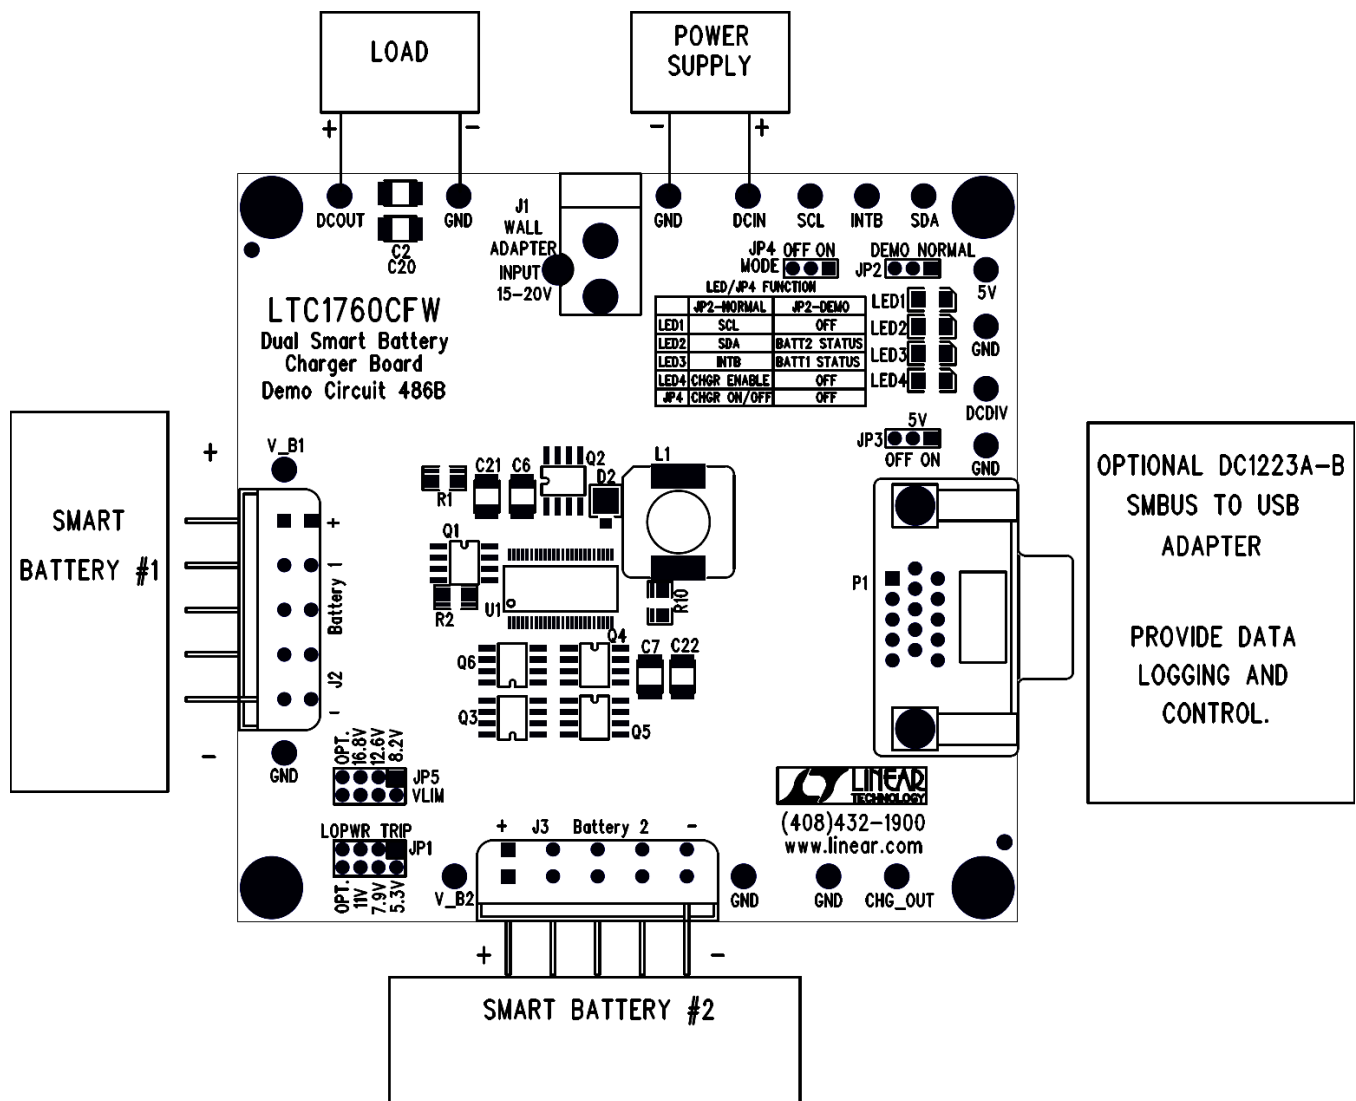



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.