

Evaluation Board User Guide

One Technology Way • P.O. Box 9106 • Norwood, MA 02062-9106, U.S.A. • Tel: 781.329.4700 • Fax: 781.461.3113 • www.analog.com

Evaluation Board for the AD5110 Digital Potentiometer

FEATURES

Full-featured evaluation board for the AD5110
Several test circuits
Various ac/dc input signals
PC control via a separately purchased system demonstration platform (SDP)
PC control software

PACKAGE CONTENTS

Resistor tolerance error stored in EEMEM

EVAL-AD511xSDZ evaluation board
CD that includes
Self-installing software that allows users to control the
board and exercise all functions of the device
Electronic version of the AD5110 data sheet
Electronic version of the UG-322 user guide

GENERAL DESCRIPTION

This user guide describes the evaluation board for evaluating the AD5110—a single-channel, 128-position, nonvolatile memory digital potentiometer.

The AD5110 supports single-supply 2.3 V to 5.5 V operation, making the device suited for battery-powered applications and many other applications, offering guaranteed low resistor tolerance errors of $\pm 8\%$ and high bandwidth while allowing up to ± 6 mA current density in the A, B, and W pins.

The logic voltage levels operate from single 1.8 V to 5.5 V supplies.

The versatile I²C-compatible digital interface allows readback of the wiper register and EEPROM content which contain the resistor tolerance, providing an end-to-end tolerance accuracy of 0.1%.

The EVAL-AD5110SDZ can operate in single-supply mode and incorporates an internal power supply from the USB.

Complete specifications for the AD5110 part can be found in the AD5110 data sheet, which is available from Analog Devices, Inc., and should be consulted in conjunction with this user guide when using the evaluation board.

DIGITAL PICTURE OF EVALUATION BOARD WITH SYSTEM DEMONSTRATION PLATFORM

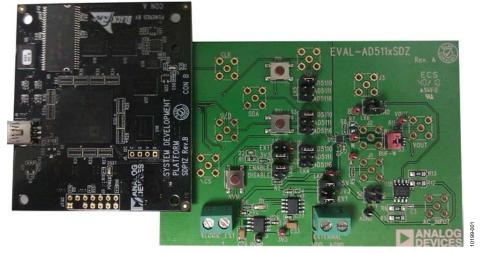


Figure 1.

UG-322

Evaluation Board User Guide

TABLE OF CONTENTS

Features]
Package Contents	1
General Description	1
Digital Picture of Evaluation Board with System Demonstration Platform	1
Revision History	2
Evaluation Board Hardware	3
Power Supplies	3
Link Options	

lest Circuits	4
Evaluation Board Software	
Installing the Software	
Running the Software	
Software Operation	
Evaluation Board Schematics and Artwork	
Ordering Information	
Rill of Materials	

REVISION HISTORY

11/11—Revision 0: Initial Version

EVALUATION BOARD HARDWARE

POWER SUPPLIES

The EVAL-AD5110SDZ supports using single power supplies.

The evaluation board can be powered either from the SDP port or externally by the EXTERNAL-1 and EXTERNAL-2 connectors, as described in Table 2.

The digital logic levels can be powered either from the SDP port or externally by the VLOGIC_EXT-1 and VLOGIC_EXT-2 connectors, as described in Table 2.

All supplies are decoupled to ground using 10 μF tantalum and 0.1 μF ceramic capacitors.

LINK OPTIONS

Several link and switch options are incorporated in the evaluation board and should be set up before using the board. Table 1 describes the positions of the links to control the evaluation board by a PC, via the SDP board, using the EVAL-AD5110SDZ. The functions of these link and switch options are described in detail in Table 3.

Table 1. Link Options Setup for SDP Control (Default)

Link No.	Option
LK2	3V3
LK8	+5V

Table 2. Maximum and Minimum Voltages of the Connectors

Connector Number	Label	Voltage	
EXTERNAL-1 VDD An		Analog positive power supply, V _{DD} .	
		If connected to the SDP, V _{DD} is 3.3 V to 5.5 V.	
		If controlled externally, V _{DD} is 2.3 V to 5.5 V.	
EXTERNAL-2	AGND	Analog ground, AGND.	
VLOGIC_EXT-1	VLOGIC_EXT+	T+ Logic positive power supply, V _{LOGIC} .	
		If connected to the SDP board, V _{LOGIC} is 3.3 V.	
		If controlled externally, V _{LOGIC} is 1.8 V to V _{DD} .	
VLOGIC_EXT-2	VLOGIC_EXT –	Logic ground, DGND.	

Table 3. Link Functions

Link Number	Power Supply	Option
LK2	V _{LOGIC}	This link selects one of the following as the logic power supply:
		3V3 (from SDP).
		EXT (external supply from the VLOGIC_EXT connector).
LK8	V _{DD}	This link selects one of the following as the positive power supply:
		+5V (from SDP).
		+3V3 (from SDP).
		EXT ¹ (external supply from the EXTERNAL connector).

¹ If the part is powered using the external connector without connecting the SDP board, +5V jumper must be connected as well.

TEST CIRCUITS

The EVAL-AD5110SDZ incorporates several test circuits to evaluate the AD5110 performance.

DAC

The AD5110 can be operated as a digital-to-analog converter (DAC), as shown in Figure 2.

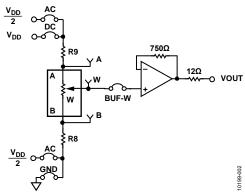


Figure 2. DAC

Table 4 shows the options available for the voltage references.

Table 4. DAC Voltage References

Terminal	Link	Options	Description
Α	LK1	AC	Connects Terminal A to V _{DD} /2
		DC	Connects Terminal A to V _{DD}
W	BUF-W		Connects Terminal W to an output buffer
В	LK6	AC	Connects Terminal B to V _{DD} /2
		GND	Connects Terminal B to analog ground

The output voltage is defined in Equation 1.

$$V_{OUT} = (V_A - V_B) \times \frac{RDAC}{256} \tag{1}$$

where:

RDAC is the code loaded in the RDAC register.

 V_A is the voltage applied to Terminal A (LK1 link).

 V_B is the voltage applied to Terminal B (LK6 link).

However, by using the R8 and R9 external resistors, the user can reduce the voltage of the voltage references. In this case, use the A and B test points to measure the voltage applied to the A and B terminals and recalculate V_{A} and V_{B} in Equation 1.

AC Signal Attenuation

The AD5110 can be used to attenuate an ac signal, which must be provided externally using the AC_INPUT connector, as shown in Figure 3.

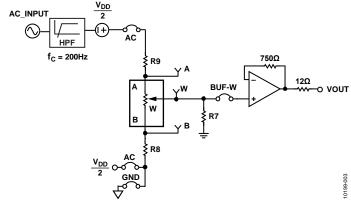


Figure 3. AC Signal Attenuator

Depending on the voltage supply rails and the dc offset voltage of the ac signal, various configurations can be used as described in Table 5.

Table 5. AC Signal Attenuation Link Options

Terminal	Link	Options	Description	
A	LK1	AC	Remove dc voltage and biased the signal to V _{DD} /2	
W	BUF-W		Connects Terminal W to an output buffer	
В	LK6	AC ¹	Connects Terminal B to V _{DD} /2	
		GND	Connects Terminal B to analog ground	

¹ Recommended to ensure optimal total harmonic distortion (THD) performance.

The signal attenuation is defined in Equation 2.

$$Attenuation (dB) \approx 20 \times \log \left(\frac{RDAC}{128} \right)$$
 (2)

where:

RDAC is the code loaded in the RDAC register.

In addition, R7 can be used to achieve an exponential attenuation. To do so, adjust the R7 resistor until a desirable transfer function is found, typically around 1.6 k Ω for a 10 k Ω potentiometer.

EVALUATION BOARD SOFTWARE

INSTALLING THE SOFTWARE

The EVAL-AD5110SDZ evaluation kit includes evaluation board software provided on a CD. The software is compatible with Windows* XP, Windows Vista, and Windows 7 (both 32 and 64 bits).

Install the software before connecting the SDP board to the USB port of the PC to ensure that the SDP board is recognized when it is connected to the PC.

- 1. Start the Windows operating system and insert the CD.
- 2. The installation software opens automatically. If it does not, run the **setup.exe** file from the CD.
- 3. After the installation is completed, power up the evaluation board as described in the Power Supplies section.
- 4. Plug the EVAL-AD511xSDZ into the SDP board and the SDP board into the PC using the USB cable included in the box.
- 5. When the software detects the evaluation board, follow the instructions that appear to finalize the installation.

To uninstall the program, click **Start > Control Panel > Add or Remove Programs > AD5110 Eval Board.**

RUNNING THE SOFTWARE

To run the evaluation board software, use the following steps:

- Click Start > All Programs > Analog Devices > AD5110 > AD5110 Eval Board.
- If the SDP board is not connected to the USB port when the software is launched, a connectivity error is displayed (see Figure 4). Connect the evaluation board to the USB port of the PC, wait a few seconds, click **Rescan**, and follow the instructions.

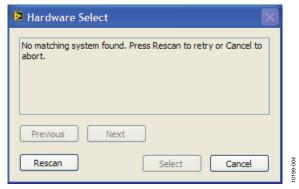


Figure 4. Pop-Up Window Error

The main window of the EVAL-AD5110SDZ evaluation software then opens, as shown in Figure 5.

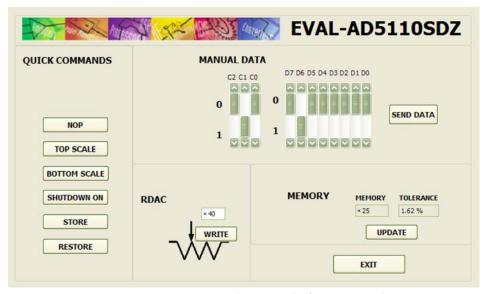


Figure 5. EVAL-AD5110SDZ Evaluation Board Software Main Window

OPERATING THE SOFTWARE

The main window of the EVAL-AD5110SDZ software is divided into the following sections: QUICK COMMANDS, MANUAL DATA, RDAC, and MEMORY. The features of the main window are as follows:

- The QUICK COMMANDS section allows you to send quick commands directly to the AD5110.
- The RDAC section can be used to update the RDAC registers by typing a value into a text box and clicking WRITE. When WRITE is clicked or a quick command is executed, a write-read operation is performed and the

- values displayed in this section are updated with the actual RDAC register values.
- The MANUAL DATA can be used to send a customized I²C data word by manually switching the scroll bars from 0 to 1 or from 1 to 0, as desired, and then clicking SEND DATA. The scroll bars are updated upon each write transfer.
- The MEMORY section displays the data stored in the memory block. The data can be updated manually by clicking UPDATE.
- Clicking EXIT closes the program but does not reset the part.

EVALUATION BOARD SCHEMATICS AND ARTWORK

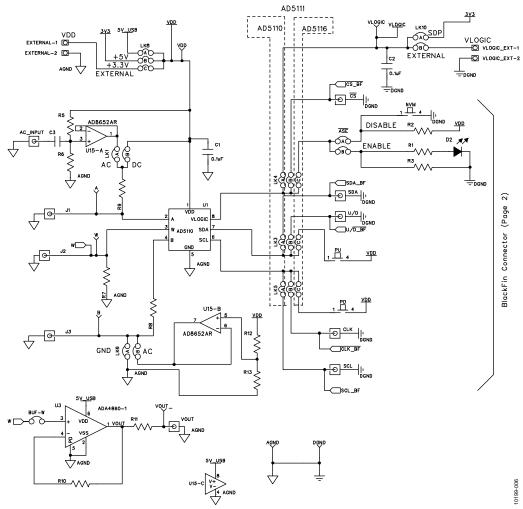


Figure 6. Schematic of the AD5110 Circuitry

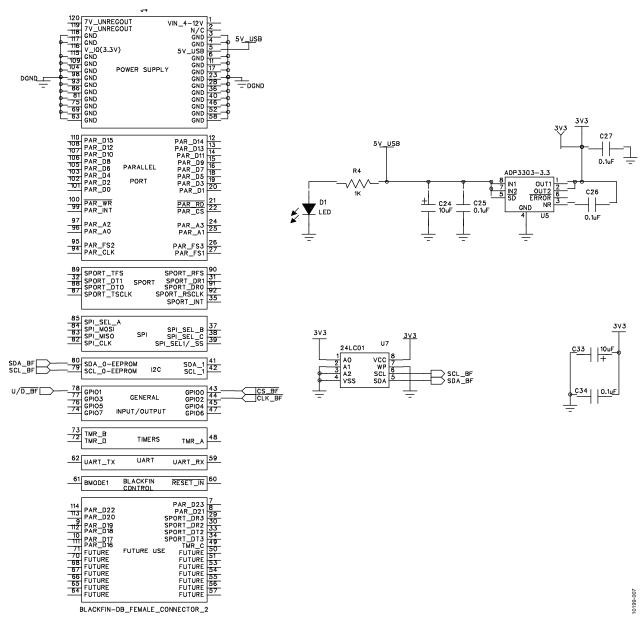


Figure 7. Schematic of SDP Connector

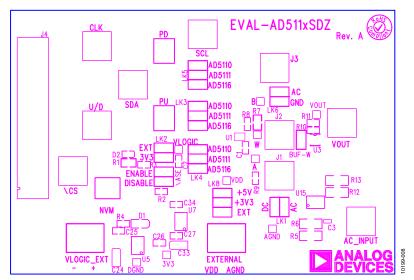


Figure 8. Component Placement Drawing

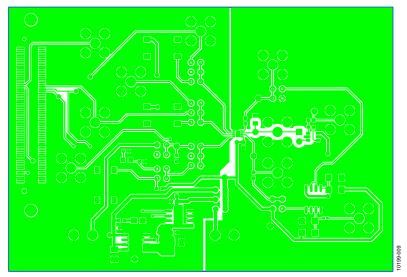


Figure 9. Component Side PCB Drawing

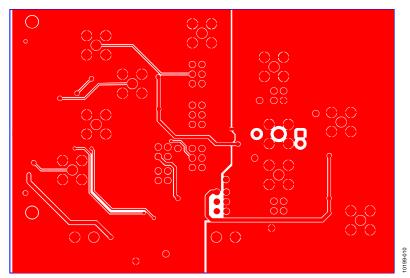


Figure 10. Solder Side PCB Drawing

ORDERING INFORMATION

BILL OF MATERIALS

Table 6.

Qty	Reference Designator	Description	Supplier ¹ /Part Number
1	C3	100 nF, 0402 capacitor	FEC 1414580
2	C1,C2	0.1 μF, 0603 capacitor	FEC 138-2224
4	C25, C26, C27, C34	0.1 μF, 0603 capacitor	FEC 301-9482
2	C24, C33	10 μF, 1206 capacitor	FEC 197-130
1	D1	Green LED	FEC 579-0852
2	VLOGIC_EXT, EXTERNAL	2-pin connector	FEC 151789
1	J4	Receptacle, 0.6 mm, 120 way	Digi-Key H1219-ND
8	LK1, LK2, LK3, LK4, LK5, LK6, LK8, ASE	Header, 2-row, 36 + 36 way, and jumper socket, black	FEC 148-535 and FEC 150-411
1	BUF-W	Header, 1-row, 2-way, and jumper socket, black	FEC 102-2247 and FEC 150-411
1	R11	12 Ω, 0603, 1% resistor	FEC 9330534
1	R10	750 Ω, 0603, 1% resistor	FEC 9331506
1	R4	1 kΩ, 0603, 0.01% resistor	FEC 9330380
4	R5, R6, R12, R13	2.7 kΩ, 1206, 1% resistor	FEC 9337288
2	R8, R9	0Ω , 0603 resistor	FEC 9331662
2	DGND, AGND	Test point, PCB, black, PK100	FEC 873-1128
7	3V3, A, B, VDD, VLOGIC, VOUT, W	Test point, PCB, red, PK100	FEC 873-1144
1	U1	AD5110	Analog Devices AD5110
1	U3	ADA4860	Analog Devices ADA4860
1	U5	ADP3303	Analog Devices ADP3303
1	U7	24LC64 serial EEPROM	FEC 9758070
1	U15	AD8652	Analog Devices AD8652

 $^{^{\}rm 1}$ FEC refers to Farnell Electronic Component Distributors.

NOTES

 I^2C refers to a communications protocol originally developed by Philips Semiconductors (now NXP Semiconductors).



FSD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board, and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL. SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

©2011 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. UG10199-0-11/11(0)



www.analog.com



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.