


NAT2XXX Series SIP Non-Isolated Point-of-Load Converters 9V – 36V input, 3V -6V 10A/45W output

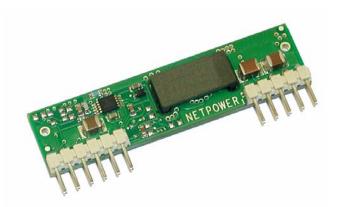

DOSA Compatible

RoHS Compliant Parts Available

Applications

- Intermediate bus architecture
- Industrial, telecom, and networking equipment
- Electronic data processing, servers
- Distributed power architectures

Features

- High efficiency, 88% (24Vin, 3.3Vout@10A)
- Excellent thermal performance
- High output current/Power: 10A/45W
- Extra wide input-voltage range: 9 36V
- Wide output-voltage range: 3V to 6V
- Monotonic start-up into pre-biased load
- Output trim, Remote sense
- Switching frequency synchronization
- Remote enable control
- Small footprint: 2"x0.25"x0.5"
- All components meet UL 94V0

Options

- Baseplate
- Negative/Positive enable logic
- Output over-voltage protection
- Output voltage tracking/Sequence

This NAT non-isolated point-of-load (POL) dc-dc converter delivers up to 10A current or 45W power in an industry standard SIP package with high efficiency and unparalleled thermal performance. The extra wide input voltage range, from 9V to 36V, makes it suitable for a wide range of applications with different bus voltages, such as 12V, 15V, 24V or 28V. The output voltage of this converter can be programmed in the range of 3V - 6V. The wide input/output voltage ranges, high power density, and user-friendly features are ideal for today's industrial, telecom, datacom, wireless networks, computing, and automotive applications.

This *NAT* converter provides competitive cost, high performance, high reliability and quality, and flexibility of use in a wide range of applications. The open frame design with integrated magnetics has a small footprint (2''x0.27''), achieving industry-leading power density and enhanced airflow for nearby components. As a benefit of the high efficiency and resulting superior thermal performance, these converters can provide high output currents in challenging environments with simple thermal management. This converter provides input under-voltage lockout, remote sense, wide output voltage trim, overload and short circuit protection and over-temperature shutdown as standard features. NetPower also offers several optional features to allow system designers the freedom required to optimize the system performance. The optional output over-voltage protection provides increased protection and system reliability in practical applications. The optional output voltage sequence/tracking feature allows the output voltage to track an external signal during startup and shutdown in systems with sensitive powering timing requirements. To further improve thermal performance, and provide flexibility to be used in conduction-cooled systems, the baseplate option provides necessary thermal management enhancement for the challenging environment common in many of today's electronic systems.

† UL is a registered trademark of Underwriters Laboratory Inc.



Absolute Maximum Ratings

Excessive stresses over these absolute maximum ratings can cause permanent damage to the converter. Also, exposure to absolute maximum ratings for extended periods of time can adversely affect the reliability of the converter. Operation should be limited to the conditions outlined under the Electrical Specification Section.

Parameter	Symbol	Min	Max	Unit
Input Voltage (continuous)	Vi	-0.5	38.5	Vdc
Operating Ambient Temperature	То	-40	85*	°C
(See Thermal Consideration section)				
Storage Temperature	Tstg	-55	125	°C

^{*} For operation above 85°C ambient temperature, please consult NetPower for derating guidance.

Electrical Specifications

These specifications are valid over the converter's full range of input voltage, resistive load, and temperature unless noted otherwise.

Input Specifications

Parameter	Symbol	Min	Тур	Max	Unit
Input Voltage	Vi	9	24	36	Vdc
Input Current	li,max	-	-	6.5	Α
Quiescent Input Current (Vin = 24, Vo = 3.3V)	li,Qsnt	-	50	70	mA
Standby Input Current	li,stdby	-	2		mA
Inrush Transient	l ² t	-	-	0.5	A ² s
Input Reflected-ripple Current, Peak-to-peak (5 Hz to 20 MHz, 1 µH source impedance)	-	-	20	-	mAp-p
Input Ripple Rejection (120 Hz)	-		30	-	dB
Input Turn-on Voltage Threshold	-		9.5		V

Output Specifications

Parameter	Symbol	Min	Тур	Max	Unit
Output Voltage Set Point Tolerance	-	-2.0	-	2.0	%
(Vi = 24 V; lo = lomax; Ta = 25°C)					
Output Voltage Set Point Tolerance (over all conditions)	-	-2.5	-	3.50	%
Output Regulaton:					
Line Regulation (Vi = 9V to 36V, lo = 1/2 of load)	-	-	0.2		%Vo
Load Regulation (Io = Io,min to Io,max, Vi = 24V)	-	-	0.3		%Vo
Temperature (Ta = -40°C to 85 °C)	=	-	0.2		%Vo
Output Ripple and Noise Voltage	Peak-to-	-	2		%Vo
(5 Hz to 20 MHz bandwidth, Vin = 24V)	peak -				
	RMS			1	%Vo
External Load Capacitance	-	-	-	2,000	μF
Output Current	lo	0	-	10	Α
Output Power	Po	0		45	W
Output Current-limit Trip Point	lo,cli	-	170	-	%lomax
Output Short-circuit Current, hiccup mode			2		Α
Switching frequency	-	270	300	330	kHz
Output Over Voltage trip point (optional, hiccup mode)		115	125	135	%Vo
Voltage Tracking/Sequencing Slew Rate – Power UP				2	V/ms
Voltage Tracking/Sequencing Slew Rate – Power down				1	V/ms

www.netpowercorp.com



Output Specifications (continued)

Parameter	Symbol	Min	Тур	Max	Unit	
Efficiency	Vo = 3.3V, Io = 10A	η		88		%
$(Vi = 24V; T_A = 25^{\circ}C)$		•				
	Vo = 5V, Io = 9A	η		90		%
Dynamic Response	•					
(Vi = 12V; Ta = 25°C; Load transier	nt 0.1A/µs)					
Load step from 75% to 100% of full	load:					
Peak deviation				50		mV
Settling time (to 10%			80		μs	
Load step from 100% to 75% of full						
Peak deviation			50		mV	
Settling time (to 10%	band of Vo deviation)			80		μs

General Specifications

	Parameter	Symbol	Min	Тур	Max	Unit
Remote Enab	le					
Negative Logi	c:					
	Logic Low – Module On	-	-	-	-	-
	Logic High – Module Off					
Positive Logic	:					
	Logic High – Module On	-	-	-	_	-
	Logic Low – Module Off					
Logic Low:	ŭ					
	ION/OFF = 1.0mA	Von/off	0	-	1.2	V
	$V_{ON/OFF} = 0.0V$	ION/OFF	-	-	1.0	mA
Logic High:	$ION/OFF = 0.0 \mu A$	Von/off	-	-	15	V
	Leakage Current	ION/OFF	-	-	50	μA
	•		-			
Over-tempera	ture Protection	То	-	120	-	°C
Turn-on Time	(Io = full load, Vo within 1% of setpoint)	-	-	6	-	ms
Calculated M	TBF (Bellcore TR-332, 40°C, full load)			> 5		10 ⁶ -hour



Characteristic Curves

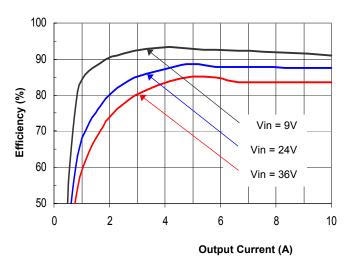


Figure 1(g). Efficiency vs. Load Current (25°C, 3.3V output)

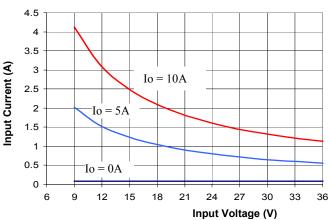


Figure 2. Input Characteristic (3.3V output)

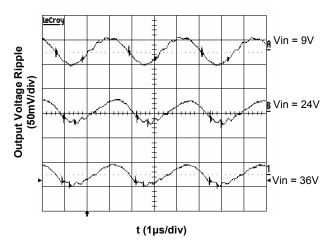


Figure 4. Output Ripple Voltage at 3.3V, 10A Output

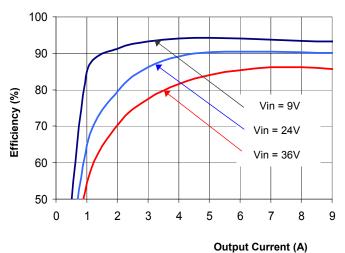


Figure 1(h). Efficiency vs. Load Current (25°C, 5V output)

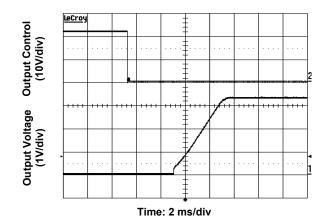


Figure 3. Start-Up from Enable Control Input voltage 24V, Output current 0A 3.3V

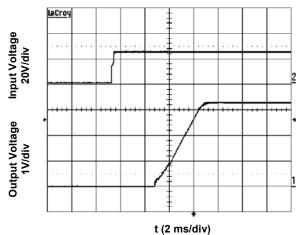


Figure 5. Start-Up from Application of Input Voltage Input voltage 24V, Output current 10A (resistive load) 3.3V



Characteristic Curves

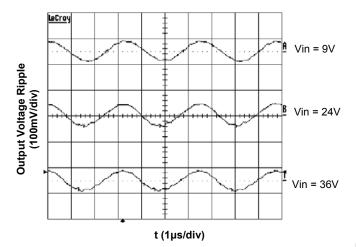


Figure 6. Output Ripple Voltage at 5V, 9A Output

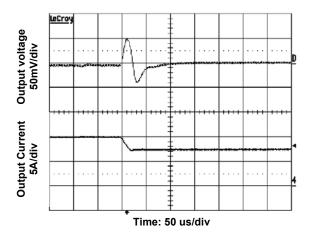


Figure 8. Transient Load Response Input/output voltage 24/3.3V, Output current 10A->7.5A,Slew rate 0.1A/µs.

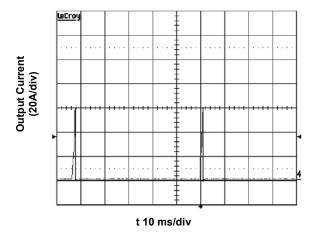


Figure 10. Short Circuit Current. Vin = 24V

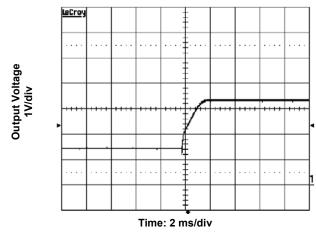


Figure 7. Start-Up with Prebias Input voltage 24V, Output current 0A, Output voltage 3.3V, Prebias 1.5V

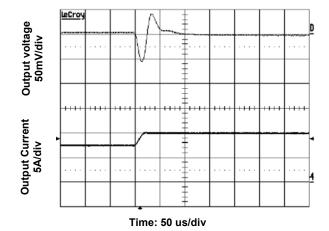


Figure 9. Transient Load Response Input/output voltage 24/3.3V, Output current 7.5A->10A, Slew rate 0.1A/µs.

Figure 11. TBD



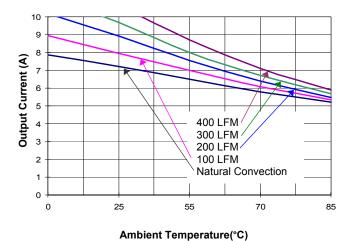


Figure 12(a). Current Derating Curve for 3.3V Output (Vin = 24V open frame)

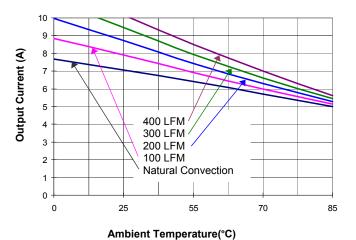


Figure 12(b). Current Derating Curve for 5V Output (Vin = 24V open frame)

www.netpowercorp.com



Feature Descriptions

Remote ON/OFF

The converter can be turned on and off by changing the voltage or resistance between the ON/OFF pin and GND. The NAT converters can be ordered with factory selectable positive logic or negative enabling logic.

For the negative control logic, the converter is ON when the ON/OFF pin is at a logic low level, and OFF when the ON/OFF pin is at a logic high level. With positive control logic, the converter is ON when the ON/OFF pin is at a logic high level and OFF when the ON/OFF pin is at a logic low level.

With the internal pull-up circuitry, a simple external switch between the ON/OFF pin and GND can control the converter. A few example circuits for controlling the ON/OFF pin are shown in Figs. 13, 14 and 15.

The logic-low level is from 0V to 1.2V, and the maximum switch current during logic low is 1mA. The external switch must be capable of maintaining a logic-low level while sinking this current. The maximum ON/OFF pin voltage, generated by the converter internal circuitry for logic-high level, is less than 10V. The maximum allowable leakage current from this pin at logic-high level is 50µA.

When the ON/OFF pin is left unconnected (floating), the converter is enabled.

Remote SENSE

The remote SENSE pin is used to sense voltage at the load point to accurately regulate the load voltage and eliminate the impact of the voltage drop in the power distribution path.

The SENSE pin should be connected to the point where regulation is desired. The voltage difference between the output pins must not exceed the operating range of this converter shown in the specification table.

When remote sense is not used, the SENSE pin can be connected to the positive output terminals. If the SENSE pins are left floating, the converter will deliver an output voltage slightly higher than its specified typical output voltage. The OVP (output over-voltage protection) circuit senses the voltage across the

output pins, so the total voltage rise should not exceed the minimum OVP setpoint given in the Specifications Table in operation.

Because the converter does not have remote sense connection for GND or power return path, it is important to make sure that the connection resistance and voltage drop between GND pins and the load is small. It's also advisable to connect the multiple GND pins with low resistance traces.

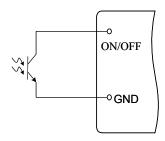


Figure 13. Opto Coupler Enable Circuit

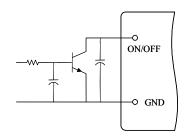


Figure 14. Open Collector Enable Circuit

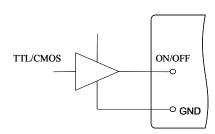


Figure 15. Direct Logic Drive

Output Voltage Programming and Adjustment

The output voltage of this converter is preset to 3.018V, and can be trimmed up to 6V using an external trim resistor. To trim the voltage lower than the preset voltage, an external voltage higher than the nominal voltage has to be applied to the Trim pin. The trim pin allows the user to adjust the output voltage set point with an external resistor or voltage. If the trim pin is open, the converter outputs 3.018V. If the trim pin is shorted to GND, the converter

www.netpowercorp.com



outputs 6V. To program the output voltage, a resistor should be connected between the Trim pin and the GND pin. The output voltage can be adjusted down by changing the value of the external resistor using the equation below:

$$Rtrim = (\frac{10.5}{\Lambda} - 3.48)(k\Omega)$$

Where

$$\Delta = Vo - Vonom$$

For variable output, Vonom = 3.018.

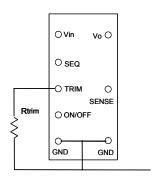


Figure 16. Circuit to Trim Output Voltage

The circuit configuration for trim operation is shown in Figure 16. Because NAT converters use GND/GND as the reference point inside the converters, Rtrim should be placed as close to GND pin as possible, and the trace connecting GND pin and Rtrim should not carry significant current, to reduce the effect of voltage drop on the GND trace/plain on the output voltage accuracy.

When use remote sense and trim functions simultaneously, do not allow the output voltage at the converter output terminals to be outside the operating range.

Input Under-Voltage Lockout

This feature prevents the converter from turning on until the input voltage reaches about 8.5V.

Output Over-Current/Short-Circuit Protection

This converter is designed to operate within 10A of output current or 45W of output power if the output voltage is higher than 4.5V. The converter turns off when the load current exceeds the current limit. If the over-current or short circuit condition persist, the converter will operate in a hiccup mode (repeatedly trying to restart) until the over-current condition is

cleared.

Thermal Shutdown

As a standard feature, the converter will shut down if an over-temperature condition is detected. The converter has a temperature sensor located within the converter's circuit board, which detects the thermal condition of key components of the converter.

The thermal shutdown circuit is designed to turn the converter off when the temperature at the sensor reaches 120°C. The converter will resume operation after the converter cools down.

Output Over-Voltage Protection

As an optional feature, if the voltage across the output pins exceeds the output voltage protection threshold as shown in the Specifications Table, the converter will clamp its output to protect the converter and the load. The converter automatically resumes normal operation once the over-voltage fault is cleared.

The typical over-voltage protection setpoint for this converter is 25% higher than nominal output, or 7.5V for variable output.

Voltage Tracking/Sequencing

An optional voltage tracking/sequencing feature is available with this converter. This feature is compatible with the "Voltage Sequencing" feature (DOSA) or the "Voltage Tracking" feature (POLA) seen in industry standards. If this feature is not used, the corresponding SEQ pin should be left open, or tied to a voltage higher than the output voltage but less than 10V.

This feature basically forces the output of the converter to follow the voltage at the SEQ pin until it reaches the setpoint during startup, or is completely shutdown during turnoff. The converter's output voltage is controlled to be the same magnitude as the voltage on the SEQ pin, on a 1:1 basis. When using this function, one should pay careful attention to the following aspects:

1). This feature is intended mainly for startup and shutdown sequencing control. In normal operation, the voltage at SEQ pin should be maintained higher than the required output voltage, or the SEQ pin is left unconnected:

www.netpowercorp.com



- 2). The input voltage should be valid for this feature to work. During startup, it is recommended to have a delay of at least 10 ms between the establishment of a valid input voltage, and the application of a voltage at the SEQ pin;
- 3). The ON/OFF pin should be in "Enabled" state when this function is effective.
- 4). The converter's pre-bias startup is affected by this function. The converter will still be able to start under a pre-bias condition, but the output voltage waveform will have a glitch during startup.

Frequency Synchronization

When multiple converters are used in a system, it is desirable to have all converters running at the same switching frequency to avoid the so-called "beat frequency" phenomenon, and reduce the system noise. The switching frequency of this series of POL converters can be synchronized to an outside clock with a frequency at least 10-20 kHz higher than the maximum free-running switching frequency of the converter. For example, for converters with a nominal switching frequency of 300 kHz, the minimum frequency of the synchronous clock should be at least 340 kHz. With the use of synch clock, the under-voltage lock-out (UVLO) point of the converter becomes higher. The Higher the synch frequency is, the higher UVLO becomes. Please contact NetPower if the UVLO point is to remain unchanged with a given synch frequency. The following table shows a relationship between synch frequency and UVLO on a 300 kHz converter:

Synch Freq. (kHz)	340	380	420	460	500	540	580	620	660	700
UVLO (V)	9.5	10	11	11.4	12.1	12.7	14	14	14.8	15.5

The key parameters of the clock signal are: pulse width at least 50nS, logic HIGH level in 2 - 5V, logic LOW level less than 0.8V, and being able to source and sink at least 10 uA current. The clock signal should be connected to the optional PIN B (SEQ pin), which is also used for the optional voltage sequencing (tracking) pin. Therefore, the voltage tracking function and the frequency synchronization function can not be selected at the same time. This pin can be left open or shorted to GND if the synch function is not used.

The effective edge of the synchronization pulse is the falling edge of the clock signal. Through properly phase-shift of the clock signals, multiple converters

can work in an interleaved manner, reducing the strength of the switching noise.

Design Considerations

Input Source Impedance and Filtering

The stability of the NAT converters, as with any DC/DC converter, may be compromised if the source impedance is too high or too inductive. It's desirable to keep the input source AC impedance as low as possible. To reduce switching frequency ripple current getting into the input circuit (especially the ground/return conductor), it is desirable to place some low ESR capacitors at the input. Ceramic capacitors of at least 10uF total capacitance are recommended. Due to the existence of inductance (such as the trace inductance, connector inductance, etc) in the input circuit, possible oscillation may occur at the input of the converter. Because the relatively high input current of low input voltage power system, it may not be practical or economical to have separate damping or soft start circuit in front of POL converters. We recommend to use a combination of ceramic capacitors and Tantalum/Polymer/Aluminum capacitors at the input, so the relatively higher ERS of Tantalum/Polymer capacitors can help damp the possible oscillation between the ceramic capacitors and the inductance.

Similarly, although the converter is designed to be stable without external capacitor at the output, some low ESR capacitors at the output may be desirable to further reduce the output voltage ripple or improve the transient response. Again, a combination of ceramic capacitors and Tantalum/Polymer/Aluminum capacitors usually can achieve good results.

Safety Considerations

To meet safety requirements of the system, the converter shall be used in accordance with the requirements of end-use equipment safety standards. If a fuse is to be used at the input, it's recommended to use a fast blow fuse with adequate current rating.

The converter's output meets SELV requirements if its input meets SELV requirements.

www.netpowercorp.com



Thermal Considerations




Figure 17. Temperature Monitoring Locations

The NAT converters can operate in various thermal environments. Due to the high efficiency and optimal heat distribution, these converters exhibit excellent thermal performance. Proper cooling in the end system can be verified by monitoring the temperature of the key components. Figure 17 shows recommended temperature monitoring points. The temperature at these locations should not exceed 120 °C continuously.

The maximum allowable output power of any power converter is usually determined by the electrical design and the maximum operating temperature of its components. The NAT converters have been tested comprehensively under various conditions to generate the derating curves with consideration for long term reliability.

Thermal derating curves are highly influenced by derating guide, the test conditions and test setup, such as test temperatures, the interface method between the converter and the test fixture board, spacing and construction (especially copper weight, holes and openings) of the fixture board and the spacing board, temperature measurement method, and the ambient temperature measurement point. The thermal derating curves in this datasheet are obtained by thermal tests in a wind tunnel at 25°C, 55°C, 70°C, and 85°C. The converter's power pins

are soldered to a 2-layer test fixture board through 18 AWG wires. The space between the test board and a PWB spacing board is 1". Usually, the end system board has more layer count, and has better thermal conduction than our test fixture board. For thermal considerations specific to your application environment, please contact NetPower's technical support team for assistance.

Heat Transfer without a Baseplate or Heatsink

Convection heat transfer is the primary cooling means for converters without a baseplate. Therefore, airflow speed is important for any intended operating environment. Increasing the airflow over the converter enhances the heat transfer via convection.

Figures 12 (a) through (f) show the current derating curves under nominal input voltage for a few output voltages. To maintain long-term reliability, the module should be operated within these curves in steady state. Note: the natural convection condition can be measured from 0.05-0.15 m/s (10-30 LFM).

Heat Transfer with a Baseplate or Heatsink

The NAT converter can use a baseplate to further enhance their thermal performance. A baseplate works as a heat spreader, and thus can improve the heat transfer between the converter and its ambient.

An additional heatsink or cold-plate can be attached to the baseplate with external mechanical attachment. The heatsink/cold plate further improves the thermal performance of the converter.

www.netpowercorp.com

www.netpowercorp.com



POL Converter Part Numbering System:


NAT	2	033	N	10	R	1	Į.	5
	Nominal	Nominal		Rated			Mechanic	al Options
Series Name:	Input Voltage:	Output Voltage:	Enabling Logic:	Output Current:	Pin Length:	Electrical Option 1:	Lead-free, ROHS Compliant	Leaded (ROHS-5 Compliant)
NAT	0 : 2.5-5.5V 1 : 8.5 – 18V 2 : 9 – 36V 3 : 18 – 36V	Unit: 0.1V 033 = 3.3V 000 = adj	P: Positive N: Negative	Unit: A 010 = 10A	R : 0.2"	0: None1: output tracking2: output OVP3: tracking and OVP4: Frequency Synch5: OVP and Synch	5: None 6: Baseplate	0: None 1: Baseplate


Standard output voltage includes 3.3V and 5V.

The above example denotes a 3.3V, 10A output converter in Pb-free (RoHS compliant) with negative enabling logic, and voltage tracking options.

Data Sheet Rev B 4-9-07 Page 11

Mechanical Information

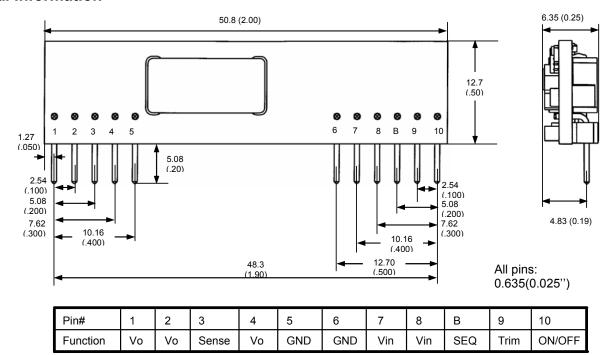

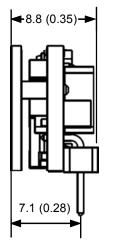

Side View with Baseplate

Notes

- 1) All dimensions in mm (inch) (1 inch = 25.4mm). Tolerances:
 - .x (.xx): <u>+</u> 0.5 (0.020") .xxx: + 0.25 (0.010")
- 2) All pins are 0.635mm (0.025") square.
- 3) A converter's thickness is increased to 0.35" with a baseplate option.
- 3) All pins are coated with 90%/10% solder finish, or Matte Tin, or Gold.
- 4) Weight: 7 g open frame converter
- 5) Workmanship: Meet or exceeds IPC-A-610 Class II
- 6) Baseplate flatness tolerance is 0.10mm (0.004") TIR for surface.

For more information, please contact:

NetPower Technologies, Inc.
Toll Free: 866-NETPOWER (866-638-7693)

Local Phone: 972-560-0500

Fax: 972-560-0210

E-mail: sales@netpowercorp.com

www.netpowercorp.com

1680 Prospect Drive #200, Richardson, TX 75081

Warranty

NetPower offers a two (2) year limited warranty. Complete warranty information is listed on our web site or is available upon request. Information furnished by NetPower is believed to be accurate and reliable. However, no responsibility is assumed by NetPower for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of NetPower.

www.netpowercorp.com

Data Sheet Rev B 4-9-07 Page 12



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: <u>org@eplast1.ru</u>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.