

5V-3.3V VOLTAGE TRANSLATOR™

Manual

All Mikroelektronika's development systems feature a large number of peripheral modules expanding microcontroller's range of application and making the process of program testing easier. In addition to these modules, it is also possible to use numerous additional modules linked to the development system through the I/O port connectors. Some of these additional modules can operate as stand-alone devices without being connected to the microcontroller.

Additional Board

 **MikroElektronika**

SOFTWARE AND HARDWARE SOLUTIONS FOR EMBEDDED WORLD ...making it simple

5V-3.3V VOLTAGE TRANSLATOR Additional Board

The 5V-3.3V VOLTAGE TRANSLATOR additional board is used to adjust voltage levels between a 5V development system and a 3.3V device.

How to connect the board?

The additional board is connected to a development system via two 2x5 connectors and a flat cable with appropriate IDC10 connectors, Figure 1. A 2x5 connector CN1 is used for connection with the development system, whereas a 2x5 connector CN2 is used for connection with a device.

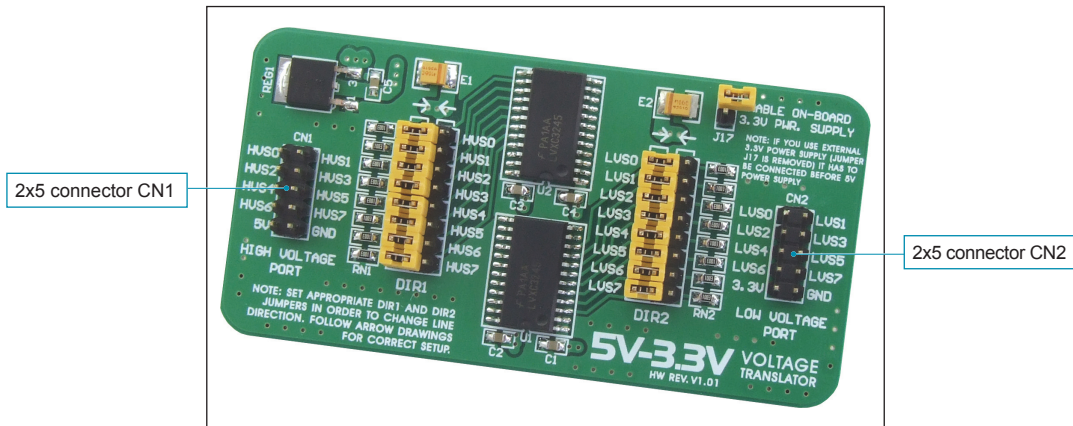


Figure 1: 5V-3.3V VOLTAGE TRANSLATOR additional board

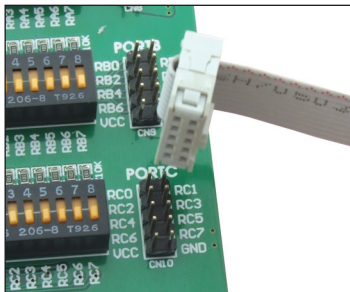


Figure 2: Plugging IDC10 connector into a development system

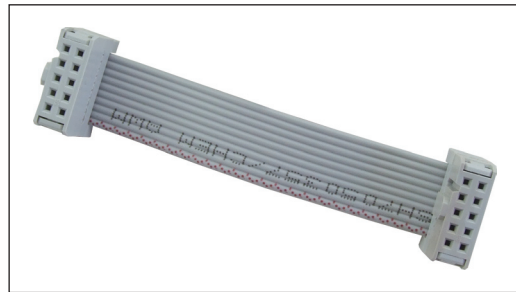


Figure 3: Flat cable with IDC10 connectors

How does the board operate?

The additional board performs voltage adjustment by using two voltage translators 74LVCC3245. The board comes with jumpers placed in the position indicating that a 5V voltage signal is adjusted to a 3.3V voltage signal. If necessary, the process of voltage adjustment may be performed in the opposite direction, i.e. a 3.3V voltage level may be adjusted to a 5V voltage level. In order to set the voltage adjustment direction to be different from default, it is necessary to place jumpers as in Figure 5.

The additional board utilizes two power supply voltages for its operation. The 5V power supply voltage is supplied from the development system, whereas the 3.3V power supply voltage is supplied from the device connected to the development system. If this device is not capable of providing the 3.3V power supply voltage, it may be provided by reducing the 5V power supply voltage supplied from the development system. This is performed by using a voltage regulator provided on the additional board. In order to enable this voltage regulator, it is necessary to have jumper J17 placed on the board, Figure 7.

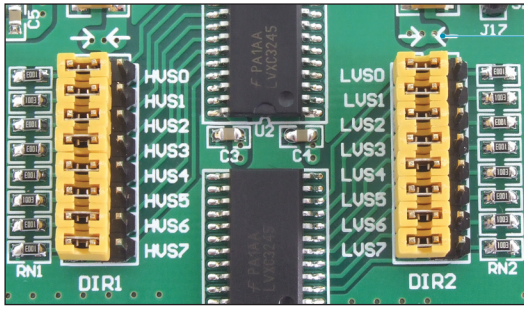


Figure 4: Jumpers DIR1 and DIR2 in the position for 5V to 3.3V voltage level adjustment

Arrows indicating voltage signal direction

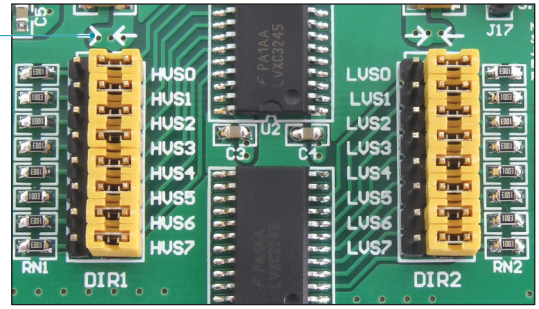


Figure 5: Jumpers DIR1 and DIR2 in the position for 3.3V to 5V voltage level adjustment

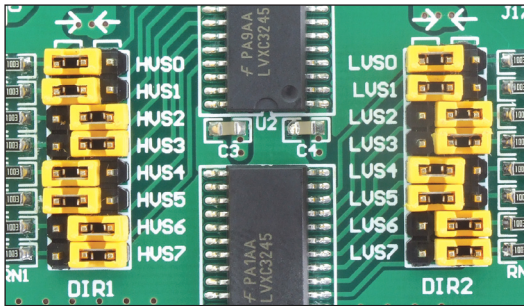


Figure 6: Jumpers DIR1 and DIR2 in the position for bidirectional transfer

In case it is necessary to send and receive different voltage signals at the same time, jumpers belonging to jumper groups DIR1 and DIR2 should be placed in the appropriate positions. Refer to Figure 6. Jumpers HVS1, HVS4 and HVS5 belonging to jumper group DIR1 as well as jumpers LVS0, LVS1, LVS4 and LVS5 belonging to jumper group DIR2 are placed so as to enable 5V to 3.3V voltage signal adjustment. Likewise, jumpers HVS2, HVS3, HVS6 and HVS7 belonging to jumper group DIR1 as well as jumpers LVS2, LVS3, LVS6 and LVS7 belonging to jumper group DIR2 are placed so as to enable 3.3V to 5V voltage signal adjustment.

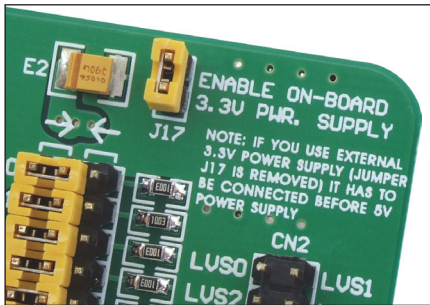


Figure 7: Jumper J17 placed on the board

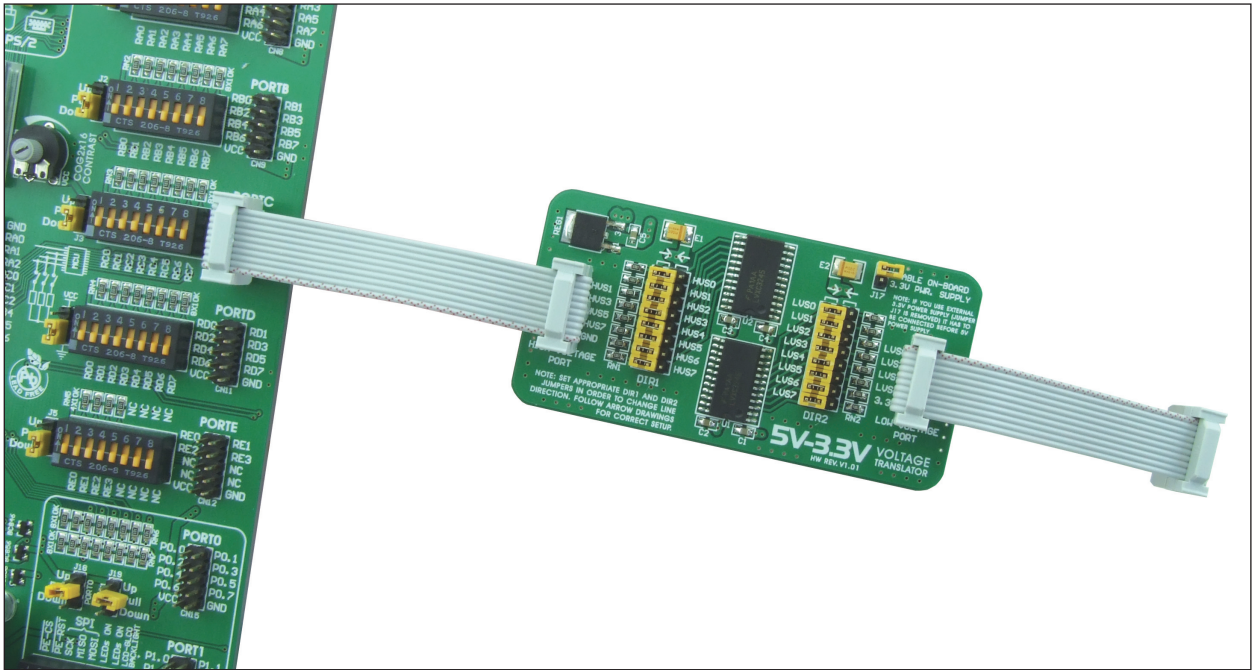


Figure 8: Additional board and development system connection schematic

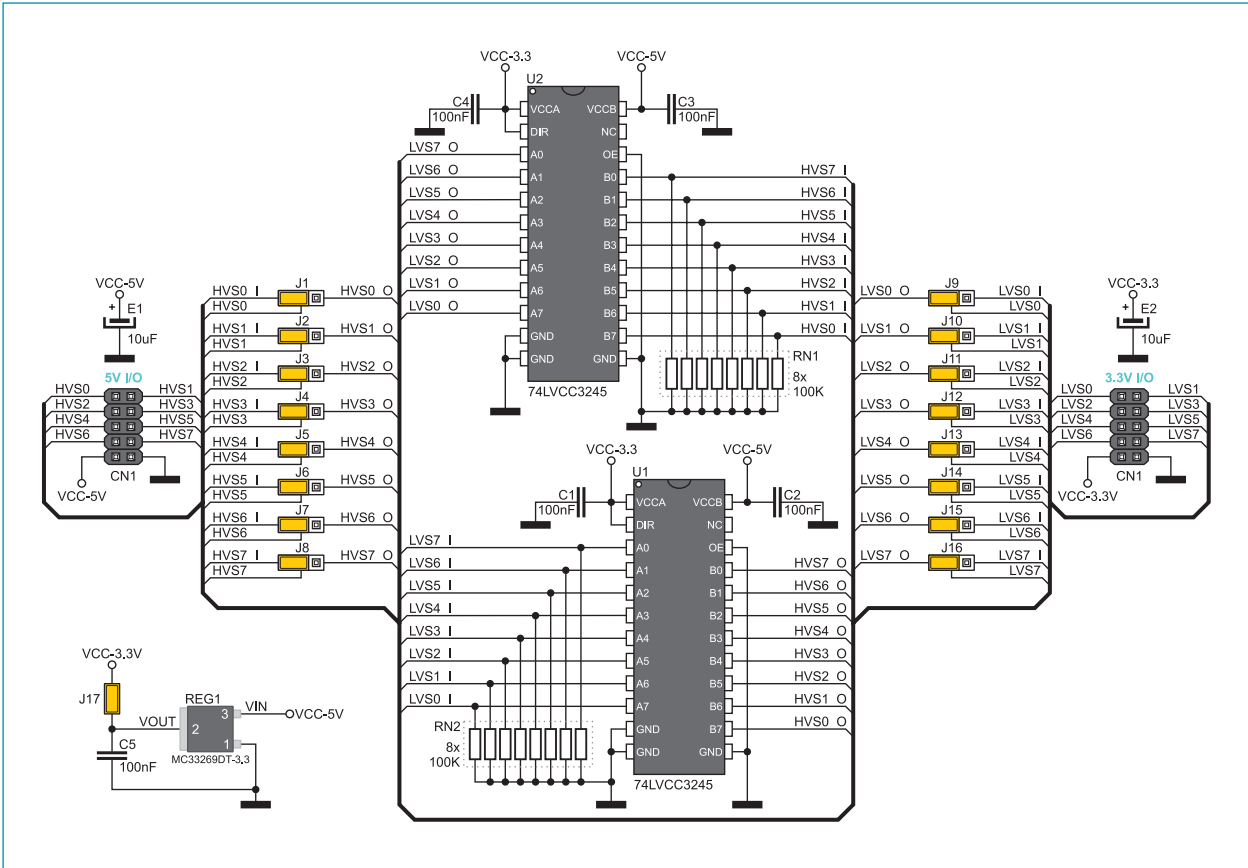


Figure 9: Additional board connection schematic



MikroElektronika
SOFTWARE AND HARDWARE SOLUTIONS FOR EMBEDDED WORLD ...making it simple

If you want to learn more about our products, please visit our website at www.mikroe.com

If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/en/support

If you have any questions, comments or business proposals, do not hesitate to contact us at office@mikroe.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Mikroe:](#)

[MIKROE-259](#)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.