

LTC3452EUF
SYNCHRONOUS BUCK-BOOST
MAIN/CAMERA WHITE LED DRIVER

DESCRIPTION

WARNING!**Do not look directly at operating LED.**

This circuit produces light that can damage eyes.

Demonstration circuit 928 is a SYNCHRONOUS BUCK-BOOST MAIN/CAMERA WHITE LED DRIVER featuring the LTC3452EUF.

The circuit drives two banks of LEDs: one 250mA flash device, and a bank of 5 LEDs at 20mA each for backlighting. The backlight LED currents are typically matched within 2%. The input voltage range of 2.7V to 5.5V is suitable for a single Lithium-Ion battery or three AAA batteries in series. Some of the many features include: Lithium-Ion battery input voltage range, flash LED output, separate, dimmable backlight outputs, internal synchronous power switches, minimal and low-profile external components, and simple design; therefore the LTC3452 is the top solution for highly efficient, space-constrained, cellular telephone camera flash solutions.

The flash output (LED_H) is activated by depressing The 'FLASH' momentary switch, or connecting the 'ENH' terminal to 'V_{IN}' with a jumper wire.

WARNING- The LED_H LED can be permanently damaged if the flash mode is engaged for more than a few seconds.

The backlight outputs (LED_{L1-5}) are activated by depressing The 'DISPLAY' momentary switch, or connecting the 'ENL' terminal to 'V_{IN}' with a jumper wire. The backlight intensity can be modulated by applying a 10kHz pwm signal to the 'ENL' terminal, as indicated in the table.

Figure 2 shows efficiency at 200mA flash output with various 4.7uH inductors.

The LTC3452 datasheet gives a complete description of the part along with operation and applications information. The datasheet must be read in conjunction with this Quick Start Guide for demonstration circuit 928. In addition, the Nichia NSCW100 datasheet (www.nichia.com) and the AOT2015 datasheet (www.aot.com) must be read to understand thermal and LED current constraints for varying flash current pulse-widths and intensity. The LTC3452 is offered in a small low profile QFN package. Proper board layout is essential for maximum thermal performance. See the datasheet section 'Layout Considerations'.

**Design files for this circuit board are available.
Call the LTC factory.**

LT, LTC, LTM, LT, Burst Mode, OPTI-LOOP, Over-The-Top and PolyPhase are registered trademarks of Linear Technology Corporation. Adaptive Power, C-Load, DirectSense, Easy Drive, FilterCAD, Hot Swap, LinearView, µModule, Micropower SwitcherCAD, Multimode Dimming, No Latency ΔΣ, No Latency Delta-Sigma, No R_{SENSE}, Operational Filter, PanelProtect, PowerPath, PowerSOT, SmartStart, SoftSpan, Stage Shedding, SwitcherCAD, ThinSOT, UltraFast and VLDO are trademarks of Linear Technology Corporation. Other product names may be trademarks of the companies that manufacture the products.

PERFORMANCE SUMMARY Specifications are at TA = 25°C

SYMBOL	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
V _{IN}	Input Supply Range		2.7		5.5	V
V _{OUT}	Output Voltage Range				4.4	V
I _{OUT}	Output Current – LED _H	V _{IN} = 2.7V to 5.5V		250		mA
I _{OUT}	Output Current – LED _{L1} through LED _{L5}	V _{IN} = 2.7V to 5.5V		20		mA each
V _{OUT P-P}	Output Ripple	V _{IN} = 4.2V, I _{OUT} = 20mA (20MHz BW)		10		mV _{P-P}
I _{REG}	Output Regulation	Line, V _{IN} = 2.7V to 5.5V		±1.0		%
F _{SW}	Switching Frequency			1.0		MHz
P _{OUT} /P _{IN}	Efficiency	V _{IN} = 4.2V, I _{OUT} = 200mA		85		%

QUICK START PROCEDURE

Demonstration circuit 928 is easy to set up to evaluate the performance of the LTC3452EUF. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE. When measuring output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the output voltage ripple by touching the probe tip directly across the output capacitor. See Figure 2 for proper scope probe technique.

1. Preset a dc source capable of 5.5V at 1A to 4V.
2. With power off, connect the input power supply to 'VIN' and 'GND' of the circuit.
3. Turn on the power at the input. The input voltage may be varied between 2.7V and 5.5VDC.

NOTE. Make sure that the input voltage does not exceed 5.5V.

4. Press 'DISPLAY' to observe a constant 20mA x 5 LED backlight for displays.
5. Press 'FLASH' to observe a 250mA camera flash.

WARNING- The LED_H LED can be permanently damaged if the flash mode is engaged for more than a few seconds.

6. Alternatively, the backlight and flash modes can be enabled by connecting 'ENL' (backlight), or 'ENH' (flash) to 'VIN'.
7. The backlight intensity can be modulated by applying a 10kHz, 2V pwm signal to the 'ENL' terminal. Output current will vary with duty cycle, as indicated in the table on the board.

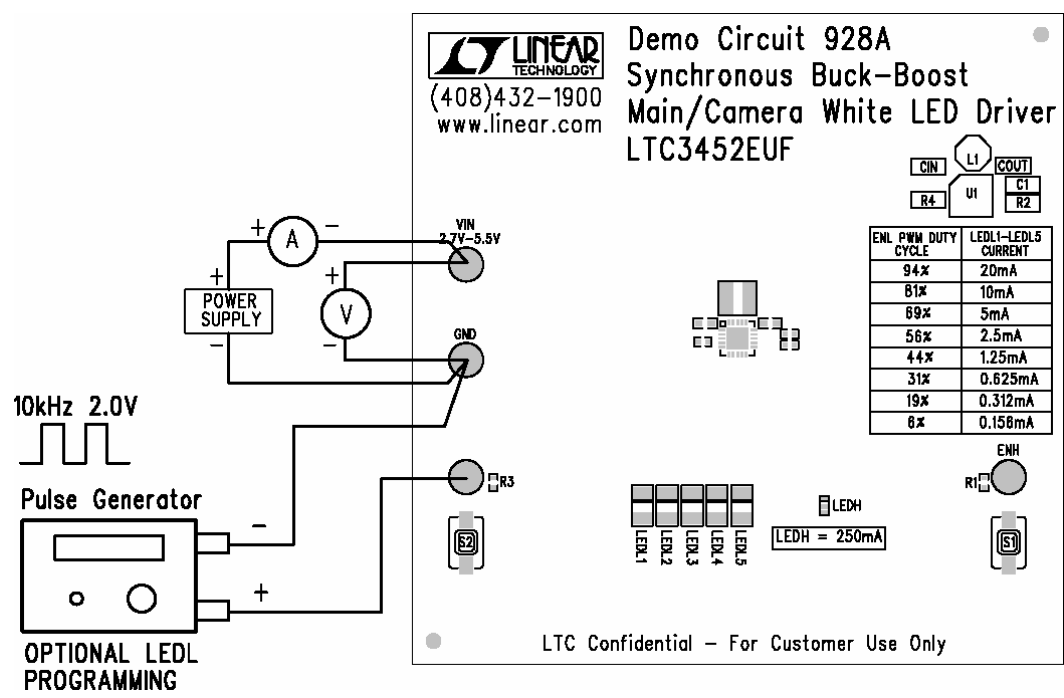


Figure 1. Proper Measurement Equipment Setup

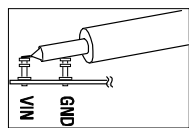


Figure 2. Measuring Input or Output Ripple


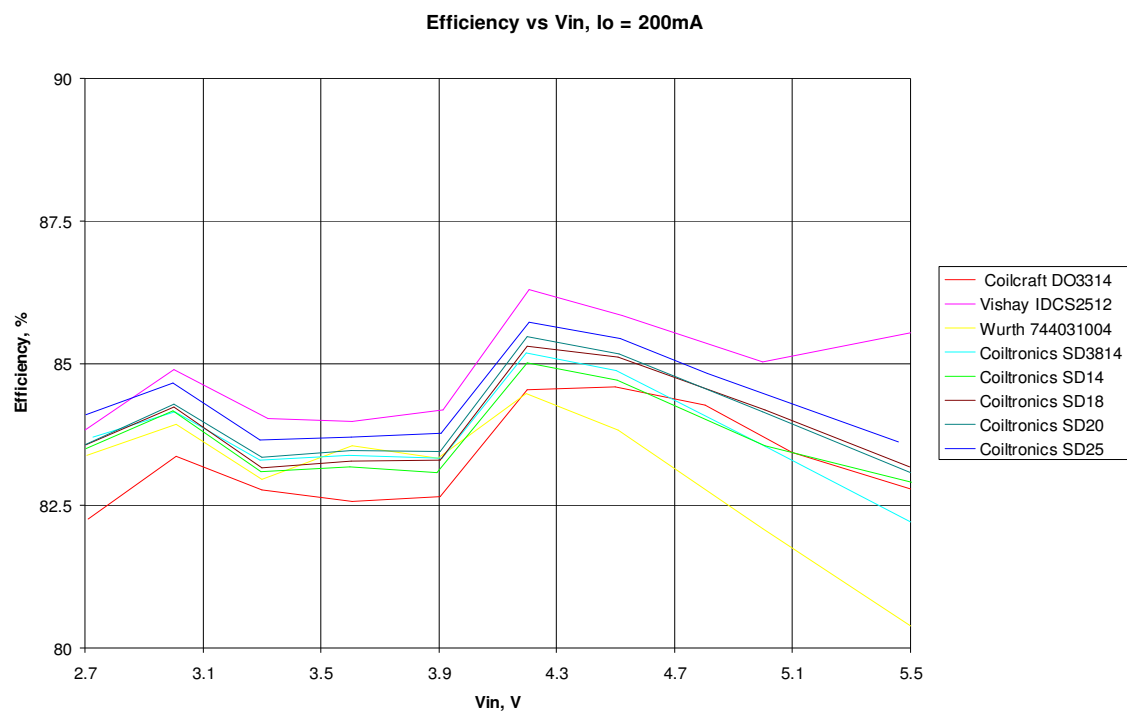


Figure 3. Efficiency



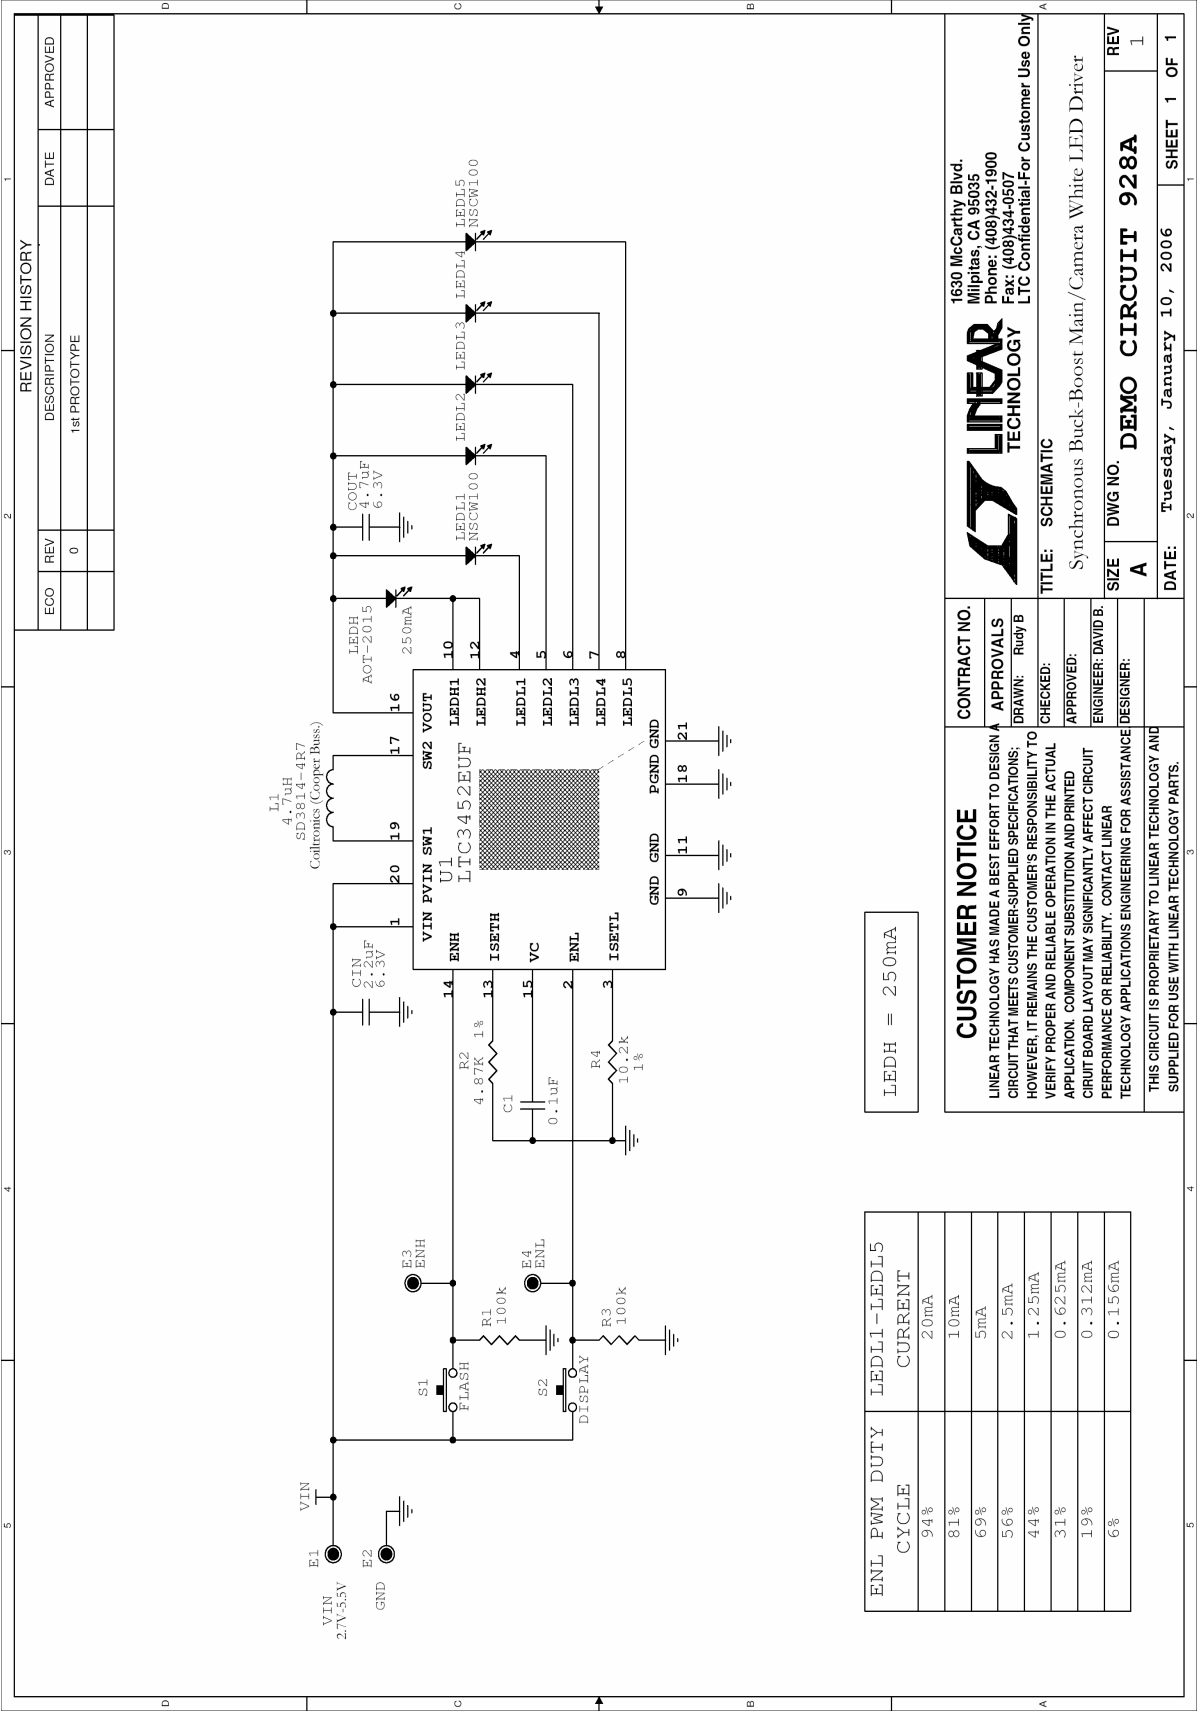

Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.