

# Grove - 80cm Infrared Proximity Sensor User Manual

Release date: 2015/9/22

Version: 1.0

Wiki: http://www.seeedstudio.com/wiki/index.php?title=Twig - 80cm Infrared Proximity Sensor v0.9

Bazaar: <a href="http://www.seeedstudio.com/depot/Grove-80cm-Infrared-">http://www.seeedstudio.com/depot/Grove-80cm-Infrared-</a>

Proximity-Sensor-p-788.html?cPath=25 31



## **Document Revision History**

Revision	Date	Author	Description
1.0	Sep 22, 2015	Loovee	Create file



## Contents

Do	cument	Revision History 2				
1.	Introd	Introduction ·····				
2.	Features ····					
3.	Application Ideas · · · · · · · · · · · · · · · · · · ·					
4.	Specification ·····					
5.	Usage	······································				
	5.1	With Arduino ·····				
	5.2	With Raspberry Pi · · · · · · · · · · · · · · · · · ·				
6.	Refere	ence······10				
7	Resou	rces				



#### Disclaimer

For physical injuries and possessions loss caused by those reasons which are not related to product quality, such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.

Under the supervision of Seeed Technology Inc., this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

### Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.



## 1. Introduction

The 80cm Infrared Proximity Sensor is a General Purpose Type Distance Measuring Sensor. This sensor SharpGP2Y0A21YK, boasts a small package and very low current consumption, takes a continuous distance reading and returns a corresponding analog voltage with a range of 10cm (4") to 80cm (30"). Can be used in TVs, personal computers, cars and so on.





# 2. Features

- Easy to use
- Wide supply voltage range: 2.5V 7V
- Grove Interface



# 3. Application Ideas

- Waterdrop conservation
- Toys
- Robotics



# 4. Specification

Item	Minimum	Typical	Maximum
Working Voltage	2.5V	5V	7V
Analog Output	0.25V	0.4V	0.5V
Current	-	33mA	50mA



## 5. Usage


#### 5.1 With Arduino

The Infrared Proximity sensor is easy to use. The relationship between the voltage reading and the distance as shown below. When we read the voltage, which indicate the distance from the object in front to this sensor.

 Connect the 3-pin connector to the sensor, and connect the 4-pin connector to the A1 port of the Grove-Base Shield

**Note:** This sensor is quite small and use a tiny connector called the Japan Solderless Terminal (JST) connector. These connectors have three wires: ground, vcc, and the output signal. Because this sensor fire continuously and don't need any clock to initiate a reading cycle, it is easy to interface with any microcontroller. For the Arduino&Seeeduino, we prepared a 4-pin to 3-pin wire to convert the 3-pin connecter on the sensor to 4-pin connecter on the Grove Base Shield, to compatible with the Seeeduino Grove interface.

• Connect Arduino/Seeeduino via a USB cable.

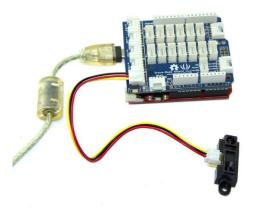


Copy and paste code below to a new Arduino sketch.



```
// initialise serial communications at 9600 bps:
    Serial.begin(9600);
void loop()
    voltage = getVoltage();
    Serial.print("sensor voltage = ");
    Serial.print(voltage);
    // wait 500 milliseconds before the next loop
    delay(500);
/*Function: Get voltage from the sensor pin that is connected with analog pin*/
/*Parameter:-void
                                                                        */
/*Return:-float, the voltage of the analog pin
float getVoltage()
    int sensor_value;
    int sum;
    // read the analog in value:
    for (int i = 0; i < 20; i ++)//Continuous sampling 20 times
        sensor_value = analogRead(IR_PROXIMITY_SENSOR);
        sum += sensor_value;
    sensor_value = sum / 20;
    float voltage;
    voltage = (float)sensor_value*ADC_REF/1024;
    return voltage;
```

- Upload the code, please click here if you do not know how to upload.
- Open the Serial Monitor, you can get the voltage. you can calculate or find the distance to the reflective object according to the below figures.



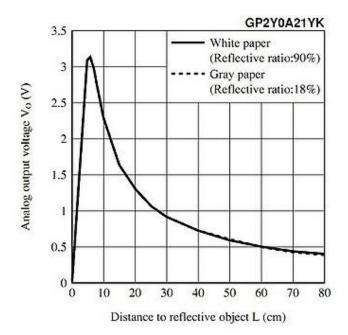

**Note:** Because of some basic trigonometry within the triangle from the emitter to reflection spot to receiver, the output of the detector is non-linear with respect to the distance being measured.

## 5.2 With Raspberry Pi

- 1. You should have got a raspberry pi and a grovepi or grovepi+.
- 2. You should have completed configuring the development environment, otherwise follow here.
- 3. Connection
  - Plug the sensor to grovepi socket D4 by using a grove cable.
- 4. Navigate to the demos' directory:

cd yourpath/GrovePi/Software/Python/

#### To see the code

```
nano grove_infrared_distance_interrupt.py # "Ctrl+x" to exit #
import time
import grovepi

# Connect the Grove Infrared Distance Interrupt Sensor to digital port D4
# SIG, NC, VCC, GND
sensor = 4
grovepi.pinMode(sensor, "INPUT")
```



```
while True:
    try:
        # Sensor returns LOW and onboard LED lights up when the
        # received infrared light intensity exceeds the calibrated level
        if grovepi.digitalRead(sensor) == 0:
            print "found something"
        else:
            print "nothing"

        time.sleep(.5)

except IOError:
        print "Error"
```


## 5. Run the demo.

sudo python grove\_infrared\_distance\_interrupt.py



## 6. Reference

This new rangers use triangulation and a small linear CCD array to compute the distance and/or presence of objects in the field of view. The basic idea is this: a pulse of IR light is emitted by the emitter. This light travels out in the field of view and either hits an object or just keeps on going. In the case of no object, the light is never reflected and the reading shows no object. If the light reflects off an object, it returns to the detector and creates a triangle between the point of reflection, the emitter, and the detector.

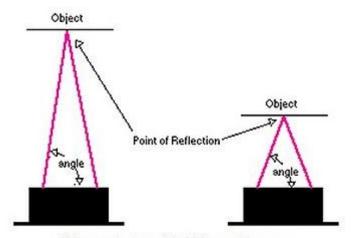

Different Angles with Different Distances

The angles in this triangle vary based on the distance to the object. The receiver portion of these new detectors is actually a precision lens that transmits the reflected light onto various portions of the enclosed linear CCD array based on the angle of the triangle described above. The CCD array can then determine what angle the reflected light came back at and therefore, it can calculate the distance to the object.

This new method of ranging is almost immune to interference from ambient light and offers amazing indifference to the color of object being detected. Detecting a black wall in full sunlight is now possible.



## 7. Resources

GP2Y0A21YK datasheet



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов:
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: <u>org@eplast1.ru</u>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.