

DEMO MANUAL DC2314A

LTC4236-1/LTC4236-2 Dual Ideal Diode-OR and Single Hot Swap Controller with Current Monitor

DESCRIPTION

Demonstration circuit 2314A is intended to demonstrate the performance of the LTC4236-1/LTC4236-2 Dual Ideal Diode-OR and Single Hot Swap Controller with Current Monitor. The controller operates in redundant supply circuits, where each rail has an individual ideal diode, and the outputs are connected to the load through a single Hot Swap circuit. The controller enables monitoring of the load current by providing a signal that is 100× the sense resistor voltage.

The DC2314A allows verification of the LTC4236 Hot Swap and ideal diode functionality during individual rail ramp-up and ramp-down events, during power supply switchover, in steady state, and in overcurrent fault conditions.

The DC2314A is configured for 12V operation with a 10A current load.

The main board components are the LTC4236 controller, two power MOSFETs functioning as ideal diodes and one power MOSFET controlled as a Hot Swap switch, two jumpers for enabling the second ideal diode and Hot Swap, four LEDs to indicate the power good state, fault condition, and the state of the MOSFETs operating as ideal diodes, seven banana jacks for connecting power supplies and loads, and many turrets and pads for observing circuit signals.

Table 1. DC2314A Assembly Options

Version	Part	Overcurrent Fault	
DC2314A-A	LTC4236-1	LATCHOFF	
DC2314A-B	LTC4236-2	RETRY	

Design files for this circuit board are available at http://www.linear.com/demo/DC2314A

7, LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

BOARD AND CONTROLLER PERFORMANCE SUMMARY Specifications are at TA = 25°C

SYMBOL	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
Supplies						
V _{IN}	Input Supply Range		2.9		18.0	V
I _{LIM}	Board Current Limit	OUT = 11V	8.91	10	11.11	А
V _{INTVCC}	Internal Regulator Voltage		4.5	5	5.5	V
V _{INTVCC(UVL)}	Internal V _{CC} Undervoltage Lockout	INTV _{CC} Rising	2.1	2.2	2.3	V
Ideal Diode Co	ontrol					
$\Delta V_{FWD(REG)}$	Forward Regulation Voltage (V _{INN} – V _{SENSE})		2	15	28	mV
ΔV_{DGATE}	External N-Channel Gate Drive (V _{DGATE1} – V _{IN1}) and (V _{DGATE2} – V _{D2SRC})	IN < 7V, ΔV_{PWD} = 0.15V; I = 0, -1 μ A IN = 7V to 18V, ΔV_{PWD} = 0.15V; I = 0, -1 μ A	5 10	7 12	14 14	V
I _{CPO(UP)}	CPO _n Pull-Up Current	CPO = IN = D2SRC = 2.9V CPO = IN = D2SRC = 18V	-60 -50	-100 -90	-130 -120	μΑ μΑ
I _{DGATE(FPU)}	DGATE _n Fast Pull-Up Current	$\Delta V_{FWD} = 0.2V$, $\Delta V_{DGATE} = 0V$, $CPO = 17V$		-1.5		A
I _{DGATE(FPD)}	DGATE _n Fast Pull-Down Current	$\Delta V_{FWD} = -0.2V$, $\Delta V_{DGATE} = 5V$		1.5		A
I _{DGATE2(DN)}	DGATE2 Off Pull-Down Current	D20FF = 2V, $\Delta V_{DGATE2} = 2.5V$	50	100	200	μΑ
t _{ON(DGATE)}	DGATE _n Turn-On Delay	$\Delta V_{FWD} = 0.2V$, $C_{DGATE} = 10nF$		0.25	0.5	μs
t _{OFF(DGATE)}	DGATE _n Turn-Off Delay	$\Delta V_{FWD} = -0.2V$, $C_{DGATE} = 10$ nF		0.2	0.5	μs
t _{PLH(DGATE2)}	D20FF Low to DGATE2 High			50	100	μѕ



BOARD AND CONTROLLER PERFORMANCE SUMMARY Specifications are at $T_A = 25\,^{\circ}\text{C}$

SYMBOL	PARAMETER	CONDITIONS	MIN	TYP	MAX	UNITS
Hot Swap Diode	Control .					
$\Delta V_{SENSE(TH)}$	Current Limit Sense Voltage Threshold (V _{SENSE} ⁺ – V _{SENSE} ⁻)	FB = 1.3V FB = 0V	22.5 5.8	25 8.3	27.5 10.8	mV mV
V _{SENSE+(UVL)}	SENSE ⁺ Undervoltage Lockout	SENSE+ Rising	1.8	1.9	2	V
$\Delta V_{SENSE+(HYS)}$	SENSE ⁺ Undervoltage Lockout Hysteresis		10	50	90	mV
ΔV_{HGATE}	External N-Channel Gate Drive (V _{HGATE} – V _{OUT})	IN < 7V, I = 0, -1µA IN = 7V to 18V, I = 0, -1µA	5 10	7 12	14 14	V
$\Delta V_{HGATE(H)}$	Gate High Threshold (V _{HGATE} – V _{OUT})		3.6	4.2	4.8	V
I _{HGATE(UP)}	External N-Channel Gate Pull-Up Current	Gate Drive On, HGATE = 0V	-7	-10	-13	μА
I _{HGATE(DN)}	External N-Channel Gate Pull-Down Current	Gate Drive Off, OUT = 12V, HGATE = OUT +5V	1	2	4	mA
I _{HGATE(FPD)}	External N-Channel Gate Fast Pull-Down Current	Fast Turn-Off, OUT = 12V, HGATE = OUT +5V	100	200	350	mA
Input/Output Pir	1					
V _{IN(TH)}	ON, FB Pin Threshold Voltage	Voltage Rising	1.21	1.235	1.26	V
V _{ON(RESET)}	ON Pin Fault Reset Threshold Voltage	ON Falling	0.57	0.6	0.63	V
V _{D20FF(H,TH)}	D20FF Pin High Threshold	D20FF Rising	1.21	1.235	1.26	V
V _{TMR(H)}	FTMR, DTMR Pin High Threshold		1.198	1.235	1.272	V
I _{FTMR(UP)}	FTMR Pull-Up Current	FTMR = 1V, in Fault Mode	-80	-100	-120	μA
I _{FTMR(DN)}	FTMR Pull-Down Current	FTMR = 2V, No Faults	1.3	2	2.7	μA
Current Monitor	•					
G _{IMON}	IMON Voltage Gain	$\Delta V_{SENSE} = 20$ mV and 5mV	99	100	101	V/V
V _{IMON(MAX)}	IMON Maximum Output Voltage	ΔV_{SENSE} = 70mV, 5V \leq SENSE ⁺ \leq 18V ΔV_{SENSE} = 35mV, SENSE ⁺ = 2.9V	3.5 2.7		5.5 2.9	V
R _{IMON(OUT)}	IMON Output Resistance	$\Delta V_{SENSE} = 200 \mu V$	15	20	27	kΩ

OPERATING PRINCIPLES

The LTC4236 is intended to build a combination of a diode-OR circuit for two rails and a common single Hot Swap path for inrush current limiting and overcurrent protection.

The LTC4236 regulates the forward voltage drop across the ideal diode MOSFET to ensure smooth current transfer from one supply to the other without oscillation. A fast ideal diode MOSFET turn-on reduces the load voltage droop during supply switchover. If the input supply fails or is shorted, a fast turn-off minimizes reverse current transients.

The Hot Swap fast acting current limit and internal timed circuit breaker protect circuit components when a short-circuit fault occurs.

The Hot Swap section of the LTC4236 has independent on/off control (ON pin).

Each ideal diode MOSFET is activated from an individual charge pump source, and the second one has an additional on/off control (D2OFF pin).

The LTC4236 features an adjustable debounce time — the delay time between events when the controller is enabled and when it starts up.

The DC2314A-A (LTC4236-1) circuit features a latchoff circuit breaker, and DC2314A-B (LTC4236-2) provides automatic retry after a fault.



BANANA JACKS WITH ASSOCIATED TURRETS

IN1 (E1, E2): First rail input. IN2 (E5, E6): Second rail input.

GND (E3, E4, E7, E8, E14, E15, E21, E22): Power and control ground.

SENSE⁺ (E16, E26): SENSE⁺ power node.

OUT (E12, E13): Circuit output for load connection.

TURRETS

ON (E18): Hot Swap ON control input.

EN (E19): Enable input.

D2OFF (E20): Enable ideal diode 2. PWRGD (E9): Power status output. FAULT (E10): Fault status output.

CMON (E11): Current sense monitoring output.

JUMPERS

JP1 (ON_SEL): Hot Swap ON control signal selection.

JP2 (EN_SEL): ENABLE signal selection.

JP3 (DIODE2_OFF): Diode 2 OFF-ON control.

JP4 (PPRI_SEL): Prioritizer function selection.

JP5 (FB_SEL): Foldback circuit selection.

JP6 (DEBOUNCE): Debounce time selection.

JP8 (DSTAT2_SEL): DSTAT2 pin functionality selection.

JP9 (D20FF_SEL): D20FF control in the prioritizer mode.

LEDS

D3: Indicates \overline{PWRGD} pin signal.

D4: Indicates FAULT pin signal.

D5: Indicates $\overline{\text{DSTAT1}}$ pin signal.

D6: Indicates DSTAT2 pin signal.

QUICK START PROCEDURE

Demonstration circuit 2314A is easy to set up to evaluate LTC4236. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

The DC2314A test includes independent test of the LTC4236 Hot Swap functionality and ideal diode functionality.

HOT SWAP FUNCTIONALITY TEST

This test is performed with singe rail operation when the output is provided through two series connected MOSFETs. One MOSFET functions as an ideal diode and the other one as a Hot Swap circuit switch.

The parameters of four different transients completely characterize the Hot Swap circuit performance. These transients are:

A Power-Up Without Any Additional Load

A Current Limit Operation After Successful Power-Up

A Power-Up With Shorted Output

A Power-Up With Pure Capacitive Load For Confirming Foldback Current Limiting

1. Initially, install the jumpers in the following positions, if the first ideal diode is used in the test:

JP1 ON SEL in the position OFF

JP2 EN SEL in the position EN

JP3 DIODE2_OFF in the position OFF_EXT

If the second ideal diode is used:

JP1 ON SEL in the position OFF

JP2 EN_SEL in the position EN

JP3 DIODE2 OFF in the position ON

Connect a +12V power supply to turrets IN1 (or IN2) and GND. Do not load the output. Place the current probe on the +12V wire, voltage probes on the OUT turret and a voltmeter on the CMON and GND turrets.

Provide an ON signal at the ON pin by changing the JP1 header position from the OFF position to 12V. Observe the transient. The output voltage rise time should be in the range of 8.3ms – 19.7ms. The PWRGD green LED D3 must light up. The voltmeter at the CMON turret should display an absolute value not larger than 15mV. Turn off the rail using the ON SEL jumper.

- 2. Connect a disabled electronic load to the OUT turret and GND. Turn on the rail and slowly increase the load current up to the circuit breaker threshold level. The current limit range should be from 8.91A to 11.11A. The voltage at the CMON turret should be in the range from 2.18V to 2.83V. Turn off the rail with the ON_SEL jumper.
- 3. Initially short the output with an external wire. Place the current probe on this wire. Turn on the rail and record the current shape. The maximum current should be in the 2.30A to 4.36A range, and the voltage at the CMON turret should be in the range from 0.57V to 1.09V.
- 4. With no rail voltages and JP1 in the OFF position, connect a 1000μF capacitor to the board output. Place a scope current probe on any wire between the board and the 1000μF capacitor, and a voltage probe at the output. Provide +12V to any input (IN1 or IN2) and enable the ON signal. Confirm that current limit is characterized by a foldback functionality.

IDEAL DIODE FUNCTIONALITY TEST

In this test, both ideal diodes are active and small variations in the input voltage forces one ideal diode to be off and the other ideal diode to be on.

Connect input turrets (IN1 and IN2) of each ideal diode with individual independent lab supplies. Adjust each input voltage to +12V with maximum possible accuracy. Place one voltmeter between IN1 and IN2 turrets to measure the difference between the two input voltages. Connect an electronic load to the output turret. Activate both rails and keep the load around 1A to 3A. Play with the input voltage levels and be sure that when the difference between input voltages exceeds 28mV, only one rail feeds the load.



QUICK START PROCEDURE


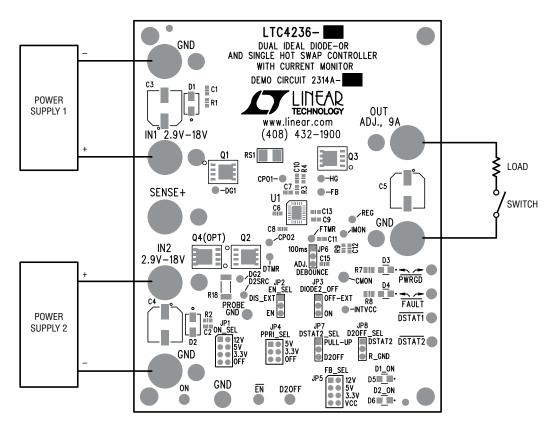


Figure 1. Measurement Equipment Setup

SCHEMATIC DIAGRAM



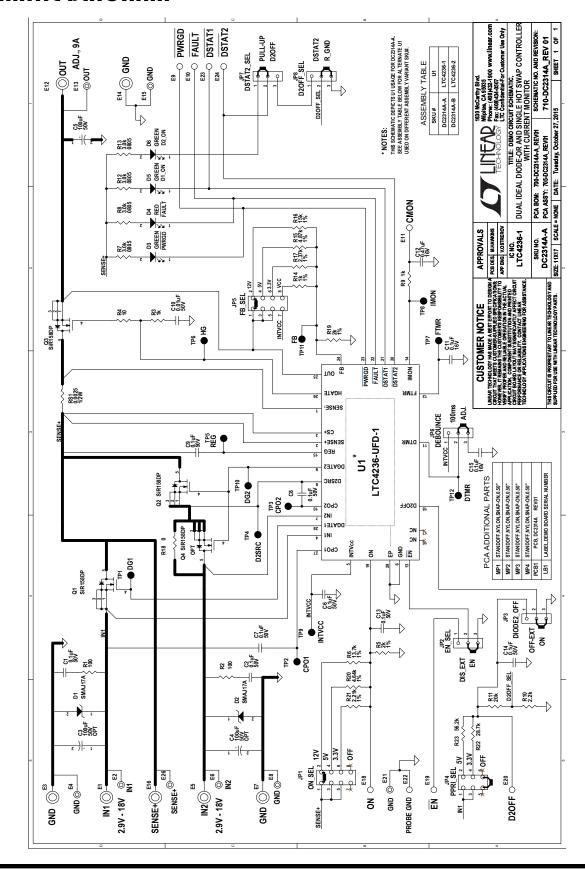

DEMO MANUAL DC2314A

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following AS IS conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged**.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation





Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.