## **Process Indicator** K3HB-X

CSM\_K3HB-X\_DS\_E\_11\_1

#### A Process Indicator Ideal for Discriminating and **Displaying Measurements for Voltage/Current** Signals

- Easy recognition of judgement results using color display that can be switched between red and green. \*
- Equipped with a position meter for monitoring operating status trends.
- External event input allows use in various measurement and discrimination applications.
- Series expanded to include DeviceNet models.
- Short body with depth of only 95 mm (from behind the front panel), or 97 mm for DeviceNet models.
- UL certification approval (Certification Mark License).
- CE Marking conformance by third party assessment body.
- Water-resistant enclosure conforms to NEMA 4X (equivalent to IP66).
- Capable of high-speed sampling at 50 times per second (20 ms)
- · Easy-to-set two-point scaling allows conversion and display of any userset values.
- \*Visual confirmation of judgement results is not supported on models that do not have an output or models that do not support DeviceNet. You can change the display color by setting it, but you cannot switch it based on the

judgement results.



Refer to Safety Precautions for All Digital Panel Meters.





For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

## **Model Number Structure**

## ■ Model Number Legend

Base Units and Optional Boards can be ordered individually or as sets.

#### **Base Units**

#### 1. Input Sensor Code

VD: DC voltage input AD: DC current input VA: AC voltage input AA: AC current input

#### 5. Supply Voltage

100-240 VAC: 100 to 240 VAC 24 VAC/VDC: 24 VAC/VDC

## **Optional Board**

Sensor Power Supply/Output Boards

K33-□

**Relay/Transistor Output Boards** 

**Event Input Boards** 

K35-□

Note: The following combinations are not possible.

- Communications (FLK□A) + DeviceNet (DRT)
- Communications (FLK□A) + BCD output (BCD)
- Linear current/voltage (L□A) + DeviceNet (DRT)

## **Base Units with Optional Boards**

K3HB-X -- -1 2 3 4

#### 2. Sensor Power Supply/Output Type Code

None: None
CPA: Relay output (PASS: SPDT) + Sensor power supply
(12 VDC +/-10%, 80 mA) (See note 1.)
L1A: Linear current output (0 to 20 or 4 to 20 mA DC) + Sensor power supply
(12 VDC +/-10%, 80 mA) (See note 2.)
L2A: Linear voltage output (0 to 5, 1 to 5, or 0 to 10 VDC) + Sensor power supply
(12 VDC +/-10%, 80 mA) (See note 2.)
A: Sensor power supply (12 VDC +/-10%, 80 mA)
FLK1A: Communications (RS-232C) + Sensor power supply
(12 VDC +/-10%, 80 mA) (See note 2.)
FLK3A: Communications (RS-485) + Sensor power supply
(12 VDC +/-10%, 80 mA) (See note 2.)

CPA can be combined with relay outputs only.

Note: 1. CPA can be combined with relay outputs only.

Only one of the following can be used by each Digital Indicator: RS-232C/RS-485 communications, a linear output, or DeviceNet communications.

#### 3. Relay/Transistor Output Type Code

None: None

C1: Relay contact (H/L: SPDT each)

C2: Relay contact (HH/H/LL/L: SPST-NO each)

T1: Transistor (NPN open collector: HH/H/PASS/L/LL)
T2: Transistor (PNP open collector: HH/H/PASS/L/LL)

BCD \*: BCD output + transistor output (NPN open collector: HH/H/PASS/L/

DRT: DeviceNet (See note 2.)

\* A Special BCD Output Cable (sold separately) is required.

#### 4. Event input Type Code

None: None

1: 5 inputs (M3 terminal blocks), NPN open collector 2: 8 inputs (10-pin MIL connector), NPN open collector

3: 5 inputs (M3 terminal blocks), PNP open collector

4: 8 inputs (10-pin MIL connector), PNP open collector

## **Accessories (Sold Separately)**

K32-DICN: Special Cable (for event inputs, with 8-pin connector)

K32-BCD: Special BCD Output Cable

### Watertight Cover

	Model	
Y92A-49N		

## **Rubber Packing**

	Model	
K32-P1		

Note: Rubber packing is provided with the Controller.

## **Specifications**

## **■** Ratings

Power supply voltage		100 to 240 VAC (50/60 Hz), 24 VAC/VDC, DeviceNet power supply: 24 VDC		
Allowable power sup	pply voltage range	85% to 110% of the rated power supply voltage, DeviceNet power supply: 11 to 25 VDC		
Power consumption (See note 1.)		100 to 240 V: 18 VA max. (max. load) 24 VAC/DC: 11 VA/7 W max. (max. load)		
Current consumption	n	DeviceNet power supply: 50 mA max. (24 VDC)		
Input		DC voltage, DC current, AC voltage, AC current		
A/D conversion met	hod	Delta-Sigma method		
External power supp	oly	12 VDC ±10%, 80 mA (models with external power supply only)		
Event inputs (See note 2.)		NPN open collector or no-voltage contact signal ON residual voltage: 3 V max. ON current at 0 $\Omega$ : 17 mA max. Max. applied voltage: 30 VDC max. OFF leakage current: 1.5 mA max.		
	Startup compensa- tion timer input	NPN open collector or no-voltage contact signal ON residual voltage: 2 V max.		
	Hold input	ON current at 0 Ω: 4 mA max.		
	Reset input	Max. applied voltage: 30 VDC max.  OFF leakage current: 0.1 mA max.		
	Forced-zero input			
	Bank input			
Output ratings (depends on the mod-	Relay output	250 VAC, 30 VDC, 5 A (resistive load) Mechanical life expectancy: 5,000,000 operations, Electrical life expectancy: 100,000 operations		
el)	Transistor output	Maximum load voltage: 24 VDC, Maximum load current: 50 mA, Leakage current: 100 μA max.		
	Linear output	Linear output 0 to 20 mA DC, 4 to 20 mA DC:  Load: 500 Ω max, Resolution: Approx. 10,000, Output error: ±0.5% FS  Linear output 0 to 5 VDC, 1 to 5 VDC, 0 to 10 VDC:  Load: 5 kΩ max, Resolution: Approx. 10,000, Output error: ±0.5% FS  (1 V or less: ±0.15 V; no output for 0 V or less)		
Display method		Negative LCD (backlit LED) display 7-segment digital display (Character height: PV: 14.2 mm (green/red); SV: 4.9 mm (green)		
Main functions		Scaling function, measurement operation selection, averaging, previous average value comparison, forced-ze-ro, zero-limit, output hysteresis, output OFF delay, output test, teaching, display value selection, display color selection, key protection, bank selection, display refresh period, maximum/minimum hold, reset		
Ambient operating t	emperature	-10 to 55°C (with no icing or condensation)		
Ambient operating h	numidity	25% to 85%		
Storage temperature	9	–25 to 65°C (with no icing or condensation)		
Altitude		2,000 m max.		
Accessories		Watertight packing, 2 fixtures, terminal cover, unit stickers, instruction manual. DeviceNet models also include a DeviceNet connector (Hirose HR31-5.08P-5SC(01)) and crimp terminals (Hirose HR31-SC-121) (See note 3.)		

Note: 1. DC power supply models require a control power supply capacity of approximately 1 A per Unit when power is turned ON. Particular attention is required when using two or more DC power supply models. The OMRON S8VS-series DC Power Supply Unit is recommended

- 2. PNP input types are also available.
- 3. For K3HB-series DeviceNet models, use only the DeviceNet Connector included with the product. The crimp terminals provided are for Thin Cables.

## **■** Characteristics

Display range		-19,999 to 99,999			
Sampling period	d	20 ms (50 times/second)			
Comparative ou	tput response time	DC input: 100 ms max.; AC input: 300 ms max. (The time until the comparative output is output when there is a forced sudden change in the input signal from 15% to 95% or 95% to 15%.)			
Linear output re	esponse time	DC input: 150 ms max.; AC input: 420 ms max. (The time until the final analog output value is reached when there is a forced sudden change in the outp signal from 15% to 95% or 95% to 15%.)			
Insulation resis	tance	20 M $\Omega$ min. (at 500 VDC)			
Dielectric streng	gth	2,300 VAC for 1 min between external terminals and case			
Noise immunity	,	100 to 240 VAC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)  24 VAC/VDC models:  ±1,500 V at power supply terminals in normal or common mode (waveform with 1-ns rising edge and pulse width of 1 μs/100 ns)			
Vibration resist	ance	Frequency: 10 to 55 Hz; Acceleration: 50 m/s², 10 sweeps of 5 min each in X, Y, and Z directions			
Shock resistance	ce	150 m/s² (100 m/s² for relay outputs) 3 times each in 3 axes, 6 directions			
Weight		Approx. 300 g (Base Unit only)			
Degree of	Front panel	Conforms to NEMA 4X for indoor use (equivalent to IP66)			
protection	Rear case	IP20			
	Terminals	IP00 + finger protection (VDE0106/100)			
Memory protect	tion	EEPROM (non-volatile memory) Number of rewrites: 100,000			
Applicable stan	dards	UL61010-1, CSA C22.2 No.61010-1-04 EN61010-1 (IEC61010-1): Pollution degree 2/Overvoltage category II EN61326-1			
EMC		EMI: EN61326 industrial applications			
		Electromagnetic radiation interference CISPR 11 Group 1, Class A			
		Terminal interference voltage CISPR 11 Group 1, Class A			
		EMS: EN61326 industrial applications			
		Electrostatic Discharge Immunity EN61000-4-2: 4 kV (contact), 8 kV (in air)			
		Radiated Electromagnetic Field Immunity EN61000-4-3: 10 V/m 1 kHz sine wave amplitude modulation (80 MHz to 1 GHz, 1.4 to 2 GHz)			
		Electrical Fast Transient/Burst Immunity EN61000-4-4: 2 kV (power line), 1 kV (I/O signal line)			
		Surge Immunity EN61000-4-5: 1 kV with line (power line), 2 kV with ground (power line)			
		Conducted Disturbance Immunity EN61000-4-6: 3 V (0.15 to 80 MHz)			
		Power Frequency Magnetic Immunity EN61000-4-8: 30 A/m (50 Hz) continuous time			
		Voltage Dips and Interruptions Immunity EN61000-4-11: 0.5 cycle, 0°/180°, 100% (rated voltage)			

OMRON 3

## ■ Input Range (Measurement Range and Accuracy) CAT II

Input type	Range	Set value	Measurement range	Maximum measurement range	Input impedance	Accuracy	Allowable instantaneous overload (30 s)
K3HB-XVD	Α	A ud	±199.99 V	-199.99 to 219.99 V	10 M $\Omega$ min.	±0.1%rdg ± 1	±400 V
DC voltage	В	b ud	±19.999 V	-19.999 to 21.999 V	1 MΩ min.	digit max.	±200 V
	С	[ ud	±1.9999 V	-1.9999 to 2.1999 V	]		
	D	d ud	1.0000 to 5.0000 V	0.5000 to 5.5000 V	]		
K3HB-XAD	Α	A A9	±199.99 mA	199.99 to 219.99 mA	1 Ω max.	±0.1%rdg ± 1	±400 mA
DC current	В	ь Rd	±19.999 mA	19.999 to 21.999 mA	10 Ω max.	digit max.	±200 mA
	С	E Ra	±1.9999 mA	1.9999 to 2.1999 mA	33 $\Omega$ max.		
	D	d Rd	4.000 to 20.000 mA	2.000 to 22.000 mA	10 Ω max.		
K3HB-XVA	Α	R uR	0.0 to 400.0 V	0.0 to 440.0 V	1 MΩ min.	±0.3%rdg ± 5	700 V
AC voltage	В	ь иЯ	0.00 to 199.99 V	0.00 to 219.99 V		digits max.	
(See note 4.)	С	Г ⊔Я	0.000 to 19.999 V	0.000 to 21.999 V		±0.5%rdg ± 10	400 V
	D	d uR	0.0000 to 1.9999 V	0.0000 to 1.9999 V		digits max.	
K3HB-XAA AC current	А	A AA	0.000 to 10.000 A	0.000 to 11.000 A	(0.5 VA CT) (See note 3.)	±0.5%rdg ± 20 digits max.	20 A
	В	ь RR	0.0000 to 1.9999 A	0.0000 to 2.1999 A	(0.5 VA CT) (See note 3.)		
	С	E RR	0.00 to 199.99 mA	0.00 to 219.99m A	1 Ω max.	±0.5%rdg ± 10	2 A
	D	d RR	0.000 to 19.999 mA	0.000 to 21.999m A	10 Ω max.	digits max.	

Note: 1. The accuracy is for an input frequency range of 40 Hz to 1 kHz (except for AD current input A and B ranges of 50 to 60 Hz) and an ambient temperature of 23 ±5°C. The error, however, increases below 10% of the maximum input value.

DC voltage input (all ranges): 10% or less of max. input =  $\pm 0.15\%$  FS
DC current input (all ranges): 10% or less of max. input =  $\pm 0.15\%$  FS
AC voltage input (A: 0.0 to 400.0 V): 10% or less of max. input =  $\pm 0.15\%$  FS
AC voltage input (B: 0.00 to 199.99 V): 10% or less of max. input =  $\pm 0.2\%$  FS
AC voltage input (C: 0.000 to 19.999 V): 10% or less of max. input =  $\pm 0.2\%$  FS
AC voltage input (C: 0.000 to 19.999 V): 10% or less of max. input =  $\pm 0.2\%$  FS


AC current input (A: 0.000 to 10.000 A): 10% or less of max. input =  $\pm 0.25\%$  FS

AC current input (B: 0.0000 to 1.9999 Å): 10% or less of max. input =  $\pm 0.5\%$  FS

AC current input (C: 0.00 to 199.99 mA; D: 0.000 to 19.999 A): 10% or less of max. input = ±0.15% FS

When DC voltage input models are used with a ±1.9999 V range, make sure that the connections between input terminals are not open. If the input terminals are open, the display will show large variations. Connect resistance of approximately 1 MΩ between the input terminals if they are open.

- 2. The letters "rdg" mean "reading" and refer to the input error.
- 3. The value (0.5 VA CT) is the VA consumption of the internal CT (current transformer).



4. The K3HB-XVA□□ complies with UL standards when the applied input voltage is within the range 0 to 150 VAC. If the input voltage is higher than 150 VAC, install an external transformer or take other measures to drop the voltage to 150 VAC or lower.

## **Common Specifications**

## **■** Event Input Ratings

Input type	S-TMR, HOLD, RESET, ZERO, BANK1, BANK2, BANK4	TIMING
Contact	ON: 1 k $\Omega$ max., OFF: 100 k $\Omega$ min.	
No-contact	OFF leakage current: 0.1 mA max. Load current: 4 mA max.	ON residual voltage: 3 V max. OFF leakage current: 1.5 mA max. Load current: 17 mA max. Maximum applied voltage: 30 VDC max.

## **■** Output Ratings

## **Contact Output**

Item	Resistive loads (250 VAC, cosφ=1; 30 VDC, L/R=0 ms)	Inductive loads (250 VAC, closed circuit, cos \$\phi=0.4\$; 30 VDC, L/R=7 ms)
Rated load	5 A at 250 VAC 5 A at 30 VDC	1 A at 250 VAC 1 A at 30 VDC
Mechanical life expectancy	5,000,000 operations	
Electrical life expectancy	100,000 operations	

## **Transistor Output**

Maximum load voltage	24 VDC
Maximum load current	50 mA
Leakage current	100 μA max.

## **Linear Output**

Item	0 to 20 mA	4 to 20 mA	0 to 5 V	1 to 5 V	0 to 10 V	
Allowable load impedance	500 $\Omega$ max.	$0~\Omega$ max. $5~\mathrm{k}\Omega$ min.				
Resolution	Approx. 10,000					
Output error	±0.5%FS		±0.5%FS (1 V or les	ss: ±0.15 V; no outp	ut for 0 V or less.)	

## **Serial Communications Output**

Item	RS-232C, RS-485
Communications method	Half duplex
Synchronization method	Start-stop synchronization
Baud rate	9,600, 19,200, or 38,400 bps
Transmission code	ASCII
Data length	7 bits or 8 bits
Stop bit length	2 bits or 1 bit
Error detection	Vertical parity and FCS
Parity check	Odd, even

Note: For details on serial and DeviceNet communications, refer to the *Digital Indicator K3HB Communications User's Manual* (Cat.No. N129).

# BCD Output I/O Ratings (Input Signal Logic: Negative)

	I/O signal name		Item	Rating
Inputs	REQUEST HOLD MAX MIN	Input signal		No-voltage contact input
			urrent for age input	10 mA
	RESET	Signal	ON voltage	1.5 V max.
		level	OFF voltage	3 V min.
Outputs	DATA POLARITY OVER DATA VALID RUN	Maximum load voltage		24 VDC
		Maximum load current		10 mA
		Leakage current		100 μA max.
	HH H	Maximum load voltage		24 VDC
	_	Maximum load current		50 mA
		Leakag	e current	100 μA max.


Note: For details on serial and DeviceNet communications, refer to the *Digital Indicator K3HB Communications User's Manual* (Cat.No. N129).

OMRON 5


## **DeviceNet Communications**

Communications prot	ocol	Conforms to DeviceNet						
Supported communications	Remote I/O communications	Master-Slave connection (polling, bit-strobe, COS, cyclic) Conforms to DeviceNet communications standards.						
	I/O allocations	ΑI	locate any I/O data	using the Configurat	or.			
		Allocate any data, such as DeviceNet-specific parameters and variable area for Digit Indicators.						
		Input area: 2 blocks, 60 words max.						
		O	utput area: 1 block,	29 words max.				
		(T	he first word in the a	rea is always allocate	ed for the Output Exe	cution Enabled Flags.)		
	Message communications		plicit message com					
			ompoWay/F commu mmunications)	nications commands	s can be executed (u	sing explicit message		
Connection methods		Combination of multi-drop and T-branch connections (for trunk and drop lines)				and drop lines)		
Baud rate		DeviceNet: 500, 250, or 125 Kbps (automatic follow-up)						
Communications med	ia	Sp	oecial 5-wire cable (	2 signal lines, 2 pow	er supply lines, 1 sh	ield line)		
Communications dista	ance							
			Baud rate	Network length (max.)	Drop line length (max.)	Total drop line length (max.)		
			500 Kbps	100 m (100 m)	6 m	39 m		
			250 Kbps	100 m (250 m)	6 m	78 m		
			125 Kbps	100 m (500 m)	6 m	156 m		
			The values in pare	ntheses are for Thic	k Cable.	<u> </u>		
Communications pow	er supply	24	-VDC DeviceNet po	ower supply				
Allowable voltage fluc	tuation range	11	to 25-VDC Device	Net power supply				
<b>Current consumption</b>		50 mA max. (24 VDC)						
Maximum number of r	nodes	64 (DeviceNet Configurator is counted as one node when connected)						
Maximum number of s	slaves	63						
Error control checks		CRC errors						
DeviceNet power supp	oly	Supplied from DeviceNet communications connector						

## ■ Internal Block Diagram

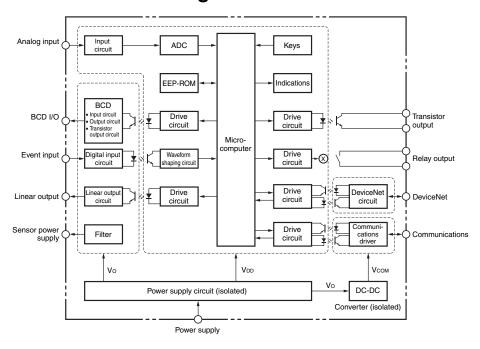


## **■** Power Supply Derating Curve for Sensor (Reference Value)

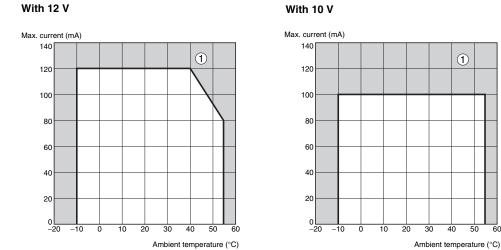

- Note: 1. The above values are for standard mounting. The derating curve differs depending on the mounting conditions.
  - 2. Do not use the Sensor outside of the derating area (i.e., do not use it in the area labeled ① in the above graphics). Doing so may occasionally cause deterioration or damage to internal components.


## **■** Component Names and Functions

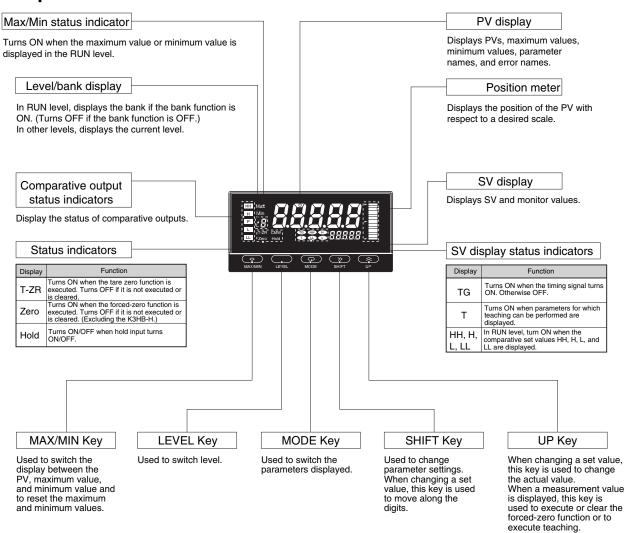

## ■ BCD Output Timing Chart


A REQUEST signal from a Programmable Controller or other external device is required to read BCD data.

## Single Sampling Data Output

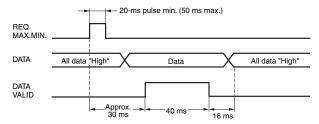


The data is set in approximately 30 ms from the rising edge of the REQUEST signal and the DATA VALID signal is output. When reading the data from a Programmable Controller, start reading the data when the DATA VALID signal turns ON. The DATA VALID signal will turn OFF 40 ms later, and the data will turn OFF 16 ms after that.


## **Continuous Data Output**



Measurement data is output every 64 ms while the REQUEST signal remains ON.

Note: If HOLD is executed when switching between data 1 and data 2, either data 1 or data 2 is output depending on the timing of the hold signal. The data will not go LOW.

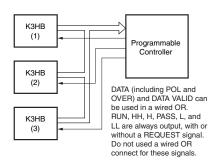

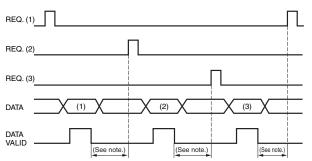


Note: Leave 20 ms min. between DATA VALID turning OFF and the REQUEST signal.

## **Programmable Controller Connection Example**

### **Display Unit Connection Example**

the pin number for the Digital Indicator narrow pitch connector (manufactured by

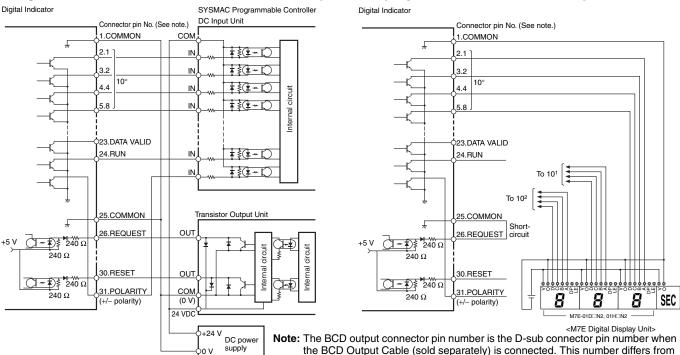

Refer to the following User's Manual for application precautions and other information required when using the Digital Indicator: K3HB-S/-X/-V/-H Digital Indicator User's Manual (Cat. No. N128)


Honda Tsushin Kogyo Co., Ltd.).


The manual can be downloaded from the following site in PDF format: OMRON Industrial Web http://www.fa.omron.co.jp


## **■** Connections

## **Terminal Arrangement**


Note: Insulation is used between signal input, event input, output, and power supply terminals.

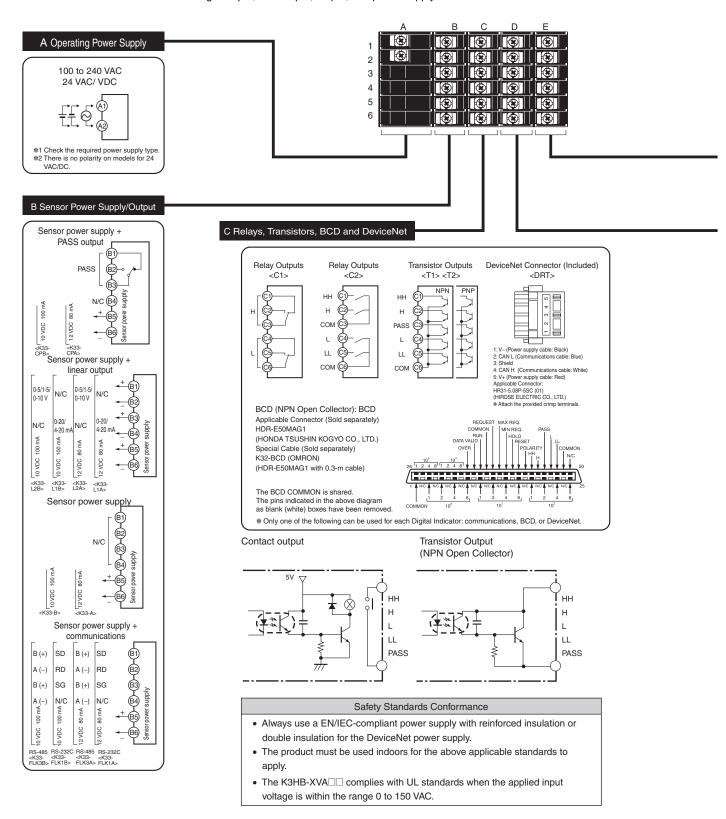

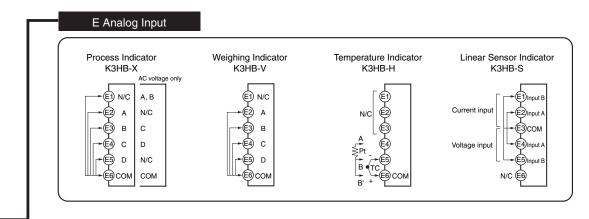


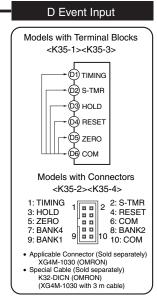

- Use terminal pin D6 as the common terminal.
- Use NPN open collector or no-voltage contacts for event input.
   PNP types are also available.

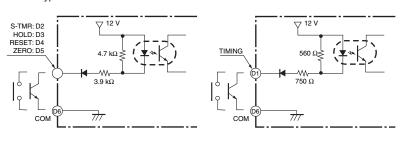

## **BCD Output Cable**

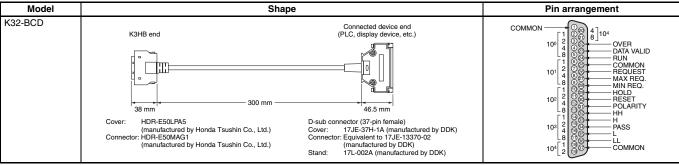

Note: The BCD Output Cable has a D-sub plug. Cover: 17JE-37H-1A (manufactured by DDK); Connector: equivalent to 17JE-23370-02 (D1) (manufactured by DDK)

## **Special Cable (for Event Inputs with 8-pin Connector)**

Model	Appearance		Wiring		
K32-DICN	9 10 2 3,000 mm Cable marking (3 m)	•	Pin No.  1 2 3 4 5 6 7 8	Signal name N/C S-TMR HOLD RESET N/C COM BANK4 BANK4 BANK1	
			10	СОМ	

OMRON 1


## **■** Main Functions

#### Measurement

#### Timing Hold


#### **Normal**

 Continuously performs measurement and always outputs based on comparative results.




### **Peak Hold/Bottom Hold**

• Measures the maximum (or minimum) value in a specified period.

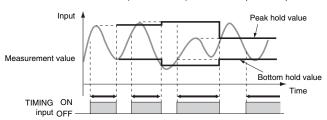

#### Scaling

Scaling converts input signals in any way required before displaying them. The values can be manipulated by shifting, inverting, or  $\pm$ -reversing.

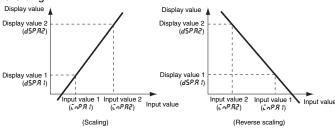

#### Teaching


Settings for scaling can be made using the present measurement values instead of inputting values with the SHIFT and UP Keys. This is a convenient function for making the settings while monitoring the operating status.

### Standby Sequence

Turns the comparative output OFF until the measurement value enters the PASS range.


#### **Sampling Hold**

• Holds the measurement at the rising edge of the TIMING signal.

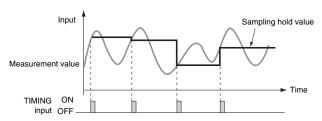

#### Peak-to-peak Hold

Measures the difference between the maximum and minimum values in a specified period.

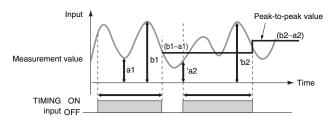

#### **Average Processing**

Average processing of input signals with extreme changes or noise smooths out the display and makes control stable.

#### Previous Average Value Comparison

Slight changes can be removed from input signals to detect only extreme changes.

## ■ Input Compensation/Display

#### Forced-zero


Forces the present value to 0. (Convenient for setting reference values or deducting tares for weight measurement.)

#### **Zero-trimming**

Compensates for mild fluctuations in input signals due to factors such as sensor temperature drift, based on OK (PASS) data at measurement. (This function can be used with sampling hold, peak hold, or bottom hold.)

#### Zero-limit

Changes the display value to 0 for input values less than the set value. It is enabled in normal mode only. (This function can be used, for example, to stop negative values being displayed or to eliminate flickering and minor inconsistencies near 0.)




#### **Display Refresh Period**

The display refresh period can be lengthened to reduce flickering and thereby make the display easier to read.

#### **Display Color Selection**

Values can be displayed in either red or green. With comparative output models, the display color can also be set to change according to the status of comparative outputs (e.g., green to red or red to green).

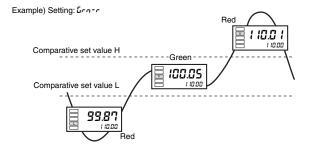

#### **Display Value Selection**

The current display value can be selected from the present value, the maximum value, and the minimum value.

#### Step Value

It is possible to specify (i.e., restrict) the values that the smallest displayed digit can change by. For example, if the setting is 2, the smallest digit will only take the values 0, 2, 4, 6, or 8 and if the setting is 5, it will only take the values 0 or 5. If the setting is 10, it will only take the value of 0.


#### **Interruption Memory**


- The minimum and maximum values when the power supply is turned OFF can be saved if interruption memory is turned ON.
- If interruption memory is ON, the maximum and minimum values after the last resetting will be displayed.
- If interruption memory is OFF, the maximum and minimum values will be displayed after the power supply is turned ON (or after the reset input is performed).

## **■** Output

#### **Comparative Output Pattern**

The output pattern for comparative outputs can be selected. In addition to high/low comparison with set values, output based on level changes is also possible. (Use the type of output pattern appropriate for the application.)






#### **Output Logic**

Reverses the output operation of comparative outputs for comparative results.

#### Hysteresis

Prevents comparative output chattering when the measurement value fluctuates slightly near the set value.


Example: Comparative Output Pattern (Standard Output)



#### **Startup Compensation Timer**

Measurement can be stopped for a set time using external input.

When S-TMR and COM are interconnected and the startup compensation timer is set, measurement will not be performed until a set time after the power supply is tuned ON.

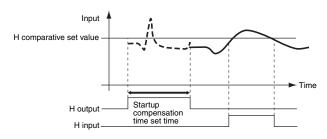


#### **PASS Output Change**

Comparative results other than PASS and error signals can be output from the PASS output terminal.

### **■** Dimensions



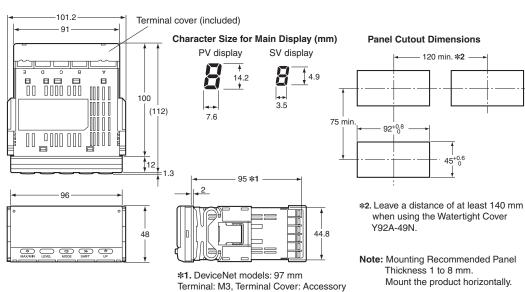


## **■** Wiring Precautions

- For terminal blocks, use the crimp terminals suitable for M3 screws.
- Tighten the terminal screws to the recommended tightening torque of approx. 0.5 N·m.
- To prevent inductive noise, separate the wiring for signal lines from that for power lines.


### Wiring

• Use the crimp terminals suitable for M3 screws shown below.



### **Unit Stickers**


 Select the appropriate units from the unit sticker sheets provided and attach the sticker to the Indicator.

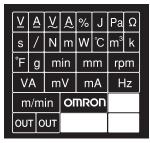


**Note:** When using for meters, such as weighing meters, use the units specified by regulations on weights and measures.

## **■** Mounting Method

- 1. Insert the K3HB into the mounting cutout in the panel.
- Insert watertight packing around the Unit to make the mounting watertight.

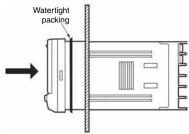


Insert the adapter into the grooves on the left and right sides of the rear case and push until it reaches the panel and is fixed in place.

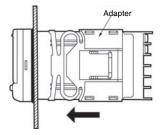


### **■ LCD Field of Vision**

The K3HB is designed to have the best visibility at the angles shown in the following diagram.




## **■** Watertight Cover

Y92A-49N



## **■** Rubber Packing

K32-P1



If the rubber packing is lost or damaged, it can be ordered using the following model number: K32-P1.

(Depending on the operating environment, deterioration, contraction, or hardening of the rubber packing may occur and so, in order to ensure the level of waterproofing specified in NEMA4, periodic replacement is recommended.)

**Note:** Rubber packing is provided with the Controller.

## ■ Safety Precautions

## /!\ WARNING

Do not touch the terminals while power is being supplied. Doing so may possibly result in electric shock. Make sure that the terminal cover is installed before using the product.



Always provide protective circuits in the network. Without protective circuits, malfunctions may possibly result in accidents that cause serious injury or significant property damage.

Provide double or triple safety measures in external control circuits, such as emergency stop circuits, interlock circuits, or limit circuits, to ensure safety in the system if an abnormality occurs due to malfunction of the product or another external factor affecting the product's operation.



#### **∕!\ CAUTION**

Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in minor electric shock, fire, or malfunction.



Do not use the product in locations where flammable or explosive gases are present. Doing so may occasionally result in explosion, causing minor or moderate injury, or property damage.



Do not attempt to disassemble, repair, or modify the product. Doing so may occasionally result in minor or moderate injury due to electric shock.



Do not use the equipment for measurements within Measurement Categories III and IV for K3HB-X and II, III, and IV for K3HB-S, K3HB-V, and K3HB-H (according to IEC61010-1). Doing so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment. Use the equipment for measurements only within the Measurement Category for which the product is designed.



Perform correct setting of the product according to the application. Failure to do so may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.



Ensure safety in the event of product failure by taking safety measures, such as installing a separate monitoring system. Product failure may occasionally prevent operation of comparative outputs, resulting in damage to the connected facilities and equipment.



Tighten the screws on the terminal block and the connector locking screws securely using a tightening torque within the following ranges. Loose screws may occasionally cause fire, resulting in minor or moderate injury, or damage to the equipment.



Terminal block screws: 0.43 to 0.58 N·m Connector locking screws: 0.18 to 0.22 N·m

Make sure that the product will not be adversely affected if the DeviceNet cycle time is lengthened as a result of changing the program with online editing. Extending the cycle time may cause unexpected operation, occasionally resulting in minor or moderate injury, or damage to the equipment.



Before transferring programs to other nodes or changing I/O memory of other nodes, check the nodes to confirm safety. Changing the program or I/O memory of other nodes may occasionally cause unexpected operation, resulting in minor or moderate injury, or damage to the equipment.




#### **Precautions for Safe Use**

- 1. Do not use the product in the following locations.
- Locations subject to direct radiant heat from heating equipment
- Locations where the product may come into contact with water or oil
- · Locations subject to direct sunlight
- Locations where dust or corrosive gases (in particular, sulfuric or ammonia gas) are present
- · Locations subject to extreme temperature changes
- · Locations where icing or condensation may occur
- · Locations subject to excessive shocks or vibration
- 2. Do not use the product in locations subject to temperatures or humidity levels outside the specified ranges or in locations prone to condensation. If the product is installed in a panel, ensure that the temperature around the product (not the temperature around the panel) does not go outside the specified range.
- 3. Provide sufficient space around the product for heat dissipation.
- 4. Use and store the product within the specified temperature and humidity ranges. If several products are mounted side-by-side or arranged in a vertical line, the heat dissipation will cause the internal temperature of the products to rise, shortening the service life. If necessary, cool the products using a fan or other cooling method
- 5. The service life of the output relays depends on the switching capacity and switching conditions. Consider the actual application conditions and use the product within the rated load and electrical service life. Using the product beyond its service life may result in contact welding or burning.
- 6. Install the product horizontally.
- 7. Mount to a panel between 1 and 8-mm thick.
- 8. Use the specified size of crimp terminals (M3, width: 5.8 mm max.) for wiring. To connect bare wires, use AWG22 (cross section: 0.326 mm²) to AWG14 (cross section: 2.081 mm²) to wire the power supply terminals and AWG28 (cross section: 0.081 mm²) to AWG16 (cross section: 1.309 mm²) for other terminals. (Length of exposed wire: 6 to 8 mm)
- 9. In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.
- 10.Ensure that the rated voltage is achieved no longer than 2 s after turning the power ON.
- 11.Allow the product to operate without load for at least 15 minutes after the power is turned ON.
- 12.Do not install the product near devices generating strong high-frequency waves or surges. When using a noise filter, check the voltage and current and install it as close to the product as possible.
- 13.Do not use thinner to clean the product. Use commercially available alcohol.
- 14.Be sure to confirm the name and polarity for each terminal before wiring the terminal block and connectors.
- 15.Use the product within the noted supply voltage and rated load.
- 16.Do not connect anything to unused terminals.
- 17.Output turns OFF when the mode is changed or settings are initialized. Take this into consideration when setting up the control system.
- 18.Install an external switch or circuit breaker that complies with applicable IEC60947-1 and IEC60947-3 requirements and label them clearly so that the operator can quickly turn OFF the power.
- 19.Use the specified cables for the communications lines and stay within the specified DeviceNet communications distances. Refer to the User's Manual (Cat. No. N129) for details on communications distance specifications and cables.
- 20.Do not pull the DeviceNet communications cables with excessive force or bend them past their natural bending radius.
- 21.Do not connect or remove connectors while the DeviceNet power is being supplied. Doing so will cause product failure or malfunction.
- 22.Use cables with a heat resistance of 70°C min.


## **■** Noise Countermeasures

- Do not install the product near devices generating strong high-frequency waves or surges, such as high-frequency welding and sewing machines.
- Mount a surge suppressor or noise filter to peripheral devices generating noise, in particular, motors, transformers, solenoids, and magnet coils.



3. In order to prevent inductive noise, wire the lines connected to the terminal block separately from power lines carrying high voltages or currents. Do not wire in parallel with or in the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shield lines.

## **Example of Countermeasures for Inductive Noise on Input Lines**



- If a noise filter is used for the power supply, check the voltage and current, and install the noise filter as close to the product as possible.
- 5. Reception interference may occur if the product is used close to a radio, television, or wireless.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

#### Terms and Conditions Agreement

#### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2014.9

In the interest of product improvement, specifications are subject to change without notice.



## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Omron:

<u>K3HB-XAA 24VAC/VDC</u> <u>K3HB-XAD 24VAC/VDC</u> <u>K3HB-XVA 24VAC/VDC</u> <u>K3HB-XVA 100-240VAC</u> <u>K3HB-XVD 24VAC/VDC</u> <u>K33-L2A</u> <u>K33-FLK1A</u> <u>K3HB-XAA 100-240VAC</u> <u>K3HB-XVD 100-240VAC</u> <u>K3HB-XAD 100-240VAC</u> <u>K33-L1A</u> <u>K3HB-XVD-T23 100-240 VAC</u>



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.