

Pulse Input Bipolar Stepper Motor Driver

■ GENERAL DESCRIPTION


NJU7384 is a bipolar drive stepping motor driver.

The control method used is a simple pulse train input control (STEP & DIR) method of programming. Also, low power consumption was realized as a result of the adoption of a highly efficient CMOS.

As the control functions, the external input RESET and ENABLE functions are used, and as the protective function, a thermal shutdown (TSD) is incorporated.

The package uses the low thermal resistance SSOP32 which can withstand a high output current.

■ PACKAGE OUTLINE

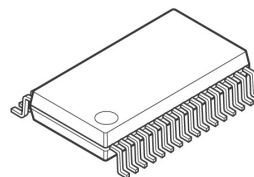


NJU7384V


■ FEATURES

- Operating Voltage 3.0 to 5.5V (Logic : V_{DD})
 4.0 to 8.0V (H bridge : V_{MM})
- Maximum Output Current 700mA/ch
- Pulse Input (STEP & DIR) Control
- Half / Full Step Change Function
- Thermal Shutdown Circuit
- Thermal Shutdown Alarm Output
- RESET Function
- ENABLE Function
- CMOS Technology
- Package Outline SSOP32

■ BLOCK DIAGRAM

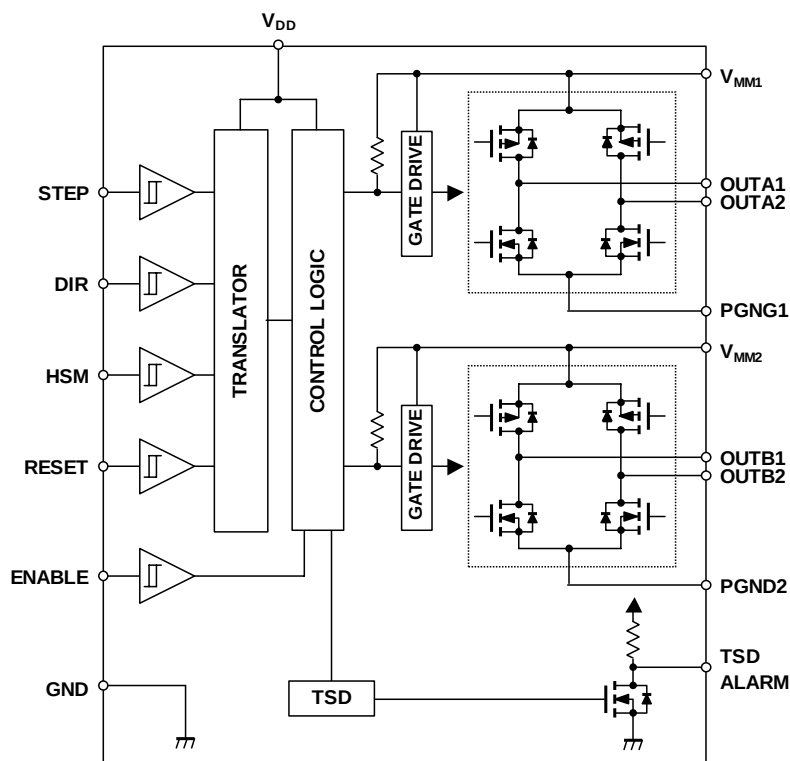

PIN FUNCTION

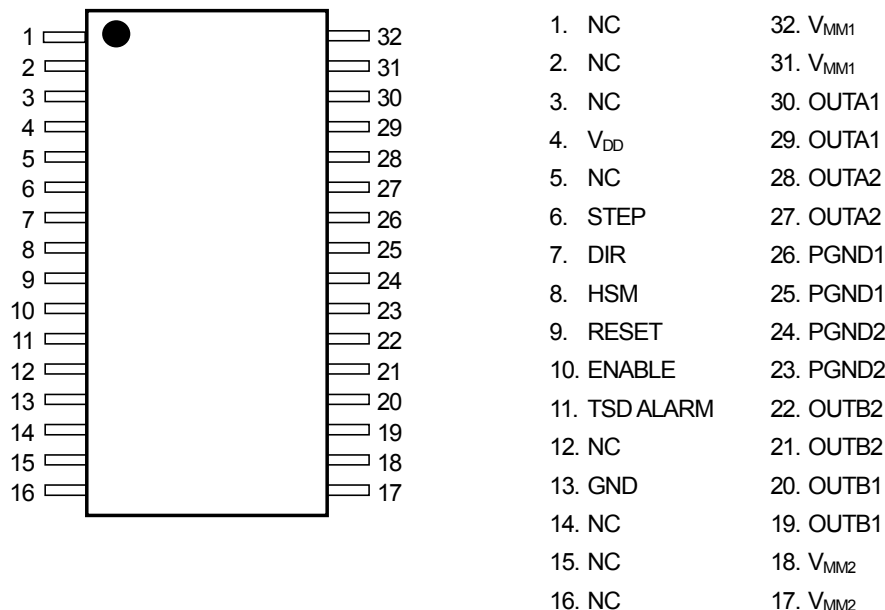

PIN DESCRIPTION

PIN No.	SYMBOL	FUNCTION	NOTE
1,2,3	NC	Non connection pins	-
4	V_{DD}	Logic Power-Supply input pin	-
5	NC	Non connection pin	-
6	STEP	Pulse signal input pin for motor rotation control pin	1 pulse input $\Rightarrow$ 1 clock motion
7	DIR	Forward / Reverse rotation control	"H"= Forward (CW), "L"= Reverse (CCW)
8	HSM	Full / Half step mode control pin	"H"= Full step, "L"= Half step
9	RESET	Phase initialize signal input pin	"H"= Normal operation, "L"= Phase initialize
10	ENABLE	Output signal all off control signal input pin	"H"= Normal operation, "L"= Output all off
11	TSD ALARM	TSD alarm output pin	TSD operating ="L" signal output
12	NC	Non connection pins	-
13	GND	Logic ground (GND) pin	-
14,15,16	NC	Non connection pins	-
17,18	V_{MM2}	H bridge power-supply pins	Connect to motor power-supply
19,20	OUTB1	Output pin B1	-
21,22	OUTB2	Output pin B2	-
23,24	PGND2	H bridge ground (GND) pin	-
25,26	PGND1	H bridge ground (GND) pin	-
27,28	OUTA2	Output pin A2	-
29,30	OUTA1	Output pin A1	-
31,32	V_{MM1}	H bridge power-supply pins	Connect to motor power-supply

* Short all logic ground terminals and the H bridge ground terminal externally.

* Short all H bridge power supply voltage terminals externally.

* Fix the potential of unused logic input terminals externally.

■ ABSOLUTE MAXIMUM RATINGS

(Ta=25°C)

PARAMETER	RATINGS	SYMBOL(unit)	NOTE
Logic Power Supply Voltage	+7.0	V _{DD} (V)	*1)
H Bridge Power Supply Voltage	+9.0	V _{MM} (V)	-
Logic Input Voltage	-0.3 ~ V _{DD}	V _{ID} (V)	-
Motor Output Current (Max)	700	I _{OPEAK} (mA/ch)	-
Logic Input Current	10	I _{IPEAK} (mA)	-
Operating Temperature Range	-40 ~ +85	T _{opr} (°C)	-
Operating Junction Temperature Range	-40 ~ +150	T _j (°C)	-
Storage Temperature Range	-50 ~ +150	T _{stg} (°C)	-
Power Dissipation	1175	P _D (mW)	*2)

*1) : V_{DD} ≤ V_{MM}

*2) : EIAJ/JEDEC STD 2 Layer substrate

■ RECOMMENDED OPERATING CONDITIONS

(Ta=25°C)


PARAMETER	SYMBOL	MIN.	TYP.	MAX.	UNIT	NOTE
Logic Power Supply Voltage Range	V _{DD}	3.0	5.0	5.5	V	V _{DD} ≤ V _{MM}
H Bridge Power Supply Voltage Range	V _{MM}	4.0	6.0	8.0	V	-
Logic H Input Voltage	V _{IH}	3.5	-	V _{DD}	V	V _{DD} =5.0V, No load
Logic L Input Voltage	V _{IL}	0	-	1.2	V	
STEP-ON Time	t _{ONMIN}	10	-	-	μs	
STEP-OFF Time	t _{OFFMIN}	10	-	-	μs	
Data Setup Time	t _{DS}	1	-	-	μs	
Hold Time	t _{DH}	1	-	-	μs	
Input Clock Frequency	f _{CLK}	-	-	50	kHz	

■ ELECTRICAL CHARACTERISTICS

(Ta=25°C, V_{DD}=5V, V_{MM}=6V)

PARAMETER	SYMBOL	CONDITION	MIN.	TYP.	MAX.	UNIT
■ General						
Operating Current	I _{DD}	STEP, DIR, HSM, RESET, ENABLE="5V", No Load, V _{DD} Meas.	-	0.3	0.6	mA
	I _{MM}	STEP, DIR, HSM, RESET, ENABLE="5V", No load, V _{MM} Meas.	-	0.3	0.6	mA
Thermal Shutdown Operating Temperature	T _{TSD}	-	-	180	-	°C
Thermal Shutdown Hysteresis	T _{HYS}	-	-	30	-	°C
■ Input (STEP, DIR, HSM, ENABLE, RESET Terminals)						
Logic Input Current	I _{IH}	STEP, DIR, HSM, ENABLE, RESET ="5V"	-	-	1	μA
	I _{IL}	STEP, DIR, HSM, ENABLE, RESET ="0V"	-1	-	-	μA
■ H Bridge (Output)						
H Output Voltage	V _{OH}	I _o =+400mA	5.5	5.7	-	V
L Output Voltage	V _{OL}	I _o = -400mA	-	0.2	0.4	V
Upper Side Output ON Resistance	R _{OH}	I _o =400mA	-	0.75	1.25	Ω
Under Side Output ON Resistance	R _{OL}	I _o =400mA	-	0.50	1.00	Ω
Output Leak Current	I _{O LEAK}	-	-	1.0	-	μA
■ Signal Output						
TSD Alarm L Output Voltage	V _{TSD}	No external pull-up resistance	-	-	0.3	V
TSD Pull-up Resistance	R _{TSD}	-	-	10	-	kΩ

TIMING CONDITION

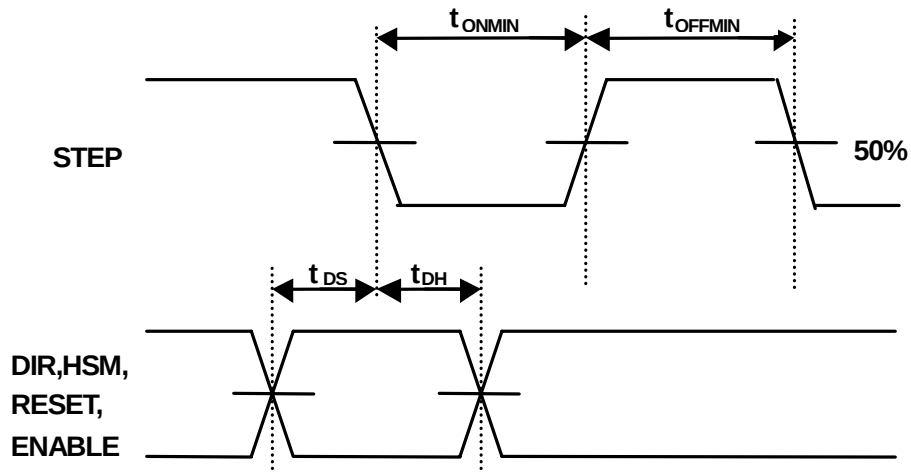

TRUTH TABLE

LOGIC IN		MODE
V_{DD}	H	OPERATE
	L	Hi Z
DIR	H	CW
	L	CCW
HSM	H	FULL STEP
	L	HALF STEP
RESET	H	OPERATE
	L	RESET
ENABLE	H	OPERATE
	L	Hi Z

* V_{MM} : Motor voltage supply

*OPERATE : Follow the input logic

*Hi Z : Output all off (A1, A2, B1,B2)

EXCITATION SEQUENCE

Condition: FULL STEP, HSM=ENABLE=RESET

Pulse	0	1	2	3
OUTA1	L	H	H	L
OUTA2	H	L	L	H
OUTB1	L	L	H	H
OUTB2	H	H	L	L
IA	-	+	+	-
IB	-	-	+	+
DIR=HIGH	CW			
DIR=LOW	CCW			


Condition: HALF STEP, HSM=LOW, ENABLE=RESET=HIGH

Pulse	0	1	2	3	4	5	6	7
OUTA1	L	Hi Z	H	H	H	Hi Z	L	L
OUTA2	H	Hi Z	L	L	L	Hi Z	H	H
OUTB1	L	L	L	Hi Z	H	H	H	Hi Z
OUTB2	H	H	H	Hi Z	L	L	L	Hi Z
IA	-	0	+	+	+	0	-	-
IB	-	-	-	0	+	+	+	0
DIR=HIGH	CW							
DIR=LOW	CCW							


* Regarding the current flow direction, the direction A1→A2 and B1→B2 is indicated as +, and the direction A2→A1 and B2→B1 is indicated as -.

POWER SUPPLY ON/OFF TIMING

Regarding the switch-on sequence of the logic power supply V_{DD} and the motor power supply V_{MM} , input V_{DD} after V_{MM} has risen. The recommended sequence is shown below.

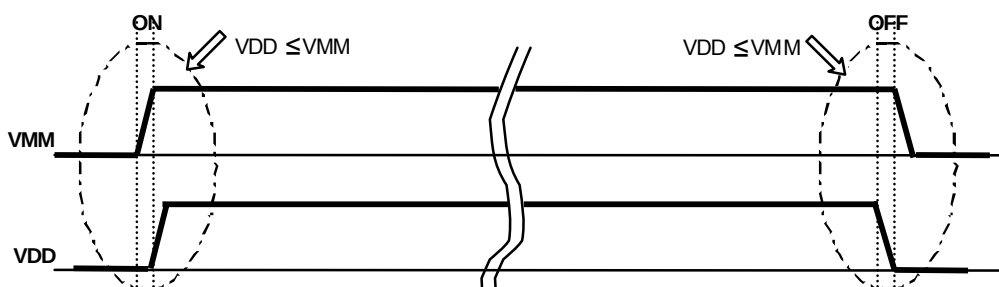

The RESET signal is "L" level in the range of turning ON. And Phase logic is initialized.

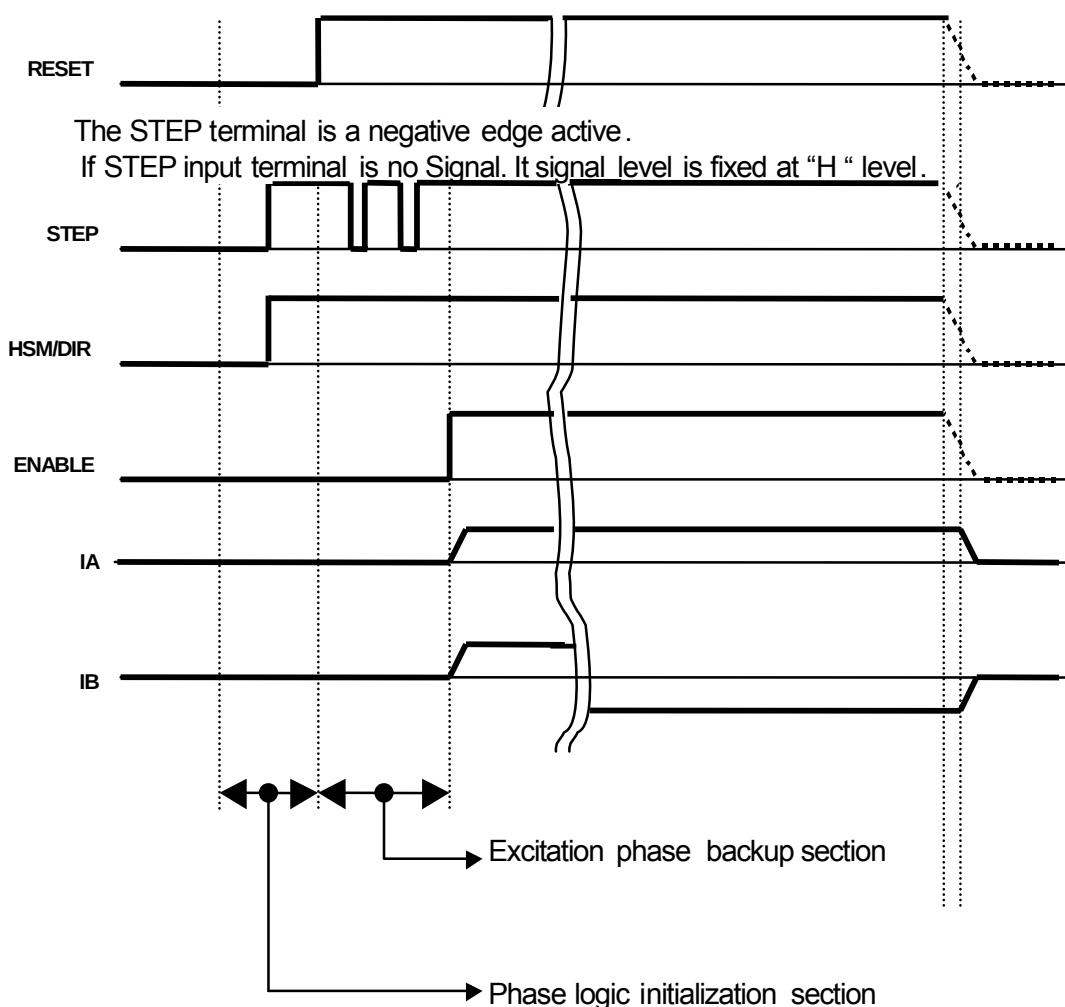

RECOMMENDED STEP MODE CHANGEOVER (HSM)

The current flowing through the stepping motor must be controlled continuously so that a mis-step does not occur. Also, the following precautions must be observed concerning changing of the setting of the HSM input.


- (1) A mis-step does not occur during changeover from a full step to a half step
- (2) Regarding changeover from a half step to a full step,
 - (a) A mis-step does not occur during changeover from a half step (excitation sequence 0, 2, 4, 6) to a full step.
 - (b) A mis-step occurs during changeover from a half step (excitation sequence 1, 3, 5, 7) to a full step.

For the above reason, it is recommended that mode changeover from a half step to a full step be carried out during the period when the RESET input is "L" logic.

■ TIMING CHART


- Fixed mode (Full step / Forward direction)

Condition : DIR="H", HSM="H"

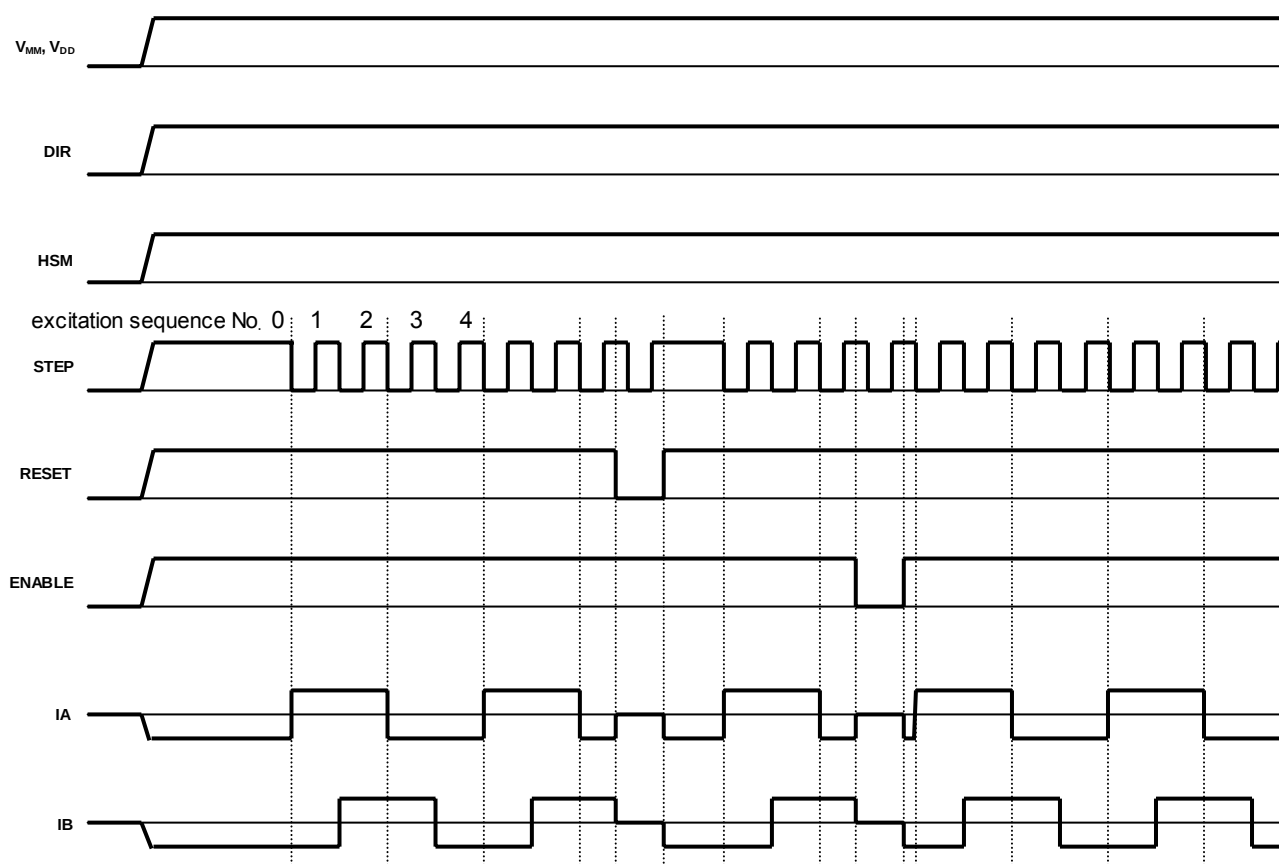


- Direction change (Full step / Forward direction $\Rightarrow$ Reverse direction)

Condition : DIR="H" $\Rightarrow$ "L", HSM="H"

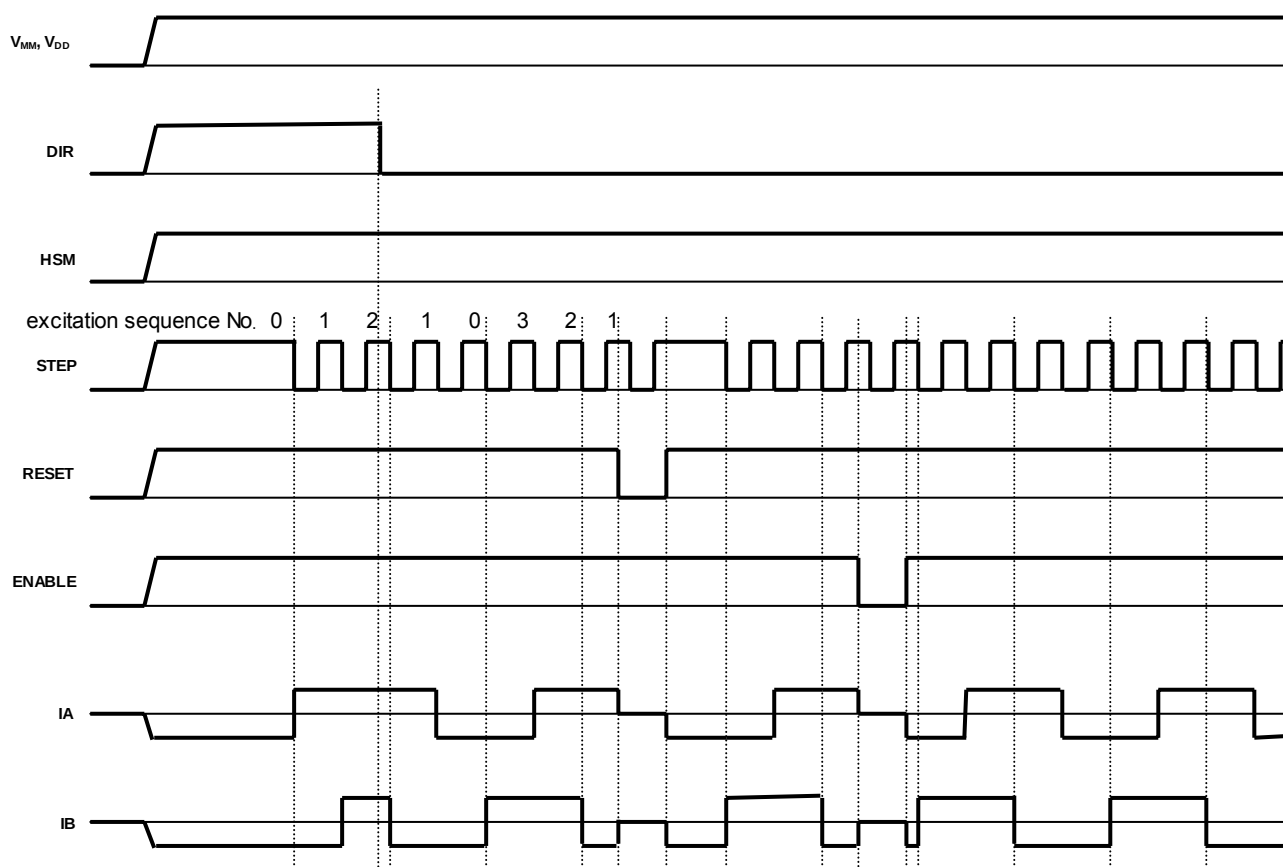


- Step mode change (Full step $\Rightarrow$ Half step)

Condition : DIR="H", HSM="H" $\Rightarrow$ "L"

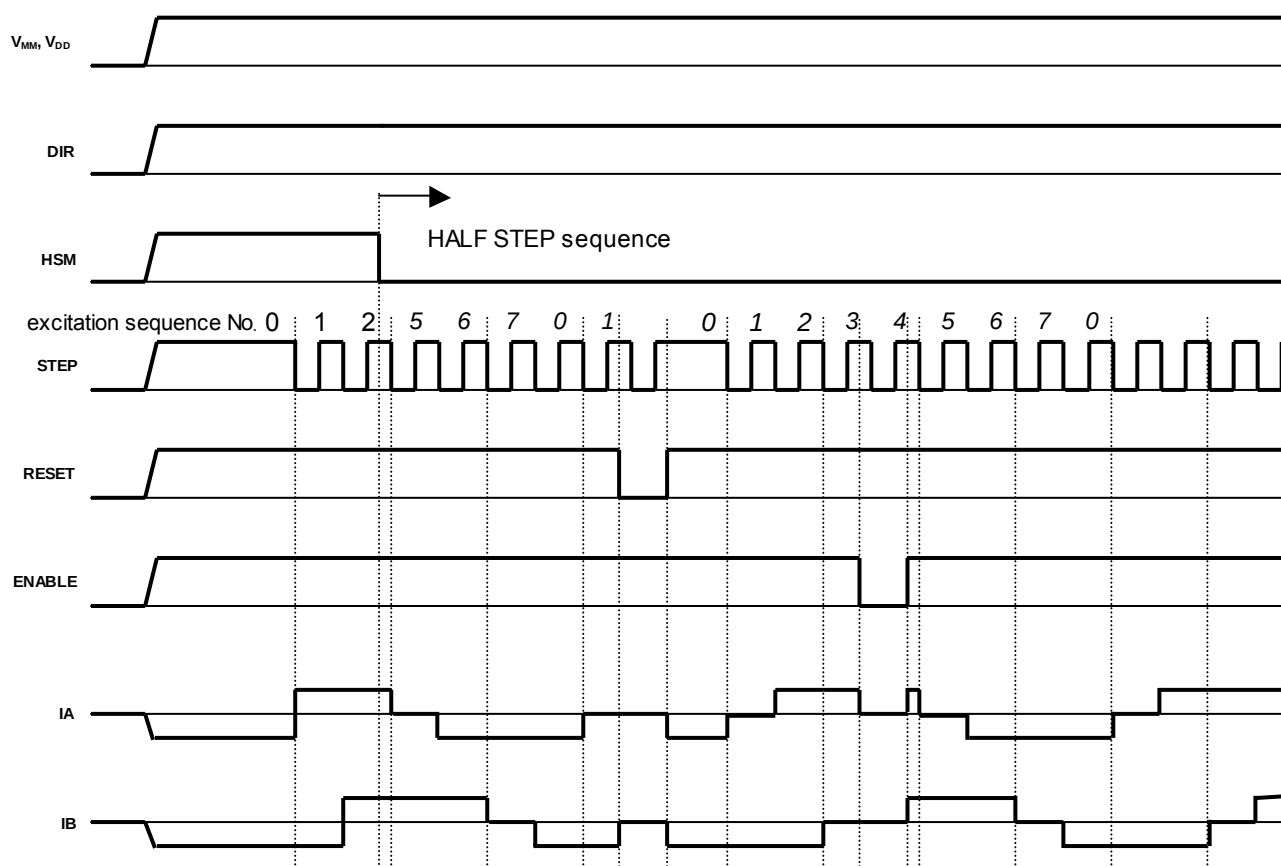

APPLICATION CIRCUIT

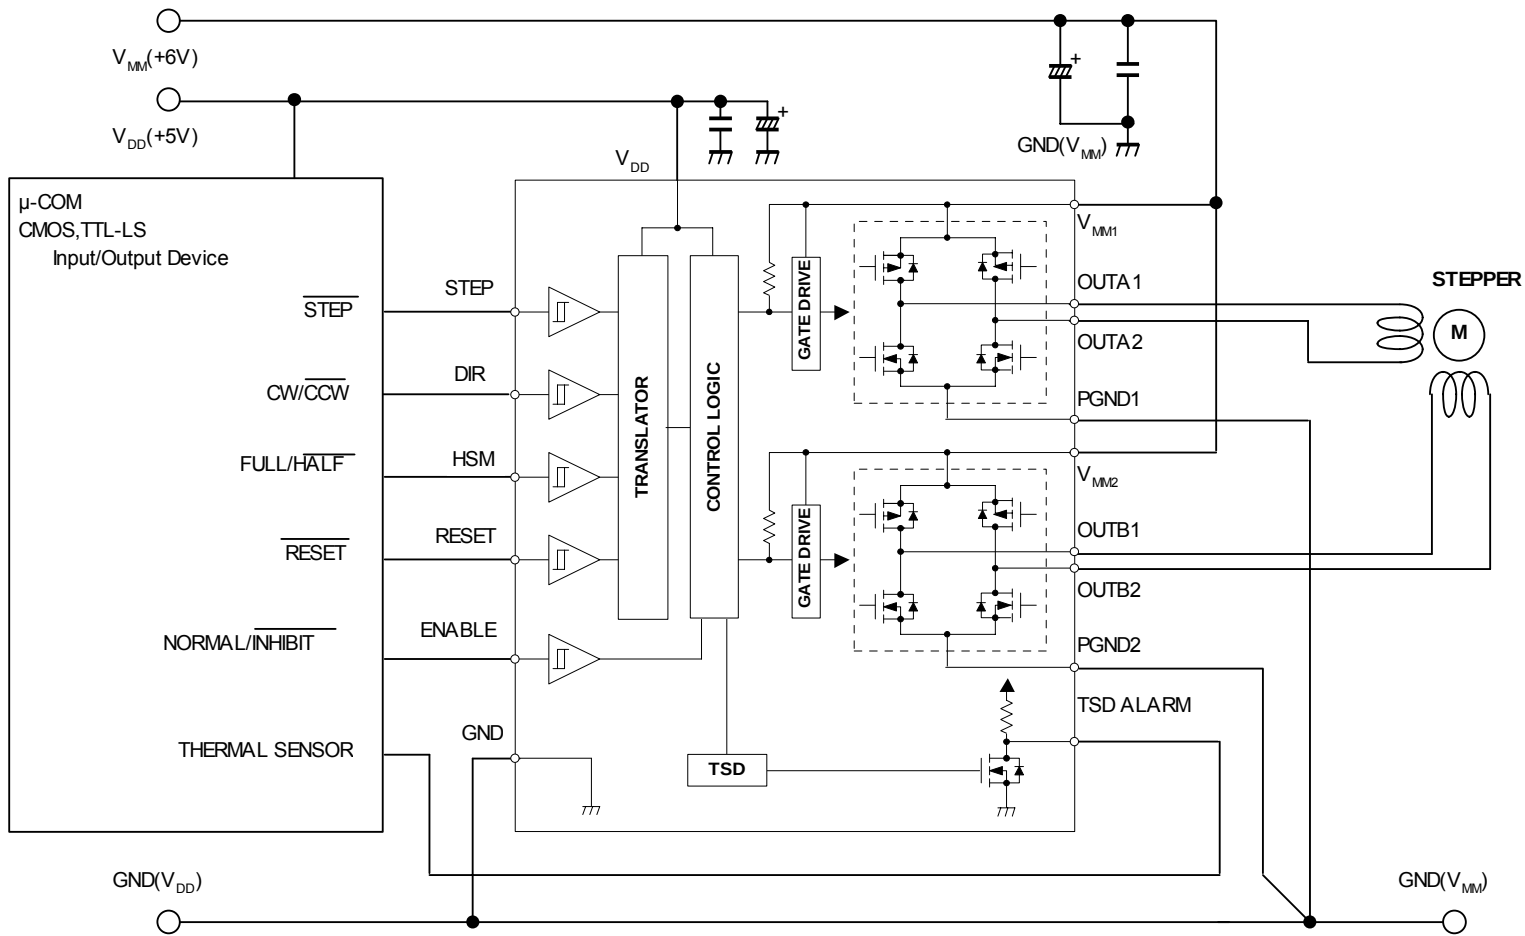

[CAUTION]

The specifications on this databook are only given for information, without any guarantee as regards either mistakes or omissions. The application circuits in this databook are described only to show representative usages of the product and not intended for the guarantee or permission of any right including the industrial rights.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[NJR:](#)

[NJU7384V-TE1](#)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.