

# 16M x 16 bit Synchronous DRAM (SDRAM)

# Confidential

Advanced (Rev. 1.4, Feb. /2012)

## **Features**

• Fast access time from clock: 5.4/5.4 ns

Fast clock rate: 166/143 MHzFully synchronous operation

• Internal pipelined architecture

• 4M word x 16-bit x 4-bank

Programmable Mode registers

- CAS Latency: 2, or 3

Burst Length: 1, 2, 4, 8, or full pageBurst Type: Sequential or Interleaved

- Burst stop function

· Auto Refresh and Self Refresh

• 8192 refresh cycles/64ms

• CKE power down mode

• Single +3.3V power supply

• Interface: LVTTL

Operating temperature range

- Commercial (0 ~  $70^{\circ}$ C)

- Industrial (-40  $\sim$  85°C)

- Automotive (-40 ~ 105°C)

• 54-pin 400 mil plastic TSOP II package

54-ball 8.0 x 8.0 x 1.2mm (max) FBGA package

# All parts fully ROHS Compliant

## Overview

The 256Mb SDRAM is a high-speed CMOS synchronous DRAM containing 256 Mbits. It is internally configured as 4 Banks of 4M word x 16 DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of a BankActivate command which is then followed by a Read or Write command.

The SDRAM provides for programmable Read or Write burst lengths of 1, 2, 4, 8, or full page, with a burst termination option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence. The refresh functions, either Auto or Self Refresh are easy to use. By having a programmable mode register, the system can choose the most suitable modes to maximize its performance. These devices are well suited for applications requiring high memory bandwidth and particularly well suited to high performance PC applications.

**Table 1. Key Specifications** 

	<b>AS</b> 4C16M16S	-6/7
tCK3	Clock Cycle time (min.)	6/7 ns
tAC3	Access time from CLK (max.)	5.4/5.4 ns
tRAS	Row Active time (min.)	42/49 ns
tRC	Row Cycle time (min.)	60/63 ns

**Table 2. Ordering Information** 

Part Number	Frequency	Package
AS4C16M16S-7TCN	143 MHz	54 pin TSOP II
AS4C16M16S-6TCN	166 MHz	54 pin TSOP II
AS4C16M16S-6TIN	166 MHz	54 pin TSOP II
AS4C16M16S-6BIN	166 MHz	54 ball TFBGA
AS4C16M16S-7BCN	143 MHz	54 ball TFBGA
AS4C16M16S-6TAN	166 MHz	54 pin TSOP II

T: indicates TSOP II package B: indicates TFBGA package

N: indicates Pb free and Halogen free – ROHS compliant parts

C: Commercial I: Industrial A: Automotive temperatures



Figure 1. Pin Assignment (Top View)


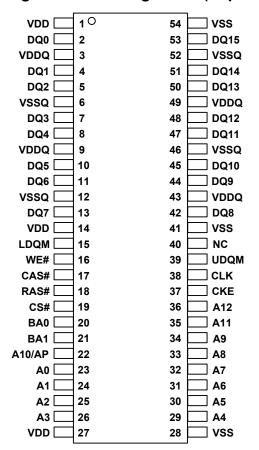


Figure 1.1 Ball Assignment (Top View)

	1	2	3	 7	8	9
Α	VSS	DQ15	VSSQ	VDDQ	DQ0	VDD
В	<b>DQ14</b>	DQ13	VDDQ	VSSQ	DQ2	DQ1
С	DQ12	DQ11	VSSQ	VDDQ	DQ4	DQ3
D	<b>DQ10</b>	DQ9	VDDQ	VSSQ	DQ6	DQ5
Ε	DQ8	NC	vss	VDD	LDQM	DQ7
F	(UDQM)	CLK	CKE	CAS#	RAS#	WE#
G	(A12)	<b>A11</b>	(A9)	BA0	BA1	CS#
Н	(A8)	<b>A7</b>	<b>A6</b>	(A0)	(A1)	(A10)
J	vss	<b>A5</b>	<b>A4</b>	(A3)	(A2)	VDD



Figure 2. Block Diagram

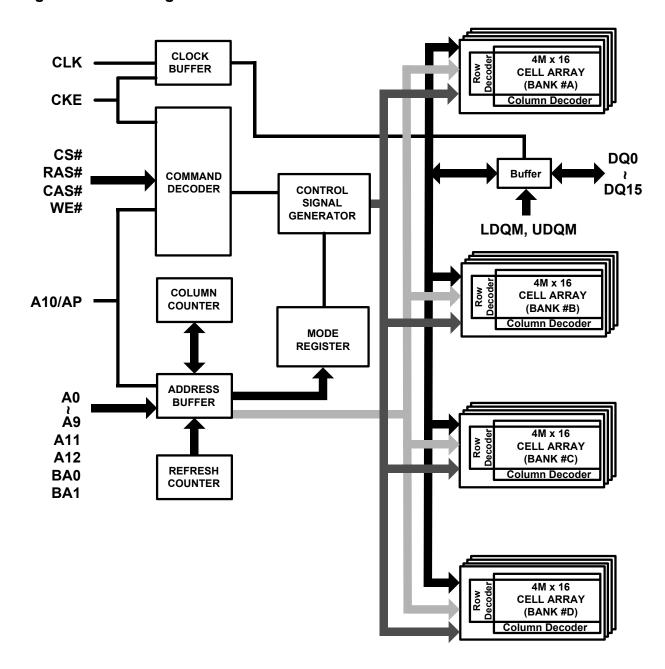

# **Pin Descriptions**



# **Table 3. Pin Details**

Symbol	Туре	Description						
CLK	Input		<b>Clock:</b> CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.					
CKE	Input	goes low synchronously wi internal clock is suspended address is frozen as long as deactivating the clock contr CKE is synchronous excep modes, where CKE become	Clock Enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. If CKE goes low synchronously with clock (set-up and hold time same as other inputs), the internal clock is suspended from the next clock cycle and the state of output and burst address is frozen as long as the CKE remains low. When all banks are in the idle state, deactivating the clock controls the entry to the Power Down and Self Refresh modes. CKE is synchronous except after the device enters Power Down and Self Refresh modes, where CKE becomes asynchronous until exiting the same mode. The input buffers, including CLK, are disabled during Power Down and Self Refresh modes, providing low standby power.					
BA0,BA1	Input	Bank Activate: BA0, BA1 i	nput select the bank for op	eration.				
		BA1	BA0	Select Bank				
		0	0	BANK #A				
		0	1	BANK #B				
		1	0	BANK #C				
		1	1	BANK #D				
A0-A12	Input	A0-A12) and Read/Write of Precharge) to select one loo a Precharge command, A10	Address Inputs: A0-A12 are sampled during the BankActivate command (row address A0-A12) and Read/Write command (column address A0-A8 with A10 defining Auto Precharge) to select one location out of the 4M available in the respective bank. During a Precharge command, A10 is sampled to determine if all banks are to be precharged (A10 = HIGH). The address inputs also provide the op-code during a Mode Register Set command.					
CS#	Input	decoder. All commands are	e masked when CS# is s	es (sampled HIGH) the command ampled HIGH. CS# provides for inks. It is considered part of the				
RAS#	Input	conjunction with the CAS# CLK. When RAS# and CS# the BankActivate command When the WE# is asserted bank designated by BA is "LOW," the Precharge comm	Row Address Strobe: The RAS# signal defines the operation commands in conjunction with the CAS# and WE# signals and is latched at the positive edges of CLK. When RAS# and CS# are asserted "LOW" and CAS# is asserted "HIGH," either the BankActivate command or the Precharge command is selected by the WE# signal. When the WE# is asserted "HIGH," the BankActivate command is selected and the bank designated by BA is turned on to the active state. When the WE# is asserted "LOW," the Precharge command is selected and the bank designated by BA is switched to the idle state after the precharge operation.					
CAS#	Input	Column Address Strobe: The CAS# signal defines the operation commands in conjunction with the RAS# and WE# signals and is latched at the positive edges of CLK. When RAS# is held "HIGH" and CS# is asserted "LOW," the column access is started by asserting CAS# "LOW." Then, the Read or Write command is selected by asserting WE# "LOW" or "HIGH."						
WE#	Input	Write Enable: The WE# signal defines the operation commands in conjunction with the RAS# and CAS# signals and is latched at the positive edges of CLK. The WE# input is used to select the BankActivate or Precharge command and Read or Write command.						
LDQM,	Input	Data Input/Output Mask: (	Controls output buffers in re	ead mode and masks				
UDQM		Input data in write mode.						
DQ0-DQ15	Input / Output	Data I/O: The DQ0-15 input of CLK. The I/Os are masks		chronized with the positive edges rites.				

Confidential 4 Rev. 3 Feb. /2014





NC	-	No Connect: These pins should be left unconnected.
V <sub>DDQ</sub>	Supply	<b>DQ Power:</b> Provide isolated power to DQs for improved noise immunity. ( 3.3V± 0.3V )
Vssq	Supply	DQ Ground: Provide isolated ground to DQs for improved noise immunity.
V <sub>DD</sub>	Supply	Power Supply: +3.3V ± 0.3V
Vss	Supply	Ground

Confidential 5 Rev. 3 Feb. /2014



# **Operation Mode**

Fully synchronous operations are performed to latch the commands at the positive edges of CLK. Table 4 shows the truth table for the operation commands.

Table 4. Truth Table (Note (1), (2))

Command	State	CKE <sub>n-1</sub>	CKEn	DQM	BA0,1	<b>A</b> 10	A0-9,12	CS#	RAS#	CAS#	WE#
BankActivate	Idle <sup>(3)</sup>	Н	Х	Х	V	Row	address	L	L	Н	Н
BankPrecharge	Any	Н	Х	Х	V	L	Х	L	L	Н	L
PrechargeAll	Any	Н	Х	Х	Х	Н	Х	L	L	Н	L
Write	Active(3)	Н	Х	V	V	L	Column address	L	Н	L	L
Write and AutoPrecharge	Active(3)	Н	Х	V	V	Н	(A0 ~ A8)	L	Н	L	L
Read	Active <sup>(3)</sup>	Н	Х	V	V	L	Column address	L	Н	L	Н
Read and Autoprecharge	Active(3)	Н	Х	V	V	Н	(A0 ~ A8)	L	Н	L	Н
Mode Register Set	Idle	Н	Х	Х		OP co	ode	L	L	L	L
No-Operation	Any	Н	Х	Х	Х	Х	Х	L	Н	Н	Н
Burst Stop	Active(4)	Н	Х	Х	Х	Х	Х	L	Н	Н	L
Device Deselect	Any	Н	Х	Х	Х	Х	Х	Н	Х	Х	Х
AutoRefresh	Idle	Н	Н	Х	Х	Х	Х	L	L	L	Н
SelfRefresh Entry	Idle	Н	L	Х	Х	Х	X	L	L	L	Н
SelfRefresh Exit	Idle	L	Н	Х	Х	Х	Х	Η	Х	Х	Χ
	(SelfRefresh)	L	11	^	^	^	^	L	Н	Н	Н
Clock Suspend Mode Entry	Active	Н	L	Х	Х	Х	Х	Η	Х	Х	Χ
								L	V	V	V
Power Down Mode Entry	Any <sup>(5)</sup>	Н	L	Х	Х	Х	Х	Н	Х	Х	Х
		П	L	^	^	^	^	L	Н	Н	Н
Clock Suspend Mode Exit	Active	L	Н	Х	Х	Х	Х	Х	Х	Х	Х
Power Down Mode Exit	Any	L	Н	Х	Х	Х	Х	Н	Х	Х	Х
	(PowerDown)							L	Н	Н	Н
Data Write/Output Enable	Active	Н	Х	L	Х	Х	Х	Х	Х	Х	Х
Data Mask/Output Disable	Active	Н	Х	Н	Х	Х	Х	Х	Х	Х	Х

Note: 1. V=Valid, X=Don't Care, L=Low level, H=High level

2. CKE<sub>n</sub> signal is input level when commands are provided. CKE<sub>n-1</sub> signal is input level one clock cycle before the commands are provided.

- 3. These are states of bank designated by BA signal.
- 4. Device state is 1, 2, 4, 8, and full page burst operation.
- 5. Power Down Mode can not enter in the burst operation.

  When this command is asserted in the burst cycle, device state is clock suspend mode.

Confidential 6 Rev. 3 Feb. /2014



## **Commands**

#### 1 BankActivate

(RAS# = "L", CAS# = "H", WE# = "H", BAs = Bank, A0-A12 = Row Address)

The BankActivate command activates the idle bank designated by the BA0, 1 signals. By latching the row address on A0 to A12 at the time of this command, the selected row access is initiated. The read or write operation in the same bank can occur after a time delay of tRCD(min.) from the time of bank activation. A subsequent BankActivate command to a different row in the same bank can only be issued after the previous active row has been precharged (refer to the following figure). The minimum time interval between successive BankActivate commands to the same bank is defined by tRC(min.). The SDRAM has four internal banks on the same chip and shares part of the internal circuitry to reduce chip area; therefore it restricts the back-to-back activation of the two banks. tRRD(min.) specifies the minimum time required between activating different banks. After this command is used, the Write command and the Block Write command perform the no mask write operation.

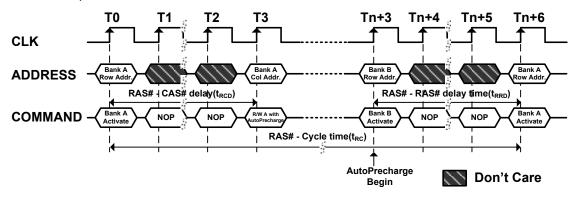


Figure 3. BankActivate Command Cycle (Burst Length = n)

## 2 BankPrecharge command

(RAS# = "L", CAS# = "H", WE# = "L", BAs = Bank, A10 = "L", A0-A9, A11 and A12 = Don't care)

The BankPrecharge command precharges the bank designated by BA signal. The precharged bank is switched from the active state to the idle state. This command can be asserted anytime after tras(min.) is satisfied from the BankActivate command in the desired bank. The maximum time any bank can be active is specified by tras(max.). Therefore, the precharge function must be performed in any active bank within tras(max.). At the end of precharge, the precharged bank is still in the idle state and is ready to be activated again.

## 3 PrechargeAll command

(RAS# = "L", CAS# = "H", WE# = "L", BAs = Don't care, A10 = "H", A0-A9, A11 and A12 = Don't care)

The PrechargeAll command precharges all banks simultaneously and can be issued even if all banks are not in the active state. All banks are then switched to the idle state.

#### 4 Read command

(RAS# = "H", CAS# = "L", WE# = "H", BAs = Bank, A10 = "L", A0-A8 = Column Address)

The Read command is used to read a burst of data on consecutive clock cycles from an active row in an active bank. The bank must be active for at least tRCD(min.) before the Read command is issued. During read bursts, the valid data-out element from the starting column address will be available following the CAS# latency after the issue of the Read command. Each subsequent data-out element will be valid by the next positive clock edge (refer to the following figure). The DQs go into high-impedance at the end of the burst unless other command is initiated. The burst length, burst sequence, and CAS# latency are determined by the mode register, which is already programmed. A full-page burst will continue until terminated (at the end of the page it will wrap to column 0 and continue).

Confidential 7 Rev. 3 Feb. /2014



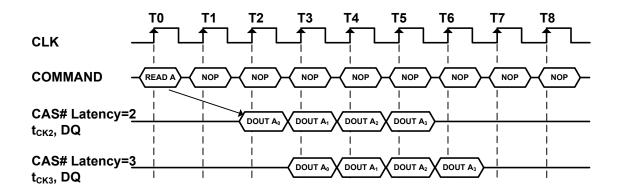


Figure 4. Burst Read Operation (Burst Length = 4, CAS# Latency = 2, 3)

The read data appears on the DQs subject to the values on the DQM inputs two clocks earlier (i.e. DQM latency is two clocks for output buffers). A read burst without the auto precharge function may be interrupted by a subsequent Read or Write command to the same bank or the other active bank before the end of the burst length. It may be interrupted by a BankPrecharge/ PrechargeAll command to the same bank too. The interrupt coming from the Read command can occur on any clock cycle following a previous Read command (refer to the following figure).

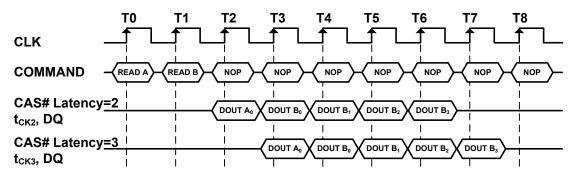


Figure 5. Read Interrupted by a Read (Burst Length = 4, CAS# Latency = 2, 3)

The DQM inputs are used to avoid I/O contention on the DQ pins when the interrupt comes from a Write command. The DQMs must be asserted (HIGH) at least two clocks prior to the Write command to suppress data-out on the DQ pins. To guarantee the DQ pins against I/O contention, a single cycle with high-impedance on the DQ pins must occur between the last read data and the Write command (refer to the following three figures). If the data output of the burst read occurs at the second clock of the burst write, the DQMs must be asserted (HIGH) at least one clock prior to the Write command to avoid internal bus contention.

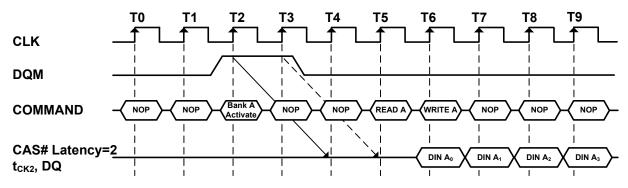


Figure 6. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 2)

Confidential 8 Rev. 3 Feb. /2014



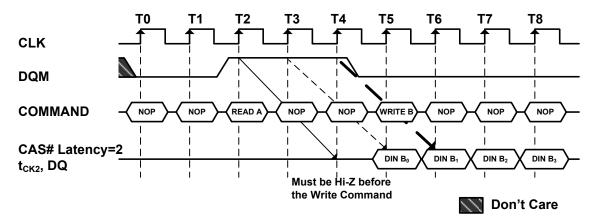


Figure 7. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 2)

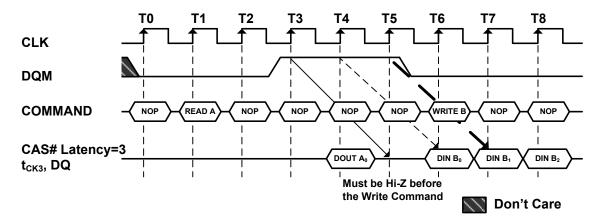


Figure 8. Read to Write Interval (Burst Length ≥ 4, CAS# Latency = 3)

A read burst without the auto precharge function may be interrupted by a BankPrecharge/ PrechargeAll command to the same bank. The following figure shows the optimum time that BankPrecharge/ PrechargeAll command is issued in different CAS# latency.

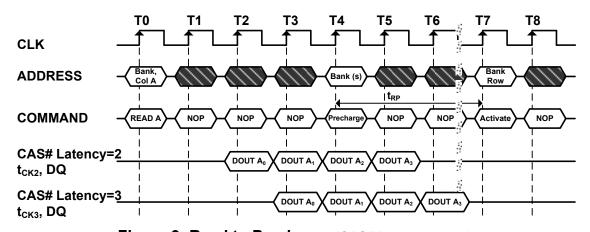


Figure 9. Read to Precharge (CAS# Latency = 2, 3)

5 Read and AutoPrecharge command

Confidential 9 Rev. 3 Feb. /2014



(RAS# = "H", CAS# = "L", WE# = "H", BAs = Bank, A10 = "H", A0-A8 = Column Address)

The Read and AutoPrecharge command automatically performs the precharge operation after the read operation. Once this command is given, any subsequent command cannot occur within a time delay of {tRP(min.) + burst length}. At full-page burst, only the read operation is performed in this command and the auto precharge function is ignored.

#### 6 Write command

(RAS# = "H", CAS# = "L", WE# = "L", BAs = Bank, A10 = "L", A0-A8 = Column Address)

The Write command is used to write a burst of data on consecutive clock cycles from an active row in an active bank. The bank must be active for at least tRCD(min.) before the Write command is issued. During write bursts, the first valid data-in element will be registered coincident with the Write command. Subsequent data elements will be registered on each successive positive clock edge (refer to the following figure). The DQs remain with high-impedance at the end of the burst unless another command is initiated. The burst length and burst sequence are determined by the mode register, which is already programmed. A full-page burst will continue until terminated (at the end of the page it will wrap to column 0 and continue).

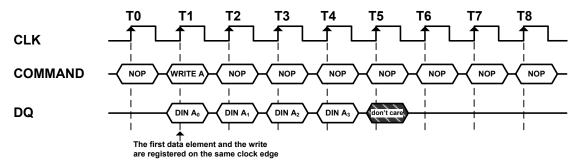


Figure 10. Burst Write Operation (Burst Length = 4)

A write burst without the auto precharge function may be interrupted by a subsequent Write, BankPrecharge/PrechargeAll, or Read command before the end of the burst length. An interrupt coming from Write command can occur on any clock cycle following the previous Write command (refer to the following figure).

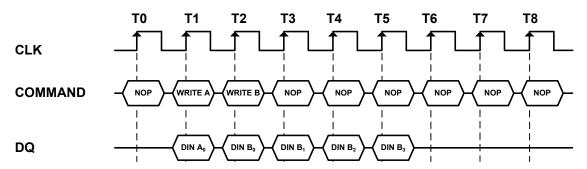


Figure 11. Write Interrupted by a Write (Burst Length = 4)

The Read command that interrupts a write burst without auto precharge function should be issued one cycle after the clock edge in which the last data-in element is registered. In order to avoid data contention, input data must be removed from the DQs at least one clock cycle before the first read data appears on the outputs (refer to the following figure). Once the Read command is registered, the data inputs will be ignored and writes will not be executed.

Confidential 10 Rev. 3 Feb. /2014




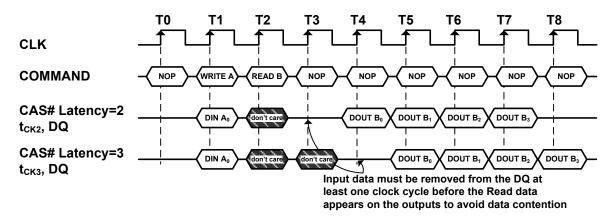


Figure 12. Write Interrupted by a Read (Burst Length = 4, CAS# Latency = 2, 3)

The BankPrecharge/PrechargeAll command that interrupts a write burst without the auto precharge function should be issued m cycles after the clock edge in which the last data-in element is registered, where m equals  $t_{WR}/t_{CK}$  rounded up to the next whole number. In addition, the DQM signals must be used to mask input data, starting with the clock edge following the last data-in element and ending with the clock edge on which the BankPrecharge/PrechargeAll command is entered (refer to the following figure).

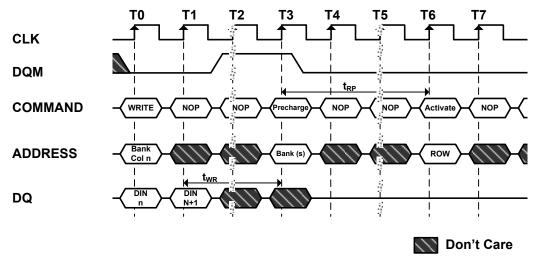

Note: The DQMs can remain low in this example if the length of the write burst is 1 or 2.

Figure 13. Write to Precharge

7 Write and AutoPrecharge command

(RAS# = "H", CAS# = "L", WE# = "L", BAs = Bank, A10 = "H", A0-A8 = Column Address)

The Write and AutoPrecharge command performs the precharge operation automatically after the write operation. Once this command is given, any subsequent command can not occur within a time delay of  $\{(burst length -1) + tw_R + t_{RP}(min.)\}$ . At full-page burst, only the write operation is performed in this command and the auto precharge function is ignored.

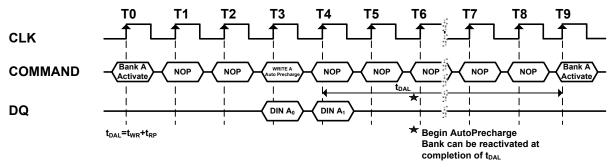


Figure 14. Burst Write with Auto-Precharge (Burst Length = 2)

Confidential 11 Rev. 3 Feb. /2014



8 Mode Register Set command (RAS# = "L", CAS# = "L", WE# = "L", A0-A12 = Register Data)

The mode register stores the data for controlling the various operating modes of SDRAM. The Mode Register Set command programs the values of CAS# latency, Addressing Mode and Burst Length in the Mode register to make SDRAM useful for a variety of different applications. The default values of the Mode Register after power-up are undefined; therefore this command must be issued at the power-up sequence. The state of pins A0~A9 and A12 in the same cycle is the data written to the mode register. Two clock cycles are required to complete the write in the mode register (refer to the following figure). The contents of the mode register can be changed using the same command and the clock cycle requirements during operation as long as all banks are in the idle state.

**Table 5. Mode Register Bitmap** 

BA1	BA0	A12	A11	A10	)	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0
RFU*	0		RFU*		١	WBL	Test	Mode	CAS	S# Late	ency	BT	Bu	rst Len	igth
								<b>—</b>		<u>_</u> ,			<b>—</b>		
A9	Write	Burst I	Mode		8A	A7		Test N	/lode			A3	Bu	ırst Typ	ре
0		Burst			0	0		Norr	mal			0	Se	equenti	al
1	Si	ingle B	it		1	0	Ve	ndor U	lse Onl	y		1	In	terleav	'e
					0	1	Ve	ndor U	lse Onl	у					
	<u> </u>												₩		
A6	A5	A4	CAS	S# La	iter	псу			A2	A1	A0		Burs	t Lengt	h
0	0	0	F	Reser	vec	t			0	0	0			1	
0	0	1	F	Reser	vec	t			0	0	1			2	
0	1	0		2 cloc	ks				0	1	0			4	
0	1	1	;	3 clocks					0	1	1			8	
1	0	0 Reserved			t			1	1	1	Ful	l Page	(Sequ	ential)	
	All other Reserved								•	,	All other	Rese	erved		

\*Note: RFU (Reserved for future use) should stay "0" during MRS cycle.

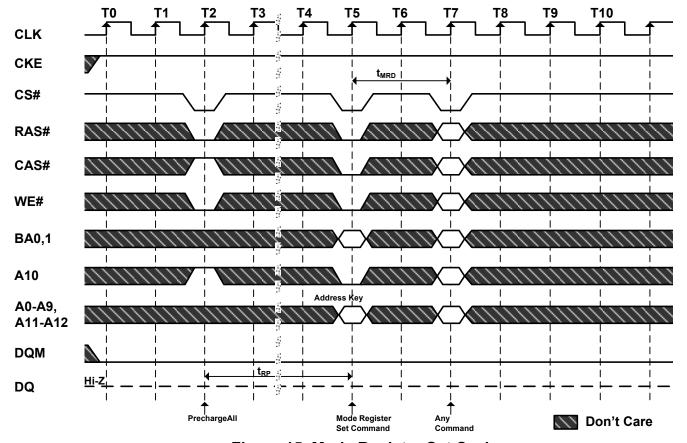


Figure 15. Mode Register Set Cycle

Confidential 12 Rev. 3 Feb. /2014



Burst Length Field (A2~A0)

This field specifies the data length of column access using the A2~A0 pins and selects the Burst Length to be 2, 4, 8, or full page.

Table 6. Burst Length Field

A2	A1	A0	Burst Length
0	0	0	1
0	0	1	2
0	1	0	4
0	1	1	8
1	0	0	Reserved
1	0	1	Reserved
1	1	0	Reserved
1	1	1	Full Page

Full Page Length: 512

• Burst Type Field (A3)

The Addressing Mode can be one of two modes, Interleave Mode or Sequential Mode. Sequential Mode supports burst length of 1, 2, 4, 8, or full page, but Interleave Mode only supports burst length of 4 and 8.

**Table 7. Addressing Mode Select Field** 

A3	Burst Type
0	Sequential
1	Interleave

• Burst Definition, Addressing Sequence of Sequential and Interleave Mode

**Table 8. Burst Definition** 

Durat Langth	Sta	rt Addr	ess	Cognential	Interlegue
Burst Length	A2	A1	A0	Sequential	Interleave
2	Х	Х	0	0, 1	0, 1
	Х	Х	1	1, 0	1, 0
	Х	0	0	0, 1, 2, 3	0, 1, 2, 3
4	Х	0	1	1, 2, 3, 0	1, 0, 3, 2
4	Х	1	0	2, 3, 0, 1	2, 3, 0, 1
	Х	1	1	3, 0, 1, 2	3, 2, 1, 0
	0	0	0	0, 1, 2, 3, 4, 5, 6, 7	0, 1, 2, 3, 4, 5, 6, 7
	0	0	1	1, 2, 3, 4, 5, 6, 7, 0	1, 0, 3, 2, 5, 4, 7, 6
	0	1	0	2, 3, 4, 5, 6, 7, 0, 1	2, 3, 0, 1, 6, 7, 4, 5
8	0	1	1	3, 4, 5, 6, 7, 0, 1, 2	3, 2, 1, 0, 7, 6, 5, 4
0	1	0	0	4, 5, 6, 7, 0, 1, 2, 3	4, 5, 6, 7, 0, 1, 2, 3
	1	0	1	5, 6, 7, 0, 1, 2, 3, 4	5, 4, 7, 6, 1, 0, 3, 2
	1	1	0	6, 7, 0, 1, 2, 3, 4, 5	6, 7, 4, 5, 2, 3, 0, 1
	1	1	1	7, 0, 1, 2, 3, 4, 5, 6	7, 6, 5, 4, 3, 2, 1, 0
Full page	location = 0-511		511	n, n+1, n+2, n+3,511, 0, 1, 2, n-1, n,	Not Support

Confidential 13 Rev. 3 Feb. /2014



#### CAS# Latency Field (A6~A4)

This field specifies the number of clock cycles from the assertion of the Read command to the first read data. The minimum whole value of CAS# Latency depends on the frequency of CLK. The minimum whole value satisfying the following formula must be programmed into this field.

tcac(min) ≤ CAS# Latency X tck

Table 9. CAS Latency

A6	A5	A4	CAS# Latency
0	0	0	Reserved
0	0	1	Reserved
0	1	0	2 clocks
0	1	1	3 clocks
1	Х	Х	Reserved

#### • Test Mode field (A8~A7)

These two bits are used to enter the test mode and must be programmed to "00" in normal operation.

Table 10. Test Mode

A8	A7	Test Mode
0	0	normal mode
0	1	Vendor Use Only
1	Х	Vendor Use Only

#### • Write Burst Length (A9)

This bit is used to select the write burst mode. When the A9 bit is "0", the Burst-Read-Burst-Write mode is selected. When the A9 bit is "1", the Burst-Read-Single-Write mode is selected.

**Table 11. Write Burst Length** 

A9	Write Burst Mode	
0	Burst-Read-Burst-Write	
1	Burst-Read-Single-Write	

Note: A10 and BA0, 1 should stay "L" during mode set cycle.

#### 9 No-Operation command

(RAS# = "H", CAS# = "H", WE# = "H")

The No-Operation command is used to perform a NOP to the SDRAM which is selected (CS# is Low). This prevents unwanted commands from being registered during idle or wait states.

#### 10 Burst Stop command

(RAS# = "H", CAS# = "H", WE# = "L")

The Burst Stop command is used to terminate either fixed-length or full-page bursts. This command is only effective in a read/write burst without the auto precharge function. The terminated read burst ends after a delay equal to the CAS# latency (refer to the following figure). The termination of a write burst is shown in the following figure.

Confidential 14 Rev. 3 Feb. /2014



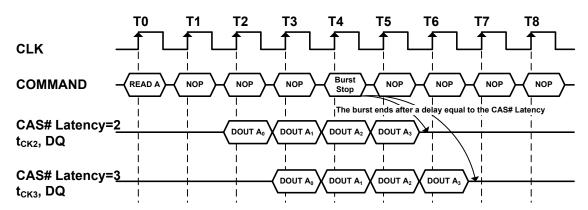


Figure 16 .Termination of a Burst Read Operation (Burst Length > 4, CAS# Latency = 2, 3)

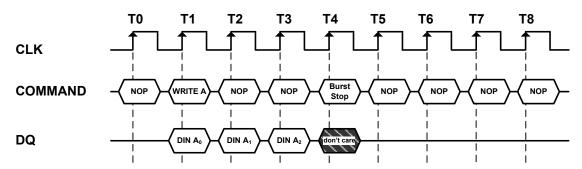


Figure 17 .Termination of a Burst Write Operation (Burst Length = X)

#### 11 Device Deselect command (CS# = "H")

The Device Deselect command disables the command decoder so that the RAS#, CAS#, WE# and Address inputs are ignored, regardless of whether the CLK is enabled. This command is similar to the No Operation command.

#### 12 AutoRefresh command

(RAS# = "L", CAS# = "L", WE# = "H", CKE = "H", A0-A12 = Don't care)

The AutoRefresh command is used during normal operation of the SDRAM and is analogous to CAS#-before-RAS# (CBR) Refresh in conventional DRAMs. This command is non-persistent, so it must be issued each time a refresh is required. The addressing is generated by the internal refresh controller. This makes the address bits a "don't care" during an AutoRefresh command. The internal refresh counter increments automatically on every auto refresh cycle to all of the rows. The refresh operation must be performed 8192 times within 64ms. The time required to complete the auto refresh operation is specified by  $t_{RC}(min.)$ . To provide the AutoRefresh command, all banks need to be in the idle state and the device must not be in power down mode (CKE is high in the previous cycle). This command must be followed by NOPs until the auto refresh operation is completed. The precharge time requirement,  $t_{RP}(min)$ , must be met before successive auto refresh operations are performed.

## 13 SelfRefresh Entry command

(RAS# = "L", CAS# = "L", WE# = "H", CKE = "L", A0-A12 = Don't care)

The SelfRefresh is another refresh mode available in the SDRAM. It is the preferred refresh mode for data retention and low power operation. Once the SelfRefresh command is registered, all the inputs to the SDRAM become "don't care" with the exception of CKE, which must remain LOW. The refresh addressing and timing is internally generated to reduce power consumption. The SDRAM may remain in SelfRefresh mode for an indefinite period. The SelfRefresh mode is exited by restarting the external clock and then asserting HIGH on CKE (SelfRefresh Exit command).

Confidential 15 Rev. 3 Feb. /2014



#### 14 SelfRefresh Exit command

This command is used to exit from the SelfRefresh mode. Once this command is registered, NOP or Device Deselect commands must be issued for  $t_{\rm XSR}(min.)$  because time is required for the completion of any bank currently being internally refreshed. If auto refresh cycles in bursts are performed during normal operation, a burst of 8192 auto refresh cycles should be completed just prior to entering and just after exiting the SelfRefresh mode.

15 Clock Suspend Mode Entry / PowerDown Mode Entry command (CKE = "L")

When the SDRAM is operating the burst cycle, the internal CLK is suspended (masked) from the subsequent cycle by issuing this command (asserting CKE "LOW"). The device operation is held intact while CLK is suspended. On the other hand, when all banks are in the idle state, this command performs entry into the PowerDown mode. All input and output buffers (except the CKE buffer) are turned off in the PowerDown mode. The device may not remain in the Clock Suspend or PowerDown state longer than the refresh period (64ms) since the command does not perform any refresh operations.

16 Clock Suspend Mode Exit / PowerDown Mode Exit command (CKE= "H")

When the internal CLK has been suspended, the operation of the internal CLK is reinitiated from the subsequent cycle by providing this command (asserting CKE "HIGH", the command should be NOP or deselect). When the device is in the PowerDown mode, the device exits this mode and all disabled buffers are turned on to the active state. tpde (min.) is required when the device exits from the PowerDown mode. Any subsequent commands can be issued after one clock cycle from the end of this command.

17 Data Write / Output Enable, Data Mask / Output Disable command (DQM = "L", "H")

During a write cycle, the DQM signal functions as a Data Mask and can control every word of the input data. During a read cycle, the DQM functions as the controller of output buffers. DQM is also used for device selection, byte selection and bus control in a memory system.

Confidential 16 Rev. 3 Feb. /2014



**Table 12. Absolute Maximum Rating** 

Symbol	Item		Rating	Unit	Note
VIN, VOUT	Input, Output Voltage		- 0.5 ~ 4.6	V	1
$V_{DD},V_{DDQ}$	Power Supply Voltage		-0.5 ~ 4.6	٧	1
TA	Ambient Temperature	Commercial	0 ~ 70	°C	1
		Industrial	-40 ~ 85	°C	1
		Automotive	-40 ~ 105	°C	1
Tstg	Storage Temperature		- 65 ~ 150	ů	1
Tsolder	Soldering Temperature (10 second)		260	°C	1
PD	Power Dissipation		1	W	1
los	Short Circuit Output Current		50	mA	1

Table 13. Recommended D.C. Operating Conditions ( $T_A = -40 \sim 85$ °C)

Symbol	Parameter	Min.	Тур.	Max.	Unit	Note
V <sub>DD</sub>	Power Supply Voltage	3.0	3.3	3.6	V	2
V <sub>DDQ</sub>	Power Supply Voltage(for I/O Buffer)	3.0	3.3	3.6	V	2
ViH	LVTTL Input High Voltage	2.0	3.0	VDDQ +0.3	V	2
VIL	LVTTL Input Low Voltage	- 0.3	0	0.8	V	2
lı∟	$\label{eq:local_local_local} Input \ Leakage \ Current \\ \ (\ 0V \le V_{IN} \le V_{DD}, \ All \ other \ pins \ not \ under \ test = 0V \ )$	- 10	I	10	μΑ	
loL	Output Leakage Current Output disable, $0V \le V_{OUT} \le V_{DDQ}$ )	- 10	-	10	μΑ	
Vон	LVTTL Output "H" Level Voltage (lout = -2mA)	2.4		_	V	
Vol	LVTTL Output "L" Level Voltage ( lout = 2mA )	_	_	0.4	V	

Table 14. Capacitance ( $V_{DD} = 3.3V$ , f = 1MHz,  $T_A = 25$ °C)

Symbol	Parameter	Min.	Max.	Unit
Cı	Input Capacitance	2.5	5	pF
C <sub>I/O</sub>	Input/Output Capacitance	4	6.5	pF

Note: These parameters are periodically sampled and are not 100% tested.

Confidential 17 Rev. 3 Feb. /2014



# Table 15. D.C. Characteristics (V<sub>DD</sub> = $3.3V \pm 0.3V$ , T<sub>A</sub> = -40~85°C)

Description/Test condition		- 6	-7	Unit	Noto
-	Symbol		ax.	Oilit	NOLE
Operating Current					
trc ≥ trc(min), Outputs Open	I <sub>DD1</sub>	100	100		3
One bank active					
Precharge Standby Current in non-power down mode					
$t_{CK}$ = 15ns, CS# $\geq$ V <sub>IH</sub> (min), CKE $\geq$ V <sub>IH</sub>	I <sub>DD2N</sub>	40	40		
Input signals are changed every 2clks					
Precharge Standby Current in non-power down mode	_	20	20		
$t_{CK} = \infty$ , $CLK \le V_{IL}(max)$ , $CKE \ge V_{IH}$	IDD2NS	30	30		
Precharge Standby Current in power down mode		5	5		
tcκ = 15ns, CKE ≤ V <sub>IL</sub> (max)	IDD2P	5	5		
Precharge Standby Current in power down mode		5	5		
$t_{CK} = \infty$ , $CKE \le V_{IL}(max)$	IDD2PS	3	5	mA	
Active Standby Current in non-power down mode					
$t_{CK}$ = 15ns, CKE $\geq$ V <sub>IH</sub> (min), CS# $\geq$ V <sub>IH</sub> (min)	I <sub>DD3N</sub>	65	65		
Input signals are changed every 2clks					
Active Standby Current in non-power down mode	I <sub>DD3NS</sub>	45	45		
CKE $\geq$ V <sub>IH</sub> (min), CLK $\leq$ V <sub>IL</sub> (max), t <sub>CK</sub> = $\infty$		40	45		
Operating Current (Burst mode)		150	150		
tcк =tcк(min), Outputs Open, Multi-bank interleave	I <sub>DD4</sub>	150	150		3, 4
Refresh Current	_	200	200		
$t_{RC} \ge t_{RC}(min)$	I <sub>DD5</sub>	200	200		3
Self Refresh Current		-	-		
CKE $\leq 0.2V$ ; for other inputs V $_{IH}\! \geq \! VDD$ - 0.2V, V $_{IL} \leq 0.2V$	I <sub>DD6</sub>	6	6		

Confidential 18 Rev. 3 Feb. /2014



Table 16. Electrical Characteristics and Recommended A.C. Operating Conditions  $(V_{DD} = 3.3V \pm 0.3V, T_A = -40 \sim 85 ^{\circ}C)$  (Note: 5, 6, 7, 8)

-6 -7 Unit Note Symbol A.C. Parameter Min. Max. Min. Max. Row cycle time tRC 60 63 (same bank) Refresh cycle time **t**RFC 60 63 RAS# to CAS# delay **t**RCD 18 21 (same bank) Precharge to refresh/row activate command trp 18 21 (same bank) **t**RRD Row activate to row activate delay 12 14 (different banks) Mode register set cycle time **t**MRD 12 14 Row activate to precharge time **t**RAS 42 120K 49 120K (same bank) Write recovery time twR 12 14 ns  $CL^* = 2$ 12 12 9 tcĸ Clock cycle time  $CL^* = 3$ 6 7 10 Clock high time 2.5 t<sub>CH</sub> 2.5 10 Clock low time tcl 2.5 2.5  $CL^* = 2$ \_ 6.5 Access time from CLK 10 tac  $CL^* = 3$ (positive edge) 5.4 5.4 Data output hold time 2 2 tон \_ \_ 9 tLZ Data output low impedance 0 0 tHZ Data output high impedance 5.4 5.4 8 Data/Address/Control Input set-up time tıs 1.5 1.5 10 Data/Address/Control Input hold time 10 tıн Power Down Exit set-up time **t**PDE tis+tck tis+tck Average Refresh interval time 7.8 7.8 **t**REFI μs Exit Self-Refresh to Read Command txsr t<sub>RC+t</sub>is trc+tis ns

#### Note:

- 1. Stress greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device.
- 2. All voltages are referenced to  $V_{SS}$ . Overshoot  $V_{IH}$  (Max) =  $V_{DDQ}$ +2.0V for pulse width  $\leq$  3ns. Undershoot  $V_{IL}$  (Min) = -2.0V for pulse width  $\leq$  3ns.
- 3. These parameters depend on the cycle rate and these values are measured by the cycle rate under the minimum value of tck and tRc. Input signals are changed one time during every 2 tck.
- 4. These parameters depend on the output loading. Specified values are obtained with the output open.
- 5. Power-up sequence is described in Note 11.
- 6. A.C. Test Conditions

Confidential 19 Rev. 3 Feb. /2014

<sup>\*</sup> CL is CAS# Latency.



# Table 17. LVTTL Interface

Reference Level of Output Signals	1.4V / 1.4V
Input Signal Levels	2.4V / 0.4V
Transition Time (Rise and Fall) of Input Signals	1ns
Reference Level of Input Signals	1.4V

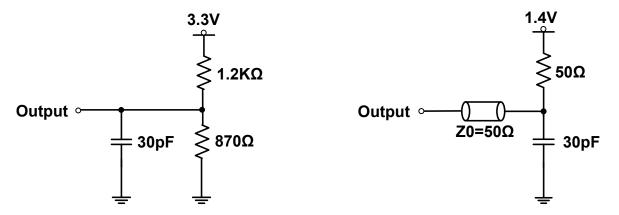


Figure 18.1 LVTTL D.C. Test Load (A)

Figure 18.2 LVTTL A.C. Test Load (B)

- 7. Transition times are measured between  $V_{IH}$  and  $V_{IL}$ . Transition (rise and fall) of input signals are in a fixed slope (1 ns).
- 8. thz defines the time in which the outputs achieve the open circuit condition and are not at reference levels.
- 9. If clock rising time is longer than 1 ns,  $(t_R / 2 0.5)$  ns should be added to the parameter.
- 10. Assumed input rise and fall time  $t_T$  ( $t_R \& t_F$ ) = 1 ns

If  $t_R$  or  $t_F$  is longer than 1 ns, transient time compensation should be considered, i.e., [(tr + tf)/2 - 1] ns should be added to the parameter.

11. Power up Sequence

Power up must be performed in the following sequence.


- 1) Power must be applied to  $V_{DD}$  and  $V_{DDQ}$  (simultaneously) when CKE= "LOW", DQM= "HIGH" and all input signals are held "NOP" state.
- 2) Start clock and maintain stable condition for minimum 200  $\mu$ s, then bring CKE "HIGH" and, it is recommended that DQM is held "HIGH" ( $V_{DD}$  levels) to ensure DQ output is in high impedance.
- 3) All banks must be precharged.
- 4) Mode Register Set command must be asserted to initialize the Mode register.
- 5) A minimum of 2 Auto-Refresh dummy cycles must be required to stabilize the internal circuitry of the device.
- \* The Auto Refresh command can be issue before or after Mode Register Set command

Confidential 20 Rev. 3 Feb. /2014



# **Timing Waveforms**


Figure 19. AC Parameters for Write Timing (Burst Length=4)

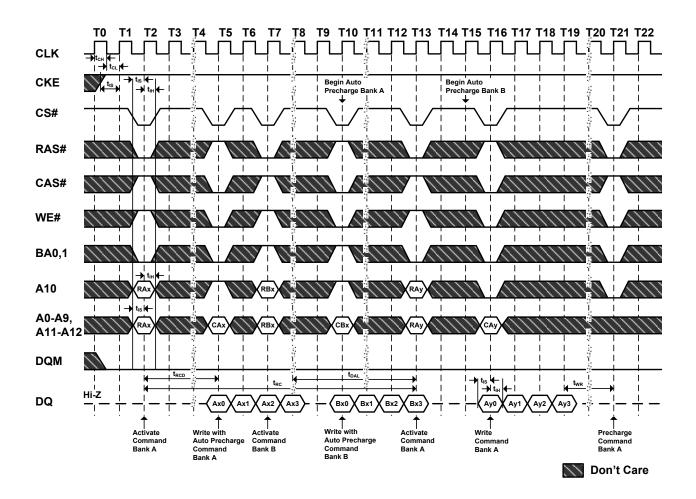

Confidential 21 Rev. 3 Feb. /2014




Figure 20. AC Parameters for Read Timing (Burst Length=2, CAS# Latency=2)

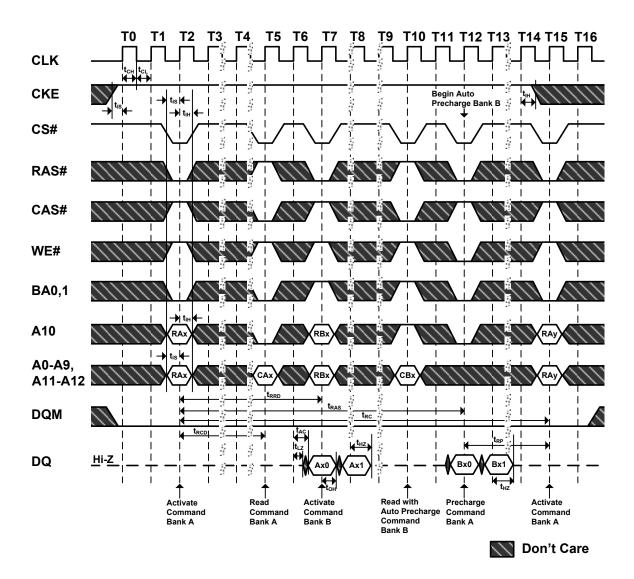

Confidential 22 Rev. 3 Feb. /2014




Figure 21. Auto Refresh (Burst Length=4, CAS# Latency=2)

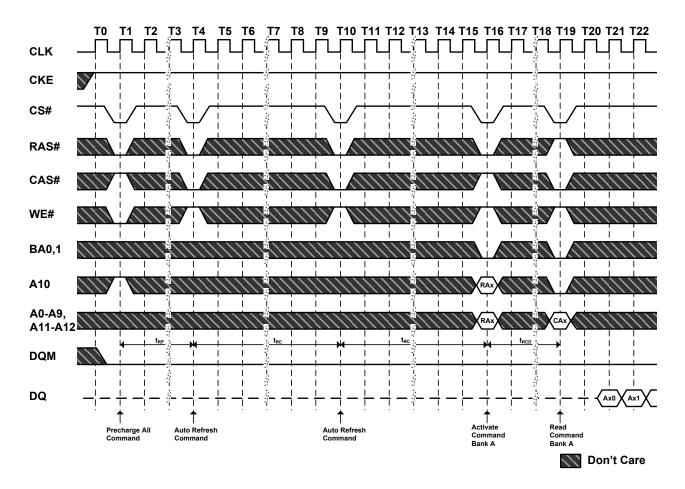

Confidential 23 Rev. 3 Feb. /2014




Figure 22. Power on Sequence and Auto Refresh

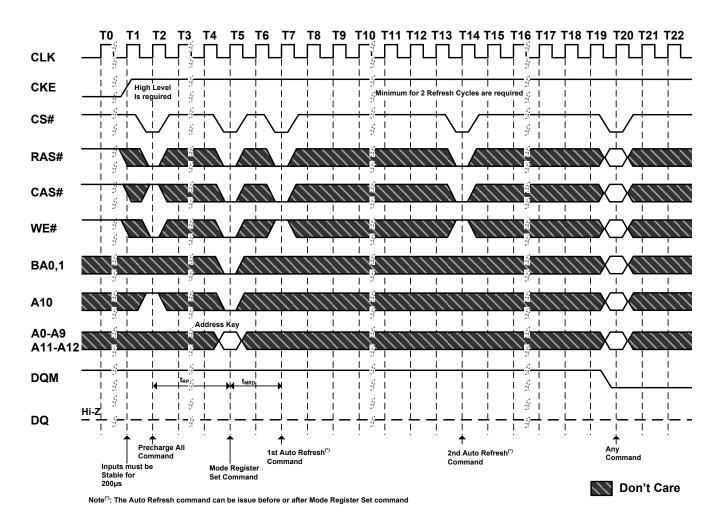

Confidential 24 Rev. 3 Feb. /2014



Figure 23. Self Refresh Entry & Exit Cycle

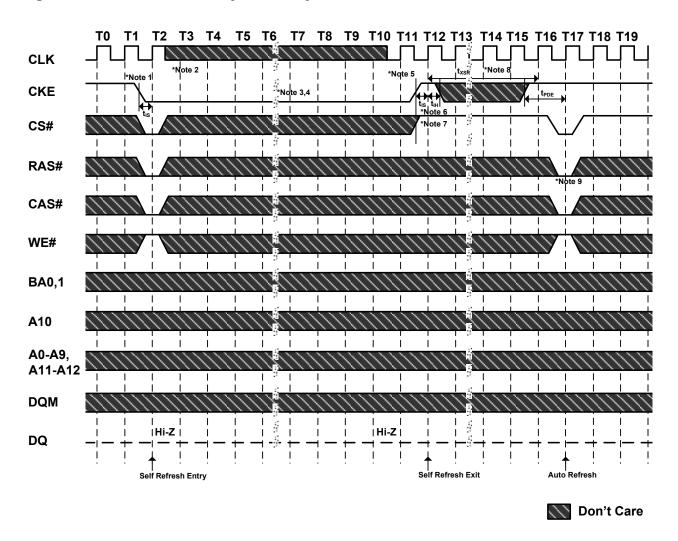

## Note: To Enter SelfRefresh Mode

- 1. CS#, RAS# & CAS# with CKE should be low at the same clock cycle.
- 2. After 1 clock cycle, all the inputs including the system clock can be don't care except for CKE.
- 3. The device remains in SelfRefresh mode as long as CKE stays "low".
- 4. Once the device enters SelfRefresh mode, minimum tras is required before exit from SelfRefresh.

#### To Exit SelfRefresh Mode

- 5. System clock restart and be stable before returning CKE high.
- 6. Enable CKE and CKE should be set high for valid setup time and hold time.
- 7. CS# starts from high.
- 8. Minimum txsR is required after CKE going high to complete SelfRefresh exit.
- 9. 8192 cycles of burst AutoRefresh is required before SelfRefresh entry and after SelfRefresh exit if the system uses burst refresh.

Figure 24.1. Clock Suspension During Burst Read (Using CKE)

Confidential 25 Rev. 3 Feb. /2014



(Burst Length=4, CAS# Latency=2)

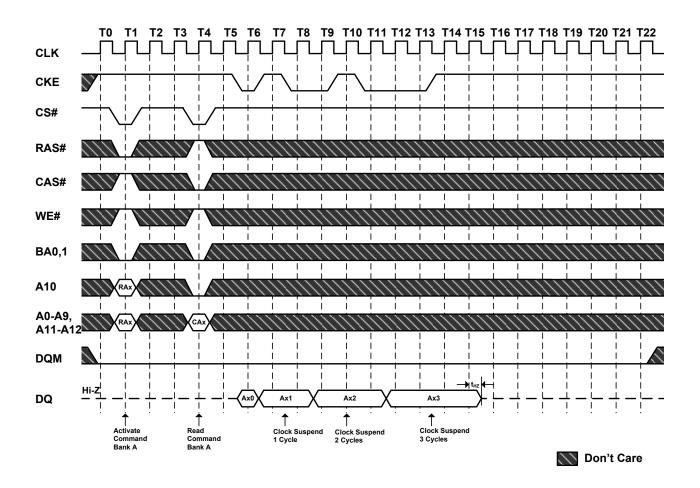


Figure 24.2. Clock Suspension During Burst Read (Using CKE) (Burst Length=4, CAS# Latency=3)

Confidential 26 Rev. 3 Feb. /2014




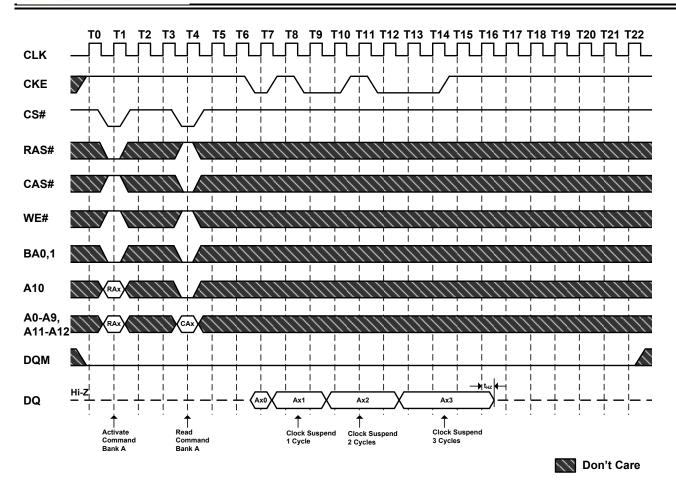




Figure 25. Clock Suspension During Burst Write (Using CKE) (Burst Length=4)

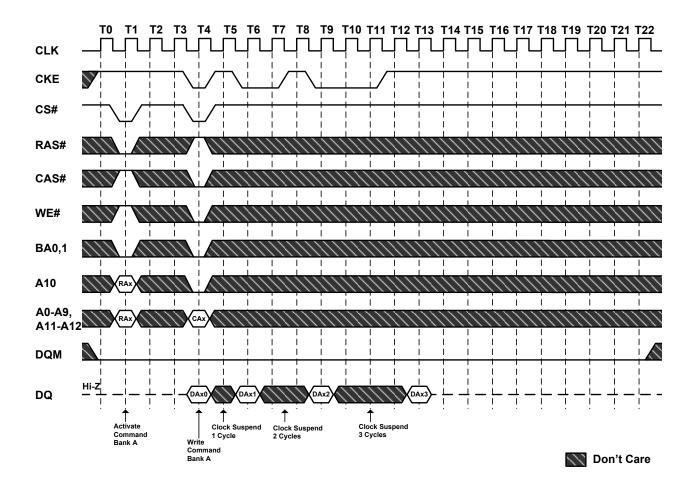

Confidential 28 Rev. 3 Feb. /2014



Figure 26. Power Down Mode and Clock Suspension (Burst Length=4, CAS# Latency=2)


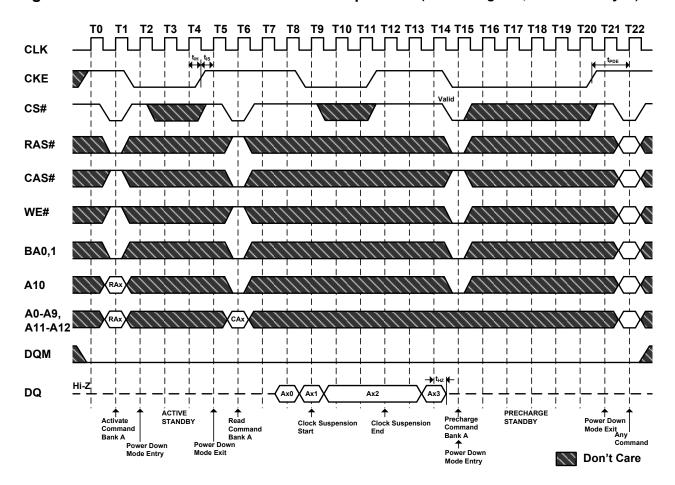





Figure 27.1. Random Column Read (Page within same Bank) (Burst Length=4, CAS# Latency=2)

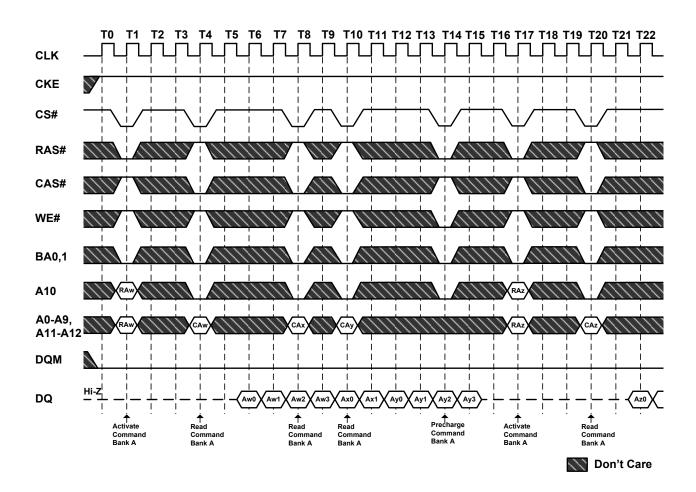

Confidential 30 Rev. 3 Feb. /2014




Figure 27.2. Random Column Read (Page within same Bank) (Burst Length=4, CAS# Latency=3)

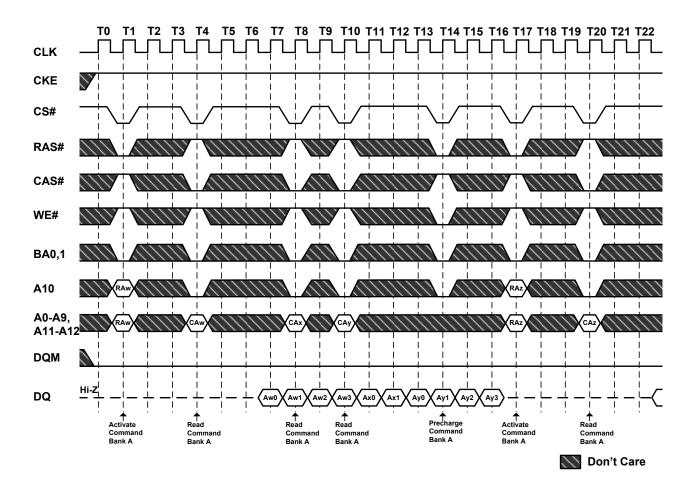

Confidential 31 Rev. 3 Feb. /2014




Figure 28. Random Column Write (Page within same Bank) (Burst Length=4)

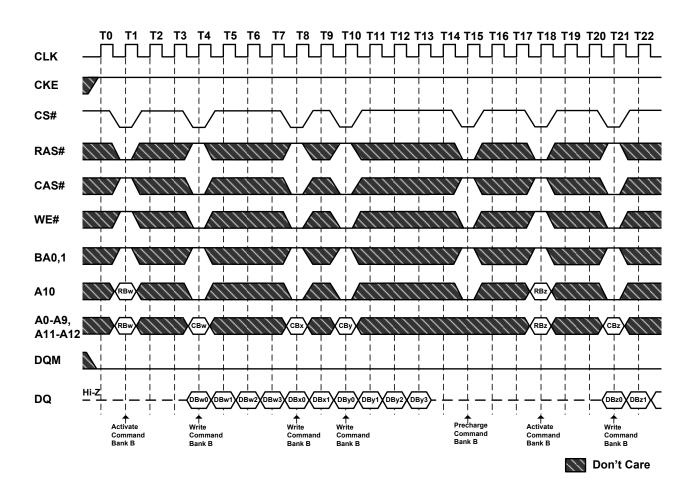

Confidential 32 Rev. 3 Feb. /2014




Figure 29.1. Random Row Read (Interleaving Banks)
(Burst Length=8, CAS# Latency=2)

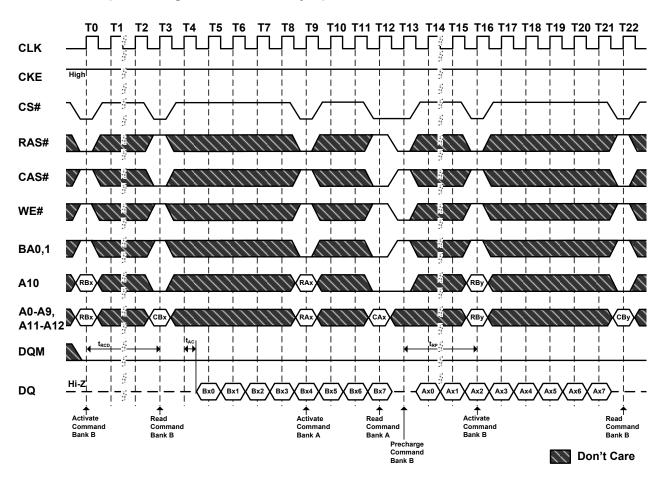

Confidential 33 Rev. 3 Feb. /2014




Figure 29.2. Random Row Read (Interleaving Banks) (Burst Length=8, CAS# Latency=3)

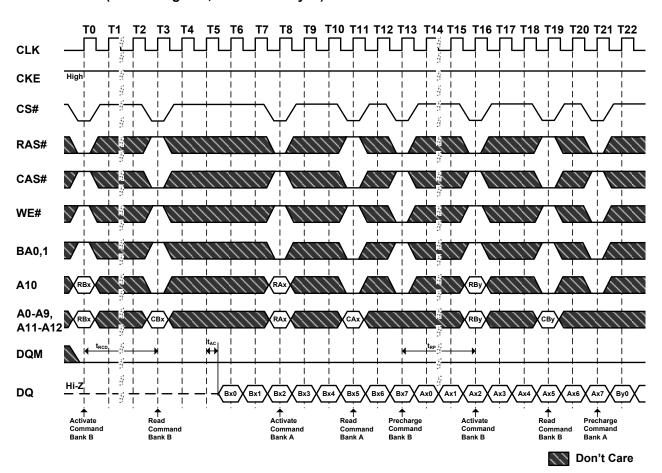

Confidential 34 Rev. 3 Feb. /2014




Figure 30. Random Row Write (Interleaving Banks)
(Burst Length=8)

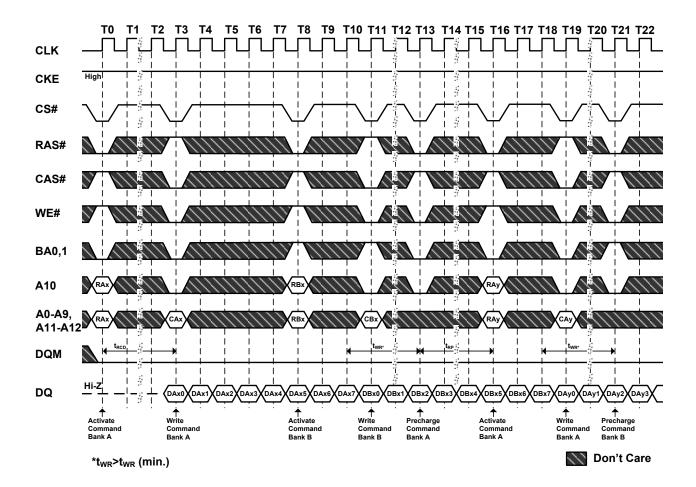

Confidential 35 Rev. 3 Feb. /2014




Figure 31.1. Read and Write Cycle (Burst Length=4, CAS# Latency=2)

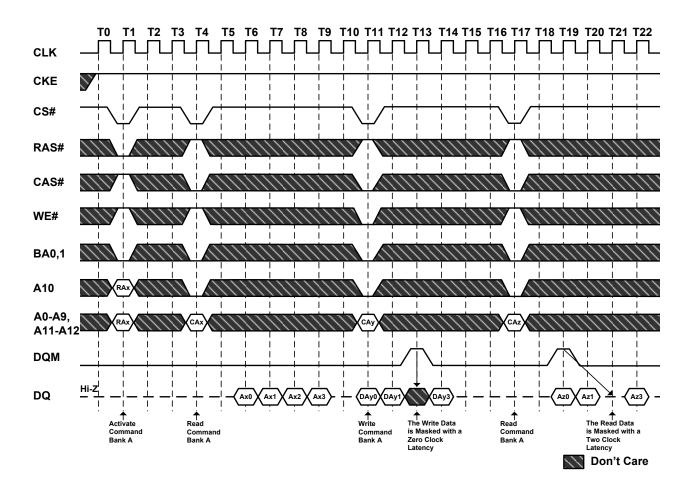

Confidential 36 Rev. 3 Feb. /2014




Figure 31.2. Read and Write Cycle (Burst Length=4, CAS# Latency=3)

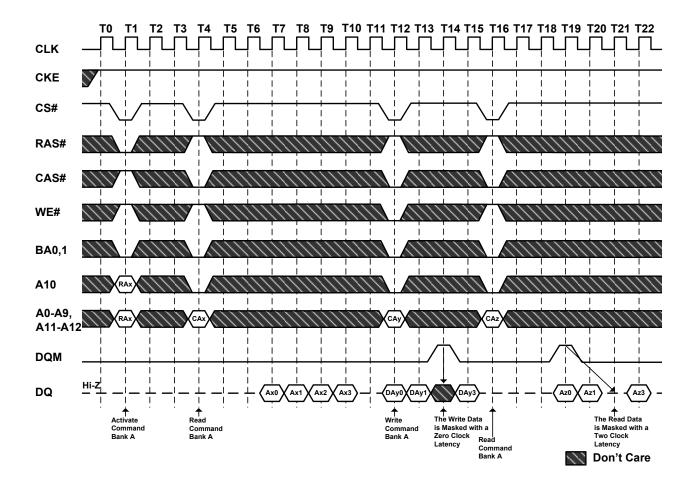

Confidential 37 Rev. 3 Feb. /2014




Figure 32.1. Interleaving Column Read Cycle (Burst Length=4, CAS# Latency=2)

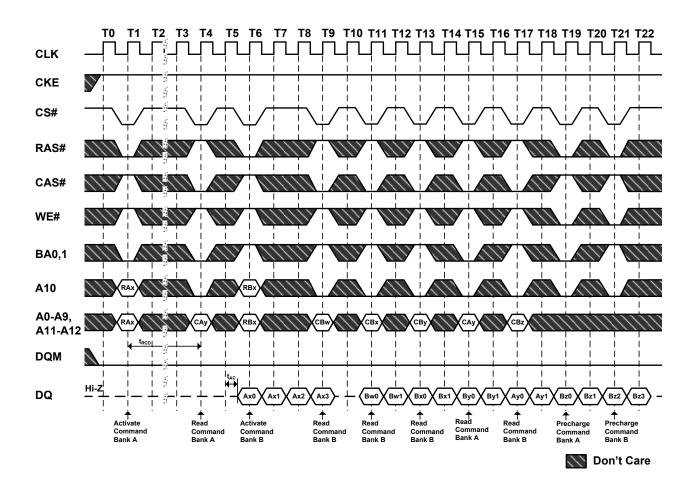

Confidential 38 Rev. 3 Feb. /2014




Figure 32.2. Interleaved Column Read Cycle (Burst Length=4, CAS# Latency=3)

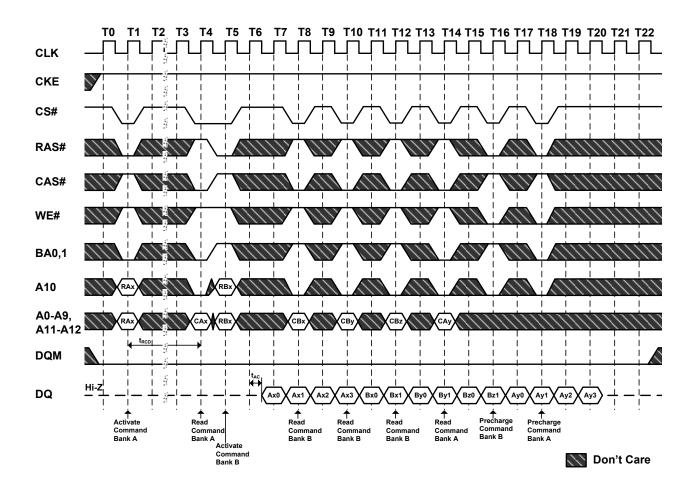

Confidential 39 Rev. 3 Feb. /2014




Figure 33. Interleaved Column Write Cycle (Burst Length=4)

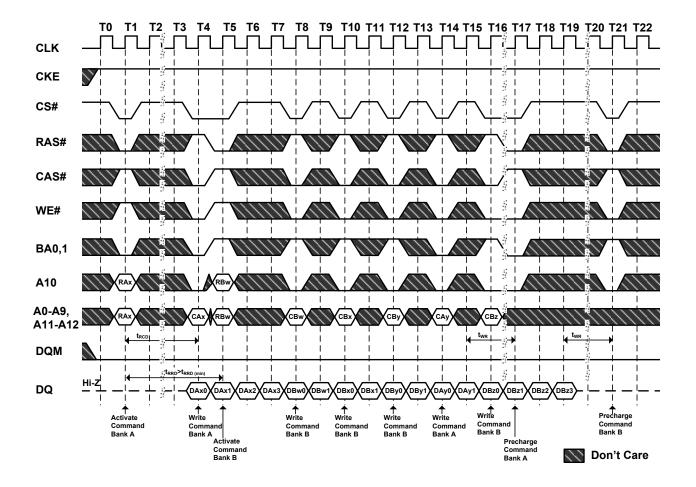

Confidential 40 Rev. 3 Feb. /2014




Figure 34.1. Auto Precharge after Read Burst (Burst Length=4, CAS# Latency=2)

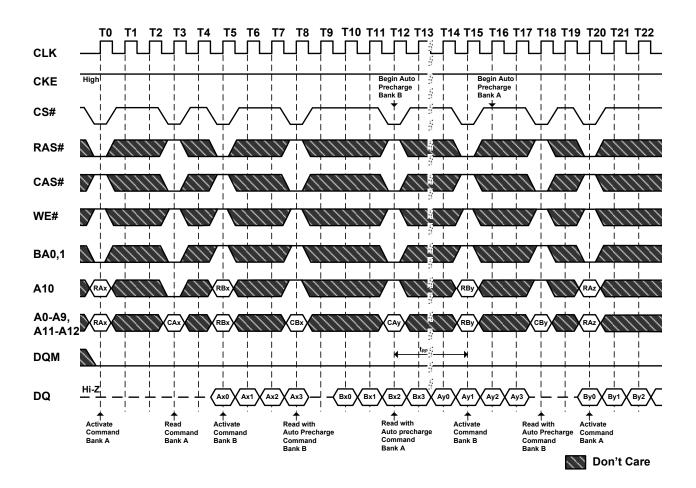

Confidential 41 Rev. 3 Feb. /2014




Figure 34.2. Auto Precharge after Read Burst (Burst Length=4, CAS# Latency=3)

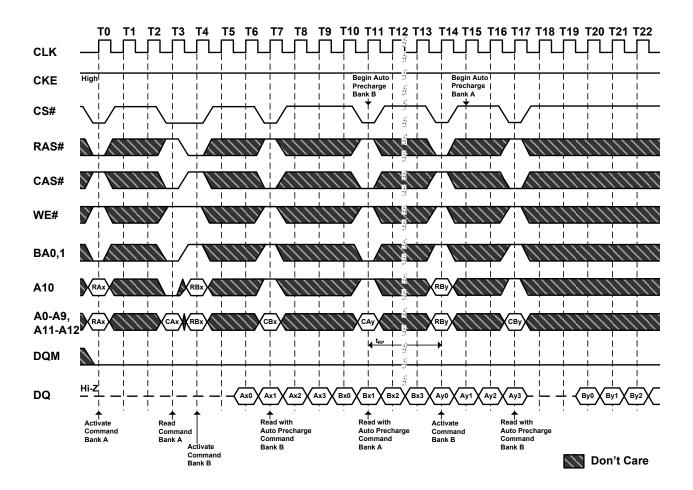

Confidential 42 Rev. 3 Feb. /2014




Figure 35. Auto Precharge after Write Burst (Burst Length=4)

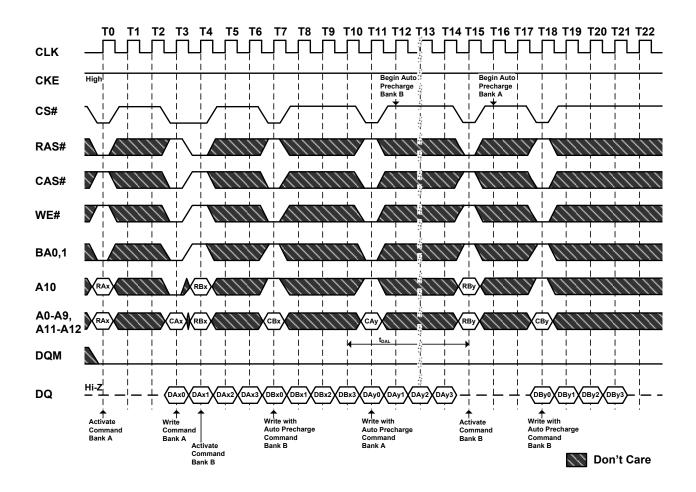

Confidential 43 Rev. 3 Feb. /2014




Figure 36.1. Full Page Read Cycle (Burst Length=Full Page, CAS# Latency=2)

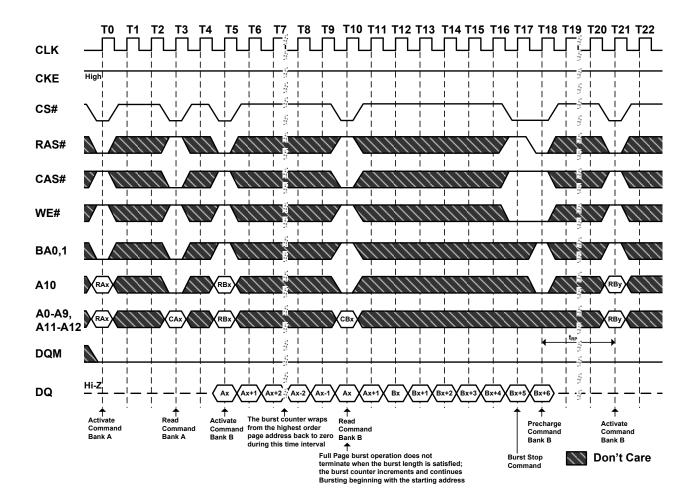

Confidential 44 Rev. 3 Feb. /2014



Figure 36.2. Full Page Read Cycle (Burst Length=Full Page, CAS# Latency=3)

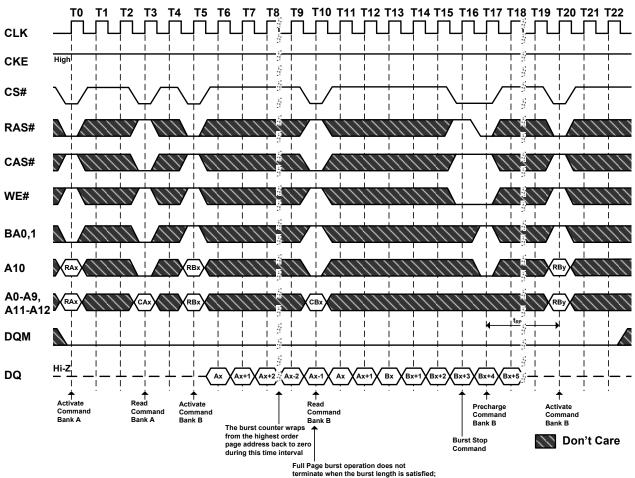


rull Page burst operation does not terminate when the burst length is satisfied; the burst counter increments and continues Bursting beginning with the starting address

Confidential 45 Rev. 3 Feb. /2014




Figure 37. Full Page Write Cycle (Burst Length=Full Page)

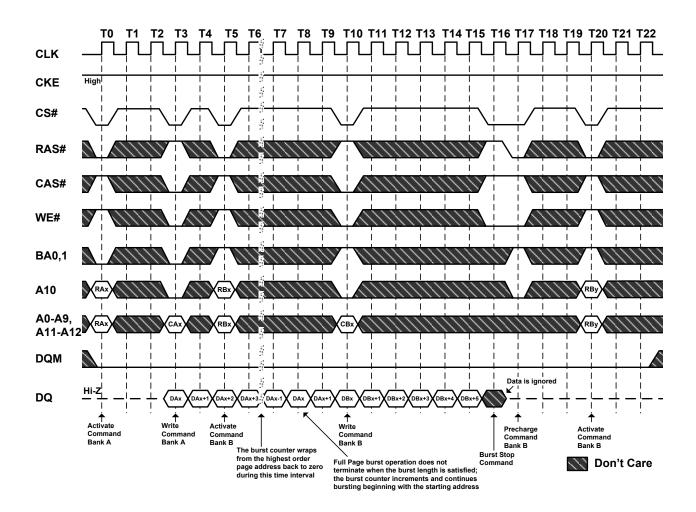

Confidential 46 Rev. 3 Feb. /2014



Figure 38. Byte Read and Write Operation (Burst Length=4, CAS# Latency=2)

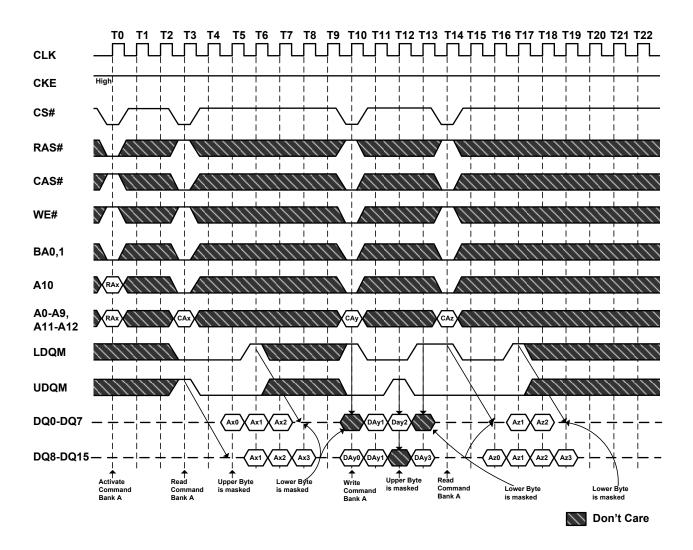


Confidential 47 Rev. 3 Feb. /2014



Figure 39. Random Row Read (Interleaving Banks)


(Burst Length=4, CAS# Latency=2)

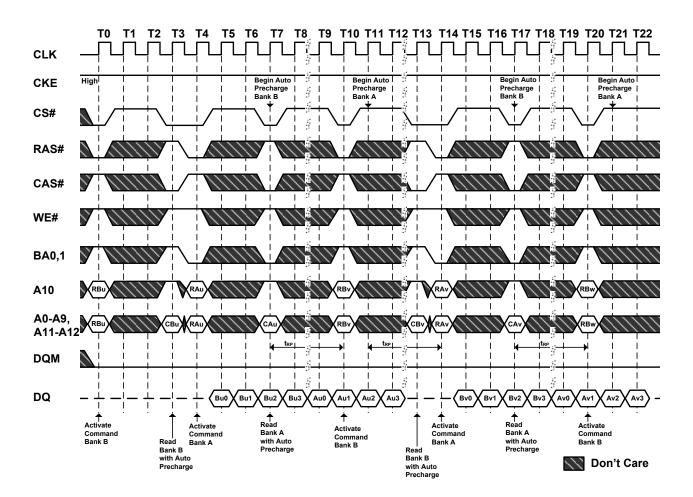

Confidential 48 Rev. 3 Feb. /2014




Figure 40. Full Page Random Column Read (Burst Length=Full Page, CAS# Latency=2)

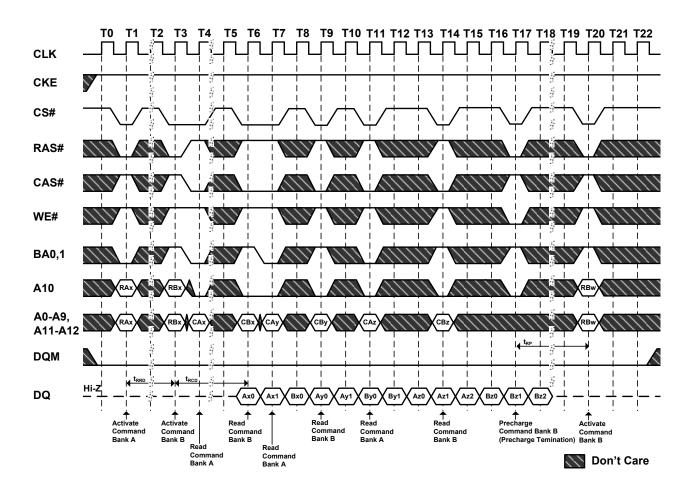

Confidential 49 Rev. 3 Feb. /2014




Figure 41. Full Page Random Column Write (Burst Length=Full Page)

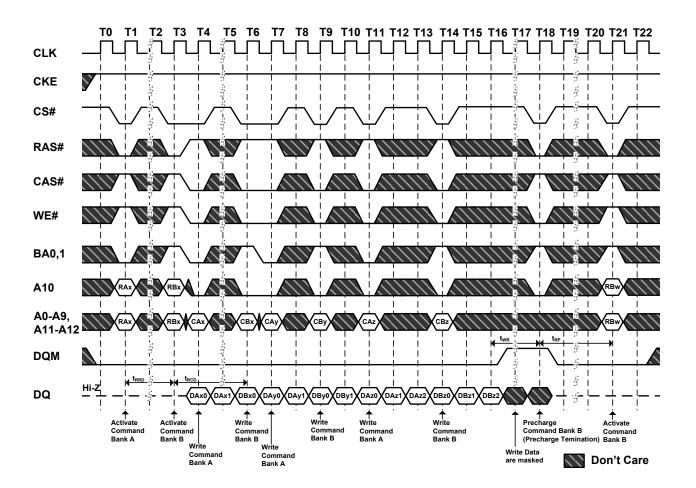

Confidential 50 Rev. 3 Feb. /2014




Figure 42. Precharge Termination of a Burst (Burst Length=4, 8 or Full Page, CAS# Latency=3)

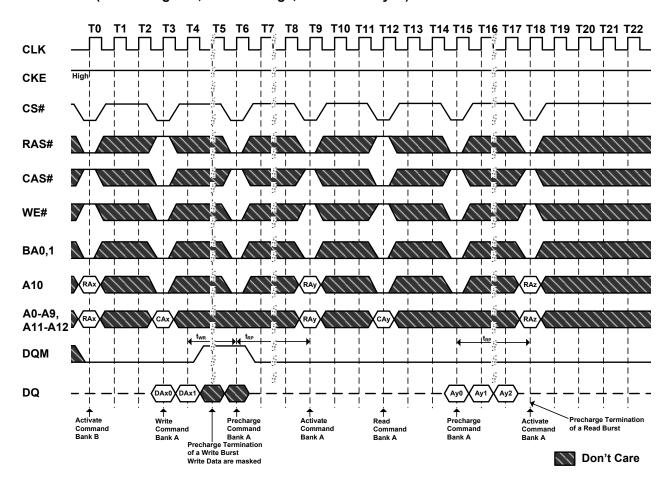

Confidential 51 Rev. 3 Feb. /2014



Figure 43. 54 Pin TSOP II Package Outline Drawing Information

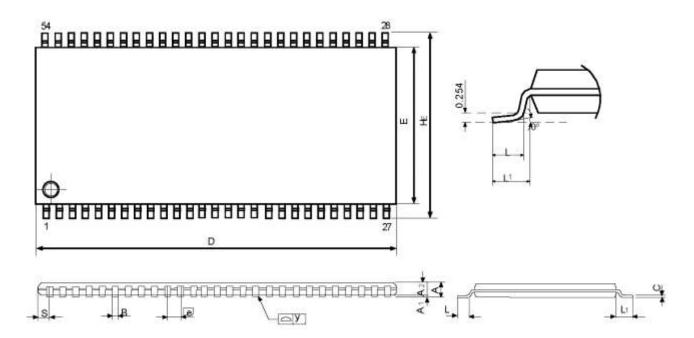


Symbol	Dimension in inch			Dimension in mm		
	Min	Nom	Max	Min	Nom	Max
Α			0.047			1.2
A1	0.002		0.008	0.05		0.2
A2	0.035	0.039	0.043	0.9	1.0	1.1
В	0.01	0.014	0.018	0.25	0.35	0.45
С	0.004	0.006	0.008	0.12	0.165	0.21
D	0.87	0.875	0.88	22.09	22.22	22.35
Е	0.395	0.400	0.405	10.03	10.16	10.29
е		0.031			0.8	
HE	0.455	0.463	0.471	11.56	11.76	11.96
L	0.016	0.02	0.024	0.4	0.5	0.6
L1		0.032			0.84	
S		0.028			0.71	
У			0.004			0.1
$\theta$	<b>0</b> °		8°	0°		8°

Confidential 52 Rev. 3 Feb. /2014



Figure 44. 54 Ball TFBGA Package Outline Drawing Information

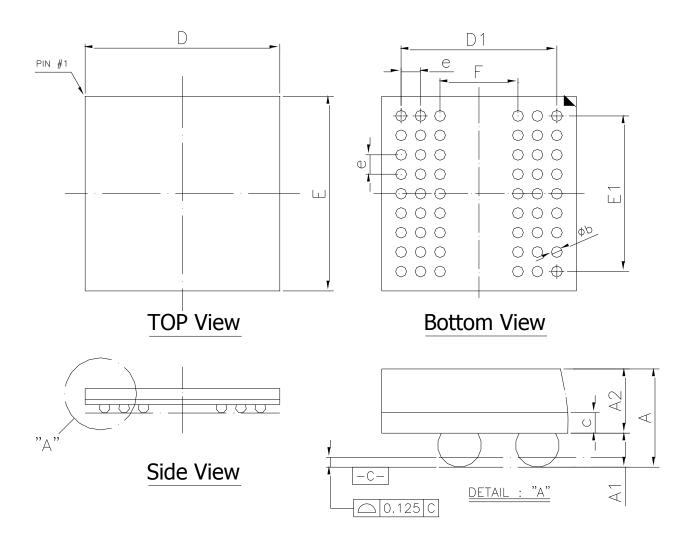

Symbol	Dimension in inch			Dimension in mm		
	Min	Nom	Max	Min	Nom	Max
Α			0.047			1.20
A1	0.012	0.014	0.016	0.30	0.35	0.40
A2	0.024	0.026	0.028	0.61	0.66	0.71
С	0.007	0.008	0.010	0.17	0.21	0.25
D	0.311	0.315	0.319	7.90	8.00	8.10
Е	0.311	0.315	0.319	7.90	8.00	8.10
D1		0.252			6.40	
E1		0.252			6.40	
е		0.031			0.80	
b	0.016	0.018	0.020	0.40	0.45	0.50
F		0.126			3.20	

Confidential 53 Rev. 3 Feb. /2014





Alliance Memory, Inc 511 Taylor Way, San Carlos, CA 94070, USA Phone: 650-610-6800 Fax: 650-620-9211

www.alliancememory.com

Copyright © Alliance Memory All Rights Reserved

O Copyright 2007 Alliance Memory, Inc. All rights reserved. Our three-point logo, our name and Intelliwett are trademarks or registered trademarks of Alliance. All other brand and product names may be the trademarks of their respective companies. Alliance reserves the right to make changes to this document and its products at any time without notice. Alliance assumes no responsibility for any errors that may appear in this document. The detacontained herein represents Alliance's best data and/or estimates at the time of issuance. Alliance reserves the right to change or correct this data at anytime, without notice. If the product described herein is under development, significant changes to these specifications are possible. The information in inthis product data sheet is intended to be general descriptive information for potential customers and users, and is not intended to operate as, or provide, any guarantee or warrantee to any user or customer. Alliance does not assume any responsibility or liability arising out of the application or use of any product described herein, and disclaims any express or implied warranties related to the sale and/or use of Alliance products including liability orwarranties related to fitness for a particular purpose, menchantability, or infringement of any intellectual property rights, except as express agreed to inAlliance's Terms and Conditions of Sale (which are available from Alliance). All sales of Alliance products are made exclusively according to Alliance's Terms and Conditions of Sale. The purchase of products from Alliance does not authorize its products for use as critical components inlife-supporting systems implies that the manufacturer assumes all risk of such use and agrees to indemnify Alliance against allicalisms arising from such use.

Confidential 54 Rev. 3 Feb. /2014



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

## Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов:
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



## Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.