



MG Series Magnets



MG Series Magnets

The MG Series magnets offered by Honeywell Sensing and Control includes several bar magnets in various sizes and strengths for actuating Hall-effect and magnetoresistive sensor ICs. These bar magnets are for use in sensors with unipolar or omnipolar magnetic characteristics.

Made from different magnetic materials and available in a variety of sizes and shapes, the MG Series magnets can be used for evaluation and design of magnetic systems, and in numerous potential applications across a variety of different industries. Some of these magnets are offered with threaded bushings for easy installation and have a good resistance to demagnetization which could be caused by magnetic shock. These magnets are designed to provide minimum magnetic fields at a specified distance to help system designers match the appropriate magnet to their requirements.

Value to the Customer

- Variety of sizes, shapes, and packaging options to choose from

The MG Series consists of a range of magnets based on varying dimensions and packaging types to help customers identify the most appropriate magnet that can be used to evaluate Honeywell's Hall-effect and magnetoresistive sensor ICs in their applications.



DID YOU KNOW?

Magnetic sensing characteristics of Hall-effect sensor ICs are specified within particular ranges.

For example, assume an application with a temperature range of $-40\text{ }^{\circ}\text{C}$ to $125\text{ }^{\circ}\text{C}$ [$-40\text{ }^{\circ}\text{F}$ to $257\text{ }^{\circ}\text{F}$] using an SS443A. The operate point may be up to 215 Gauss [21.5 mT] and the release point may be 60 Gauss to 190 Gauss [6.0 mT to 19.0 mT]. To ensure reliable operation, at least 215 Gauss [21.5 mT] must be presented to the sensor. For a robust activation, the flux from the magnet at the maximum operating gap should be 20 % to 100 % higher than the sensor's maximum operating point over temperature. The Gauss level must then be reduced below 60 Gauss [6.0 mT] to ensure that the sensor will release.

Therefore, it is necessary to know the flux density (Gauss) measured at the chip to be able to:

- Select a device with the best magnetic characteristics for the application
- Select the best magnet
- Verify the desired mechanical characteristics

COMPACT SIZE • WIDE RANGE • VARIETY OF SHAPES

Features and Benefits

PHYSICAL STRENGTH

The MG Series offers Alnico or Indox magnets which exhibit good physical strength.

MAGNETIC FIELD

Rare Earth (SmCo-Samarium Cobalt) magnets from MG Series offer strong magnetic field in compact sizes.

Choose the best fit option

MAGNETIC MATERIAL

Honeywell's MG Series offer magnets made from different magnetic materials allowing customers to choose the most suitable option for their application.

OPERATING TEMPERATURE

The MG Series magnets exhibit good stability over a wide range of operating temperatures, as low as -40 °C [-40 °F] or as high as 140 °C [284 °F] to 300 °C [572 °F], depending on the magnet.

OPERATING MAGNETIC GAUSS LEVELS

The MG Series offers a wide selection of magnets operating across various magnetic Gauss levels to choose from.

Potential Applications



These magnets are used as actuators for Hall-effect and magnetoresistive sensor ICs which in turn can be used in a number of potential industrial and medical applications.

INDUSTRIAL

- **Door or lid closure detection in appliances or electronically controlled containers**

The unipolar sensor recessed in the door frame with a magnet embedded in the door can help in sensing the open and close positions in doors or lids in appliances or electronically controlled containers.

- **Simple speed and RPM (revolutions per minute) sensing in fitness and industrial equipment**

A single magnet of appropriate polarity mounted on the motor shaft of a treadmill when actuates a unipolar Hall-effect sensor IC generates single digital pulse for each revolution which in turn can help measure the speed or RPM of the equipment.



MEDICAL

- **Position sensor in hospital beds and medical equipment**

Magnets can be used to determine the home or end-of-travel position of the equipment on an activator arm of hospital beds and medical equipment.

- **Medication bin monitor on portable drug carts**

These magnets can be mounted on a drug dispensing drawer to detect the open or close position using a unipolar Hall-effect sensor IC.

MG Series

MAGNET CURVES

The curves shown on the graphs are typical plots of induction (Gauss) versus distance for various magnets.

Mode of operation: Head-on

Figure 1. 101MG2L1



Figure 2. 101MG3



Figure 3. 101MG7



Figure 4. 101MG8



Figure 5. 102MG11



Figure 6. 102MG15



MG Series Magnets

Figure 7. 103MG5

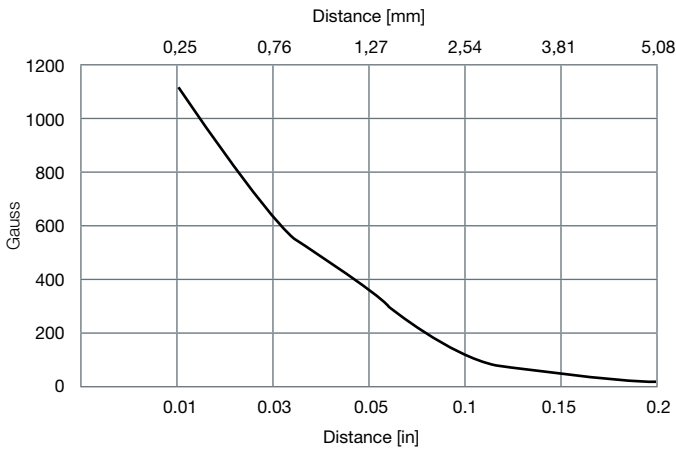


Figure 8. 103MG8



Figure 9. 104MG1

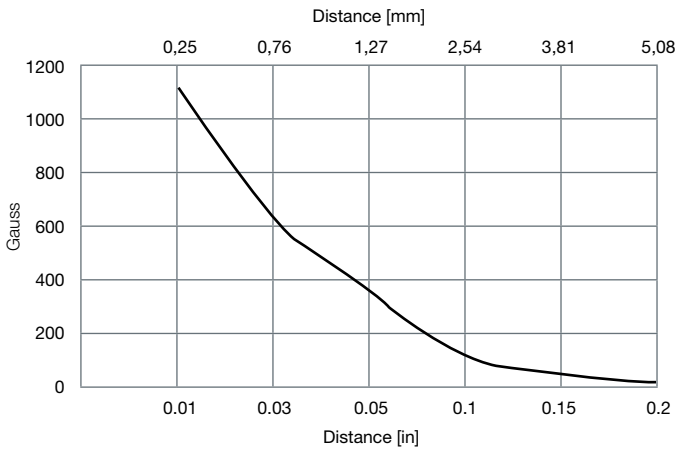


Figure 10. 104MG2



Figure 11. 104MG3

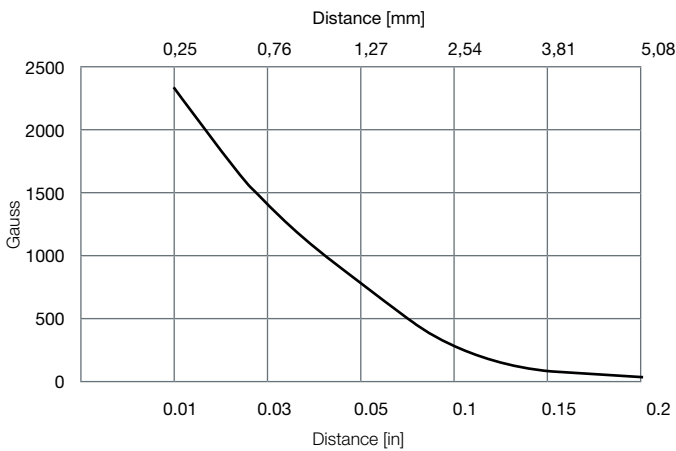


Figure 12. 106MG10



MG Series

Figure 13. 107MG1



Mode of operation: Slide-by

Figure 14. 101MG2L1



Figure 15. 101MG3



Figure 16. 101MG7



Figure 17. 103MG5



MG Series Magnets

Figure 18. 103MG8



Figure 19. 106MG10



Figure 20. 107MG1



MG Series


METHOD OF MAGNET ACTUATION

There are many ways to apply magnets in Hall-effect sensor applications. The more common methods are described below.

HEAD-ON ACTUATION

For “head-on” actuation, there should be sufficient magnet travel to provide at least 10 % flux overdrive of both maximum operate and minimum release characteristics of the sensor. The target is centered over the point of maximum sensitivity and is moved “head-on” to the sensor, then backed off.

Figure 21. Unipolar Head-on

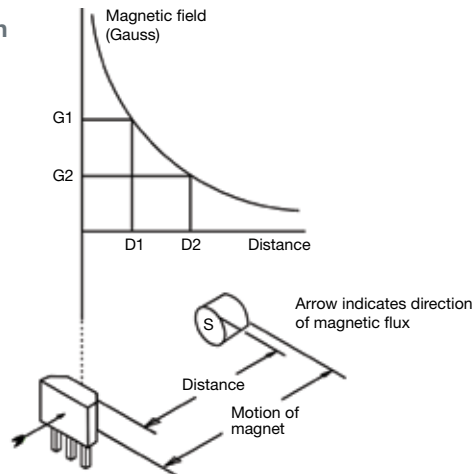

SLIDE-BY ACTUATION

For “slide-by” actuation, the magnet should pass the sensing surface at a distance which provides at least 10 % flux overdrive above maximum operate. The target is moved across the face of the sensor at a specified distance.

Figure 22. Unipolar Slide-by (One magnet)

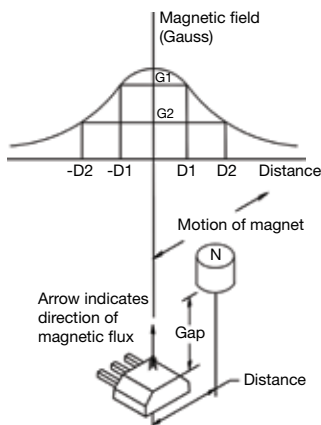


Figure 23. Bipolar Slide-by (One magnet)



Figure 24. Bipolar Slide-by (Two magnets)

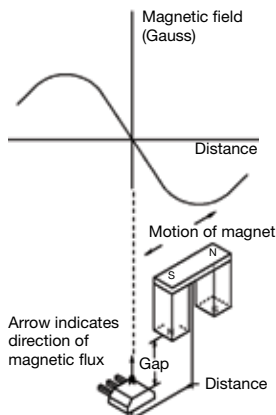


Figure 25. Bipolar Slide-by (Three magnets)



MG Series Magnets

MAGNET CONVERSION CHART

Table 1. Multiplication Factors

| From / To | Gauss | Tesla | Millitesla | Weber/Inch ² | Weber/Meter ² | Line/Inch ² | Gammas |
|--------------------------|-------------------------|-------------------------|-------------------------|-------------------------|--------------------------|------------------------|--------------------------|
| Gauss | 1.0 | 1.0×10^4 | 10 | 1.55×10^7 | 1.0×10^4 | 1.55×10^7 | 1.0×10^{-5} |
| Tesla | 1.0×10^{-4} | 1.0 | 1.0×10^{-3} | 1.55×10^3 | 1.0 | 1.55×10^3 | 1.0×10^{-9} |
| Millitesla | 0.1 | 1.0×10^3 | 1.0 | 1.55×10^{-4} | 1.0×10^3 | 1.55×10^6 | 1.0×10^{-6} |
| Weber/Inch ² | 6.4516×10^{-5} | 6.4516×10^{-4} | 6.4516×10^{-2} | 1.0 | 6.4516×10^6 | 1.0 | 6.4516×10^{-13} |
| Weber/Meter ² | 1.0×10^{-4} | 1.0 | 1.0×10^{-3} | 1.55×10^3 | 1.0 | 1.55×10^3 | 1.0×10^{-9} |
| Line/Inch ² | 6.4516×10^{-5} | 6.4516×10^{-4} | 6.4516×10^{-2} | 1.0 | 6.4516×10^6 | 1.0 | 6.4516×10^{-13} |
| Gammas | 1.0×10^6 | 1.0×10^9 | 1.0×10^5 | 1.55×10^{12} | 1.0×10^9 | 1.55×10^{12} | 1.0 |

Table 2. Various Magnetic Materials

| Magnetic Material | $(B_D H_D)$ – Peak Energy Product | (B_R) – Residual Induction Gauss | (H_C) – Coercive Force Oersteds |
|--------------------------|-----------------------------------|------------------------------------|-----------------------------------|
| Alnico V | 5.5×10^6 | 12800 | 640 |
| Alnico VIII | 6.0×10^6 | 9200 | 1550 |
| Rare Earth (SmCo magnet) | 18.0×10^6 | 8600 | 8000 |

DIMENSIONAL DRAWINGS (FOR REFERENCE ONLY)

Figure 26. Alnico VI Sintered – 101MG2L1



Figure 27. Alnico V Cast – 101MG3



MG Series

Figure 28. Alnico VIII Sintered – 101MG7



Figure 29. Alnico VIII Sintered – 101MG8



Figure 30. Alnico VIII Sintered – 102MG11



Figure 31. Alnico VIII Sintered – 102MG15



Figure 32. Rare Earth Pressed – 103MG5



Figure 33. Rare Earth Pressed – 103MG8



MG Series Magnets

Figure 34. Rare Earth Pressed – 104MG1



Figure 35. Rare Earth Pressed – 104MG2



Figure 36. Rare Earth Pressed – 104MG3



Figure 37. Rare Earth Pressed – 106MG10



Figure 38. Alnico VIII Sintered – 107MG1



MG Series

MAGNET SELECTION GUIDE

The below guide is designed to aid in determining the best magnet for use with a Hall-effect or magnetoresistive sensor. There are several factors to consider when choosing a magnet. The most important is gap distance. There must be a strong enough magnetic Gauss level to operate the sensor at the correct distance. By using the maximum operate magnetic Gauss characteristics, you can determine which magnet will operate the sensor. The other important factors include temperature and physical environment of the application. The Gauss levels below are typical values only and not guaranteed rated specifications.

Table 3. Magnet Selection Guide

| Catalog Listing | Material and Process | Physical Strength | Temperature Range* | Magnetic Shock Resistance | Resistance to Demagnetization | Gap Distance mm [in]** and Gauss Level (G) @ 25 °C [77 °F] † | | | | | |
|-----------------|----------------------|-------------------|--------------------------------------|---------------------------|-------------------------------|--|-------------------|-------------------|-------------------|-------------------|-------------------|
| | | | | | | 0,25 mm [0.01 in] | 0,76 mm [0.03 in] | 1,27 mm [0.05 in] | 2,54 mm [0.10 in] | 3,81 mm [0.15 in] | 5,08 mm [0.20 in] |
| 101MG2L1 | Alnico VI Sintered | Good | -40 °C to 250 °C -40 °F to 482 °F | Good | Good | 730 | 550 | 410 | 205 | 115 | 75 |
| 101MG3 | Alnico V Cast | Good | -40 °C to 300 °C -40 °F to 572 °F | Poor | Fair | 1460 | 1320 | 1170 | 810 | 575 | 420 |
| 101MG7 | Alnico VIII Sintered | Good | -40 °C to 250 °C -40 °F to 482 °F | Good | Excellent | 1050 | 900 | 755 | 470 | 295 | 195 |
| 101MG8 | Alnico VIII Sintered | Good | -40 °C to 250 °C -40 °F to 482 °F | Good | Excellent | 1050 | 900 | 755 | 470 | 295 | 195 |
| 102MG11 | Alnico VIII Sintered | Good | -40 °C to 140 °C -40 °F to 284 °F | Good | Excellent | 1050 | 900 | 755 | 470 | 295 | 195 |
| 102MG15 | Alnico VIII Sintered | Good | -40 °C to 140 °C -40 °F to 284 °F | Good | Excellent | 1050 | 900 | 755 | 470 | 295 | 195 |
| 103MG5 | Rare Earth Pressed | Poor | -40 °C to 200 °C -40 °F to 392 °F | Good | Excellent | 1110 | 630 | 365 | 120 | 55 | 25 |
| 103MG8 | Rare Earth Pressed | Poor | -40 °C to 200 °C -40 °F to 392 °F | Good | Excellent | 2620 | 2100 | 1600 | 940 | 550 | 350 |
| 104MG1 | Rare Earth Pressed | Poor | -40 °C to 150 °C -40 °F to 302 °F | Good | Excellent | 1110 | 630 | 365 | 120 | 55 | 25 |
| 104MG2 | Rare Earth Pressed | Poor | -40 °C to 150 °C -40 °F to 302 °F | Good | Excellent | 2500 | 1600 | 1000 | 370 | 140 | 70 |
| 104MG3 | Rare Earth Pressed | Poor | -40 °C to 150 °C -40 °F to 302 °F | Good | Excellent | 2350 | 1400 | 800 | 280 | 100 | 50 |
| 106MG10 | Rare Earth Pressed | Poor | -40 °C to 150 °C -40 °F to 302 °F | Good | Excellent | 2620 | 2100 | 1600 | 940 | 550 | 350 |
| 107MG1*** | Alnico VIII Sintered | Good | -40 °C to 140 °C -40 °F to 284 °F | Good | Excellent | 7800 | 7800 | 7800 | 750 | 550 | 375 |

*Magnet exhibits good stability over indicated temperature range

**Gap distance from sensing surface

***Measurement device saturated @ 800 Gauss

†Millitesla = Gauss × 10⁻¹

MG Series Magnets

Order Guide (Measurements for reference only)

| | Catalog Listing | Material and Process | Dimension | Description |
|---|-----------------|----------------------|---|--|
|  | 101MG2L1 | Alnico VI Sintered | 9,53 mm L x 3,18 mm W x 3,18 mm H [0.375 in L x 0.125 in W x 0.125 in H] | Bar magnet; North Pole is indicated with red |
|  | 101MG3 | Alnico V Cast | 31,75 mm L x 6,35 mm dia [1.25 in L x 0.25 in dia] | Cylindrical magnet; North Pole is indicated with red |
|  | 101MG7 | Alnico VIII Sintered | 6,35 mm L x 6,35 mm dia [0.25 in L x 0.25 in dia] | Cylindrical magnet; North Pole is indicated with red |
| | 101MG7-BP | Alnico VIII Sintered | 6,35 mm L x 6,35 mm dia [0.25 in L x 0.25 in dia] | Cylindrical magnet; North Pole is indicated with red; bulk packaging in 100 unit lots |
|  | 101MG8-BP | Alnico VIII Sintered | 6,22 mm L x 6,22 mm dia [0.245 in L x 0.245 in dia] | Cylindrical magnet; North Pole is indicated with red; bulk packaging in 100 unit lots |
|  | 102MG11 | Alnico VIII Sintered | 17,02 mm L x 7,87 mm dia [0.67 in L x 0.31 in dia] | Magnet with 8 x 32 threaded shaft for easy installation |
| | 102MG11-BP | Alnico VIII Sintered | 17,02 mm L x 7,87 mm dia [0.67 in L x 0.31 in dia] | Magnet with 8 x 32 threaded shaft for easy installation; bulk packaging in 100 unit lots |
|  | 102MG15 | Alnico VIII Sintered | 12,19 mm L x 7,87 mm dia [0.48 in L x 0.31 in dia] | Magnet with 4-40 threaded shaft for easy installation |
| | 102MG15-BP | Alnico VIII Sintered | 12,19 mm L x 7,87 mm dia [0.48 in L x 0.31 in dia] | Magnet with 4-40 threaded shaft for easy installation; bulk packaging in 100 unit lots |
|  | 103MG5 | Rare Earth Pressed | 1,98 mm L x 1,98 mm W x 1,02 mm H [0.078 in L x 0.078 in W x 0.04 in H] | Square magnet; 125 pieces per tube |

•BP - Bulk Pack

MG Series

Order Guide (Measurements for reference only)

| | Catalog Listing | Material and Process | Dimension | Description |
|---|-----------------|----------------------|--|--|
|  | 103MG8 | Rare Earth Pressed | 5,59 mm L x 5,08 mm W x 5,59 mm H [0.22 in W x 0.20 in W x 0.22 in H] | Bar magnet |
|  | 104MG1 | Rare Earth Pressed | 1,98 mm L x 1,02 mm W x 1,98 mm H [0.078 in L x 0.04 in W x 0.078 in H] | Bar magnet, magnetized and conditioned for operation; tube is marked with a red dot indicating North Pole; 125 pieces per tube |
|  | 104MG2 | Rare Earth Pressed | 3,18 mm L x 1,02 mm W x 3,18 mm H [0.125 in L x 0.04 in W x 0.125 in H] | Bar magnet; 125 pieces per tube |
|  | 104MG3 | Rare Earth Pressed | 3,96 mm L x 1,02 mm W x 1,98 mm H [0.156 in L x 0.04 in W x 0.078 in H] | Bar magnet, magnetized and conditioned for operation; 125 pieces per tube |
|  | 106MG10 | Rare Earth Pressed | 23,62 mm L x 10,16 mm dia [0.93 in L x 0.4 in dia] | Magnet in threaded plastic holder; 1/4-20 thread for easy installation |
| | 106MG10-BP | Rare Earth Pressed | 23,62 mm L x 10,16 mm dia [0.93 in L x 0.4 in dia] | Magnet in threaded plastic holder; 1/4-20 thread for easy installation; bulk packaging in 100 unit lots |
|  | 107MG1 | Alnico VIII Sintered | 25,4 mm L x 0,47 mm dia [1.00 in L x 15/32-32 UNS-2A dia] | Magnet in epoxy filled 15/32-32 UNS-2A aluminum package; 2 hex nuts; 1 per box |

•BP - Bulk Pack

MG Series Magnets

WARNING

PERSONAL INJURY

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

WARNING

MISUSE OF DOCUMENTATION

- The information presented in this product sheet is for reference only. Do not use this document as a product installation guide.
- Complete installation, operation, and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell website, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

Find out more

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office.

To learn more about Honeywell's sensing and control products, call **+1-815-235-6847** or **1-800-537-6945**, visit **sensing.honeywell.com**, or email inquiries to **info.sc@honeywell.com**

Sensing and Control
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422
honeywell.com

005972-1-EN IL50 GLO
June 2014
Copyright 2014 Honeywell International Inc. All rights reserved.

The Honeywell logo is displayed in a bold, red, sans-serif font.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.