

TLE4927x

Dynamic Differential Hall Effect Sensor

TLE4927C E6547
TLE4927CB E6547

Product Information

2013-10-03

Sense & Control

Table of Contents

	Table of Contents	2
1	General	3
1.1	Target Application	3
1.2	Features	3
2	Functional Description	4
2.1	General	4
2.2	Sensor assembly	4
3	Specification	5
3.1	Operating Range	5
3.2	Electrical Characteristics	5
3.3	ESD Protection	5
3.4	Magnetic Characteristics in Running Mode	6
3.5	Operating Characteristics	6
3.6	Reference Target Wheel - TLE4927CB E6547	6
4	Package Information	7
4.1	Application Example	7
4.2	Gear Tooth Sensing	7
4.3	Package Information - TLE4927C E6547	8
4.4	Package Outline - TLE4927CB E6547	10
4.5	Back-bias field orientation	10
4.6	Packing Information	11

1 General



1.1 Target Application

The TLE4927C E6547 is an active Hall sensor suited to detecting the motion and position of ferromagnetic or permanent magnet targets. An additional self-calibration module is implemented to achieve optimum accuracy during normal running operation. The device comes in a 3-pin package providing pins for the supply voltage and an open drain output. Infineon also offers customers the possibility to purchase sensors with already attached back bias magnets (TLE4927CB E6547).

1.2 Features

- High sensitivity
- Single chip solution
- Symmetrical thresholds
- High resistance to Piezo effects
- South and north pole pre-induction possible
- Low cut-off frequency
- Digital output signal
- Advanced performance through dynamic self calibration principle
- Two-wire and three-wire configuration possible
- Wide operating temperature range
- Fast start-up time
- Large operating air gaps
- Reverse voltage protection on V_S pin
- Short-circuit and overtemperature protection of output
- Digital output signal (voltage interface)
- Integrated back bias magnet as an option
- Module style package with two integrated capacitors:
 - 4.7 nF between Q and GND
 - 47 nF between V_S and GND: Needed for micro cuts in power supply

Type	Order Code	Marking	Package
TLE4927C E6547	SP000718266	27D8	PG-SSO-3-92
TLE4927CB E6547	SP000913548	927D00	PSG-SSO-3-11

2 Functional Description

2.1 General

The differential Hall sensor IC detects the motion and position of ferromagnetic and permanent magnet structures by measuring the differential flux density of the magnetic field. To detect ferromagnetic objects the magnetic field must be provided by a back biasing permanent magnet (south or north pole of the magnet attached to the rear unmarked side of the IC package).

Offset cancellation is achieved by advanced digital signal processing. Immediately after power-on, motion is detected (start-up mode). After a few transitions, the sensor has finished self-calibration and switches to a high accuracy mode (running mode). In running mode, switching occurs at the zero crossing points of the magnetic signal. This zero crossing is found by calculating the arithmetic mean of the maximum and minimum value of the magnetic differential signal (ΔB). ΔB is defined as the field difference between Hall plate 1 and Hall plate 2. See Figure 2-2.

2.2 Sensor assembly

Sensor and back bias magnet can be applied in the following ways:

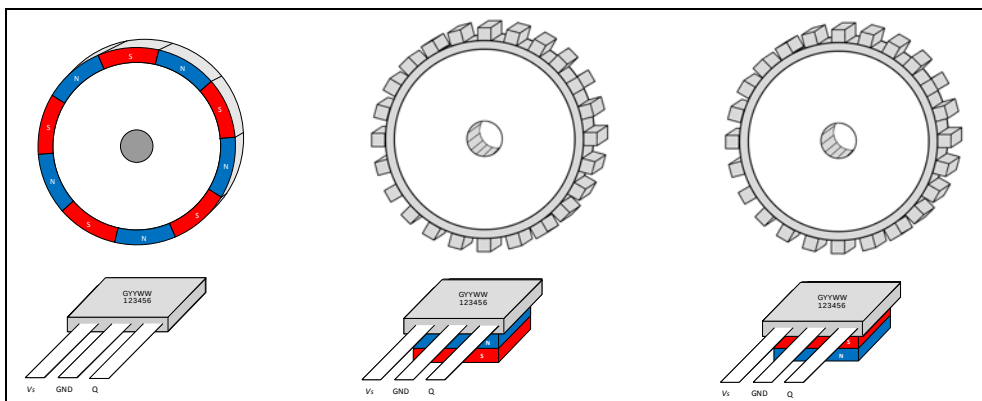


Figure 2-1 Sensor assembly

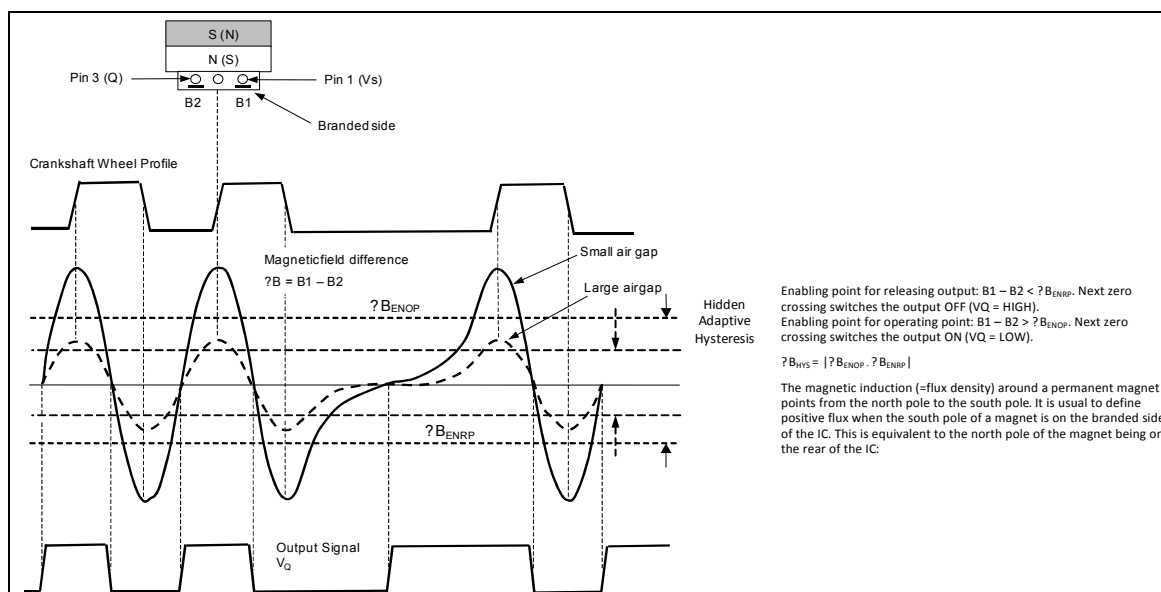


Figure 2-2 System operation with hidden adaptive hysteresis

3 Specification

3.1 Operating Range

Table 3-1 Operating Range

Parameter	Symbol	Values			Unit	Note / Test Condition
		Min.	Typ.	Max.		
Supply voltage	V_S	3.2		26	V	time limited with $R_{Series} \geq 200 \Omega$
Continuous output OFF voltage	V_Q	0		18	V	
Continuous output ON current	I_Q	0		20	mA	$V_{Qmax} = 0.6 V$
Operating junction temperature	T_J	-40		175	°C	time limited

3.2 Electrical Characteristics

Table 3-2 Electrical Characteristics

Parameter	Symbol	Values			Unit	Note / Test Condition
		Min.	Typ.	Max.		
Supply current	I_S		6.8		mA	–
Output saturation voltage	V_{Qsat}		0.25		V	$I_Q = 20 \text{ mA}$
Output rise time	t_r		12		μs	$V_{Load} = 4.5 \text{ to } 24 \text{ V}$ $R_{Load} = 1.2 \text{ k}\Omega$ $C_{Load} = 4.7 \text{ nF}$ included in package.
Output fall time	t_f		0.9		μs	$V_{Load} = 5 \text{ V}$ $R_{Load} = 1.2 \text{ k}\Omega$ $C_{Load} = 4.7 \text{ nF}$ included in package.
Delay time	t_d		12.5		μs	
Frequency range	f		–	8	kHz	

3.3 ESD Protection

Table 3-3 ESD Protection

Parameter	Symbol	Values			Unit	Note / Test Condition
		Min.	Typ.	Max.		
ESD Protection PG-SSO-3-92	V_{ESD}	–	–	± 6	kV	According to standard EIA/JESD22-A114-B Human Body Model (HBM 1500 Ω / 100 pF).

3.4 Magnetic Characteristics in Running Mode

Table 3-4 Magnetic Characteristics in Running Mode

Parameter	Symbol	Values			Unit	Note / Test Condition
		Min.	Typ.	Max.		
Minimum signal amplitude	$ \Delta B_{\min} $		0.75		mT	–

3.5 Operating Characteristics

Table 3-5 Operating Range - TLE4927CB E6547

Parameter	Symbol	Values			Unit	Remarks
		min	typ	max		
Operational airgap	AG	0.5			mm	Valid in running mode, measured from sensor housing (branded side) to target tooth. Valid at 25°C & 0h. No missing output pulses.
Phase jitter	ϕ jitter			0.035	°crank	Output falling edge 360° repeatability, 1000 rotations, 3 sigma value, min. input signal size 10 mT _{pp}

3.6 Reference Target Wheel - TLE4927CB E6547

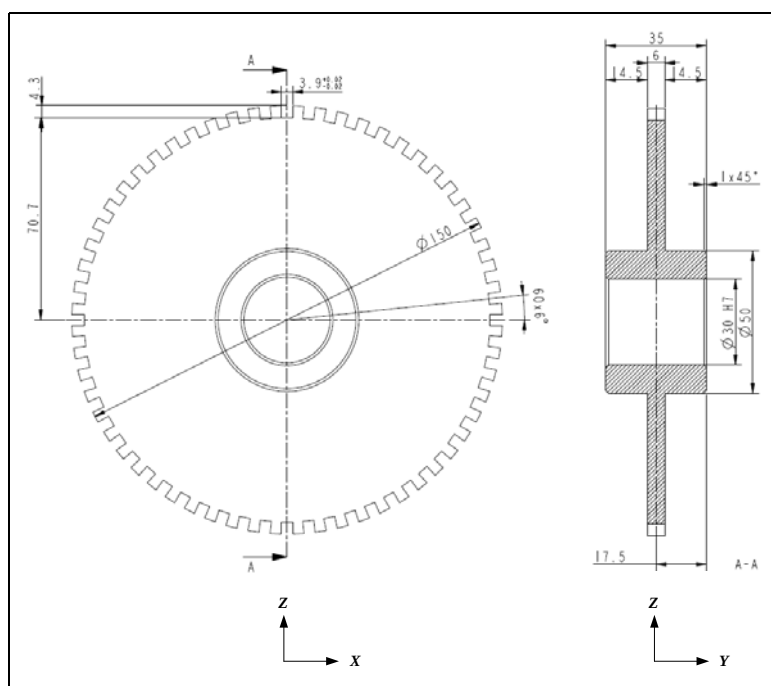


Figure 3-1 Reference target wheel

Table 3-6 Reference target wheel geometry

Parameter	Symbol	Typ value	Unit	Remarks
Outside diameter	d	150	mm	
Number of teeth	Z	60	-	
Pitch Ratio		50:50	%	
Material	ST37			

4 Package Information

4.1 Application Example

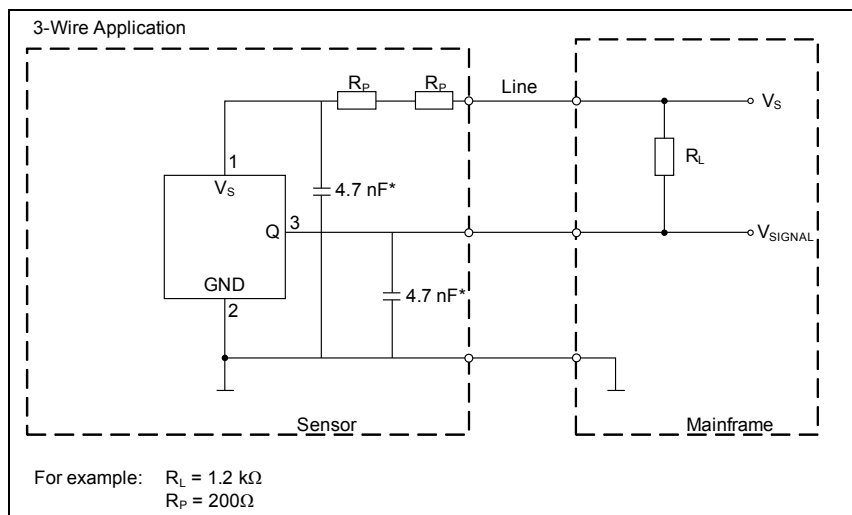


Figure 4-1 TLE4927C E6547 Application Circuits (*capacitors included in package)

4.2 Gear Tooth Sensing

In the case of ferromagnetic toothed wheel applications, the IC must be biased by the south or north pole of a permanent magnet which should cover both Hall probes (e.g. a SmCO5 magnet (Vacuumschmelze VX145) with dimensions 8 mm x 5 mm x 3 mm).

The maximum air gap depends on:

- The magnetic field strength (magnet used; pre-induction).
- The toothed wheel that is used (dimensions, material, etc.; resulting differential field).

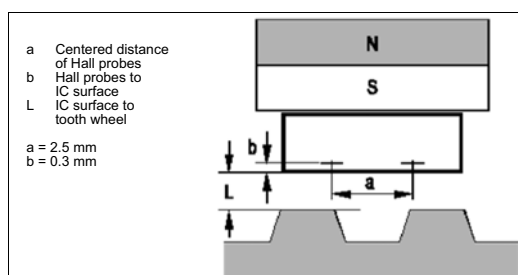


Figure 4-2 Sensor Spacing

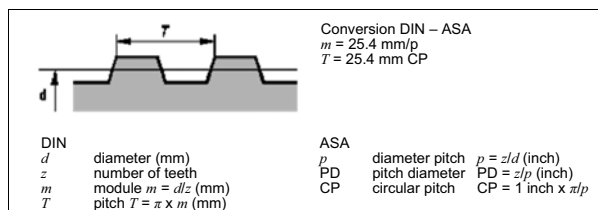


Figure 4-3 Toothed Wheel Dimensions

4.3 Package Information - TLE4927C E6547

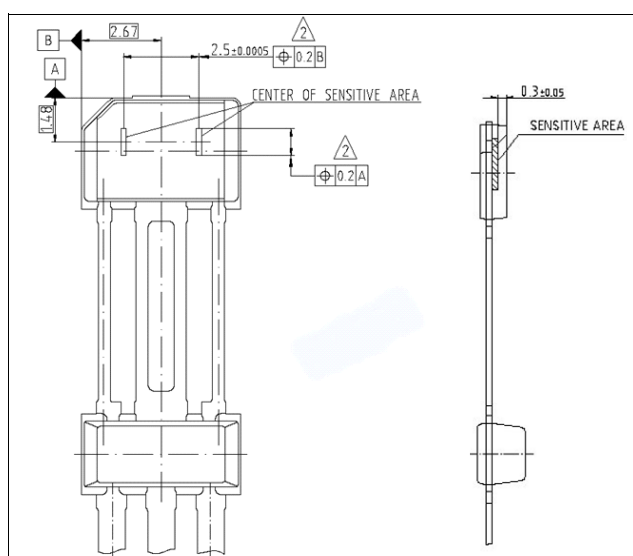


Figure 4-4 Hall Probe Spacing in PG-SSO-3-92 Package

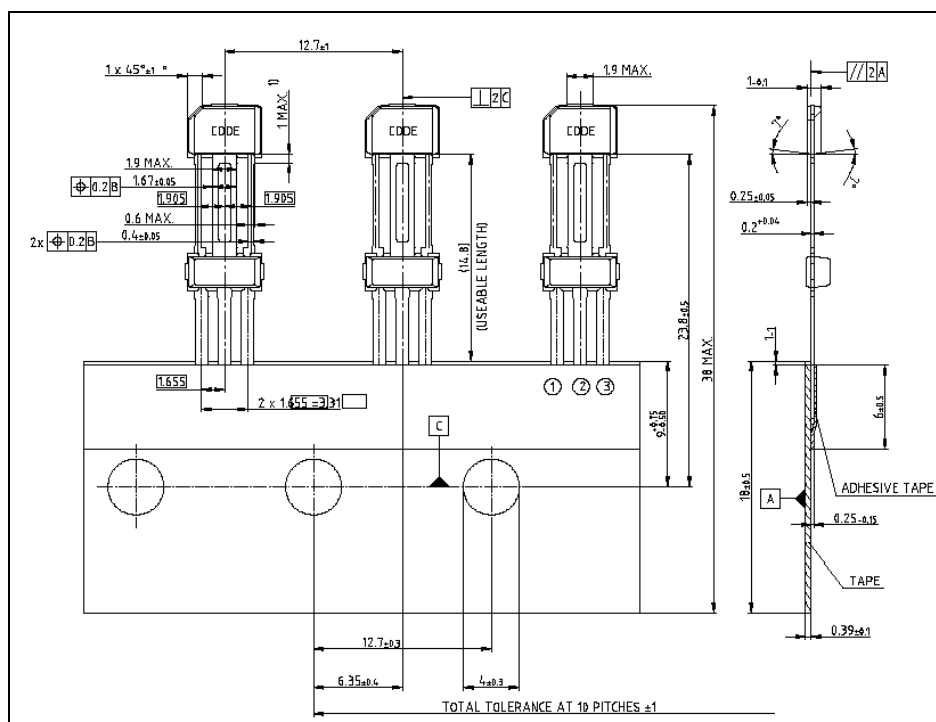


Figure 4-5 Tape Loading Orientation in PG-SSO-3-92 Package

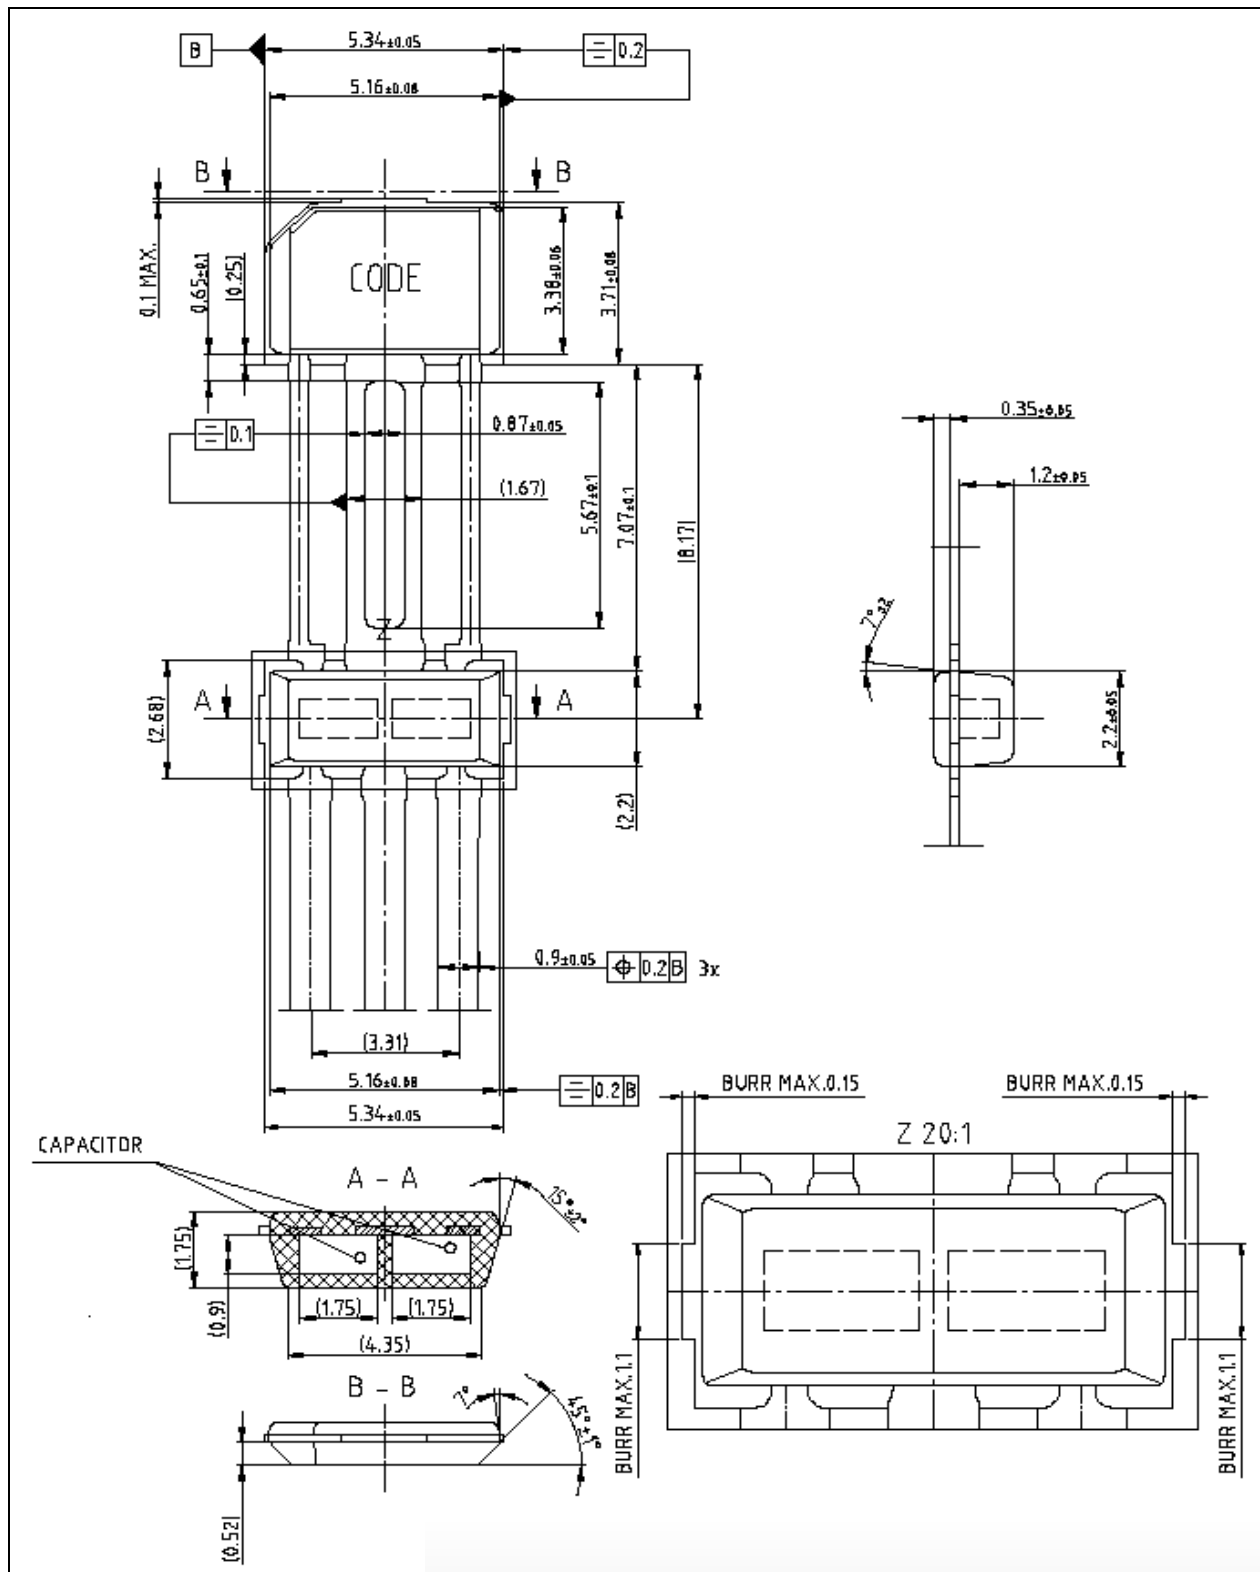


Figure 4-6 Package Dimensions of PG-SSO-3-92 (Plastic Green Single Small Outline)

4.4 Package Outline - TLE4927CB E6547

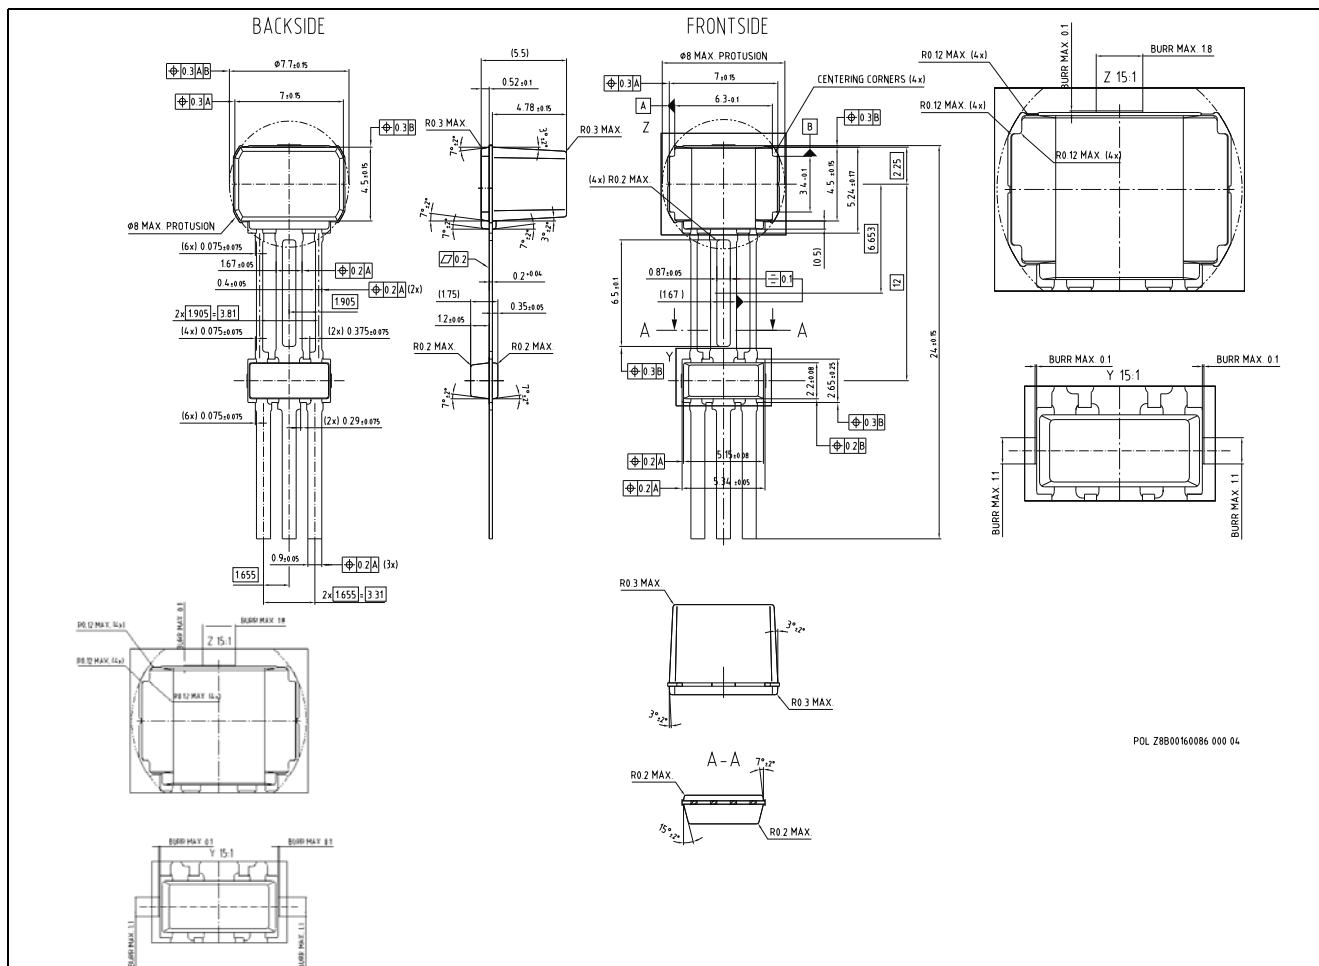


Figure 4-7 PG-SSOM-3-11 package outline

4.5 Back-bias field orientation

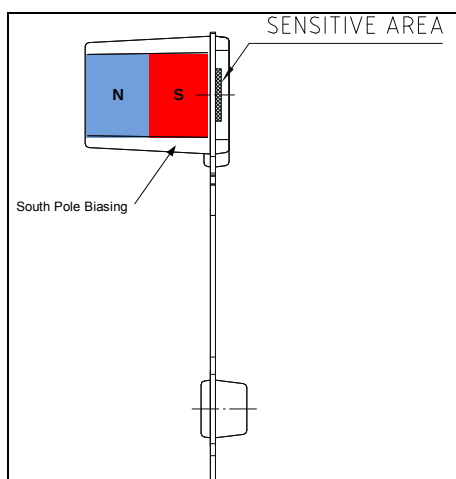


Figure 4-8 Back-bias field orientation

4.6 Packing Information

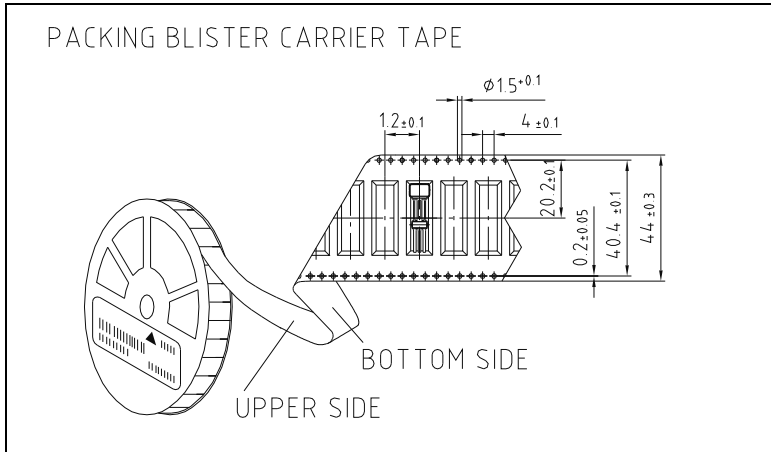


Figure 4-9 PG-SSOM-3-11 blister tape packing information

For additional packages information, sort of packing and others, please see Infineon internet web page: <http://www.infineon.com/products>

Edition 2013-10-03

Published by
Infineon Technologies AG
81726 Munich, Germany

© 2014 Infineon Technologies AG
All Rights Reserved.

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation, warranties of non-infringement of intellectual property rights of any third party.

Information

For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).

Warnings

Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office. Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.

www.infineon.com



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.