# OMRON

# **Compact Guard-locking Interlock Safety Door Switch**

D4DL

- Polymer housing, IP65, and slow-action contacts with positive opening ⊖.
- 2 versions
  - Mechanical lock/Solenoid release
  - Solenoid lock/Mechanical release
- Rotatable operating head provides four possible key entry slots.
- Incorporates an indicator that shows operation status at a glance.
- Double-insulation structure requires no grounding terminals. (with mu mark)
- Three types of Operation Key are available:
  - Horizontal mounting
  - Vertical mounting
  - Angle-adjustable vertical mounting
- Safety Standards

### Conformity:

Machinery Directive, Low-voltage Directive, EN1088, SUVA

### Approval:

Agency	Standard	File No.
TÜV Rheinland	EN60947-5-1	J9650736
BIA	EN60947-5-1, GS-ET-19	9610568
UL (see note)	UL508, CSA C22.2 No.14	E76675
SUVA	SUVA	Pending

Note: Approval for CSA C22.2 No. 14 is authorized by c<sup>(1)</sup> mark.

# Ordering Information

# Model Number Legend

Switches

D4DL-\_\_\_\_

- 1 2 3 4 5
- 1. Conduit Size (2-conduit)
  - 1: Pg13.5
  - 2: G<sup>1</sup>/<sub>2</sub>
- 2. Built-in Switch (with Safety Switch and Lock Monitor Switch Contacts)
  - C: 1NC/1NO slow-action contacts plus 1NC slow-action contact
  - D: 2NC slow-action contacts plus 1NC slow-action contact

### 3. Head Mounting Direction

F: Front



# 

### 4. Door Lock and Release

- A: Mechanical lock / 24-VDC solenoid release (see note)
- B: Mechanical lock / 110-VAC solenoid release
- C: Mechanical lock / 230-VAC solenoid release
- G: 24-VDC solenoid lock / mechanical release (see note)
- H: 110-VAC solenoid lock / mechanical release
- J: 230-VAC solenoid lock / mechanical release
- 5. Indicator
  - B: 10 to 115 VAC/VDC (with orange LED indicator)
  - E: 100 to 250 VAC (with orange neon lamp indicator)

# Operation Keys

### 1. Key Type

- 1: Horizontal mounting
- 2: Vertical mounting

1

- 3: Horizontal-adjustable vertical mounting
- 5: Vertical/Horizontal-adjustable vertical mounting

### Switches

Solenoid voltage/indicator	Lock and release types	Contact configuration (Slow-action) Approved force-separation NC contact	Connector size	Model
Solenoid: 24 VDC	Mechanical lock	1NC/1NO+1NC	PG13.5	D4DL-1CFA-B*
Orange LED: 10 to 115 VDC/VAC	Solenoid release		G1/2	D4DL-2CFA-B
		2NC+1NC	PG13.5	D4DL-1DFA-B*
			G1/2	D4DL-2DFA-B
	Solenoid lock	1NC/1NO+1NC	PG13.5	D4DL-1CFG-B*
	Mechanical release		G1/2	D4DL-2CFG-B
		2NC+1NC	PG13.5	D4DL-1DFG-B*
			G1/2	D4DL-2DFG-B
Solenoid: 110 VAC	Mechanical lock Solenoid release	1NC/1NO+1NC	PG13.5	D4DL-1CFB-B
Orange LED: 10 to 115 VDC/VAC			G1/2	D4DL-2CFB-B
		2NC+1NC	PG13.5	D4DL-1DFB-B
			G1/2	D4DL-2DFB-B
	Solenoid lock Mechanical release	1NC/1NO+1NC	PG13.5	D4DL-1CFH-B
			G1/2	D4DL-2CFH-B
		2NC+1NC	PG13.5	D4DL-1DFH-B
			G1/2	D4DL-2DFH-B
Solenoid: 230 VDC	Mechanical lock	1NC/1NO+1NC	PG13.5	D4DL-1CFC-E
Orange neon lamp: 100 to 250 VAC	Solenoid release		G1/2	D4DL-2CFC-E
		2NC+1NC	PG13.5	D4DL-1DFC-E
			G1/2	D4DL-2DFC-E
	Solenoid lock	1NC/1NO+1NC	PG13.5	D4DL-1CFJ-E
	Mechanical release		G1/2	D4DL-2CFJ-E
		2NC+1NC	PG13.5	D4DL-1DFJ-E
			G1/2	D4DL-2DFJ-E

Note: Models marked with "\*" are recommended

# Operation Keys (Order Separately)

Туре	Model
Horizontal mounting	D4DS-K1
Vertical mounting	D4DS-K2
Horizontal-adjustable vertical mounting	D4DS-K3
Vertical/Horizontal adjustable vertical mounting	D4DS-K5

# Specifications ——

### ■ Approved Standard Ratings TÜV (EN60947-5-1)

Item	LED type	Neon lamp type
Utilization category	AC-15	AC-15
Rated operating current (Ie)	6 A	3 A
Rated operating voltage (U <sub>e</sub> )	115 V	250 V

Note: Use a 10-A fuse type gI or gG as a short-circuit protection device that conforms to IEC269.

# UL/CSA (UL508, CSA C22.2 No. 14)

Rated voltage	Carry current	Current (A)		Voltage	
		Make	Break	Make	Break
120 VAC	10A	60	6	7,200	720
240 VAC		30	3		

### Characteristics

Degree of protect	ction (see note 2)	IP65 (EN60947-5-1)	
Life expectancy	(see note 3)	Mechanical:1,000,000 times min. Electrical: 500,000 times min.	
Operating speed		0.05 to 0.5 m/s	
Operating frequency		30 operations/minute max.	
Rated frequency	/	50/60 Hz	
Positive opening	g force (see note 4)	58.84 N {6 kgf} min. (EN60947-5-1)	
Positive opening	g travel (see note 4)	10 mm min. (EN60947-5-1)	
Holding force		500 N {51 kgf} min. (GS-ET-19)	
Insulation resist	tance	100 MΩ min. (at 500 VDC)	
Rated insulation	n voltage (U <sub>i</sub> )	300 V (EN60947-5-1)	
Conventional en (I <sub>the</sub> )	nclosed thermal current	10 A (EN60947-5-1)	
Rated impulse v	voltage (U <sub>imp</sub> )	Between terminals of same or different polarity, each terminal and ground, and each terminal and non-current-carrying metal part: 4 kV	
		Between the solenoid and non-current-carrying metal part: 0.8 kV for 24 VDC solenoid, 2.5 kV for 110 VAC solenoid, and 4 kV for 230 VAC solenoid (EN60947-5-1)	
Conditional sho	rt-circuit current	100 A (EN60947-5-1)	
Pollution degree	e (operating environment)	3 (EN60947-5-1)	
Protection again	nst electric shock	Class II (double insulation)	
Switching overv	voltage	1,500 V max. (EN60947-5-1)	
Contact resistan	nce	25 m $\Omega$ max. (initial value)	
Vibration resista	ance	Malfunction:10 to 55 Hz, 0.75-mm single amplitude	
Shock resistance		Mechanical:1,000 m/s <sup>2</sup> (100G) min. Malfunction:300 m/s <sup>2</sup> (30G) min.	
Ambient temper	ature	Operating: –10°C to 55°C with no icing	
Ambient humidi	ty	Operating: 95% max.	
Weight		Approx. 340 g (D4DL-1CFA-B)	
Material B	ody and actuator flange	Glass-fiber reinforced thermoplast, self-extinguishing	
A	ctuator	Stainless steel	

Note: 1. The above values are initial values.

2. Although the switch box is protected from dust or water penetration, do not use the D4DL in places where foreign material may penetrate through the key hole on the head, otherwise switch damage or malfunctioning may occur.

3. The above mechanical or electrical life is ensured at an ambient temperature of 5°C to 35°C and an ambient humidity of 40% to 70%.

4. These values must be satisfied to ensure safe operation.

.


### **Solenoid Characteristics**

Item	24 VDC	110 VAC	230 VAC
Rated operating voltage	24 VDC <sup>+10%</sup> / <sub>-15%</sub> (100% ED)	110 VAC ±10% (100% ED)	230 VAC ±10% (100% ED)
Current consumption	Approx. 200 mA	Approx. 50 mA	Approx. 30 mA
Insulation	Class F (130°C max.)	Class F (130°C max.)	Class F (130°C max.)

### Indicator


Item	LED	Neon lamp
Rated voltage	10 to 115 VAC/VDC	100 to 250 VAC
Current leakage	Approx. 1 mA	Approx. 1.9 mA
Color	Orange	Orange

# Nomenclature

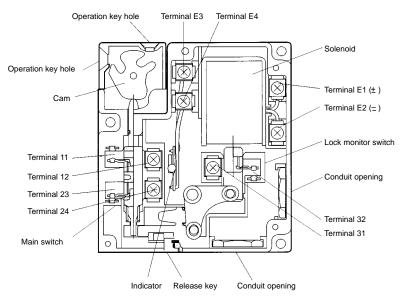

# Operation -



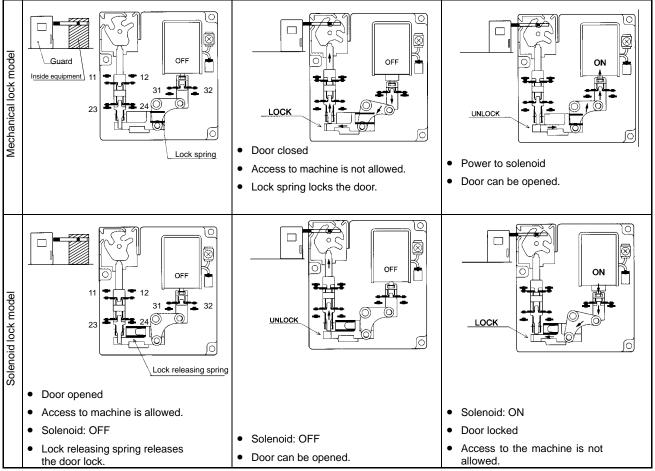


### Contacts


Indicates conditions where the Key is inserted and the lock is applied. Connect the terminals 12 to 31 to conform to BIA GS-ET-19.

Model	Contact	Contact form	Diagram	Remarks
D4DLC	1NC/1NO + 1NC	<u>11</u> <u>12</u> <u>31</u> <u>32</u> 23 <u>24</u>	Lock position 11-32 23-24 Travel ON Key fully inserted.	Only terminals 11, 12, 31, and 32 have an positive opening mechanism. The terminals 11/12 and 23/24 can be used as opposing poles.
D4DLD	2NC + 1NC	<u>11 + 12 31 + 32</u> 21 + 22	Lock position 11-32 21-22 Key fully inserted. Lock position ON ON Key fully extracted.	Terminals 11, 12, 21, 22, 31, and 32 have a positive opening mechanism. The terminals 11/12 and 21/22 can be used as opposing poles.

### ■ Indicator Internal Circuit Diagram LED Type (10 to 115 VAC/DC)




### Neon Lamp Type (100 to 250 VAC)



### **Circuit Connection Example**


Circuit is to be connected by user.

- Connect terminals 12 to 31. (To conform to BIA GS-ET-19.)
- Do not connect the indicator in parallel to the contacts. Doing so may allow short-circuit current to flow while the indicator is damaged, causing equipment malfunction.
- The 24-VDC solenoid has polarity. Be sure not to make wiring mistakes.
- In the following connection example, the indicator will be lit when the door is open. (D4DL-1CFA-B)

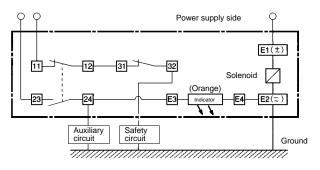


### ■ Connection Example with OMRON G9S Safety Relay Unit

G9S-321-T
(24 VDC)+D4DLCFA-/CFB-/-CFC(Mechanical Lock Type)+D4D520N

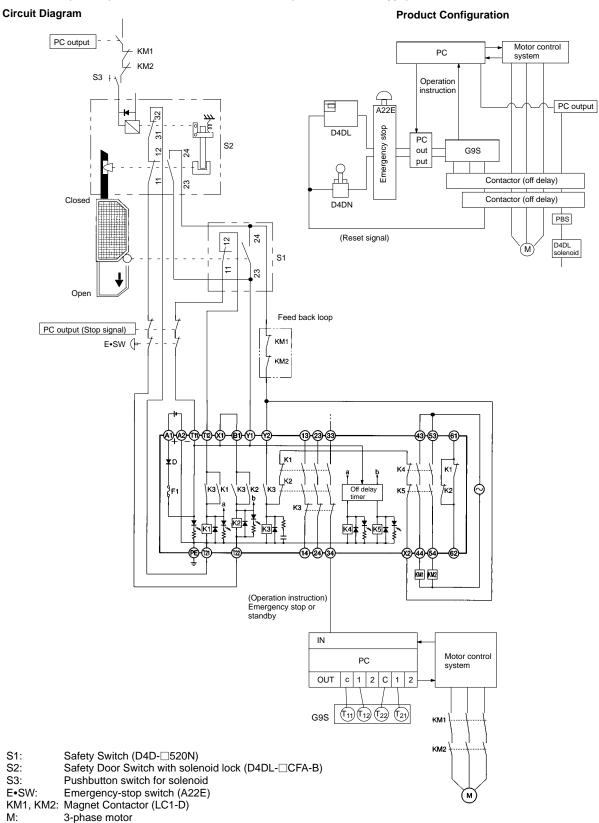

#### G9S-301 (24 VDC)+D4DL- CFG- ---- CFH- ---- CFJ- (Solenoid Lock Type)+D4D- 520 N Circuit Diagram **Product Configuration**

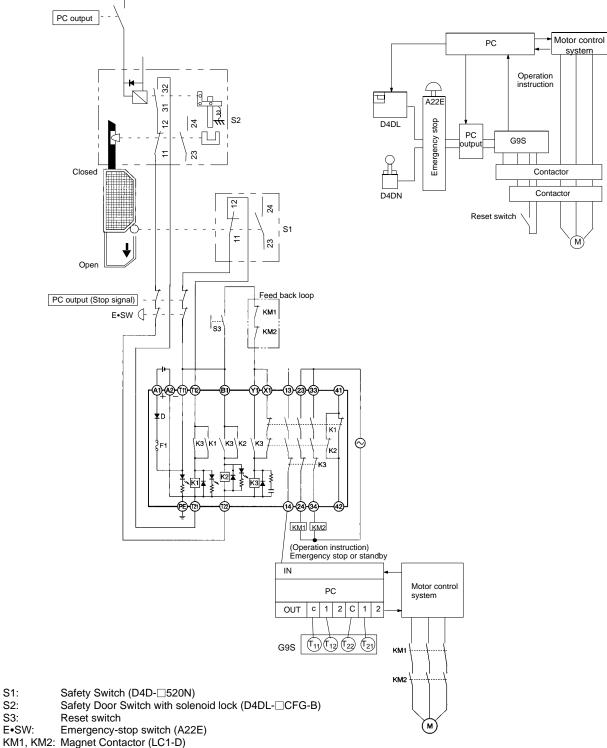

M: 3-phase motor

S1: S2:


S3:

8

# Dimensions


Note: All units are in millimeters unless otherwise indicated.

### Switch

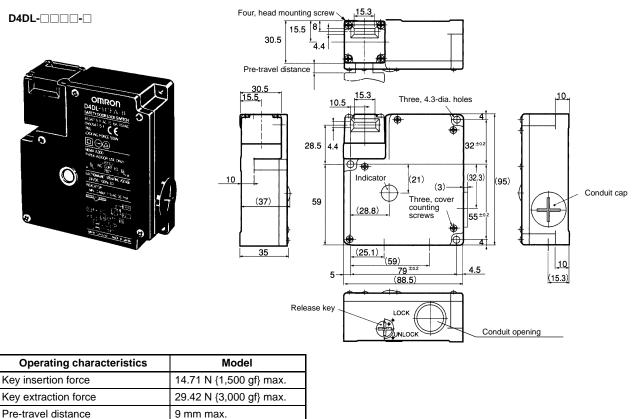


### **Operation Key**

Movement before being locked

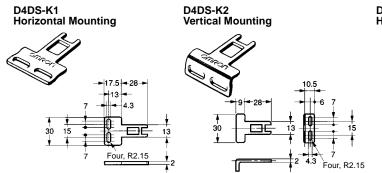


3 mm min.


D4DS-K3 Horizontal-adjustable Vertical Mounting

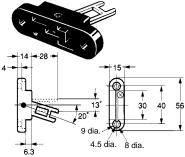

Note: Each dimension has a tolerance of  $\pm 0.4$  mm unless otherwise specified. D4DS-K5

Horizontal/Vertical-adjustable Vertical Mounting

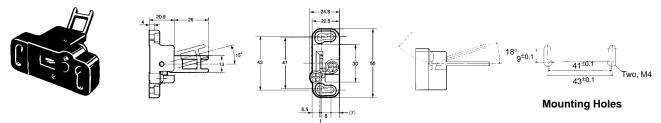

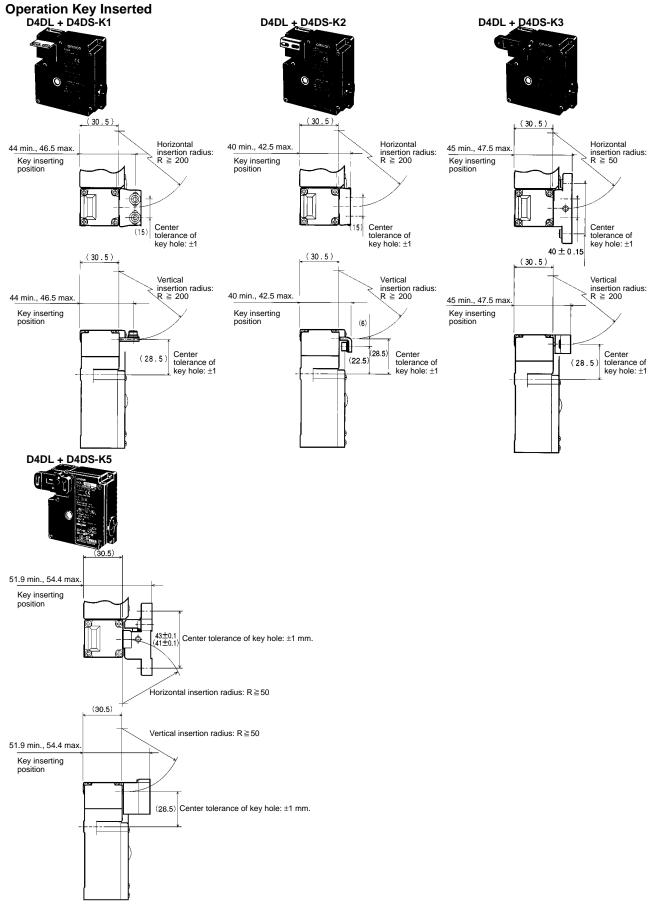

Note: Each dimension has a tolerance of  $\pm 0.4$  mm unless otherwise specified.

# **Precautions**

### WARNING

Do not dismount the operation key from the door intentionally and insert it to the switch with the door open. Machine may start operating and injury or death may be caused.

## CAUTION

/!`

Do not disassemble or touch inside under power-on. Electric shock hazard may be caused.

Do not use metal connectors or conduits with this switch. Rigid connectors and conduits may damage the switch. The broken conduit hole may cause an electrical shock hazard.

Install the operation key so that it will not hit the operator when the door is open.

After-changing the release key to the UNLOCK position or inserting the operation key, change the head direction. Otherwise, the switch may malfunction and injuries may occur due to mis-operation of the device.

### NOTICE

If the D4DL is applied to an emergency stop circuit or safety circuit for prevention of injury, use the NC contact, which incorporates a positive opening mechanism, and make sure that the D4DL operates in positive mode. Furthermore, secure the D4DL with screws or equivalent parts that are tightened in a single direction so that the D4DL or operation key cannot be easily removed or provide a protection cover to the D4DL and post a warning label near the D4DL

To protect the D4DL from damage due to short-circuits, connect the D4DL in parallel to a fuse that has a breaking current 1.5 to 2 times the rated current of the D4DL. If the D4DL is used under EN-approved rating conditions, use a 10 A fuse, type gl or gG conforming to IEC 269.

Do not supply power to the D4DL while wiring the D4DL.

In order to prevent the D4DL from burning due to overvoltage, insertion of a protection fuse into the solenoid circuits is recommended.

Do not use the D4DL in locations subject to explosive or flammable dases.

Make sure that the load current does not exceed the rated current and that the load terminals are wired correctly.

Pay utmost attention to correctly wire each terminal.

After mounting and adjusting the D4DL, make sure that the D4DL operates properly.

If the D4DL is imposed with force exceeding the lock strength, the D4DL may break and the equipment may continue operating.

Do not drop or disassemble the D4DL.


### **Release Kev**

The release key is used to unlock the D4DL in case of emergency or if the power supply to the D4DL fails.

Use an appropriate tool to set the release key to UNLOCK so that the lock will be released and the door can be opened.

The release key is set at the UNLOCK position. Set the release key to the LOCK position before use.

### Mechanical Lock Type




The release key applied to the door of a machine room ensures the safety of people adjusting the equipment in the machine room. If the release key is set to UNLOCK, the door will not be locked when the door is closed and no power will be supplied to the equipment.

Do not use the release key to start or stop machines

To prevent the release key from being used carelessly by unautho-rized people, set the release key of the D4DL in normal operation to UNLOCK and seal the release key with seal wax.

#### Mounting

Be sure to mount the D4DL with a stopper as shown in the following illustration. Do not use the D4DL Switch as a stopper.

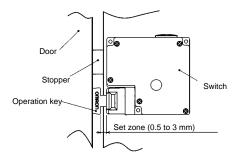

#### Solenoid Lock Type

The solenoid lock locks the door only when power is supplied to the solenoid. Therefore, the door will be unlocked if the power supply to the solenoid fails. Therefore, do not use the solenoid lock type for machines that may be operating and dangerous even after the machine stops operating because of inertia.

#### Life Expectancy

The life of the D4DL will vary with the switching conditions. Before applying the D4DL, test the D4DL under actual operating conditions and be sure to use the D4DL in actual operation within switching times that will not lower the performance of the D4DL.

### **Operating Environment**

The D4DL is for indoor use only. Do not use the D4DL outdoors. Otherwise, the D4DL may malfunction.

Do not use the D4DL in the following locations:

Locations with severe changes in temperature

Locations with excessive humidity that may cause condensation Locations with excessive vibration


Locations where metal dust, oil, or chemical may be sprayed onto the D4DL

### **Operation Key**

Be sure to use the dedicated Operation Key only.

Do not operate the D4DL with anything other than the dedicated Operation Key. Otherwise, the safety of the system may not be maintained.

Do not impose excessive force on the Operation Key inserted into the D4DL or drop the D4DL with the Operation Key inserted. Otherwise, the Operation Key may be deformed or broken.

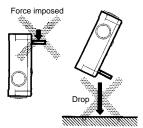


Secure the Operation Key with a one-way screw, or an equivalent, so that the Operation Key cannot be easily removed.

### Locking the Door

The D4DL may eventually break if the door opens accidentally due to the weight of the door, the vibration of the machine, or the bouncing of the door against the rubber bumper.


Furthermore, the door may not unlocked if force is imposed on the operation key.

Do not use the casing of the D4DL as a locking mechanism for the door in such cases and be sure to prepare a special lock within the lock range of the D4DL (i.e., 0.5 to 3 mm).

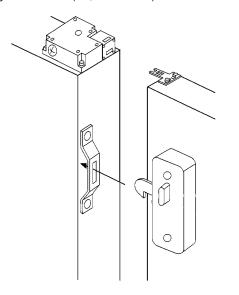


### Mounting

Refer to page 10 for the mounting dimensions of the Operation Key. Be sure that the Operation Key can be inserted properly with a tolerance of  $\pm 1$  mm in the upward, downward, left, or right direction, otherwise the D4DL may be damaged.





Be sure to tighten each screw of the D4DL properly, otherwise the D4DL may malfunction.

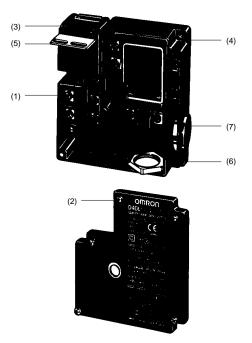

	Туре	Proper tightening torque
(1)	Terminal screw	0.59 to 0.78 N • m {6 to 8 kgf • cm/0.43 to 0.58 ft • lbf}
(2)	Cover mounting screw	0.78 to 0.88 N • m {8 to 9 kgf • cm/0.58 to 0.65 ft • lbf}
(3)	Head mounting screw	0.78 to 0.88 N • m {8 to 9 kgf • cm/0.58 to 0.65 ft • lbf}
(4)	Body mounting screw (M4) (see note)	0.49 to 0.69 N • m {5 to 7 kgf • cm/0.36 to 0.51 ft • lbf}
(5)	Operation Key mounting screw	2.35 to 2.75 N • m {24 to 28 kgf • cm/1.73 to 2.03 ft • lbf}
(6)	Connector at conduit opening	1.77 to 2.16 N • m {18 to 22 kgf • cm/1.30 to 1.59 ft • lbf}
(7)	Cap screw	1.27 to 1.67 N • m {13 to 17 kgf • cm/0.94 to 1.23 ft • lbf}


**Note:** Tighten each screw together with a washer to the specified torque.

#### Mounting

Be sure the that D4DL operates properly after mounting and adjusting the D4DL.

Use M4 screws (one-way screws, etc.) and washers to mount the D4DL and Operation Key securely.

#### **Switch Mounting Holes**

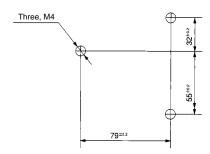

#### **Operation Key Mounting Holes**


 Horizontal/Vertical Mounting D4DSK1/D4DS-K2



 Horizontal-adjustable Vertical Mounting D4DS-K3



 Horizontal/Vertical-adjustable Vertical Mounting D4DS-K5




### **Head Direction**


By removing the four screws of the head, the mounting direction of the head can be changed. The head can be mounted in four directions.

### Wiring

Do not connect lead wires directly to the terminals. Be sure to connect the lead wires through insulation tubes and crimp terminals. The lead wires must be an AWB20 to AWG18 type (i.e., 0.5 to 10  $\text{mm}^2$  thick).



Wire the crimp terminal as shown in the following diagram so that it will not come in contact with the case or cover.



#### Conduit Opening

Connect a recommended connector (see following table) to the opening of the conduit and tighten the connector to the proper torque. The casing may be damaged if an excessive tightening torque is applied.

Be sure that the diameter of the cable connected to the connector is correct.

Attach and tighten a conduit cap to the unused conduit opening when wiring the D4DL. The conduit cap is provided with the D4DL.

#### **Recommended Connectors**

Size	Manufacturer	Model	Proper cable diameter
G <sup>1</sup> / <sub>2</sub>	OMRON	SC-6	7.5 to 9.0 mm
	LAPP	ST-PF1/2 5380-1002	6.0 to 12.0 mm
	Ohm Denki	OA-W1609	7.0 to 9.0 mm
Pg13.5	LAPP	ST13.5 5301-5030	5.0 to 12.0 mm
	HEYCO	3216	4.3 to 11.9 mm

Note: LAPP is a German manufacturer.

### **Maintenance and Repairs**

Please note in the machine manufacturer's instruction manual that the user must not repair or maintain the switch and must contact the machine manufacturer for any repairs or maintenance.

### Others

The solenoid radiates heat when power is supplied to the solenoid. Do not touch the solenoid while the power is supplied.

Use the D4BL under conditions requiring greater rigidity, sealing performance, and oil resistance.

Ohm Denki is a Japanese manufacturer. HEYCO is an American manufacturer.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

### Cat. No. C107-E1-2 In the interest of product improvement, specifications are subject to change without notice.

# **OMRON** Corporation

Industrial Control Components Division 28th Fl., Crystal Tower Bldg., 1-2-27, Shiromi, Chuo-ku, Osaka 540-6028 Japan Phone: (81)6-949-6025 Fax: (81)6-949-6029

Printed in Japan 1198-1M (0497) (A)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный) **Факс:** 8 (812) 320-02-42 **Электронная почта:** <u>org@eplast1.ru</u> **Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.