

# A01 series

## Keylock & selector switches

Distinctive features and specifications

A018\_AX1607US



- ❑ Panel Sealed to IP65
- ❑ Single pole to four pole changeover
- ❑ Custom engraving & overmould key
- ❑ Push on tab terminals
- ❑ 6A 250VAC

### ELECTRICAL SPECIFICATIONS

- **Current/Voltage Rating** : 10mA 5VAC min, 6A 250VAC, 6A 12VDC
- **Initial Contact Resistance** : 10mΩ max at 1Amp 4VDC
- **Insulation Resistance** : 50MΩ min
- **Dielectric Strength** : 750V between open contacts, 5KV live to accessible
- **Electrical Life** : 50,000 cycles min
- **Contact Gap** : >1mm (0.039)
- **Insulation** : Class 2

### MECHANICAL SPECIFICATIONS

- **Mechanical Life (operator)** : Momentary, 1 million cycles, maintained 100,000 cycles
- **Lamp** : Midget grove T1 ¾ filament, neon or LED
- **Terminals** : Solder/quick connect 2.8mm (0.110)

### GENERAL SPECIFICATIONS

- **Operating Temperature** : -20°C to +55°C
- **Solder Heat Resistance** : 350°C for 5 seconds
- **Sealing** : Panel sealed to IP65, rear of panel IP40

### AGENCY APPROVALS




### MATERIALS


- **Key** : Nickel plated steel
- **Key Barrel** : Chrome plated alloy
- **Operator** : PBT
- **Nut** : ABS
- **Camtrack Momentary** : PPE
- **Camtrack Maintained** : PPSU
- **Switch Block 1 & 2 pole** : PBT
- **Switch Block 3 & 4 pole** : PEI
- **Contacts** : Gold plated silver

### PANEL CUT OUT

Round & Square bezel operators only

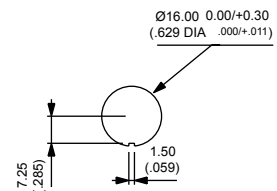

Rectangular bezel operators only

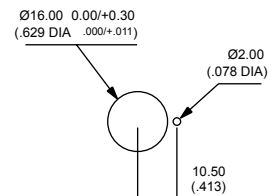

Max panel thickness 8mm (0.314)



Dimensions : first dimensions are in mm while inches are shown in brackets. Refer to the following pages for further information.



Mounting accessories : standard hardware 1 nut and 1 sealing washer.

# A01 series

## Keylock & selector switches

Panel cut-out  $\varnothing 16$  (0.755)

### Keylock



### Selector



# A01 series Keylock & selector switches

Overview

## Keylock

Operator				+		Switch block		Key position											
Pole	Bezel	Description	Part No.	Key removable	No of poles	Part No													
1 or 2		2 pos. maintained	A018101	A-C	Single pole	A0151B	<p>Clockwise Rotation      A      Anticlockwise Rotation</p> <p><b>Key Rotation – 2 position switches</b> The model numbers shown are for switches with anticlockwise key rotation. For clockwise rotation, replace:</p> <table> <tr><td>01</td><td>with</td><td>25</td></tr> <tr><td>02</td><td>with</td><td>24</td></tr> <tr><td>03</td><td>with</td><td>27</td></tr> <tr><td>04</td><td>with</td><td>28</td></tr> </table> <p>at the end of the model number</p>	01	with	25	02	with	24	03	with	27	04	with	28
01	with	25																	
02	with	24																	
03	with	27																	
04	with	28																	
1 or 2		2 pos. momentary	A018102	A	Double pole	A0152B													
3 or 4		2 pos. maintained	A018103	A-C	Three pole	A0155B													
3 or 4		2 pos. momentary	A018104	A	Four pole	A0153B													
1 or 2		3 pos. maintained	A018105	A-B-C															
1 or 2		3 pos. momentary	A018106	A															
1 or 2		3 pos. mainL, momR	A018107	A-B															
1 or 2		3 pos. momL, mainR	A018108	A-C															
1 or 2		2 pos. maintained	A018201	A-C															
1 or 2		2 pos. momentary	A018202	A															
3 or 4		2 pos. maintained	A018203	A-C															
3 or 4		2 pos. momentary	A018204	A															
1 or 2		3 pos. maintained	A018205	A-B-C															
1 or 2		3 pos. momentary	A018206	A															
1 or 2		3 pos. mainL, momR	A018207	A-B															
1 or 2		3 pos. momL, mainR	A018208	A-C															
1 or 2		2 pos. maintained	A018301	A-C															
1 or 2		2 pos. momentary	A018302	A															
3 or 4		2 pos. maintained	A018303	A-C															
3 or 4		2 pos. momentary	A018304	A															
1 or 2		3 pos. maintained	A018305	A-B-C															
1 or 2		3 pos. momentary	A018306	A															
1 or 2		3 pos. mainL, momR	A018307	A-B															
1 or 2		3 pos. momL, mainR	A018308	A-C															

Bezel: rectangular   square   round.   'pos' - position,   'mainL' - maintained left   'momR' - momentary right, etc

## Selector

Operator				+		Switch block		Lever position											
Pole	Bezel	Description	Short lever	Long lever	No of poles	Part No													
1 or 2		2 pos. maintained	A019201	A019101	Single pole	A0151B	<p>Clockwise Rotation      1      Anticlockwise Rotation</p> <p><b>Lever Rotation – 2 position switches</b> The model numbers shown are for switches with anticlockwise lever rotation. For clockwise rotation, replace:</p> <table> <tr><td>01</td><td>with</td><td>09</td></tr> <tr><td>02</td><td>with</td><td>10</td></tr> <tr><td>03</td><td>with</td><td>11</td></tr> <tr><td>04</td><td>with</td><td>12</td></tr> </table> <p>at the end of the model number Optional engraving on lever end add "WL" to the end of the part number.</p>	01	with	09	02	with	10	03	with	11	04	with	12
01	with	09																	
02	with	10																	
03	with	11																	
04	with	12																	
1 or 2		2 pos. momentary	A019202	A019102	Double pole	A0152B													
3 or 4		2 pos. maintained	A019203	A019103	Three pole	A0155B													
3 or 4		2 pos. momentary	A019204	A019104	Four pole	A0153B													
1 or 2		3 pos. maintained	A019205	A019105															
1 or 2		3 pos. momentary	A019206	A019106															
1 or 2		3 pos. mainL, momR	A019207	A019107															
1 or 2		3 pos. momL, mainR	A019208	A019108															
1 or 2		2 pos. maintained	A019401	A019301															
1 or 2		2 pos. momentary	A019402	A019302															
3 or 4		2 pos. maintained	A019403	A019303															
3 or 4		2 pos. momentary	A019404	A019304															
1 or 2		3 pos. maintained	A019405	A019305															
1 or 2		3 pos. momentary	A019406	A019306															
1 or 2		3 pos. mainL, momR	A019407	A019307															
1 or 2		3 pos. momL, mainR	A019408	A019308															
1 or 2		2 pos. maintained	A019601	A019501															
1 or 2		2 pos. momentary	A019602	A019502															
3 or 4		2 pos. maintained	A019603	A019503															
3 or 4		2 pos. momentary	A019604	A019504															
1 or 2		3 pos. maintained	A019605	A019505															
1 or 2		3 pos. momentary	A019606	A019506															
1 or 2		3 pos. mainL, momR	A019607	A019507															
1 or 2		3 pos. momL, mainR	A019608	A019508															

Bezel: rectangular   square   round.   'pos' - position,   'mainL' - maintained left   'momR' - momentary right, etc



Unsealed switches & indicators (IP40) suffix 01 to the end of the part number.  
Screen engraving insertable legends, & bi-color LED's please contact APEM


# A01 series

## Keylock & selector switches

Accessories

### Flush mount bezels

Dark grey plastic material – supplied with sealing washer

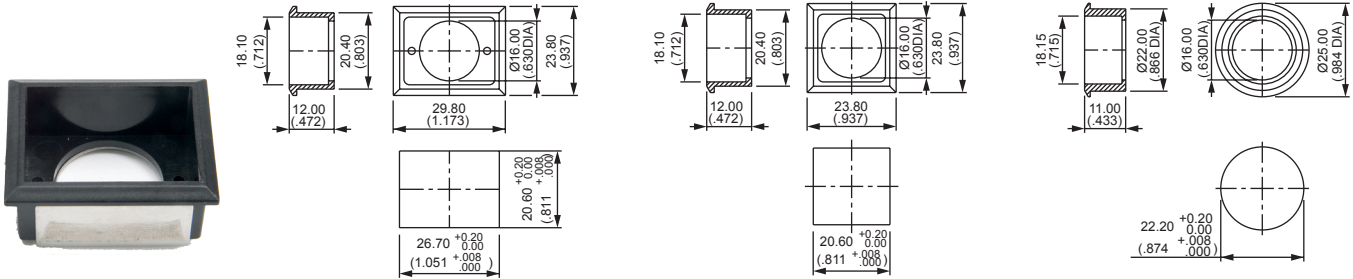

Rectangular : A01FM1

Square : A01FM

Round : A01FM2

Anodised aluminium/matt black



Round natural anodised : A01FMM

Round matt black : A01FMMG

### PCB Sockets

Number of Poles

Part No.

Single pole, non illuminated :	A01PC1
Double pole, non illuminated :	A01PC2
Single pole, illuminated :	A01PC3
Double pole, illuminated :	A01PC4
Indicator :	A01PC5



Dimensions : first dimensions are in mm while inches are shown in brackets.  
Refer to the following pages for further information.

# A01 series

## Keylock & selector switches

### Accessories

#### Flap guards



#### Alluminium bezel protection guards



#### Anti rotation ring



#### Blanking plugs



# A01 series

## Keylock & selector switches

Installation & tools

### Installation guide

**SWITCH BLOCK ASSEMBLY**

To assemble switch block to the operator, firstly, take care to line up the switch block with the back of the operator. Once in position slide on to the back of the operator. N.B. Ensure latch is fully engaged correctly onto the switch block. To remove switch block, depress the latch and slide the switch block off the operator.

**PANEL MOUNTING ASSEMBLY**

- Drill/punch hole shaped as shown on page one.
- Assemble front operator through hole, fit fixing nut and tighten to a maximum torque of 0.8Nm using tool No. 30-0001.
- Wire chosen switch block as required and slide onto operator until latch engages.
- Fit bulb if required using tool No. 30-0002.
- Snap screen onto reflector assembly with legend in between if required and snap onto front operator, take care to line up the locating slot with the polarising dot and not to damage the internal seal
- To place/remove the bulb use the bulb extractor 30-0002.

### Tools

<p>Nut fixing key</p> <p>30-0001</p>	<p>Bulb remover</p> <p>30-0002</p>
--------------------------------------	------------------------------------



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.