

## 8GB DDR3 SDRAM SODIMM with SPD

### Ordering Information

| Part Number    | Bandwidth  | Speed Grade | Max Frequency | CAS Latency | Density | Organization | Component Composition | Number of Rank |
|----------------|------------|-------------|---------------|-------------|---------|--------------|-----------------------|----------------|
| 78.C2GCM.AT30C | 10.6GB/sec | 1333Mbps    | 666MHz        | CL9         | 8GB     | 1024Mx64     | 512Mx8*16EA           | 2              |


### Specifications

- On Dimm Thermal Sensor: No
- Density: 8GB
- Organization
  - 1024M words × 64 bits, 2 ranks
- Mounting 16 pieces of 4G bits DDR3 SDRAM sealed in FBGA
- Package: 204-pin socket type small outline dual in line memory module (SO-DIMM)
  - PCB height: 30.0mm
  - Lead pitch: 0.6mm (pin)
  - Lead-free (RoHS compliant)
- Power supply: VDD = 1.5V ± 0.075V
- Eight internal banks for concurrent operation (components)
- Interface: SSTL\_15
- Burst lengths (BL): 8 and 4 with Burst Chop (BC)
- /CAS Latency (CL): 6, 7, 8, 9
- /CAS write latency (CWL): 5, 6, 7
- Precharge: auto precharge option for each burst access
- Refresh: auto-refresh, self-refresh
- Refresh cycles
  - Average refresh period
    - 7.8μs at 0°C ≤ TC ≤ +85°C
    - 3.9μs at +85°C < TC ≤ +95°C
- Operating case temperature range
  - TC = 0°C to +95°C

### Features

- Double-data-rate architecture; two data transfers per clock cycle
- The high-speed data transfer is realized by the 8 bits prefetch pipelined architecture
- Bi-directional differential data strobe (DQS and /DQS) is transmitted/received with data for capturing data at the receiver
- DQS is edge-aligned with data for READs; center-aligned with data for WRITEs
- Differential clock inputs (CK and /CK)
- DLL aligns DQ and DQS transitions with CK transitions
- Commands entered on each positive CK edge; data and data mask referenced to both edges of DQS
- Data mask (DM) for write data
- Posted /CAS by programmable additive latency for better command and data bus efficiency
- On-Die-Termination (ODT) for better signal quality
  - Synchronous ODT
  - Dynamic ODT
  - Asynchronous ODT
- Multi Purpose Register (MPR) for temperature read out
- ZQ calibration for DQ drive and ODT
- Programmable Partial Array Self-Refresh (PASR)
- /RESET pin for Power-up sequence and reset function
- SRT range:
  - Normal/extended
  - Auto/manual self-refresh
- Programmable Output driver impedance control

## Pin Configurations

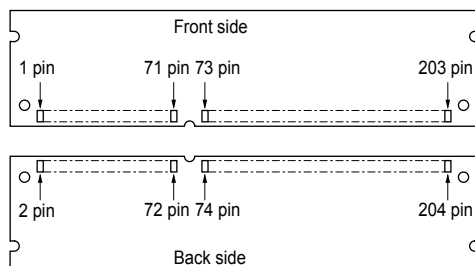

| Front side |          |         | Back side |         |          |         |          |
|------------|----------|---------|-----------|---------|----------|---------|----------|
| Pin No.    | Pin name | Pin No. | Pin name  | Pin No. | Pin name | Pin No. | Pin name |
| 1          | VREFDQ   | 103     | /CK0      | 2       | VSS      | 104     | /CK1     |
| 3          | VSS      | 105     | VDD       | 4       | DQ4      | 106     | VDD      |
| 5          | DQ0      | 107     | A10 (AP)  | 6       | DQ5      | 108     | BA1      |
| 7          | DQ1      | 109     | BA0       | 8       | VSS      | 110     | /RAS     |
| 9          | VSS      | 111     | VDD       | 10      | /DQS0    | 112     | VDD      |
| 11         | DM0      | 113     | /WE       | 12      | DQS0     | 114     | /CS0     |
| 13         | VSS      | 115     | /CAS      | 14      | VSS      | 116     | ODT0     |
| 15         | DQ2      | 117     | VDD       | 16      | DQ6      | 118     | VDD      |
| 17         | DQ3      | 119     | A13       | 18      | DQ7      | 120     | ODT1     |
| 19         | VSS      | 121     | /CS1      | 20      | VSS      | 122     | NC       |
| 21         | DQ8      | 123     | VDD       | 22      | DQ12     | 124     | VDD      |
| 23         | DQ9      | 125     | NC        | 24      | DQ13     | 126     | VREFCA   |
| 25         | VSS      | 127     | VSS       | 26      | VSS      | 128     | VSS      |
| 27         | /DQS1    | 129     | DQ32      | 28      | DM1      | 130     | DQ36     |
| 29         | DQS1     | 131     | DQ33      | 30      | /RESET   | 132     | DQ37     |
| 31         | VSS      | 133     | VSS       | 32      | VSS      | 134     | VSS      |
| 33         | DQ10     | 135     | /DQS4     | 34      | DQ14     | 136     | DM4      |
| 35         | DQ11     | 137     | DQS4      | 36      | DQ15     | 138     | VSS      |
| 37         | VSS      | 139     | VSS       | 38      | VSS      | 140     | DQ38     |
| 39         | DQ16     | 141     | DQ34      | 40      | DQ20     | 142     | DQ39     |
| 41         | DQ17     | 143     | DQ35      | 42      | DQ21     | 144     | VSS      |
| 43         | VSS      | 145     | VSS       | 44      | VSS      | 146     | DQ44     |
| 45         | /DQS2    | 147     | DQ40      | 46      | DM2      | 148     | DQ45     |
| 47         | DQS2     | 149     | DQ41      | 48      | VSS      | 150     | VSS      |
| 49         | VSS      | 151     | VSS       | 50      | DQ22     | 152     | /DQS5    |
| 51         | DQ18     | 153     | DM5       | 52      | DQ23     | 154     | DQS5     |
| 53         | DQ19     | 155     | VSS       | 54      | VSS      | 156     | VSS      |
| 55         | VSS      | 157     | DQ42      | 56      | DQ28     | 158     | DQ46     |
| 57         | DQ24     | 159     | DQ43      | 58      | DQ29     | 160     | DQ47     |
| 59         | DQ25     | 161     | VSS       | 60      | VSS      | 162     | VSS      |
| 61         | VSS      | 163     | DQ48      | 62      | /DQS3    | 164     | DQ52     |
| 63         | DM3      | 165     | DQ49      | 64      | DQS3     | 166     | DQ53     |
| 65         | VSS      | 167     | VSS       | 66      | VSS      | 168     | VSS      |
| 67         | DQ26     | 169     | /DQS6     | 68      | DQ30     | 170     | DM6      |


# Apacer Memory Product Specification

| Front side |           |         |          | Back side |          |         |          |
|------------|-----------|---------|----------|-----------|----------|---------|----------|
| Pin No.    | Pin name  | Pin No. | Pin name | Pin No.   | Pin name | Pin No. | Pin name |
| 69         | DQ27      | 171     | DQS6     | 70        | DQ31     | 172     | VSS      |
| 71         | VSS       | 173     | VSS      | 72        | VSS      | 174     | DQ54     |
| 73         | CKE0      | 175     | DQ50     | 74        | CKE1     | 176     | DQ55     |
| 75         | VDD       | 177     | DQ51     | 76        | VDD      | 178     | VSS      |
| 77         | NC        | 179     | VSS      | 78        | NC       | 180     | DQ60     |
| 79         | BA2       | 181     | DQ56     | 80        | NC       | 182     | DQ61     |
| 81         | VDD       | 183     | DQ57     | 82        | VDD      | 184     | VSS      |
| 83         | A12 (/BC) | 185     | VSS      | 84        | A11      | 186     | /DQS7    |
| 85         | A9        | 187     | DM7      | 86        | A7       | 188     | DQS7     |
| 87         | VDD       | 189     | VSS      | 88        | VDD      | 190     | VSS      |
| 89         | A8        | 191     | DQ58     | 90        | A6       | 192     | DQ62     |
| 91         | A5        | 193     | DQ59     | 92        | A4       | 194     | DQ63     |
| 93         | VDD       | 195     | VSS      | 94        | VDD      | 196     | VSS      |
| 95         | A3        | 197     | SA0      | 96        | A2       | 198     | /EVENT   |
| 97         | A1        | 199     | VDDSPD   | 98        | A0       | 200     | SDA      |
| 99         | VDD       | 201     | SA1      | 100       | VDD      | 202     | SCL      |
| 101        | CK0       | 203     | VTT      | 102       | CK1      | 204     | VTT      |

## Pin Description

| Pin name                     | Function  |
|------------------------------|---|
| A0 to A15                    | Address input<br>Row address A0 to A15<br>Column address A0 to A9 |
| A10 (AP)                     | Auto precharge  |
| A12 (/BC)                    | Burst chop  |
| BA0, BA1, BA2                | Bank select address   |
| DQ0 to DQ63                  | Data input/output   |
| /RAS                         | Row address strobe command  |
| /CAS                         | Column address strobe command                                     |
| /WE                          | Write enable  |
| /CS0, /CS1                   | Chip select   |
| CKE0, CKE1                   | Clock enable  |
| CK0, CK1                     | Clock input   |
| /CK0, /CK1                   | Differential clock input  |
| DQS0 to DQS7, /DQS0 to /DQS7 | Input and output data strobe                                      |
| DM0 to DM7                   | Input mask  |
| SCL                          | Clock input for serial PD   |
| SDA                          | Data input/output for serial PD                                   |
| SA0, SA1                     | Serial address input  |
| VDD                          | Power for internal circuit  |
| VDDSPD                       | Power for serial EEPROM   |
| VREFCA                       | Reference voltage for CA  |
| VREFDQ                       | Reference voltage for DQ  |
| VSS                          | Ground  |
| VTT                          | I/O termination supply for SDRAM                                  |
| /RESET                       | Set DRAM to known state   |
| ODT0, ODT1                   | ODT control   |
| /EVENT                       | Temperature event pin   |
| NC                           | No connection   |


## Block Diagram

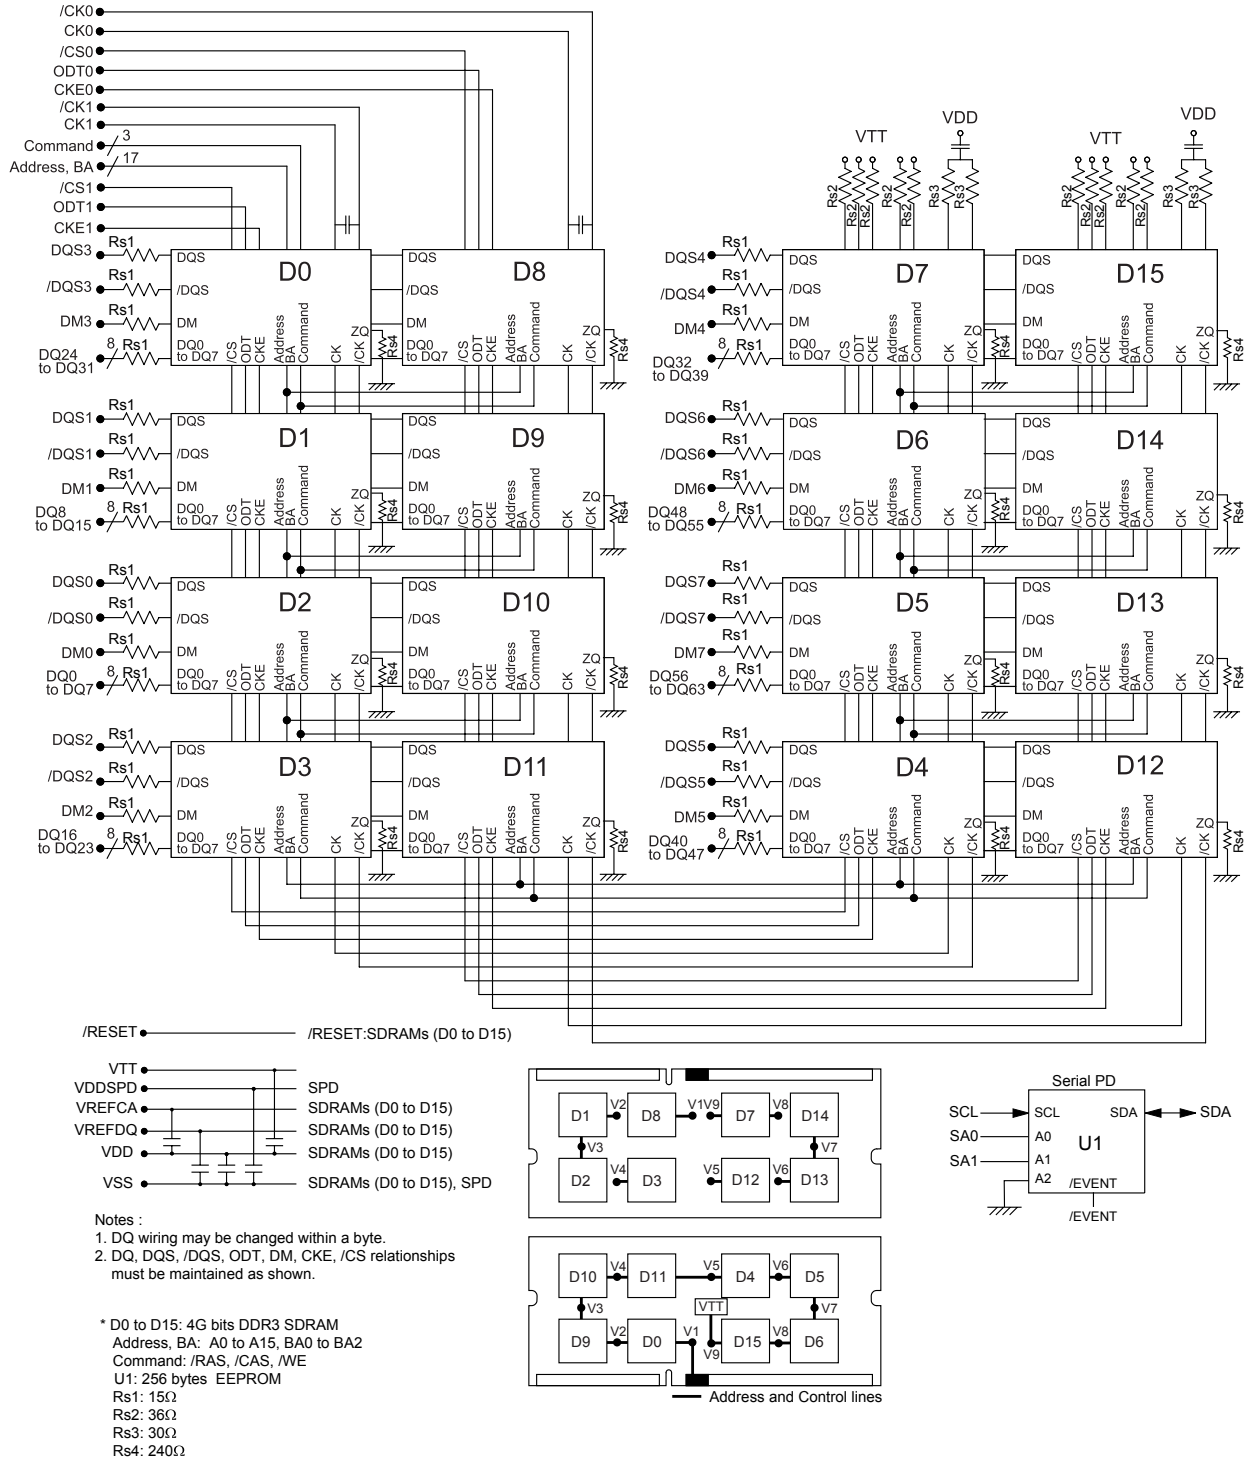


# Apacer Memory Product Specification

Unit: mm


Front side

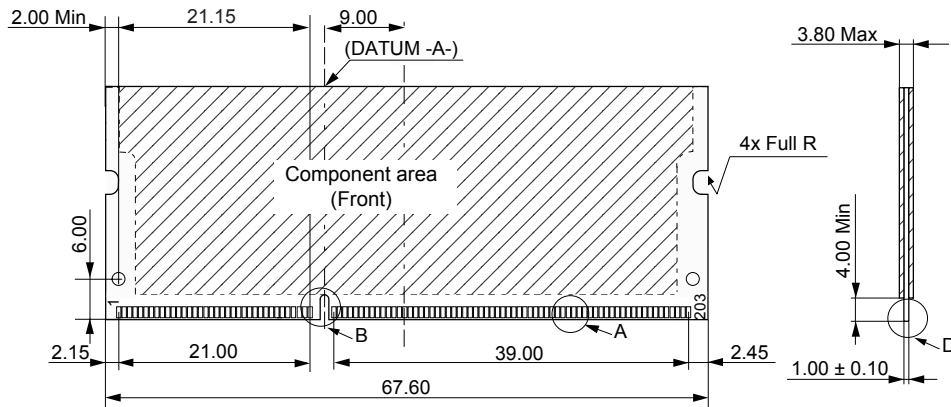


Back side

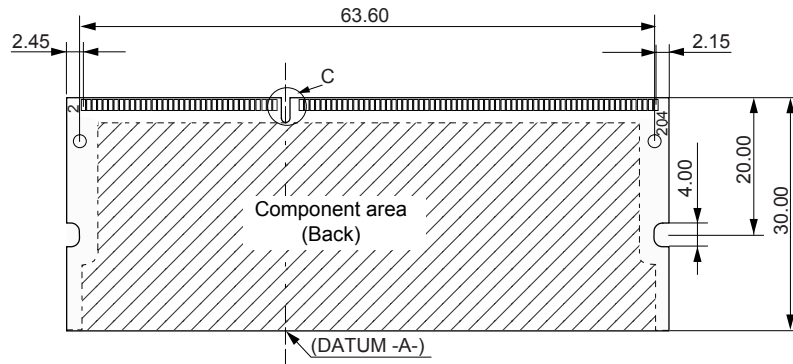


Detail A

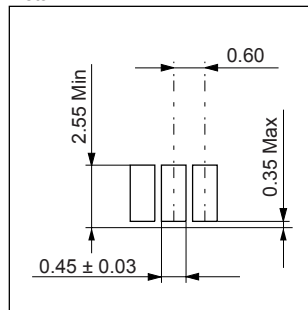


Detail B

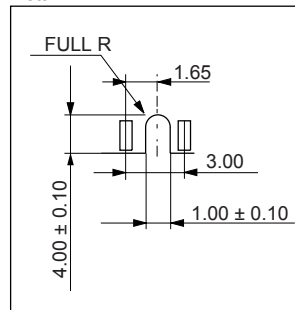

Detail C

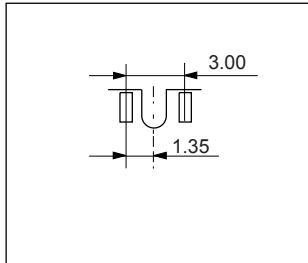

Detail D

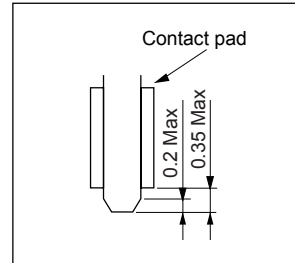

(All dimensions are in millimeters with ±0.15mm tolerance unless specified otherwise.)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.