


## FEATURES

- Built-in RapidSTM32 native-support bootloader.
- ARM 32-bits Cortex™ – M3 Processor (STM32F103RET6)
  - 90MIPS maximum speed
  - 64 KBytes SRAM
  - 51 GPIO
  - 16 channels 12-bit, 1 $\mu$ s ADC
  - 5 USART, 3 SPI, 2 I<sup>2</sup>C, 1 CAN
  - On-chip temperature sensor
  - 4 General purpose 16-bits timers with 4 IC/OC/PWM per timer
  - 2 16-bits Advanced control timers
  - 2 Watchdog timer
  - 2 channels 12-bit DAC
  - USB 2.0 full speed interface
- Two onboard crystals
  - 32 kHz (for real-time clock)
  - 8 MHz (for MCU clock)
- Power supply management
  - Reverse supply voltage protection
  - USB or External (up to 15VDC) supply input selection via jumper settings
  - 3.3V (up to 800mA) LDO regulator for internal and external circuitries
- Flash programming
  - 496Kbytes available flash memory
  - In-Application Programming via either USB HID or serial (RS232) interfaces directly from Matlab™ or MS Windows™.
  - Automatic compile and download directly from Matlab™.
- Other onboard peripherals
  - 3 user LED (red, yellow, green)
  - 2 user logic (H/L) input jumpers
  - 10K potentiometer
- High capacitance (0.33F) capacitor as RTC backup battery
- RS232 (3232-series) level converter
- Micro SD card socket
- Four built-in operating modes selectable via jumper settings
  - USB Mass Storage Device (micro SD card reader)
  - In-application programming via USB HID interface
  - In-application programming via serial (RS232/USART) interface
  - Stand-alone custom user application
- RoSH compliant

## SAMPLE APPLICATIONS

- Affordable Rapid Prototyping training tools (especially for Automatic Control and Digital Signal Processing studies) when used together with RapidSTM32 blockset, example features include:
  - Support C code generation of a custom user program for STM32 from a Simulink™ model (see minimum requirements).
  - Support various Hardware-in-the-Loop (HIL) simulation configurations, e.g. data acquisition in to, signal generation from Matlab™/Simulink™, and closed-loop control HIL simulation design and analysis.
- Create a data logger to micro SD card (FAT32) program directly from a Simulink model.
- Use in a laboratory as embedded system training kits or in-the-field for any student projects.
- Generic microcontroller evaluation board.

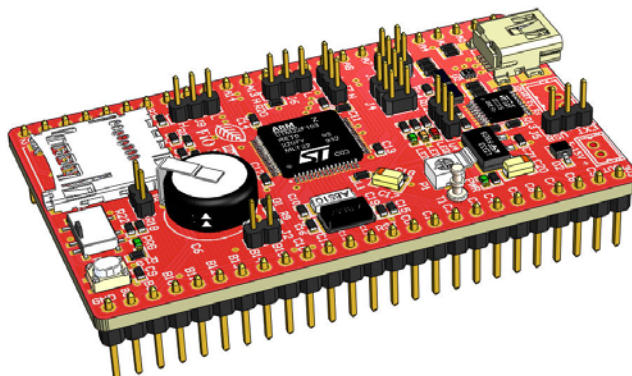

FiO Std

## INTRODUCTION

FiO Std is an evaluation board (EVB) from FiO family of evaluation boards that are based on STMicroelectronics STM32<sup>TM</sup> ARM 32-bits Cortex<sup>TM</sup> – M3 processors.

FiO EVBs have been primarily designed as affordable embedded system training boards for used by instructors and students to supplement such courses and curriculums as design and analysis of automatic or embedded control systems and digital signal processing (DSP) systems. It is hoped that the introduction of FiO and RapidSTM32 Blockset will help lower the barrier and open up opportunities for more users to play around with Rapid Prototyping technology.

FiO family of evaluation boards have been specifically designed to be applicable both as LAB kits for uses in laboratories as well as a stand-alone system for used in-the-field in any student's science and engineering projects.

When used together with RapidSTM32 Blockset, FiO Std offers several capabilities, for examples:

- Real-Time Hardware in the Loop Simulations via USB HID.

| Real-Time Hardware in the Loop (HIL) Simulation via USB HID interface |                                   | Maximum Update Rate <sup>1</sup> (Hz) |
|-----------------------------------------------------------------------|-----------------------------------|---------------------------------------|
| Open-Loop                                                             | Target → Host (Data Acquisition)  | 450                                   |
|                                                                       | Host → Target (Signal Generation) | 200                                   |
| Closed-Loop                                                           | Target ↔ Host (Control System)    | 200                                   |

- Higher HIL update rate available via other specially designed interfaces.
- Create working stand-alone embedded systems from Simulink<sup>TM</sup> models with just one click.

<sup>1</sup>

The actual update rate depends on several factors such as the host PC speed and other USB hardware in the communication loop; for example, communication speed is faster when the target is connected directly to host USB controller than via a USB hub.

- Generated source code compatible with Realview MDK<sup>TM</sup> for ARM with options for automatic compile and download option.
- Data logger to micro SD card (FAT32).
- Support simulation and code generation for typical peripherals such as push/toggle button or character LCD.
- Supported on-chip peripherals include Digital IO, ADC, DAC, RTC, PWM, USART, USB (Virtual COM) and more.
- Support integration with Finite State Machine simulation and code generation via Stateflow<sup>TM</sup> and Stateflow Coder<sup>TM</sup>.

## MINIMUM REQUIREMENTS

Minimum requirements for FiO Std to fully function with RapidSTM32 Blockset.

- Matlab<sup>TM</sup> 2009a (v7.8)
- Simulink<sup>TM</sup> (v7.3)
- Real-Time Workshop<sup>TM</sup> (v7.3)
- Real-Time Workshop Embedded Coder<sup>TM</sup> (v7.3)
- Realview MDK<sup>TM</sup> for ARM (v4.0)
- Microsoft .NET Framework (v3.5)

## CAUTIONS!!

**All FiO EVBs are pre-installed with proprietary bootloader. FiO EVBs are solely intended to be programmed using FiO own Flash programmer which can program any FiO EVBs directly from Matlab and MS Windows via USB or RS232 interfaces. DO NOT use STMicroelectronics Flash Loader Program to program FiO EVBs because this will erase the pre-installed bootloader and void your warranty totally. Therefore, jumper J8 should not be tampered with in any circumstances.**

## FURTHER INFORMATION

For further information and tutorials please visit: <http://www.aimagin.com/learningresources>


# OPERATING MODES

FiO Std supports 4 operating modes


1. In-Application Programming via USB HID
2. In-Application Programming via RS232
3. Mass Storage Device (microSD card reader)
4. Run Custom User Program

The following figures show required jumper(s) and program switch (SW1) settings for each operating mode. Each operating mode can be activated by pressing the reset switch (SW2).


## 1.1 USB IAP

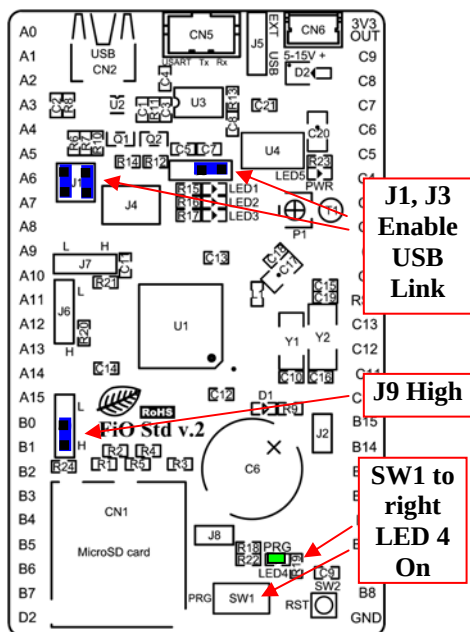


## 1.2 RS232 IAP

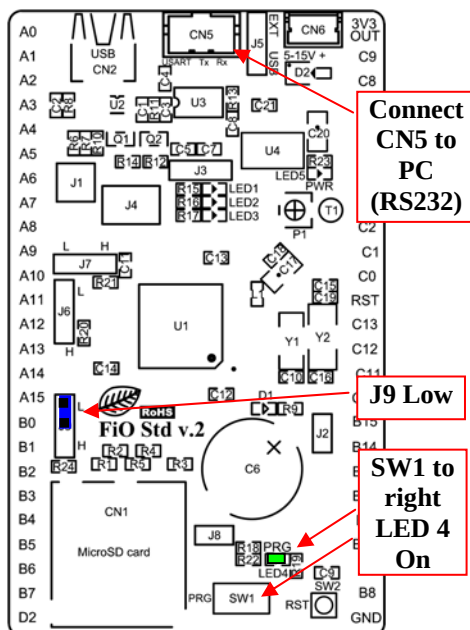

## 1.3 Mass Storage Device

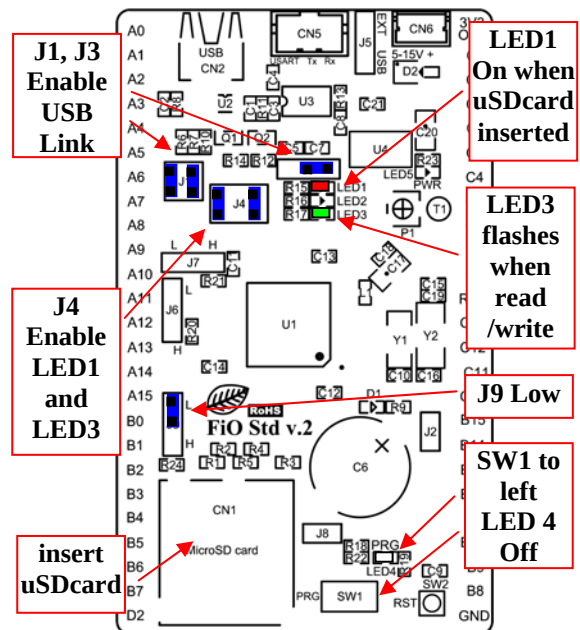


## 1.4 Run Custom User Program

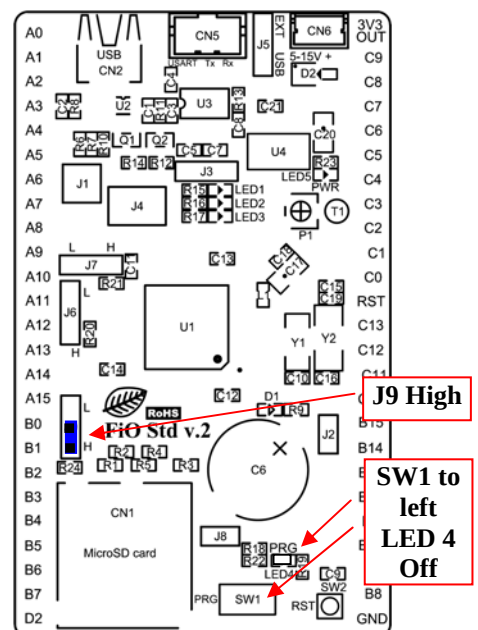


**Warning: J8 should not be tampered with at all. Warranty is void if J8 is tampered.**

Note: Other jumpers, e.g. J2, J6, J7 not mentioned in the above figures may be set or not, depending upon required functionalities.

# SCHEMATIC DIAGRAM

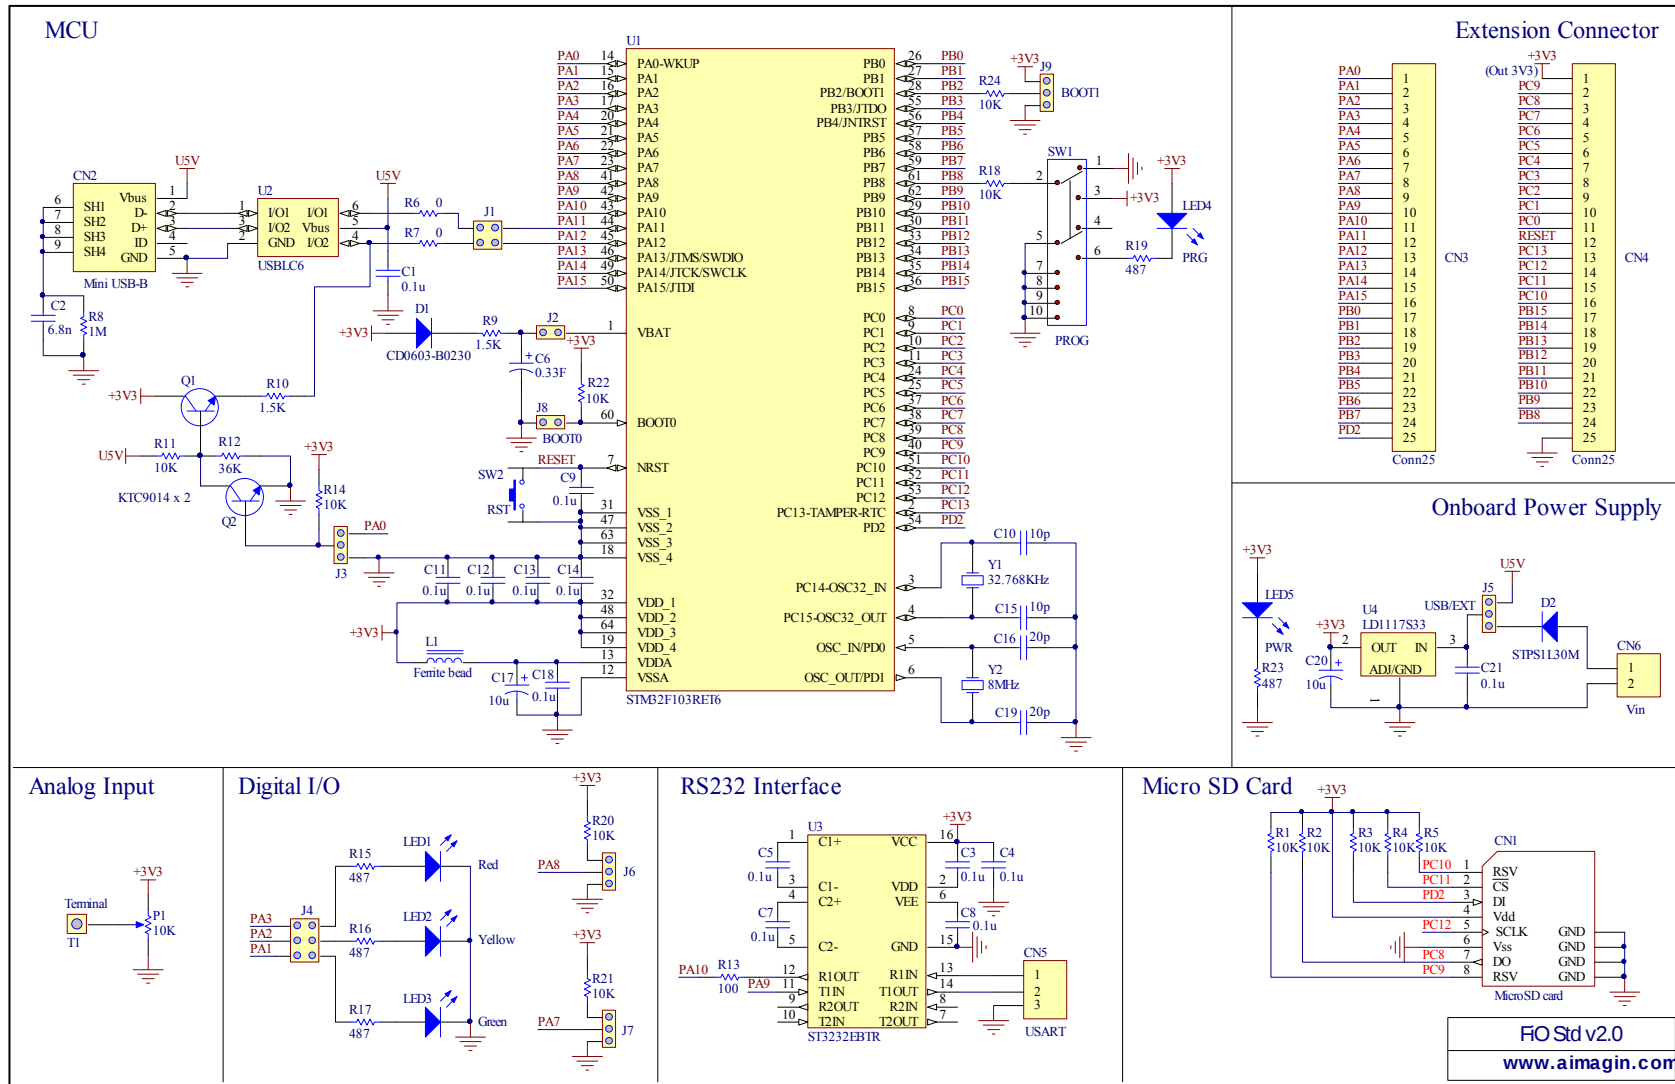


# FiO Std PCB LAYOUT

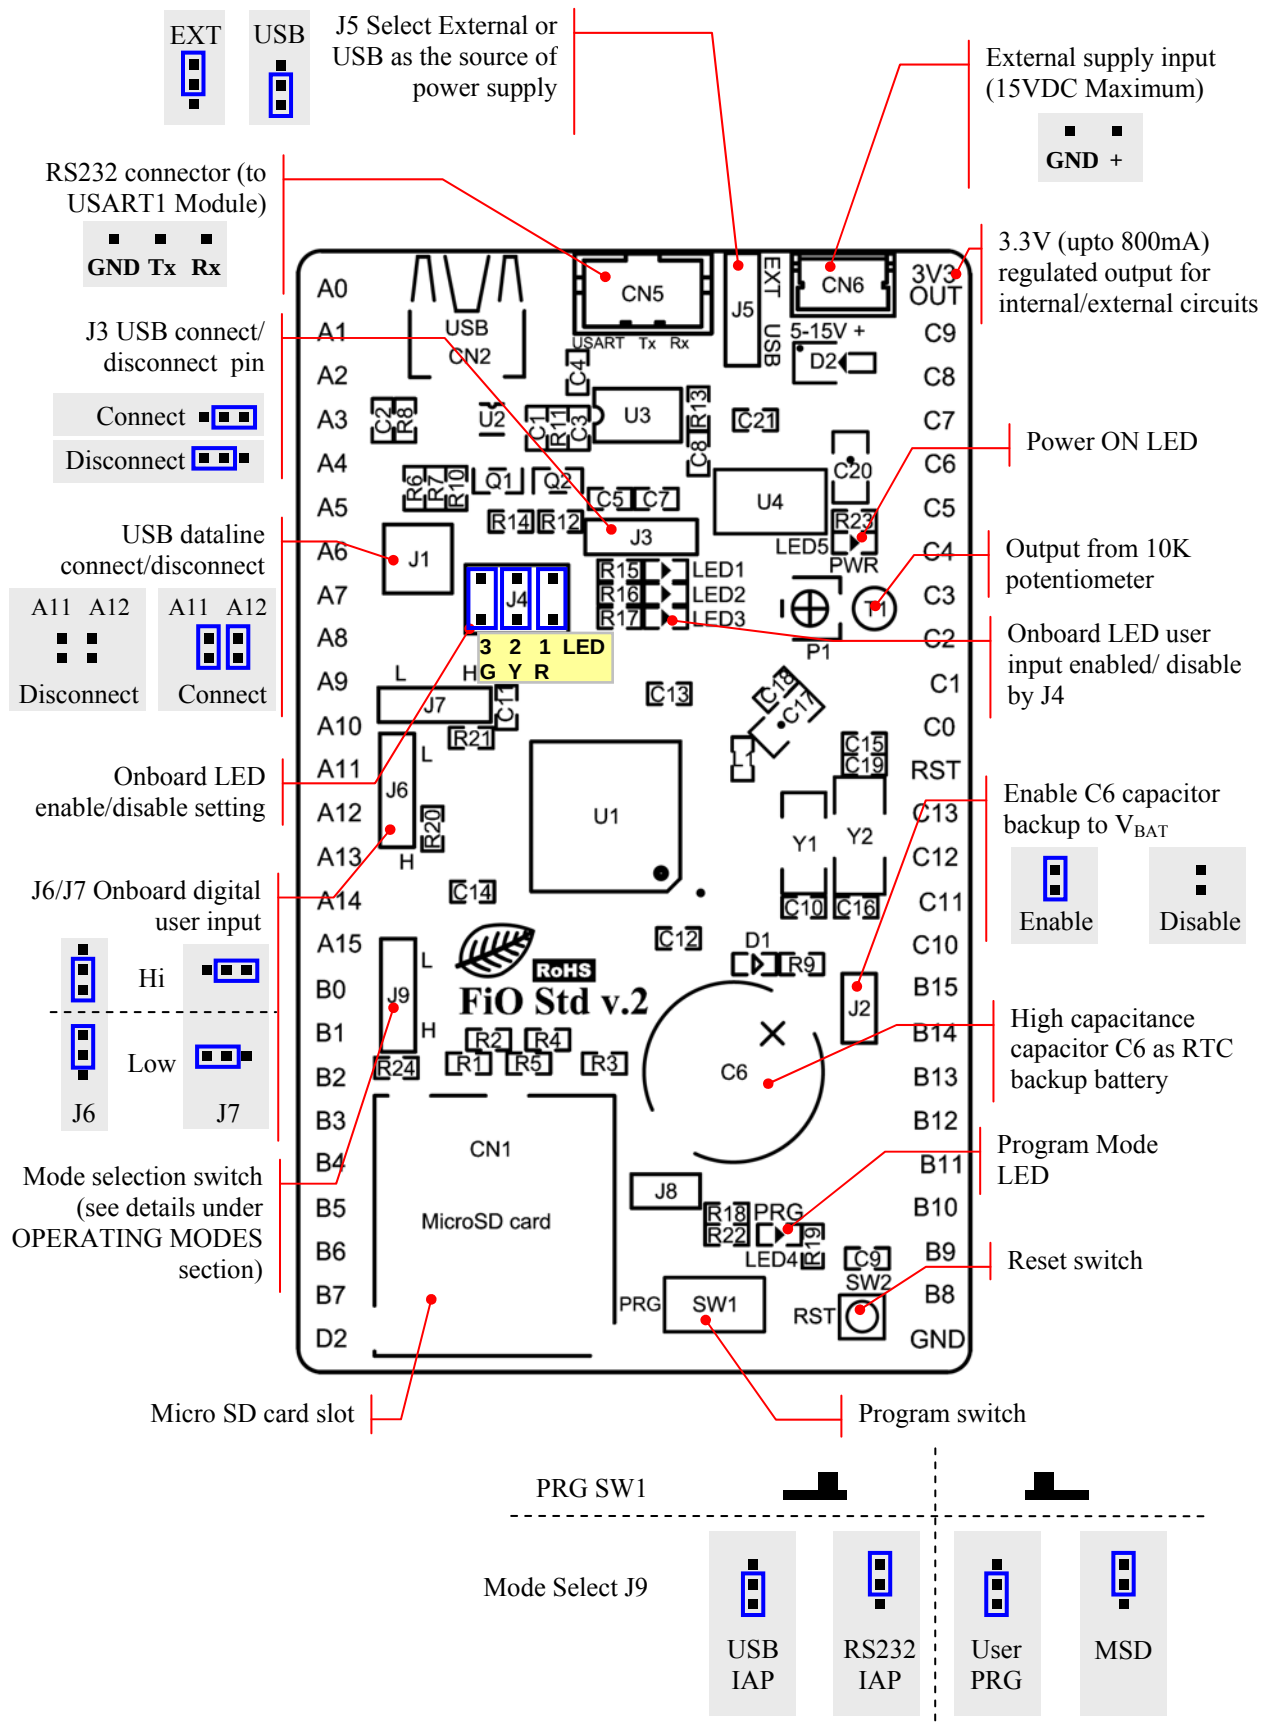

# BILL OF MATERIALS

| [Manufacture Part No.] Name          | Designator                                                        | Source         |
|--------------------------------------|-------------------------------------------------------------------|----------------|
| [0603B682K500CT] 6.8nF               | C2                                                                | www.es.co.th   |
| [0603ZC104KAT2A] 0.1uF               | C1, C3, C4, C5,<br>C7, C8, C9, C11,<br>C12, C13, C14,<br>C18, C21 | www.mouser.com |
| [C1608C0G1H100C] 10pF                | C10, C15                                                          | www.mouser.com |
| [C1608C0G1H200J] 20pF                | C16, C19                                                          | www.mouser.com |
| [293D106X0010A2TE3] 10uF             | C17, C20                                                          | www.mouser.com |
| [EECS0HD334H] 0.33F                  | C6                                                                | www.mouser.com |
| [2908-05WB-MG] MicroSD socket        | CN1                                                               | www.mouser.com |
| [67503-1020] USB Mini-B female       | CN2                                                               | www.mouser.com |
| [CD0603-B0230] CD0603-B0230          | D1                                                                | www.mouser.com |
| [STPS1L30M] STPS1L30M                | D2                                                                | www.mouser.com |
| [MMZ1608S601A] Ferrite Beads         | L1                                                                | www.mouser.com |
| [APT1608EC] LED Red                  | LED1                                                              | www.mouser.com |
| [APT1608YC] LED Yellow               | LED2                                                              | www.mouser.com |
| [APT1608SGC] LED Green               | LED3, LED4,<br>LED5                                               | www.mouser.com |
| [PVG3A103C01R00] 10K                 | P1                                                                | www.mouser.com |
| [KTC9014S-C-RTK/P] KTC9014           | Q1,Q2                                                             | www.es.co.th   |
| [0603WAJ0103T5E] 10K                 | R1, R2, R3, R4,<br>R5, R11, R14,<br>R18, R20, R21,<br>R22, R24    | www.es.co.th   |
| [RC0603FR-0736KL] 36k                | R12                                                               | www.mouser.com |
| [0603WAJ0101T5E] 100                 | R13                                                               | www.mouser.com |
| [CR0603-FX-4870ELF] 487              | R15, R16, R17,<br>R19, R23                                        | www.mouser.com |
| [WR06X000PTL] 0                      | R6, R7                                                            | www.es.co.th   |
| [RC0603JR-071ML] 1M                  | R8                                                                | www.mouser.com |
| [CRCW06031K50JNEB] 1.5k              | R9, R10                                                           | www.mouser.com |
| [SSSS820201] Switch                  | SW1                                                               | www.mouser.com |
| [SKRSPACE010] Switch                 | SW2                                                               | www.mouser.com |
| [534-1593-2] Terminal                | T1                                                                | www.mouser.com |
| [STM32F103RET6TR] STM32F103RET6      | U1                                                                | www.mouser.com |
| [USBL6-2P6] USBL6                    | U2                                                                | www.mouser.com |
| [ST3232EBTR] ST3232EBTR              | U3                                                                | www.mouser.com |
| [LD1117S33TR] LD1117S33              | U4                                                                | www.mouser.com |
| [ABS10-32.768KHZ-9-T] Xtal 32.768kHz | Y1                                                                | www.mouser.com |
| [ABM7-8.000MHZ-D2Y-T] Xtal 8MHz      | Y2                                                                | www.mouser.com |

## ENGINEERING DRAWINGS (Units: mm)

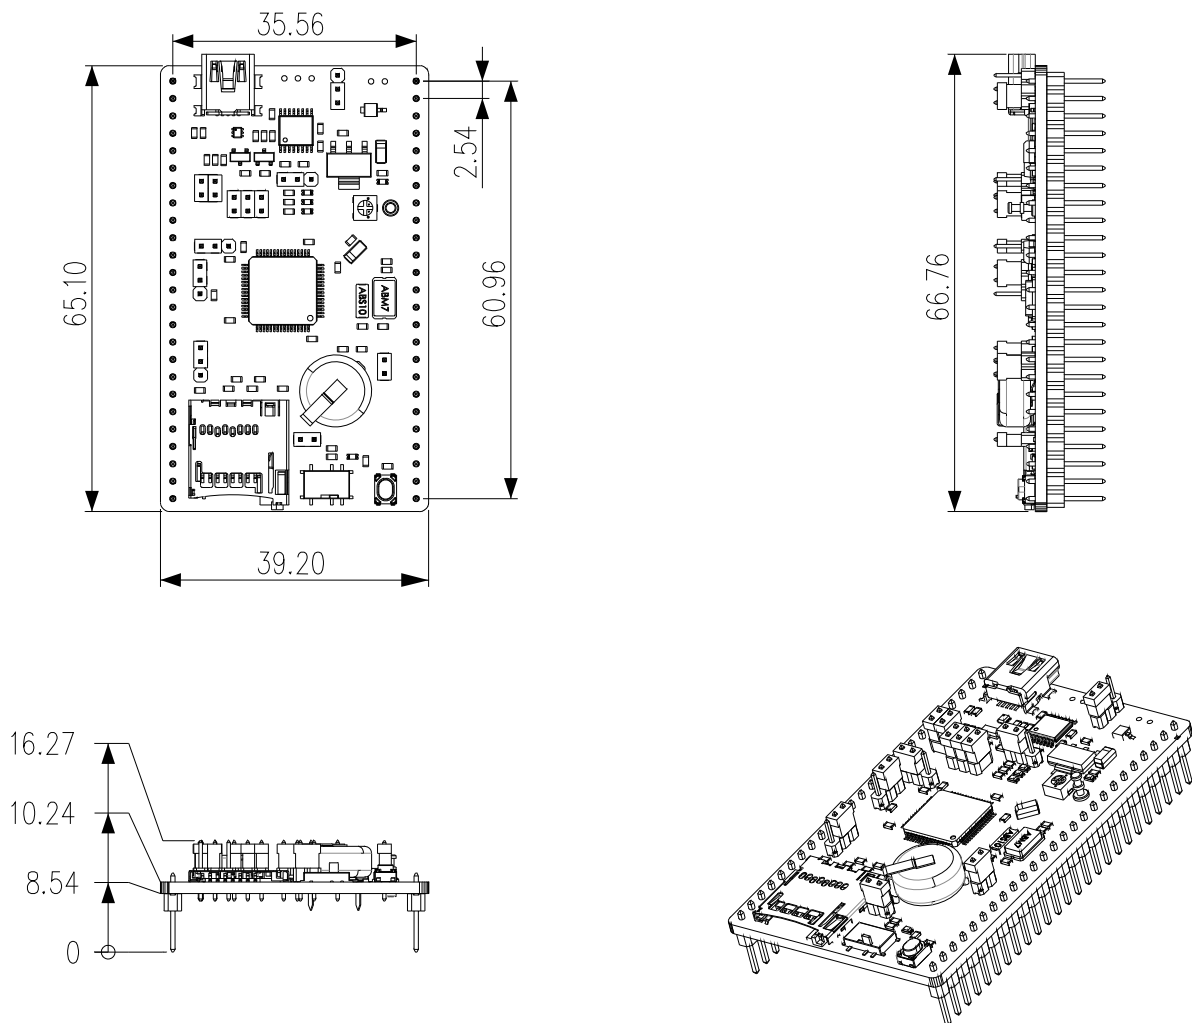

Patent Pending  
PCT/TH2010/000010, PCT/TH2010/000020, and PCT/TH2010/000037

Information in this document is provided solely in connection with Aimagin products. Aimagin reserves the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

[www.aimagin.com](http://www.aimagin.com)

Copyright 2010 Aimagin - All rights reserved

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Gravitech:](#)

[FIO-STD](#)



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

**Факс:** 8 (812) 320-02-42

**Электронная почта:** [org@eplast1.ru](mailto:org@eplast1.ru)

**Адрес:** 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.