

RS-9110-N-11-22 Self Contained 802.11 b/g/n Module with Networking Stack

Datasheet

Version 2.0

November 2012

Redpine Signals, Inc.

2107 N. First Street, #680

San Jose, CA 95131.

Tel: (408) 748-3385

Fax: (408) 705-2019

Email: info@redpinesignals.com

Website: www.redpinesignals.com

The RS9110-N-11-22 module is a IEEE 802.11bgn WLAN device that directly provides a wireless interface to any equipment with a UART or SPI interface for data transfer. It integrates a MAC, baseband processor, RF transceiver with power amplifier, a frequency reference, and an antenna in hardware; and all WLAN protocol and configuration functionality, networking stack in embedded firmware to make a fully self-contained 802.11n WLAN solution for a variety of applications.

Applications:

- Seamless Wi-Fi connectivity for Application Processors
- Industrial M2M communications
- Point of Sale Terminals
- Metering (Parking Meters, Utility Meters, Power Meters, etc.)
- Security Cameras and Surveillance Equipment
- Logistics and Freight Management
- Warehousing
- Digital Picture Frames

- Several medical applications including Patient Monitoring, Remote Diagnostics

Device Features:

- 802.11b/g and single stream 802.11n WLAN module
- Supports WPA2-PSK, WEP (64 and 128 bit) and TKIP security in infrastructure mode
- Supports WEP (64 and 128 bit) security in ad-hoc mode
- Host interface through UART and SPI
- Integrated TCP/IP stack with option to bypass the stack in SPI mode
- Integrated antenna, frequency reference. Option for external antenna through u.FL connector
- Ultra-low-power operation with power-save modes
- Ad-hoc and infrastructure modes for maximum deployment flexibility
- Configure module wirelessly and upgrade firmware wirelessly for easy field deployment
- Single supply – 3.1 to 3.6V operation
- Device Dimensions 22mm x 28mm x 2.8mm

RS9110-N-11-22 System Block Diagram

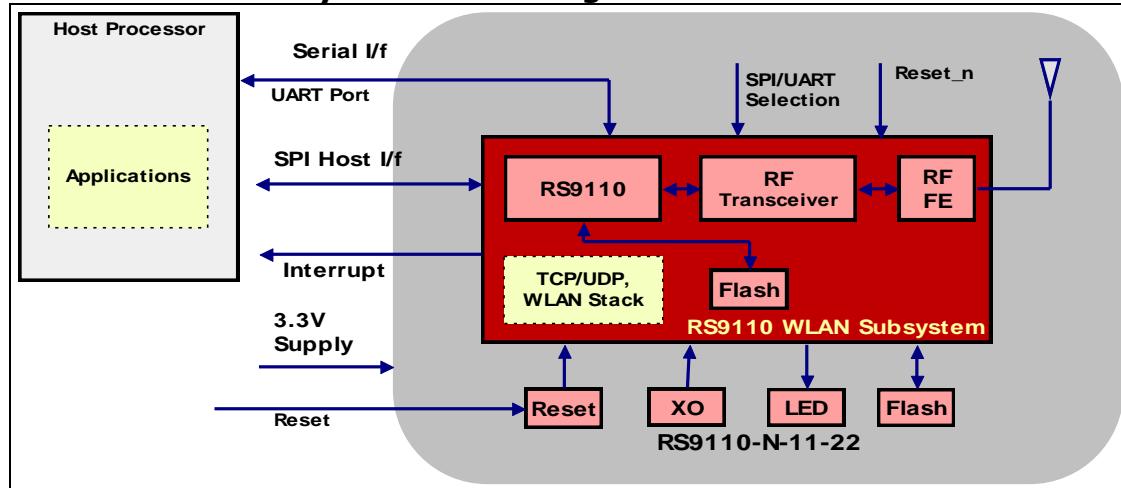


Table of Contents

| | |
|---|-----------|
| RS-9110-N-11-22 Self Contained 802.11 b/g/n Module with Networking Stack | 1 |
| 1 Detailed Feature List..... | 7 |
| 1.1 Host Interfaces | 7 |
| 1.2 WLAN..... | 7 |
| 1.3 Networking Protocols | 8 |
| 1.4 Configuration | 8 |
| 1.5 Software | 8 |
| 1.6 Compliance and Certification | 8 |
| 2 Package Description | 9 |
| 2.1 Top View | 9 |
| 2.2 Bottom View | 9 |
| 2.3 Package Dimensions | 10 |
| 2.4 PCB Landing Pattern | 11 |
| 2.5 Recommended Reflow Profile | 12 |
| 2.6 Baking Instructions | 12 |
| 3 Pin Description | 13 |
| 3.1 Module Pinout..... | 13 |
| 3.2 Pin Description | 13 |
| 4 Electrical Characteristics | 17 |
| 4.1 Absolute Maximum Ratings..... | 17 |
| 4.2 Recommended Operating Conditions | 17 |
| 4.3 DC Characteristics – Digital I/O Signals..... | 17 |
| 4.4 AC Characteristics – Digital I/O Signals..... | 18 |
| 4.4.1 SPI Interface..... | 18 |
| 4.4.2 Reset Sequence and Timing | 18 |
| 5 Performance Specifications | 20 |
| 5.1 Wireless Specifications | 20 |
| 5.2 Receive Sensitivity..... | 20 |
| 5.3 Throughput..... | 20 |
| 5.4 Standards Compliance | 21 |
| 6 Software Architecture Overview | 22 |
| 6.1 Host | 23 |
| 6.1.1 UART | 23 |
| 6.1.2 SPI | 23 |
| 6.1.3 Thin SPI Driver..... | 23 |
| 6.2 RS9110-N-11-22..... | 23 |
| 6.2.1 SPI | 23 |
| 6.2.2 UART | 24 |
| 6.2.3 Host Abstraction Layer (HAL) | 24 |
| 6.2.4 Wireless Control Block (WCB)..... | 24 |
| 6.2.5 TCP/IP Control Frames | 24 |
| 6.2.6 Station Management Entity (SME) | 24 |

| | |
|---|-----------|
| 6.2.7 WPA Supplicant | 24 |
| 6.3 Power Save Modes | 24 |
| 6.3.1 Power Mode 0 | 24 |
| 6.3.2 Power Mode 1 | 25 |
| 6.3.3 Power Mode 2 | 25 |
| 7 Ordering Information | 27 |
| 8 Command Reference(AT commands and SPI commands) .. | 29 |

Table of Figures

| | |
|--|-----------|
| Figure 1:Top View of the Module | 9 |
| Figure 2:Bottom View of the Module | 9 |
| Figure 3: Package Dimensions | 10 |
| Figure 4:PCB Landing Pattern | 11 |
| Figure 5:Reflow Profile..... | 12 |
| Figure 6:Pinout of the Module | 13 |
| Figure 7:Interface Timings – SPI Interface | 18 |
| Figure 8:Reset Pin Timing Diagram | 19 |
| Figure 9:RS9110-N-11-22 Software Architecture Block Diagram | 22 |

List of Tables

| | |
|---|-----------|
| Table 1: Pin Description | 16 |
| Table 2: Absolute Maximum Ratings | 17 |
| Table 3: Recommended Operating Conditions | 17 |
| Table 4: Input/Output DC Characteristics | 17 |
| Table 5: AC Characteristics – SPI Interface | 18 |
| Table 6: Wireless Specifications | 20 |
| Table 7: Receive Characteristics – Sensitivity | 20 |
| Table 8: Device Ordering Information | 27 |

1 Detailed Feature List

1.1 Host Interfaces

- UART
 - The UART forms the physical layer of the TCP/IP stack, transferring frames between a Host processor and the module.
 - The UART interface supports variable baud rates from 9600 to 3686400 bps
 - AT Command Interface for configuration and module operation
- SPI
 - Standard 4-wire SPI
 - Operation up to a maximum clock speed of 25MHz¹

The module can be configured in UART or SPI mode by configuring the pin MODE_SEL_1 as described in the section for Pin Description.

1.2 WLAN

MAC

- Conforms to IEEE 802.11b/g/n standards
- Dynamic selection of fragment threshold, data rate, and antenna depending on the channel statistics
- Hardware accelerated implementation of WEP 64/128-bit and AES
- Infrastructure and Ad-hoc modes
- Security - WPA/WPA2-PSK, WEP, TKIP

Baseband Processing

- Supports DSSS (1, 2 Mbps) and CCK (5.5, 11 Mbps) modes
- Supports all OFDM data rates (6, 9, 12, 18, 24, 36, 48, and 54 Mbps)
- Supports IEEE 802.11n single-stream modes with data rates up to 65 Mbps
- Supports long, short, and HT preamble modes
- High-performance multipath compensation in OFDM, DSSS, and CCK modes

RF

- Highly integrated 2.4 GHz transceiver and Power Amplifier with direct conversion architecture
- Integrated frequency reference and antenna

¹ This frequency depends on the external delays also.

1.3 Networking Protocols

- TCP
- UDP
- ARP
- ICMP
- DHCP Client

The RS9110-N-11-22 comes with flexible frameworks to enable usage in various application scenarios, viz., high throughput, more network features, etc.

1.4 Configuration

The RS9110-N-11-22 module can be configured through UART or SPI. The following are some of the commands that can be given to the module:

- Scan
- Connect
- Pre-shared Keys
- SSID of hidden WLAN networks
- DHCP Enable/Disable
- Create/Join an IBSS (ad-hoc) network
- Open/Close sockets for TCP, UDP

1.5 Software

- Sample Host driver for SPI interface
- Configuration and management GUI for Windows XP for UART
- Embedded software for complete WLAN functionality including 802.11n aggregation and Block-ACK, auto rate adaptation, security and also complete network stack and applications including TCP, UDP, ARP, ICMP, DHCP client.
- The module can be made to come up as an Access point, to which a standard WLAN device such as a laptop can connect and configure the module or upgrade the firmware

1.6 Compliance and Certification

- RS9110-N-11-22 is based on RS9110-N-02 module which is FCC, IC, and CE certified. RF Testing Software is provided for any end product certification requirements.
- RoHS (Restriction of Hazardous Substances) compliant

2 Package Description

2.1 Top View



Figure 1:Top View of the Module

2.2 Bottom View

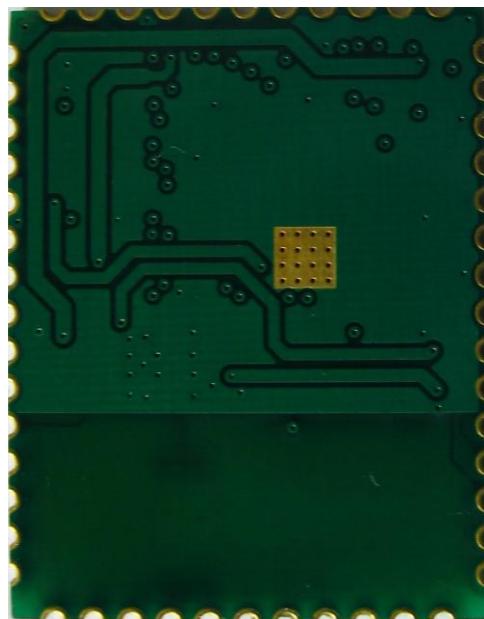


Figure 2:Bottom View of the Module

2.3 Package Dimensions

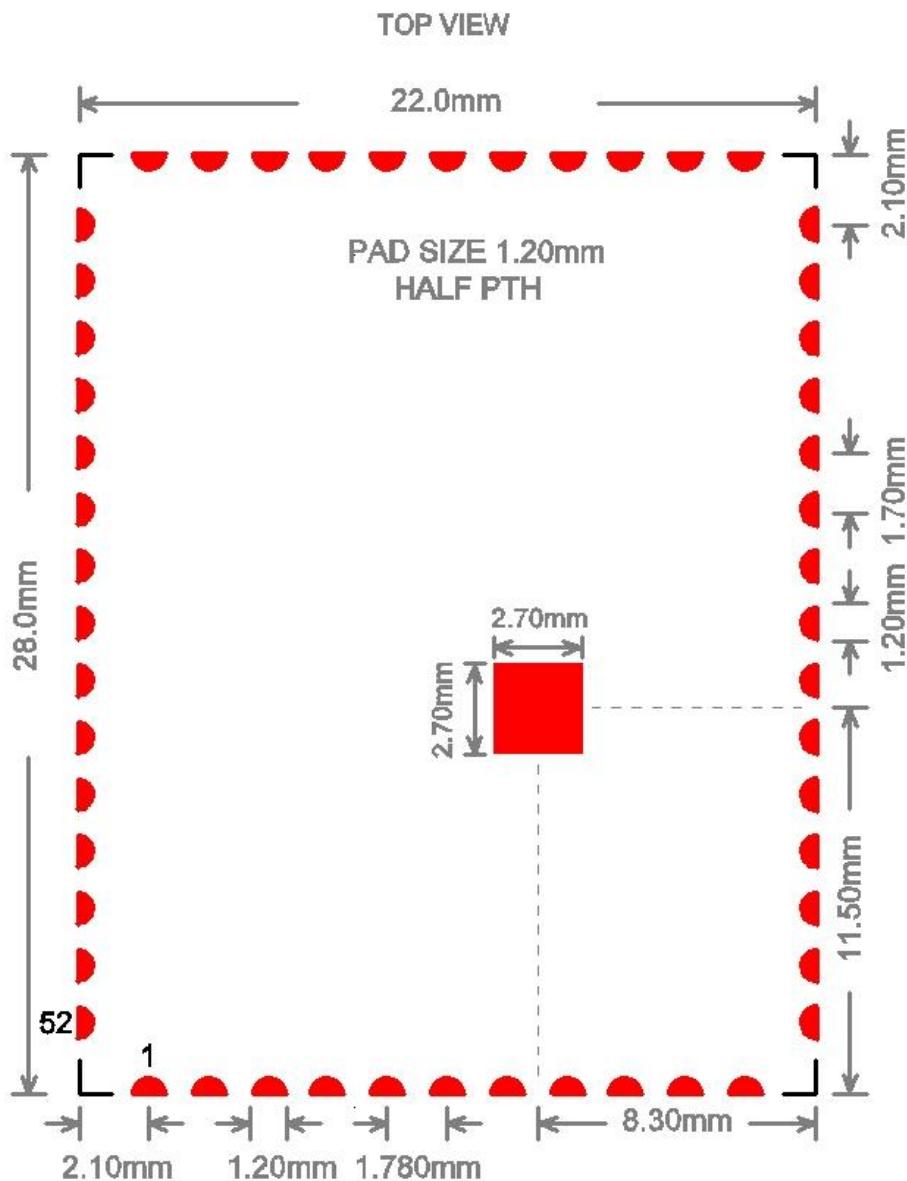


Figure 3: Package Dimensions

Module height = 2.8 mm

2.4 PCB Landing Pattern

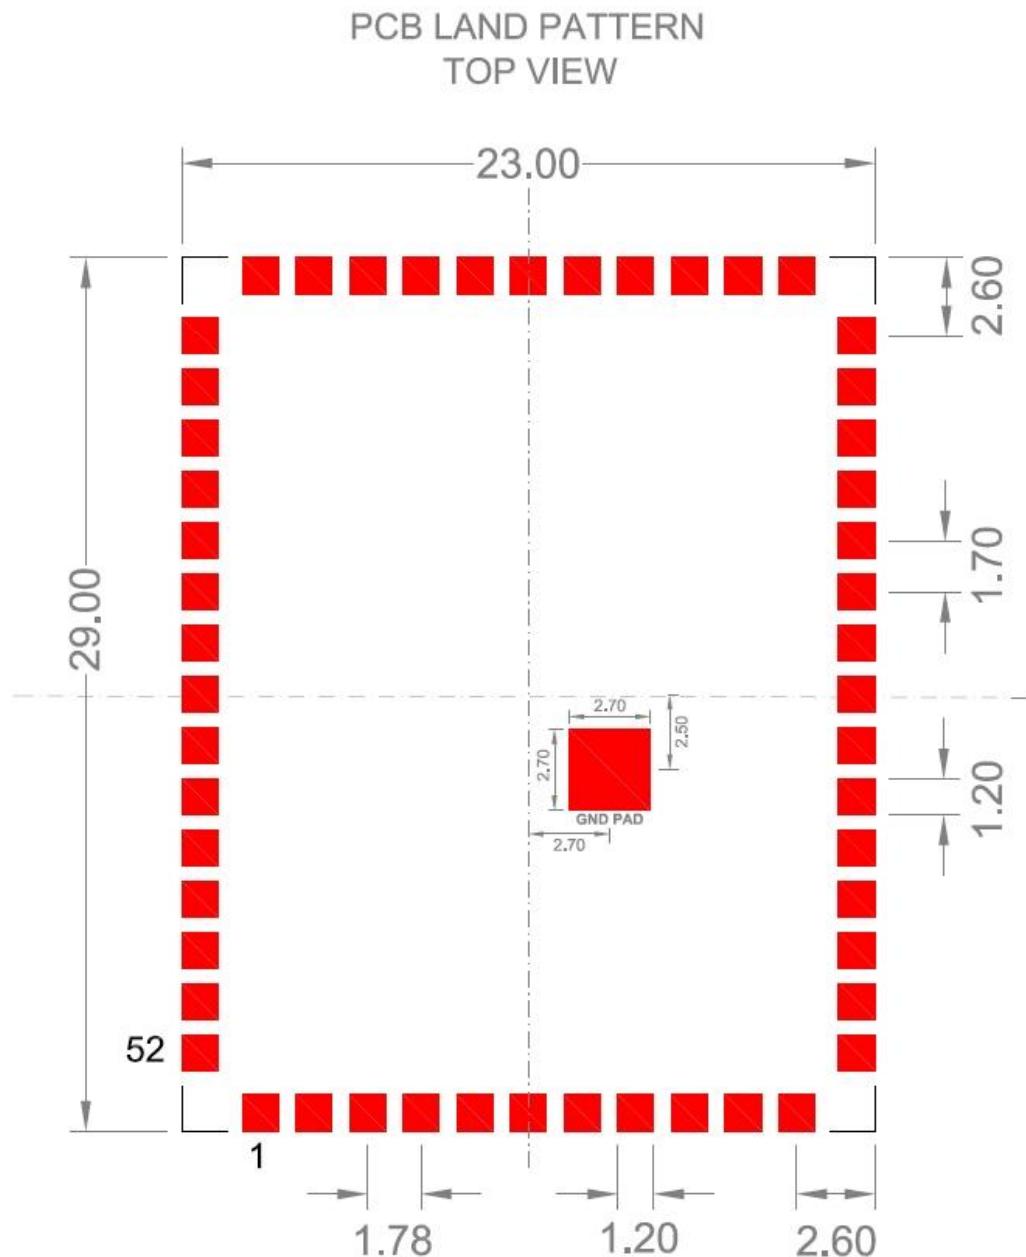


Figure 4:PCB Landing Pattern

2.5 Recommended Reflow Profile

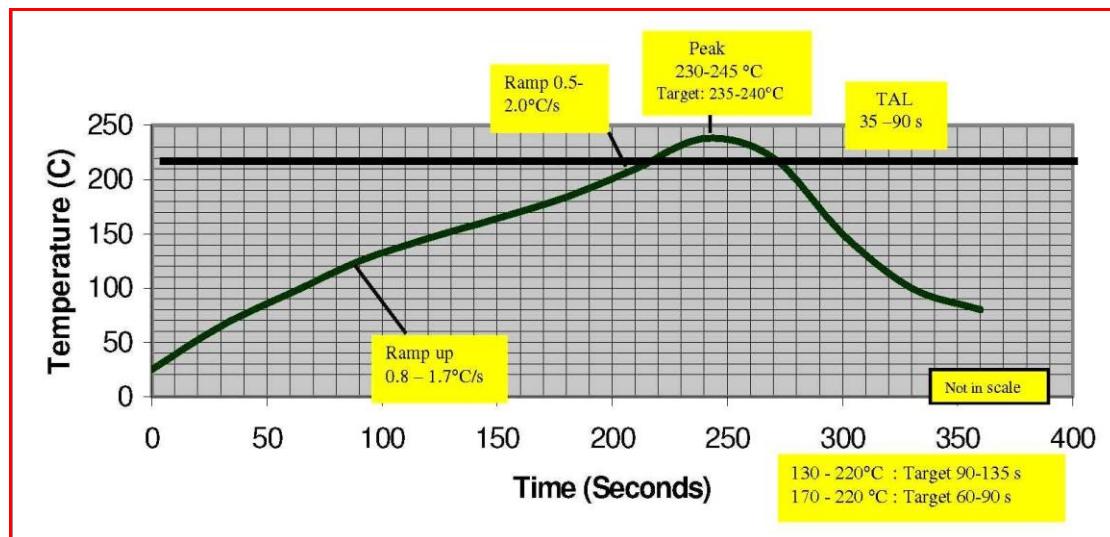


Figure 5:Reflow Profile

NOTE: The profile shown is based on SAC 305 solder (3% silver, 0.5% copper). We recommend the ALPHA OM-338 lead-free solder paste. This profile is provided mainly for guidance. The total dwell time depends on the thermal mass of the assembled board and the sensitivity of the components on it.

2.6 Baking Instructions

The RS9110-N-11-22 package is moisture sensitive and devices must be handled appropriately. After the devices are removed from their vacuum sealed packs, they should be taken through reflow for board assembly within 168 hours at room conditions, or stored at under 10% relative humidity. If these conditions are not met, the devices must be baked before reflow. The recommended baking time is nine hours at 125° C.

3 Pin Description

3.1 Module Pinout

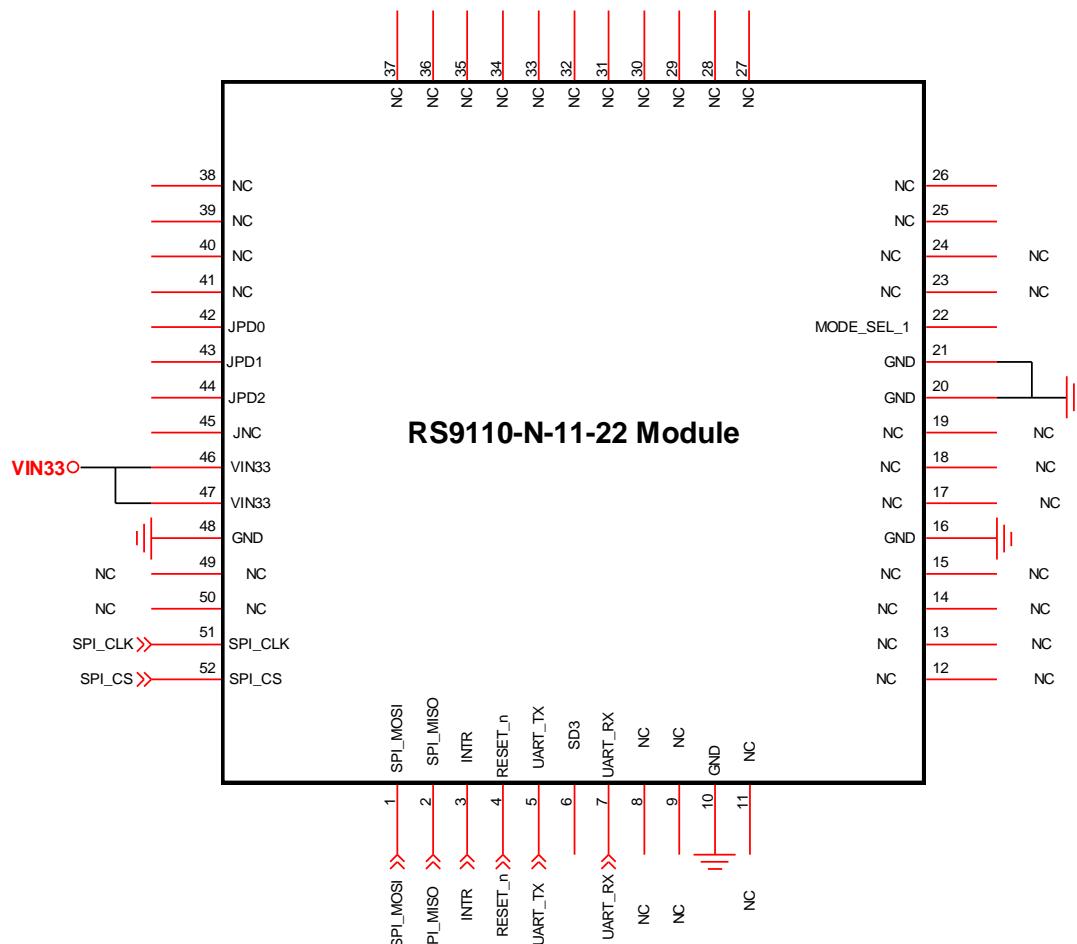


Figure 6:Pinout of the Module

3.2 Pin Description

| Pin No. | Pin Name | Direction | Type | Description |
|---------|----------|-----------|------------|---|
| 1 | SPI_MOSI | Input | LVCMOS 8mA | SPI Data Input. In UART mode, connect pull-down (1K to 10K Ohms) |
| 2 | SPI_MISO | Output | LVCMOS 8mA | SPI Data output. No connect in UART mode |
| 3 | INTR | Output | LVCMOS | Interrupt to the host. Active high, level |

| Pin No. | Pin Name | Direction | Type | Description |
|----------------|-----------------|------------------|-------------|---|
| | | | 8mA | triggered. Asserted by the module when: 1.The module has to transmit data to the host through SPI. 2.When the module wakes up from sleep mode |
| 4 | RESET_n | Input | LVCMOS | Power on reset. Active low, required to be active for at least 10 ms after power on, to reset the module. |
| 5 | UART_TX | Output | LVCMOS 4mA | UART output. No connect in SPI mode. |
| 6 | SD3 | - | | No connect in SPI mode. In UART mode, connect pull-down (1K to 10K Ohms) |
| 7 | UART_RX | Input | LVCMOS 4mA | UART input. No connect in SPI mode. |
| 8 | NC | - | | No connect |
| 9 | NC | - | | No connect |
| 10 | GND | Ground | | Ground. Connect all the GND pins directly to a ground plane or copper ground fill |
| 11 | NC | - | | No Connect |
| 12 | NC | - | | No connect |
| 13 | NC | - | | No connect |
| 14 | NC | - | | No connect |
| 15 | NC | - | | No connect |
| 16 | GND | Ground | | Ground. Connect all the GND pins directly to a ground plane or copper ground fill |
| 17 | NC | - | | No connect |
| 18 | NC | - | | No connect |
| 19 | NC | - | | No connect |
| 20 | GND | Ground | | Ground. Connect all the GND pins directly to a ground plane or copper ground fill. |
| 21 | GND | Ground | | Ground. Connect all the GND pins directly to a ground plane or copper ground fill |
| 22 | MODE_SEL_1 | Input | LVCMOS 2mA | SPI Mode: Connect pull down (3.9K Ohms to 4.7K Ohms) UART Mode: No connect |

**RS-9110-N-11-22 Self Contained 802.11 b/g/n
Module with Networking Stack**
Datasheet
Version 2.0



| Pin No. | Pin Name | Direction | Type | Description |
|----------------|-----------------|------------------|-------------|---|
| 23 | NC | - | | No connect |
| 24 | NC | - | | No connect |
| 25 | NC | - | | No Connect |
| 26 | NC | - | | No Connect |
| 27 | NC | - | | No Connect |
| 28 | NC | - | | No Connect |
| 29 | NC | - | | No Connect |
| 30 | NC | - | | No Connect |
| 31 | NC | - | | No Connect |
| 32 | NC | - | | No Connect |
| 33 | NC | - | | No Connect |
| 34 | NC | - | | No Connect |
| 35 | NC | - | | No Connect |
| 36 | NC | - | | No Connect |
| 37 | NC | - | | No Connect |
| 38 | NC | - | | No Connect |
| 39 | NC | - | | No Connect |
| 40 | NC | - | | No Connect |
| 41 | NC | - | | No Connect |
| 42 | JPD | - | | Connect pull down of 1 K Ohms |
| 43 | JPD | - | | Connect pull down of 1 K Ohms |
| 44 | JPD | - | | Connect pull down of 1 K Ohms |
| 45 | JNC | - | | No connect |
| 46 | VIN33 | Power | | 3.3V Power supply, Recommend connecting these pins to a copper fill with bypassed capacitors as indicated in reference schematics. 10mV pk-pk maximum noise allowed. |

| Pin No. | Pin Name | Direction | Type | Description |
|----------------|-----------------|------------------|-------------|---|
| 47 | VIN33 | Power | | 3.3V Power supply, Recommend connecting these pins to a copper fill with bypassed capacitors as indicated in reference schematics. 10mV pk-pk maximum noise allowed. |
| 48 | GND | Ground | | Ground. Connect all the GND pins directly to a ground plane or copper ground fill |
| 49 | NC | - | | No connect |
| 50 | NC | - | | No connect |
| 51 | SPI_CLK | Input | LVCMOS | SPI Clock input. In UART mode, should be pulled down with resistor (1K to 10K Ohms) |
| 52 | SPI_CS | Input | LVCMOS 8mA | Active low SPI Chip Select. In UART mode, should be pulled down with resistor (1K to 10K Ohms) |

Table 1: Pin Description

Notes:

- Some interfaces are not used in the default configuration or mode of operation. These may be used in custom applications with appropriate firmware.
- Please contact Redpine Signals for application notes or for customization of a solution.

4 Electrical Characteristics

4.1 Absolute Maximum Ratings

Absolute maximum ratings in the table given below are the values beyond which the device could be damaged. Functional operation at or beyond these conditions is not guaranteed.

| Parameter | Symbol | Value | Units |
|---|--------------------|------------|-------|
| Input Supply voltage | V _{IN} | 3.6 | V |
| Supply voltage for I/O Rail | DVDD33 | 3.6 | V |
| Supply Voltage for the RF | VRF33 | 3.6 | V |
| RF Input Level | RFIN | 10 | dBm |
| Storage temperature | T _{store} | -65 to 150 | °C |
| Electrostatic discharge tolerance (HBM) | ESD _{HBM} | 2000 | V |
| Electrostatic discharge tolerance (MM) | ESD _{MM} | 200 | V |
| Electrostatic discharge tolerance (CDM) | ESD _{CDM} | 500 | V |

Table 2: Absolute Maximum Ratings

4.2 Recommended Operating Conditions

| Parameter | Symbol | Min. | Typ. | Max. | Units |
|----------------------|-----------------|------|------|------|-------|
| Input Supply voltage | V _{IN} | 3.1 | 3.3 | 3.6 | V |
| Ambient temperature | T _a | -40 | 25 | 85 | °C |

Table 3: Recommended Operating Conditions

4.3 DC Characteristics – Digital I/O Signals

| Parameter | Min. | Typ. | Max. | Units |
|---|------|------|------|-------|
| Input high voltage | 2 | - | 3.6 | V |
| Input low voltage | -0.3 | - | 0.8 | V |
| Output low voltage | - | - | 0.4 | V |
| Output high voltage | 3.0 | - | - | V |
| Input leakage current (at 3.3V or 0V) | - | - | ±10 | µA |
| Tristate output leakage current (at 3.3V or 0V) | - | - | ±10 | µA |

Table 4: Input/Output DC Characteristics

4.4 AC Characteristics – Digital I/O Signals

4.4.1 SPI Interface

| Parameter | Symbol | Min. | Typ. | Max. | Units |
|--------------------------------|--------|------|------|------|-------|
| SPI_CLK Frequency | Fspi | 0 | - | 25 | MHz |
| SPI_CS to output valid | Tcs | 3.5 | - | 7.5 | ns |
| SPI CS setup time | Tcst | 2 | - | - | ns |
| SPI_MOSI setup time | Tsd | 1 | - | - | ns |
| SPI_MOSI hold time | Thd | 1.5 | - | - | ns |
| SPI_MISO clock to output valid | Tod | 4 | - | 9.25 | ns |

Table 5: AC Characteristics – SPI Interface

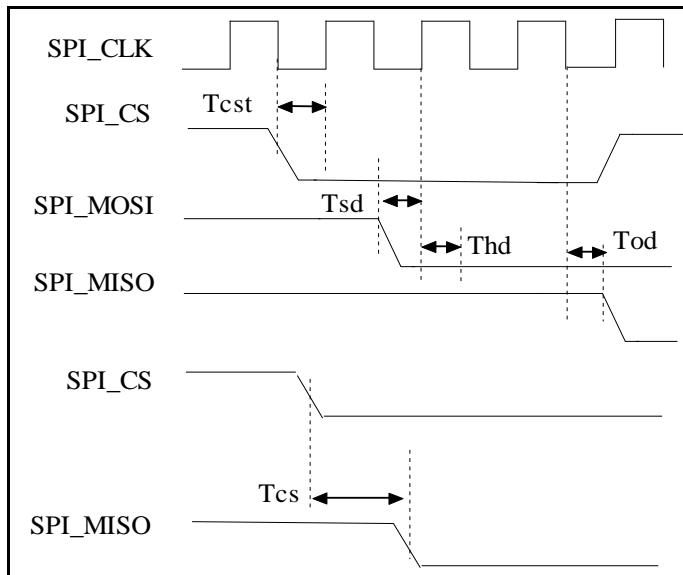


Figure 7:Interface Timings – SPI Interface

4.4.2 Reset Sequence and Timing

Following diagram shows the timing requirement for Reset_n input in two scenarios. This timing is valid for both UART and SPI based modules. The crystal oscillator output should be stable before releasing reset.

- A. Power-up
- B. Giving hard reset during module operation

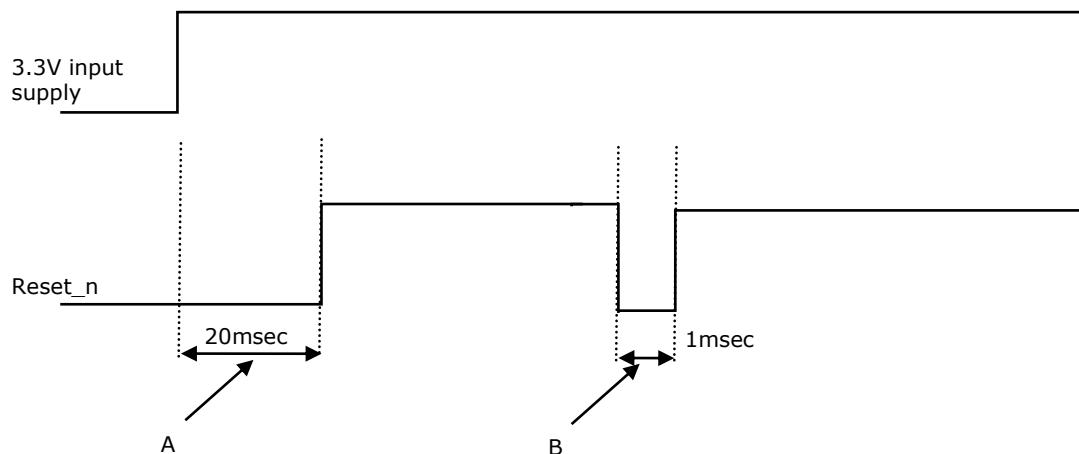


Figure 8:Reset Pin Timing Diagram

5 Performance Specifications

5.1 Wireless Specifications

| Feature | Description |
|------------------------------------|--|
| Frequency Band | 2.400 – 2.500 GHz (2.4 GHz ISM band) |
| Modulation | OFDM with BPSK, QPSK, 16-QAM, and 64-QAM 802.11b with CCK and DSSS |
| Supported Data Rates | 802.11n: 6.5, 13, 19.5, 26, 39, 52, 58.5, 65 Mbps 802.11a/g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps 802.11b: 1, 2, 5.5, 11 Mbps |
| 802.11n Features | MCS 0-7, STBC, RIFS, Greenfield Protection A-MPDU, A-MSDU Aggregation with Block-ack |
| Typical Transmit Power (+/- 2 dBm) | 17 dBm for 802.11b DSSS 17 dBm for 802.11b CCK 15 dBm for 802.11g/n OFDM |

Table 6: Wireless Specifications

5.2 Receive Sensitivity

| Data Rate | Typical Sensitivity (+/- 1.5 dBm) | Sweep – PER Floor |
|-----------|-----------------------------------|-------------------|
| 1 Mbps | -97.0 dBm | < 0.1% |
| 2 Mbps | -93.0 dBm | < 0.1% |
| 11 Mbps | -88.0 dBm | < 0.1% |
| 6 Mbps | -91.0 dBm | < 0.1% |
| 54 Mbps | -75.0 dBm | < 0.1% |
| 65 Mbps | -71.0 dBm | < 0.1% |

Table 7: Receive Characteristics – Sensitivity

Range varies with the conditions under which wireless communication is sought. For large office environments, in the presence of obstacles, a range of over 30 metres is observed, while in open, line-of-sight environments, over 300 metres is observed.

5.3 Throughput

| Interface | (TCP) Throughput |
|---|------------------|
| UART (measured at 115200 bauds per sec) | Tx – 75 kbps |

| Interface | (TCP) Throughput |
|-----------|--|
| | Rx – 72 kbps |
| SPI | Tx – 8 Mbps (TCP), 9 Mbps (UDP) Rx – 5 Mbps (TCP), 6 Mbps (UDP) |

The numbers are the actual application throughputs. For physical data rates, please refer to the table [Wireless Specifications](#).

5.4 Standards Compliance

RS9110-N-11-22 is compliant with the requirements of IEEE 802.11b, 802.11g and 802.11n that include the following:

- Transmit Spectral Mask
- Transmit Center Frequency Leakage
- Transmit Center Frequency Accuracy
- Symbol Clock Frequency Tolerance
- Transmit Constellation error
- Receiver Adjacent Channel Interference Rejection
- Receiver Non-adjacent Channel Rejection
- Receiver Minimum Input Level
- Receiver Maximum Input Level

6 Software Architecture Overview

The following figure depicts the software architecture of the RS9110-N-11-22 module.

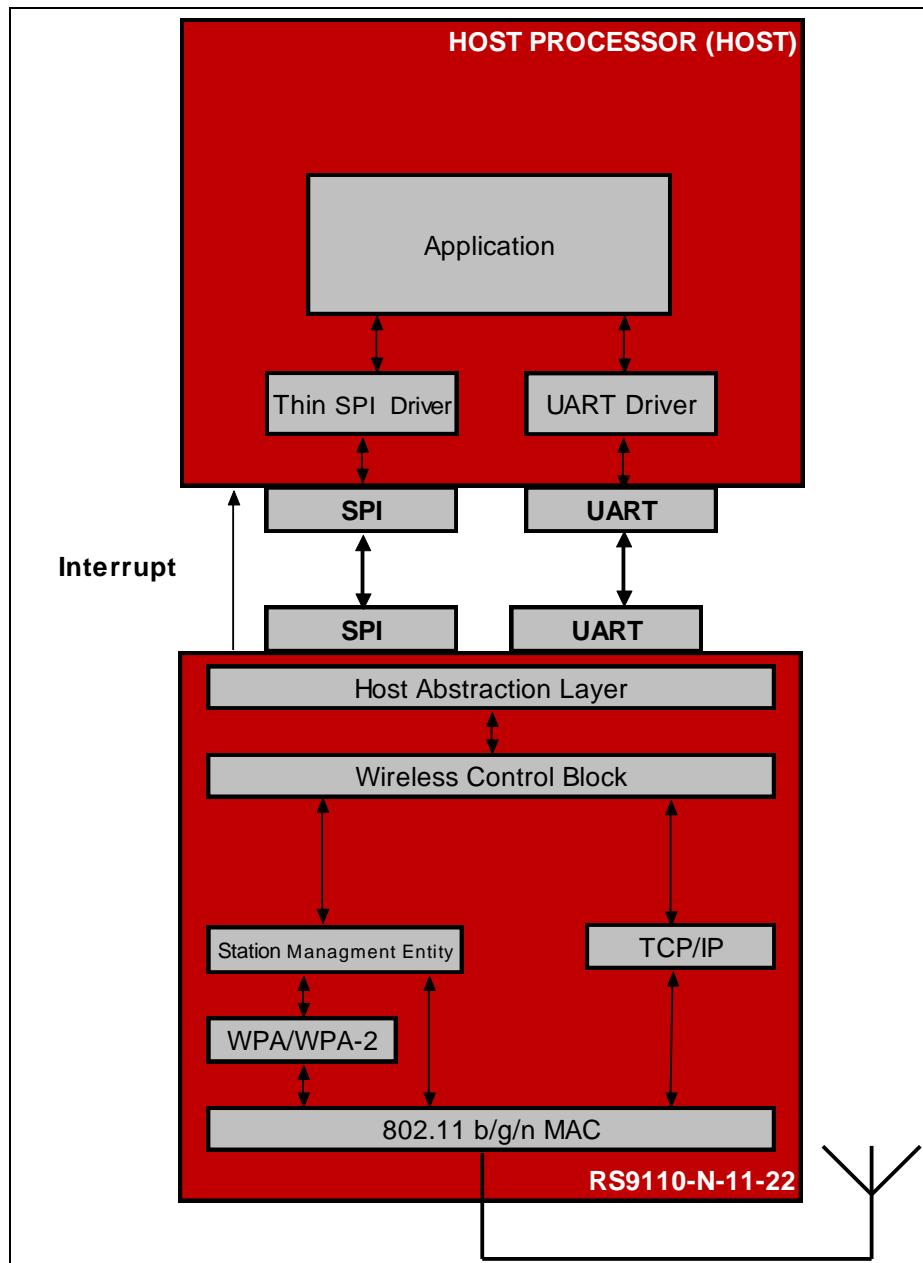


Figure 9:RS9110-N-11-22 Software Architecture Block Diagram

As shown in the figure above, the RS9110-N-11-22 module is integrated with the Host using either UART or SPI interfaces. The transmission and reception of the data to/from the Host depends on the interface used to connect the module as briefed below.

UART mode:

The Host transmits/receives raw data using UART interface when the RS9110-N-11-22 module is configured for UART mode. The access to the TCP/IP stack in the Wi-Fi module through the UART is provided through AT commands.

SPI mode:

Host transmits/receives raw data using SPI interface when the RS9110-N-11-22 module is configured for SPI mode. A thin driver on the Host takes care of interacting with the Wi-Fi module through the SPI Host interface.

The following sections explain in brief the various components illustrated in Figure 9.

6.1 Host

The Host is any system that has applications being executed and either a UART or SPI interface.

6.1.1 UART

The UART on the Host side provides an interface for the host to access the Wi-Fi module. UART is used to configure various parameters of the RS9110-N-11-22 module and also to send and receive data over the network by accessing the TCP/IP stack in the RS9110-N-11-22 module.

6.1.2 SPI

The SPI on the Host side provides an interface for the host to access the Wi-Fi module. SPI on the Host acts as the master.

6.1.3 Thin SPI Driver

The SPI driver on the Host is a thin driver through which the applications interact with the Wi-Fi module. The SPI driver uses the SPI host controller driver on the Host to send/receive the data to/from the RS9110-N-11-22 module and also to configure the same over the SPI interface.

6.2 RS9110-N-11-22

The RS9110-N-11-22 module incorporates Wi-Fi, TCP/IP, DHCP Client, ARP, etc., to act as a WLAN device. It handles all the network connectivity functions. The following sections describe the software components of the RS9110-N-11-22 module in brief.

6.2.1 SPI

The SPI on the RS9110-N-11-22 acts the SPI slave. It is a standard 4-wire SPI and can support a maximum frequency of 25MHz.

6.2.2 UART

The UART on the RS9110-N-11-22 module is the physical interface which transmits/receives the data from the Host. It supports variable baud rates from 9600 to 3686400 bps. There is support for AT commands to configure and operate the module through UART interface. Flow control is not supported.

6.2.3 Host Abstraction Layer (HAL)

The HAL abstracts the lower layers in the host interface with which the RS9110-N-11-22 module is connected. The HAL interacts with the Wireless Control Block layer for the processing of the frames obtained from or destined to the Host.

6.2.4 Wireless Control Block (WCB)

The data from/to the Host is classified as Wi-Fi specific frames and TCP/IP specific frames. The WCB layer processes the frame obtained and acts accordingly. The functionality of the WCB module depends on the type of the frame and the direction of the frame (in case of TCP/IP) as described below. The WCB interprets the Wi-Fi control information from the Host and interacts with the SME (Station Management Entity).

6.2.5 TCP/IP Control Frames

If the frames from the host are interpreted as TCP/IP specific frames then the WCB interacts with the TCP/IP stack.

6.2.6 Station Management Entity (SME)

The SME is the core layer which manages the Wi-Fi connectivity. The SME maintains the state machine to detect the activity on the Wi-Fi network and indicates to the user accordingly. It also performs re-association to the configured access point in Infrastructure mode. It interacts with the WPA supplicant if Security is enabled in the Wi-Fi network.

6.2.7 WPA Supplicant

The WPA supplicant is used to initiate the 802.1x/EAP authentication if WPA/WPA2-PSK is used as the security parameter. It also plays a major part in performing the 4-way handshake to derive the PTK in WPA/WPA2-PSK modes.

6.3 Power Save Modes

The RS9110-N-11-2X module supports three power modes. The Host can switch among the power modes depending on the Wi-Fi connection status as defined in this section.

6.3.1 Power Mode 0

In this mode, power save is disabled in the RS9110-N-11-2X module. The module will be in Power Mode 0 by default.

6.3.2 Power Mode 1

The RS9110-N-11-2X module powers off the Baseband, RF and also the Core Control Block. To power off the Core Control block, the RS9110-N-11-2X module sends request to Host for permission to sleep.

Once the permission is received the Core Control block is powered off. The Host has to wait for the module to wakeup based on the timer that is configured by the Host, before it can transmit any packets.

The functioning of the module in this mode depends on the connection status as explained below

1. Before Wi-Fi connection

In this state, the module is configured with a sleep timer. Once the timer expires, the module powers on the Core Control block and sends the request for sleep permission to the Host again. On getting permission the Host, the module will power off the Core Control block for another interval of the sleep period.

If the host wants to perform any Wi-Fi related activity like scanning or joining networks, it has to switch to Power Mode 0. After a connection is established, it can switch back to Power Mode 1 or 2.

2. After Wi-Fi Connection

In this state, the RS9110-N-11-2X module periodically wakes up to receive beacons from the Access Point (AP). If there is no data to be transmitted or received to/from the Access Point, it powers off the Baseband and RF components and requests the Host permission to turn off the Core Control block. On receiving permission from the Host, the module goes to sleep and wakes up before the next beacon comes.

6.3.3 Power Mode 2

The RS9110-N-11-2X module powers off the Baseband and RF components in this mode. The Core Control block interacting with the Host is always functional in this mode. Hence, the module can receive commands from the host at any time.

NOTE: The average current consumption in Power Mode 2 is higher than Power Mode 1.

The functioning of the module in this mode depends on the connection status as explained below

1. Before Wi-Fi connection

If this power mode is enabled before the Wi-Fi connection is established, the module powers off the Baseband and RF components until the Host reconfigures the module to Power Mode 0.

If the host wants to perform any Wi-Fi related activity like scanning and joining networks, it has to switch to Power Mode 0. This can be

done at any time during the operation. The Host can switch back to Power Modes 1 or 2 after the Wi-Fi connection is established.

2. After Wi-Fi Connection

In this state, the RS9110-N-11-2X module gets information from the Access Point to which it is connected for any buffered data at every beacon. If there is no data to be transmitted or received to/from the Access Point, it powers off the Baseband and RF components.

7 Ordering Information

Contact Information:

For additional information, please contact Sales at Redpine Signals, Inc.

Redpine Signals, Inc.

2107 North First Street, Suite 680,

San Jose, CA 95131 USA

Phone: +1 408 748 3385

E-mail: sales@redpinesignals.com

Website: <http://www.redpinesignals.com/>

Device Ordering Information:

The following table lists the part numbers to be used for ordering modules or evaluation boards (EVB). Redpine can create and provide customized firmware based on user requirements.

| Device Number | Description | Packaging | Qualification |
|-----------------------|--|------------------|----------------------|
| RS9110-N-11-22-04 | Part with UART/SPI as Host Interface and embedded chip antenna. UART or SPI mode can be selected using the pin MODE_SEL_1 | Tray | -40 C to +85 C |
| RS9110-N-11-22-05 | Part with UART/SPI as Host Interface and uFL connector for external antenna. UART or SPI mode can be selected using the pin MODE_SEL_1 | Tray | -40 C to +85 C |
| RS9110-N-11-22-04-EVB | Evaluation board with UART/SPI as Host Interface and embedded chip antenna. UART or SPI mode can be selected using the pin MODE_SEL_1 | Board | |
| RS9110-N-11-22-05-EVB | Evaluation board with UART/SPI as Host Interface and uFL connector for external antenna. UART or SPI mode can be selected using the pin MODE_SEL_1 | Board | |

Table 8: Device Ordering Information

Collateral:

The following documentation and software are available along with the RS9110-N-11-22 module.

- Embedded firmware for WLAN and TCP/IP stack
- AT Command Interface and SPI driver software
- Reference schematics and layout guidelines – Describes hardware schematics to operate the module in UART and SPI modes.
- Programming Reference Manual – Describes how to operate the module in UART and SPI modes.
- Evaluation Board (EVB) and related user guides

8 Command Reference(AT commands and SPI commands)

AT Command Set (for UART interface) and SPI command set (for SPI interface) supports the following in RS9110-N-11-XX module. This is an indicative list and not a full list. Full list of commands available in Programming Reference Manual.

- i. Configure the band to 2.4GHz
- ii. Initialize MAC and Baseband
- iii. Scan for available networks
- iv. Join an available network in infrastructure or ad-hoc modes
- v. Configure IP addresses
- vi. Open and close TCP and UDP sockets
- vii. Send and receive data
- viii. Soft reset
- ix. Query by host for network parameters like RSSI, IP addresses, security type etc.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помошь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001;
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помошь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



Как с нами связаться

Телефон: 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: org@eplast1.ru

Адрес: 198099, г. Санкт-Петербург, ул. Калинина, дом 2, корпус 4, литера А.