# ASL4501SHN

# Four-phase boost converter Rev. 2 — 10 January 2018

Product data sheet

#### Introduction 1.

The ASL4501SHN is a highly integrated and flexible four-phase DC-to-DC boost converter IC. It has a serial peripheral interface (SPI) allowing control and diagnostic communication with an external microcontroller.

It is designed primarily for use in automotive LED lighting applications and provides an optimized supply voltage for ASLx41xSHN multichannel LED buck driver.

#### 2. **General description**

The ASL4501SHN has a fixed frequency peak current mode control with parabolic/non-linear slope compensation. It can operate with input voltages from 5.5 V to 40 V. It can be configured via SPI for output voltages of up to 80 V, to power the LED buck driver IC.

The ASL4501SHN is a four-phase converter which can have two independent outputs. The driver has the flexibility to be configured, via the SPI, as a single output converter, or with multiple combinations of number of outputs and phases.

The ASL4501SHN boost converter can drive up to four external low-side N channel metal-oxide-semiconductor field-effect transistors (MOSFETs) from an internally regulated adjustable supply. It can be used to drive either logic or standard level MOSFETs.

The integrated SPI also allows for programming the supply under/overvoltage range, output voltage range and DC-to-DC switching frequency. It enables the optimization of external components and flexibility for electromagnetic compatibility (EMC) design. This interface can also be used to provide diagnostic information such as the driver temperature.

Additional features include protection against load dump transient voltages of up to 60 V and thermal shutdown when the junction temperature of the ASL4501SHN exceeds +175 °C.

The device is housed in a very small HVQFN32 pin package and is designed to meet the stringent requirements of automotive applications. It is fully AEC-Q100 grade 1 qualified. It operates over the -40 °C to +125 °C ambient automotive temperature range.



#### 3. Features and benefits

- The ASL4501SHN is an automotive grade product that is AEC-Q100 grade 1 qualified
- Operating ambient temperature range of -40 °C to +125 °C
- Wide operating input voltage range from 5.5 V to 40 V
- Output voltage programmable via SPI
- Multi-phase operation for higher power
- Up to four phases per output
- Up to two flexible output voltages with 3 % accuracy programmable via SPI
- Both output voltages can be controlled independently
- Fixed frequency operation via built-in oscillator
- Slope compensation tracks the frequency and output voltage
- Programmable control loop compensation
- Fast high efficiency field-effect transistor (FET) switching
- Programmable internal gate driver voltage regulator
- Gate switching is halted when overvoltage on output is detected
- Supports both logic level and standard level FETs
- Low electromagnetic emission (EME) and high electromagnetic immunity (EMI)
- Output voltage monitoring
- Supply voltage measurement
- Control signal to enable the device
- Read back programmed voltage and frequency range via SPI
- Junction temperature monitoring via SPI
- Small package outline HVQFN32
- Low quiescent current < 5 μA at 25 °C when EN = 0</p>
- Accurate power dissipation in phases assigned to one output

### 4. Applications


- Automotive LED lighting
  - Low beam
  - High beam
  - Daytime running lights
  - Turn indicator
  - Position or park light
  - Front fog light
  - Cornering light
  - Advanced front lighting

### 5. Ordering information

Table 1. Ordering information


Type number	Package		
	Name	Description	Version
ASL4501SHN	HVQFN32	plastic thermal enhanced very thin quad flat package; no leads; 32 terminals; body 5 $\times$ 5 $\times$ 0.85 mm	SOT617-12

### 6. Block diagram

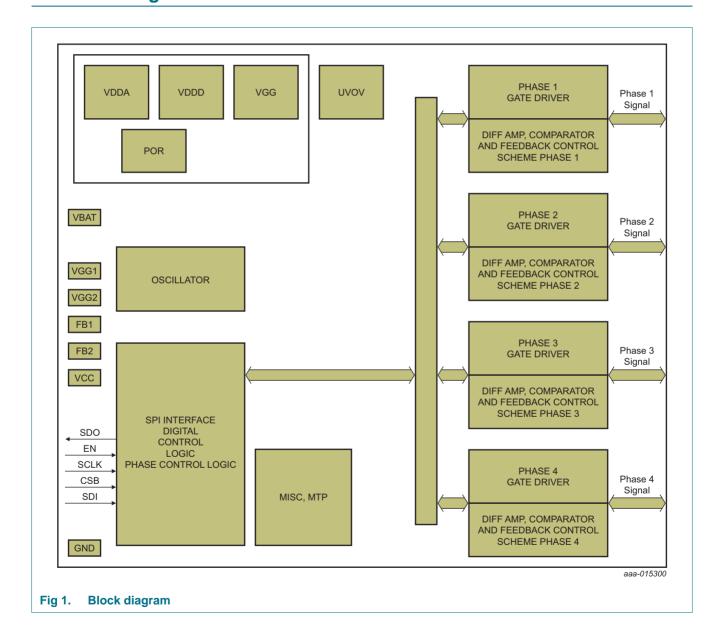

### 7. Pinning information

### 7.1 Pinning

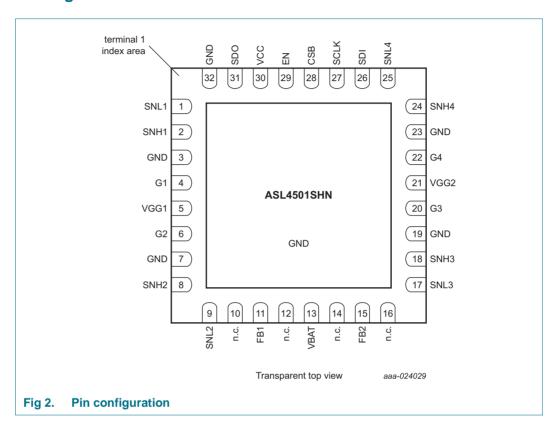

### 7.2 Pin description

Table 2. Pin description[1]

Symbol	Pin	Description
SNL1	1	phase 1 sense low
SNH1	2	phase 1 sense high
GND	3	ground
G1	4	phase 1 gate driver
VGG1	5	gate driver supply 1 <sup>[2]</sup>
G2	6	phase 2 gate driver
GND	7	ground
SNH2	8	phase 2 sense high
SNL2	9	phase 2 sense low
n.c.	10	not connected
FB1	11	feedback; to be connected to Vout1[3]
n.c.	12	not connected
VBAT	13	battery supply
n.c.	14	not connected

Table 2. Pin description[1] ...continued


Symbol	Pin	Description
FB2	15	feedback; to be connected to Vout2[3]
n.c.	16	not connected
SNL3	17	phase 3 sense low
SNH3	18	phase 3 sense high
GND	19	ground
G3	20	phase 3 gate driver
VGG2	21	gate driver supply 2 <sup>[2]</sup>
G4	22	phase 4 gate driver
GND	23	ground
SNH4	24	phase 4 sense high
SNL4	25	ph3ase 4 sense low
SDI	26	SPI data input
SCLK	27	SPI clock
CSB	28	SPI chip select
EN	29	enable signal
VCC	30	external 5 V supply
SDO	31	SPI data output
GND	32	chip ground

<sup>[1]</sup> For enhanced thermal and electrical performance, the exposed center pad of the package should be soldered to board ground (and not to any other voltage level).

<sup>[2]</sup> VGG1 and VGG2 are connected internally.

<sup>[3]</sup> Refer to Figure 4 and Figure 14 for the recommended connections for pin FB1 and pin FB2.

### 8. Functional description

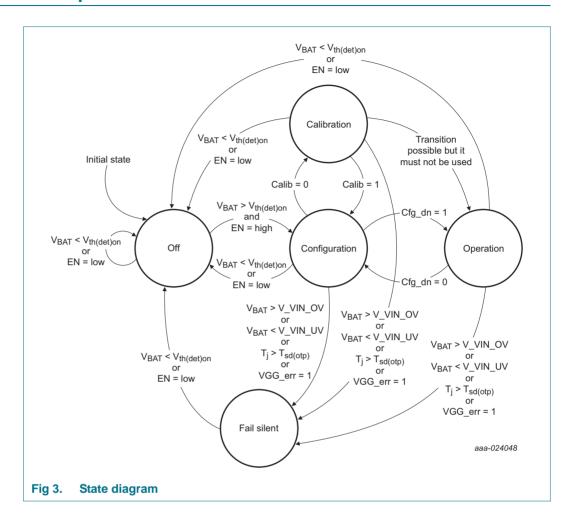

#### 8.1 Operating modes

Table 3. Operating modes

Mode	Control registers	Configuration registers	Diagnostic registers	VGG	Vout1 Vout2	Remarks
Off	n.a.	n.a.	n.a.	off	off	device is off, no communication possible
Configuration	read/write	read/write	read	off	off	VGG is off if no outputs were previously enabled
			read	according to register	off	VGG is on as soon as one of the outputs has been enabled
Operation	read/write	read	read	locked	according to register	configuration registers are locked
Fail silent	read/write	read	read <sup>[1]</sup>	off	off	communication possible, but all outputs off; restart via EN possible
Calibration	read/write	read/write	read	must be turned on	must be turned off	for successful calibration, the device has to be correctly configured, VGG has to be on and the outputs off; it is achieved by putting cfg_dn HIGH and LOW after the configuration of the device

<sup>[1]</sup> Setting the bit cfg\_dn to logic 0 also grants write access to the configuration registers.

#### 8.1.1 Off mode

The ASL4501SHN switches to off mode, if the input voltage drops below the power-on detection threshold voltage ( $V_{th(det)pon}$ ) or the EN pin is LOW.

In off mode, the SPI and all outputs are turned off.

#### 8.1.2 Configuration mode

The ASL4501SHN switches immediately from off mode to configuration mode, when the input voltage rises above the power-on detection threshold voltage (V<sub>th(det)pon</sub>) and pin EN is HIGH.

The configuration registers can be set when the ASL4501SHN is in the configuration mode.

#### 8.1.3 Operation mode

The ASL4501SHN switches from configuration mode to operation mode, as soon as the configuration done bit is set. Once the bit is set, the configuration registers are locked and cannot be changed.

In operation mode, the output is available as configured via the SPI. Setting bits Vout1en or Vout2en, initiates the gate driver. Once the gate driver is in regulation, signaled by bit VGG\_ok, the respective programmed target voltages are turned on. When the converters are on, the battery monitoring functionality is available.

#### 8.1.4 Fail silent mode


The ASL4501SHN switches from operation mode to fail silent mode, when the junction temperature exceeds the over temperature shutdown threshold or a gate driver error is detected. It also switches modes when the input voltage is below the undervoltage detection threshold or above the overvoltage detection threshold.

In fail silent mode, all outputs are turned off and only the SPI remains operational.


#### 8.2 Boost converter configuration

The ASL4501SHN is an automatic boost converter IC delivering constant DC-to-DC voltage to a load. It has a fixed frequency current mode control for an enhanced stable operation.

The ASL4501SHN offers four phases. Each phase consists of a coil, a resistor, a MOSFET and a diode as shown in Figure 4.

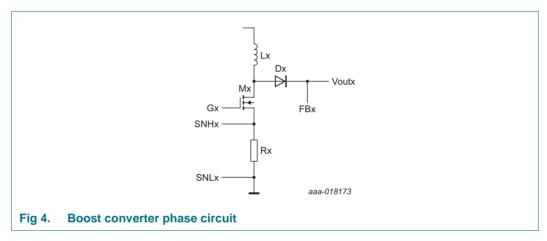

To allow flexible use of the ASL4501SHN, the configuration is based on virtual phases. The virtual phases are then mapped to a real physical phase according to the physical connections and conditions of the circuitry around the ASL4501SHN as shown in Figure 5.

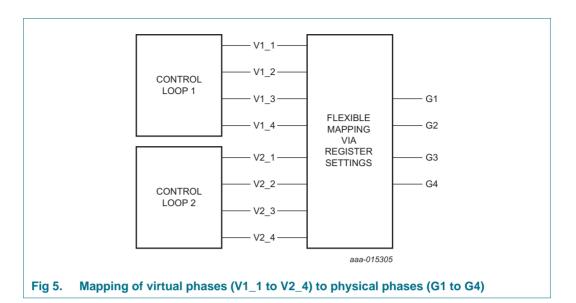

#### 8.2.1 Virtual phase configuration

The ASL4501SHN can generate up to four internal phases at up to two virtual outputs. With the internal phase control enable registers, it can be selected, how many virtual phases are generated for the individual virtual outputs.

Table 4. Internal phase control enable for phase logic 1 (address 0Bh)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved for future use: keep clear
3	EN_P4_1	phase 4 enabled	0	phase 4 is off
			1	phase 4 is enabled
2	EN_P3_1	phase 3 enabled	0	phase 3 is off
			1	phase 3 is enabled
1	EN_P2_1	phase 2 enabled	0 phase 2 is off	
			1	phase 2 is enabled
0	EN_P1_1	phase 1 enabled	0	phase 1 is off
			1	phase 1 is enabled

Table 5. Internal phase control enable for phase logic 2 (address 0Ch)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved for future use: keep clear
3	EN_P4_2	phase 4 enabled	0 phase 4 is off	
			1	phase 4 is enabled
2	EN_P3_2	phase 3 enabled	0	phase 3 is off
			1	phase 3 is enabled
1	EN_P2_2	phase 2 enabled	0 phase 2 is off	
			1	phase 2 is enabled
0	EN_P1_2	phase 1 enabled	0	phase 1 is off
			1	phase 1 is enabled

#### 8.2.2 Association of physical phases to the output voltages

The phase that the ASL4501SHN offers, must be associated to the output.

Table 6. Gate driver output (address 02h)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved for future use: keep clear
3	O_G4	association phase 4	0	phase 4 is connected to Vout1
			1	phase 4 is connected to Vout2
2	O_G3	association phase 3	0	phase 3 is connected to Vout1
			1	phase 3 is connected to Vout2
1	O_G2	association phase 2	0	phase 2 is connected to Vout1
			1	phase 2 is connected to Vout2
0	O_G1	association phase 1	0	phase 1 is connected to Vout1
			1	phase 1 is connected to Vout2

#### 8.2.3 Association of connected phases to the internal phase generation

Each physical phase that the ASL4501SHN offers, must be associated to one of the virtual phases of the output. It is established with the gate driver phase and phase select configuration registers.

Table 7. Gate driver phase (address 0Fh)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved for future use: keep clear
3	O_GP4	association phase 4	0	phase 4 is connected to phase logic 1
			1	phase 4 is connected to phase logic 2
2	O_GP3	association phase 3	0	phase 3 is connected to phase logic 1
			1	phase 3 is connected to phase logic 2
1	O_GP2	association phase 2	0	phase 2 is connected to phase logic 1
			1	phase 2 is connected to phase logic 2
0	O_GP1	association phase 1	0	phase 1 is connected to phase logic 1
			1	phase 1 is connected to phase logic 2

Table 8. Phase selection configuration (address 10h)

Bit	Symbol	Description	Value	Function
7 and 6	Phsel4[1:0]	phase select gate driver 4	0h	routing from phase 1
			1h	routing from phase 2
			2h	routing from phase 3
			3h	routing from phase 4
5 and 4	Phsel3[1:0]	phase select gate driver 3	0h	routing from phase 1
			1h	routing from phase 2
			2h	routing from phase 3
			3h	routing from phase 4

 Table 8.
 Phase selection configuration (address 10h) ...continued

Bit	Symbol	Description	Value	Function
3 and 2	Phsel2[1:0]	phase select gate driver 2	0h	routing from phase 1
			1h	routing from phase 2
			2h	routing from phase 3
			3h	routing from phase 4
1 and 0	Phsel1[1:0]	phase select gate driver 1	0h	routing from phase 1
			1h	routing from phase 2
			2h	routing from phase 3
			3h	routing from phase 4

#### 8.2.4 Enabling of connected phases

The gate driver enable register is used to configure which of the phases is active.

Table 9. Gate driver enable (address 01h)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved for future use: keep clear
3	EN_G4	phase 4 enabled	0	phase 4 is off
			1	phase 4 is enabled
2	EN_G3	phase 3 enabled	0	phase 3 is off
			1	phase 3 is enabled
1	EN_G2	phase 2 enabled	0	phase 2 is off
			1	phase 2 is enabled
0	EN_G1	phase 1 enabled	0	phase 1 is off
			1	phase 1 is enabled

#### 8.2.5 Boost converter frequencies configuration

The operation frequency of the boost converters can be set with via several SPI registers. To ensure a stable phase delay between the different phases, all timings are derived from the same oscillator. An integer number downscales the internal oscillator frequency for each regulation loop. This slower clock is then used to control the off time of a phase. It also controls the delay from one phase of the regulation loop to the next internal phase. The number of phases determinates finally when the phase is turned on again and defines so the operation frequency of the boost converter.

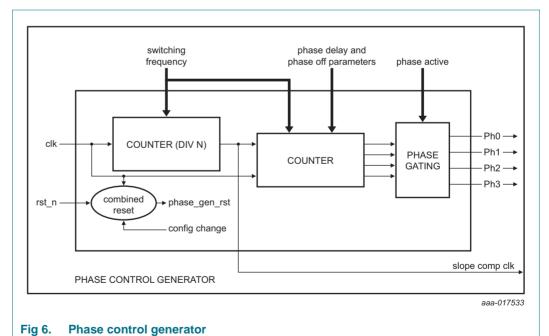


Table 10. Clock divider for Vout1 (address 09h)

Bit	Symbol	Description	Value	Function
7 to 0	Clkdiv1[7:0]	clock divider for phase logic 1	00h	clock is not divided
				clock is divided by Clkdiv1[7:0] + 1
			FFh	clock is divided by 256

#### Table 11. Clock divider for Vout2 (address 0Ah)

Bit	Symbol	Description	Value	Function
7 to 0		clock divider for phase	00h	clock is not divided
		logic 2		clock is divided by Clkdiv2[7:0] + 1
			FFh	clock is divided by 256

Table 12. Phase-off time and phase delay of output 1 (address 0Dh)

Bit	Symbol	Description	Value	Function
7 to 3 F	Phdel1[4:0]	delay to next	0h	phase delay is 1 clock period of the divided clock
		phase of phase logic 1		phase delay is Phdel1[4:0] + 1 clock period of the divided clock
			1Fh	phase delay is 32 clock periods of the divided clock
2 to 0	Phoff1[2:0]	phase-off time	0h	phase-off time is 1 clock period of the divided clock
		of phase logic 1		phase-off time is Phoff1[2:0] clock period of the divided clock
			7h	phase-off time is 7 clock periods of the divided clock

Table 13. Phase-off time and phase delay of output 2 (address 0Eh)

Bit	Symbol	Description	Value	Function
7 to 3		delay to next	0h	phase delay is 1 clock period of the divided clock
		phase of phase logic 2		phase delay is Phdel2[4:0] + 1 clock period of the divided clock
			1Fh	phase delay is 32 clock periods of the divided clock
2 to 0	Phoff2[2:0]	phase-off time	0h	phase-off time is 1 clock period of the divided clock
		of phase logic 2		phase-off time is Phoff2[2:0] clock period of the divided clock
			7h	phase-off time is 7 clock periods of the divided clock

**Note:** To obtain the best performance of the internal slope compensation, keep the settings of the delay between the phases as close to 32 as possible.

#### 8.2.6 Control loop parameter settings

The ASL4501SHN is able to operate with a wide range of external components and offers a wide range of operating frequencies. To achieve maximum performance for each set of operation conditions, set the control loop parameters in accordance with the external components and operating frequency.

Table 14. Loop filter proportional configuration (address 11h)

Bit	Symbol	Description	Value	Function
7 to 4	Prop2[3:0] proportional factor	proportional factor	0h	proportional factor output 2 is 0.05
		output 2		proportional factor output 2 is Prop2[3:0] × 0.05 + 0.05
			Fh	proportional factor output 2 is 0.8
3 to 0	Prop1[3:0]	proportional factor	0h	proportional factor output 1 is 0.05
		output 1		proportional factor output 1 is Prop1[3:0] × 0.05 + 0.05
			Fh	proportional factor output 1 is 0.8

#### Table 15. Loop filter integral configuration (address 12h)

Bit	Symbol	Description	Value	Function
7 to 4	7 to 4 Integ2[3:0] integral factor output 2	integral factor	0h	integral factor output 2 is 0.005
			integral factor output 2 is Integ2[3:0] $\times$ 0.005 + 0.005	
			Fh	integral factor output 2 is 0.08
3 to 0	3 to 0 Integ1[3:0] integral fa	integral factor	0h	integral factor output 1 is 0.005
		output 1		integral factor output 1 is Integ1[3:0] $\times$ 0.005 + 0.005
			Fh	integral factor output 1 is 0.08

Table 16. Slope compensation configuration (address 13h)

Bit	Symbol	Description	Value	Function
7 to 4	Slpcmp2[3:0]	slope	0h	slope compensation factor output 2 = 112 k $\Omega$
		compensation factor output 2	1h	slope compensation factor output 2 = 84 $k\Omega$
		lacioi output 2	2h	slope compensation factor output 2 = 70 k $\Omega$
			4h	slope compensation factor output 2 = 56 k $\Omega$
			8h	slope compensation factor output 2 = $28 \text{ k}\Omega$
3 to 0	Slpcmp1[3:0]	slope	0h	slope compensation factor output 1 = 112 k $\Omega$
		compensation factor output 1	1h	slope compensation factor output 1 = 84 $k\Omega$
			2h	slope compensation factor output 1 = 70 k $\Omega$
			4h	slope compensation factor output 1 = 56 k $\Omega$
			8h	slope compensation factor output 1 = 28 $k\Omega$

Table 17. Current sense slope resistor configuration (address 14h)

Bit	Symbol	Description	Value	Function
7 and 6 SI	Slpr4[1:0]	slope resistor configuration	0h	250 Ω
		for gate driver 4	1h	500 Ω
			2h	1000 Ω
			3h	1500 Ω
5 and 4 Slpr3[1:0]	slope resistor configuration	0h	250 Ω	
	for gate driver 3	1h	500 Ω	
			2h	1000 Ω
			3h	1500 Ω
3 and 2 Slpi	Slpr2[1:0]	slope resistor configuration	00h	250 Ω
		for gate driver 2	1h	500 Ω
			2h	1000 Ω
			3h	1500 Ω
1 and 0	Slpr1[1:0]	slope resistor configuration for gate driver 1	0h	250 Ω
			1h	500 Ω
			2h	1000 Ω
			3h	1500 Ω

#### 8.3 Output voltage programmability

The ASL4501SHN provides the possibility to program the output voltage and output overvoltage protection of the output via the SPI.

#### 8.3.1 Output voltage target programmability

The target output voltage can be programmed via the output voltage registers. As the ASL4501SHN is a boost converter, the output voltage cannot be lower than the supply voltage minus the drop of the converter diode (Dx in Figure 4).

Table 18. Output voltage 1 register (address 03h)

Bit	Symbol	Description	Value	Function
7 to 0	V_Vout_1[7:0]	target voltage output 1	00h	output 1 is turned off
				target voltage output 1 = $0.3555 \times V_{volt_1[7:0]} \times (1 + (333 \times 10^{-6}) \times (T_{junction[7:0]} - 38))$
			FFh	maximum target output voltage = 90 V

Table 19. Output voltage 2 register (address 04h)

Bit	Symbol	Description	Value	Function
7 to 0	V_Vout_2[7:0]	target voltage output 2	00h	output 2 is turned off
				target voltage output 2 = $0.3555 \times V_{\text{out}}[7:0] \times (1 + (333 \times 10^{-6}) \times (T_{\text{junction}}[7:0] - 38))$
			FFh	maximum target output voltage = 90 V

#### 8.3.2 Output overvoltage protection programming

Due to fast changes in the supply or the output, it is possible that the output voltage is disturbed. To avoid high voltages that may result into damage of attached components, the ASL4501SHN offers a programmable overvoltage protection threshold. Once the output voltage is above this threshold, the gate pin of the output stops toggling. It results in a halt of the energy delivery to the output.

Once the output voltage recovers and is below the threshold again, the gate pin starts toggling again. The regulation loop regulates the output back to the target value.

For stable operation of the device, the limit voltage output register should be programmed around 5 V higher than the output voltage registers.

Table 20. Limit voltage output 1 register (address 05h)

Bit	Symbol	Description	Value	Function
7 to 0	Vmax_Vout_1[7:0]	limit output 1	00h	output 1 is turned off
				output overvoltage protection output 1 = $0.3555 \times V_{vout_1[7:0]} \times (1 + (333 \times 10^{-6}) \times (T_{junction[7:0]} - 38))$
			FFh	maximum output overvoltage protection output 1 = 90 V

Table 21. Limit voltage output 2 register (address 06h)

Bit	Symbol	Description	Value	Function
7 to 0	Vmax_Vout_2[7:0]	limit output 2	00h	output 2 is turned off
				output overvoltage protection output 2 = $0.3555 \times V_{out_2[7:0]} \times (1 + (333 \times 10^{-6}) \times (T_{junction_[7:0]} - 38))$
			FFh	maximum output over voltage protection output 2 = 90 V

#### 8.4 Coil peak current limitation

The ASL4501SHN offers a function to limit peak current inside the coil and therefore to limit the input current for the system. Furthermore, this functionality can be used to avoid magnetic saturation of the coils and allow some soft start feature to be realized.

With the maximum phase current Voutx registers, the maximum peak current for the individual phases assigned to the output can be configured. Once the voltage drop between pins SNLx and SNHx reaches this level, the gate will be turned off until the next switching cycle. To avoid sub harmonic oscillations when the coil peak current limitation is becoming active, the slope compensation is still active. It reduces the coil peak current toward the end of the switching cycle to ensure stable operation of the system.

To avoid that this function interferes with the normal regulation, the limit should be placed well above the maximum expected currents.

Table 22. Maximum phase current Vout1 register (address 07h)

Bit	Symbol	Description	Value	Function
7 to 0	I_max_per_phase_Vout1[7:0]	coil current	00h	no current allowed
		limitation for phases assigned to		maximum peak current = $(I_max_per_phase_Vout1[7:0] \times 1.8 \text{ V} / 256 - 0.24 \text{ V}) / R_{sense}$
		Vout1	64h	maximum allowed setting = $(128 / 256 \times 1.8 \text{ V} - 0.24 \text{ V}) / R_{\text{sense}}$
				not allowed
			FFh	not allowed

Table 23. Maximum phase current Vout2 register (address 08h)

Bit	Symbol	Description	Value	Function
7 to 0	I_max_per_phase_Vout2[7:0]	coil current	00h	no current allowed
		limitation for phases		maximum peak current = (I_max_per_phase_Vout2[7:0] × 1.8 V / 256 - 0.24 V) / R <sub>sense</sub>
		assigned to Vout2	64h	maximum allowed setting = $(128 / 256 \times 1.8 \text{ V} - 0.24 \text{ V}) / R_{\text{sense}}$
				not allowed
			FFh	not allowed

### 8.5 Enabling output voltage

The ASL4501SHN provides two independent output voltages. In operation mode, the output voltages are turned on with the bits Vout1en and Vout2en.

As soon as one of the outputs is turned on, the gate driver voltage regulator is turned on. After the gate driver start-up time, the gate drivers start switching if the bit VGG\_ok is set.

Table 24. Function control register (address 00h)

Bit	Symbol	Description	Value	Function
7 to 4	-	reserved	0000	reserved: keep clear for future use
3	Cnt_CSB	count chip select time	0	chip select LOW count feature is disabled
			1	chip select LOW count feature is enabled
2	Vout2en	enable output 2	0	output 2 is turned off
		1	output 2 is turned on, when the device is in operation mode	
1	Vout1en	enable output 1	0	output 1 is turned off
			1	output 1 is turned on, when the device is in operation mode
0	Cfg_dn	configuration done	0	device is in configuration mode - no configuration lock
			1	device is in configuration mode - configuration lock is active


#### 8.6 Trimming and calibration

The ASL4501SHN offers an option to trim the oscillator frequency and calibrate the output phases. The trimming allows highly accurate switching frequency. The calibration ensures matching of the power delivered by the individual phases toward an output.

#### 8.6.1 Frequency trimming

It is mandatory to adjust the internal oscillator frequency of the device to ensure the ASL4501SHN is operating within the specified oscillator frequency range.

To measure the actual internal frequency, the device measures the time that the CSB pin is LOW during an SPI transfer. This time information is used to adjust the oscillator frequency of the device. The recommended procedure for the time adjustment is shown in Figure 7.

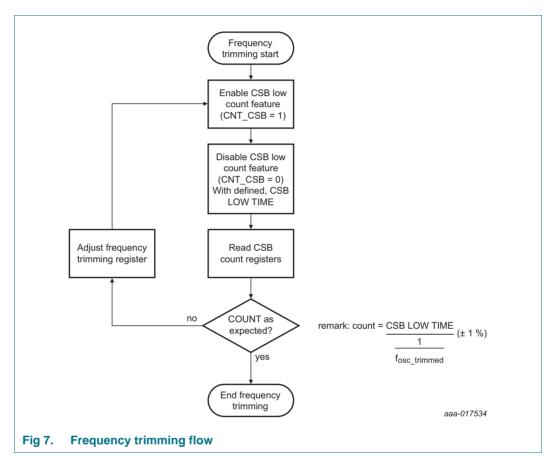

At the start of the sequence, the CSB LOW count feature is activated. It is done by setting the Cnt\_CSB bit HIGH in the frequency trimming control register (bit 3; register 00h). The device now measures the time with its internal time domain each time the CSB pin is LOW. It makes this information available in the CSB count registers. To allow an exact stable reading, set the Cnt\_CSB bit LOW again with an accurately known CSB LOW time. Setting the bit LOW freezes the count registers. These registers store the last value, which in this case is the command that sets the Cnt\_CSB bit LOW.

The CSB count registers contain the count of the CSB LOW time of the last SPI command the CSB LOW count feature was enabled. CSB count register 1 contains the bits 7 to 0 of the counter, while the CSB count register 2 contains the bits 15 to 8.

Table 25. CSB count register 1 (address 41h)

Bit	Symbol	Description	Value	Function
7 to 0	CSB_cnt[7:0]	CSB count LOW		count value (bits 7 to 0)

Table 26. CSB count register 2 (address 42h)

Bit	Symbol	Description	Value	Function
15 to 8	CSB_cnt[15:8]	CSB count HIGH		count value (bits 15 to 8)

The count, the CSB count register returns, should correspond to the real time of the CSB LOW time. 1 count should correspond with  $1/f_{osc\ trimmed}$  (see <u>Table 46</u>).

When the CSB count register count, deviates from the applied CSB LOW time, adjust the device internal timing by modifying the frequency trimming register.

To ensure that the adjustment had the desired effect, restart the procedure and check the count with the new settings in the frequency trimming register.

When the device internal time matches the applied CSB LOW time, no further adjustment is needed and the trimming procedure is finished.

#### 8.6.2 Calibration

A calibration of the IC can be initiated at power-up. The calibration ensures the individual activated phases connected to one output of the ASL4501SHN conduct the same amount of power. The calibration of the device takes care that any spread coming from the IC is minimized. Any effect from external components is not taken care of by the calibration.

As a pre-condition for the calibration, device has to be configured with the target configuration with the integral and proportional factors set to max value. The VGG regulator has to signal VGG\_ok. When the Calib bit [bit 0 in frequency trimming register (address 1Ch)] is set LOW, the calibration starts. After t\_calib, the calibration is completed and the calibration done bit will be set. The result of the calibration can be read in the calibration result register (address 4Ch).

#### Note:

While the device is in calibration mode, the device operates with the default oscillator frequency.

To ensure that the device is operating with a valid calibration, it is recommended to execute the calibration multiple times. Valid calibrations give similar calibration values. Invalid calibrations, e.g. because of external disturbances, give outliers.

A restart of the calibration is only allowed once the running calibration is completed or the device was in off mode.

#### 8.6.3 Trimming and calibration registers

The frequency trimming register contains the trim bits for the oscillator, but is also used to allow access to the calibration values.

Table 27. Calibration/frequency trimming register (address 1Ch)

Bit	Symbol	Description	Value	Function
7 and 6	-	reserved	-	n.a.
5 to 1	Calib/Ftrim[4:0]	frequency trim bits 4 to 0		Calib = 1: frequency trim setting
		calibration bits 4 to 0		Calib = 0: pointer to calibration data
0	Calib	calibration/frequency	1	frequency trimming - normal operation
	trimming		0	calibration mode

ASL4501SHN

Table 28. Calib/Ftrim settings

Bit	Symbol	Description	Value	Function
4 to 0	Calib/Ftrim[4:0]	frequency trimming	01000	default frequency – 33.33 %
		bits	01001	default frequency – 30.56 %
			01010	default frequency – 27.78 %
			01011	default frequency - 25.00 %
			01100	default frequency - 22.22 %
			01101	default frequency - 19.44 %
			01110	default frequency - 16.67 %
			01111	default frequency - 13.89 %
			00000	default frequency - 11.11 %
			00001	default frequency – 8.33 %
			00010	default frequency – 5.56 %
			00011	default frequency – 2.78 %
			00100	default frequency
			00101	default frequency + 2.78 %
			00110	default frequency + 5.56 %
			00111	default frequency + 8.33 %
			11000	default frequency + 11.11 %
			11001	default frequency + 13.89 %
			11010	default frequency + 16.67 %
			11011	default frequency + 19.44 %
			11100	default frequency + 22.22 %
			11101	default frequency + 25.00 %
			11110	default frequency + 27.78 %
			11111	default frequency + 30.56 %
			10000	default frequency + 33.33 %
			10001	default frequency + 36.11 %
			others	not allowed
		content of calibration result register (4Ch);		oration complete bit: tion complete; 0 = calibration ongoing
		Calib/Ftrim[4:0] select	4h	bits 4 to 0 calibration value REF2
		the content available in register 4Ch	6h	bits 4 to 0 calibration value CAL2
			8h	bits 4 to 0 calibration value REF3
			Ah	bits 4 to 0 calibration value CAL3
			Ch	bits 4 to 0 calibration value REF4
			Eh	bits 4 to 0 calibration value CAL4

The calibration result register contains the calibration results based on the selection of the Calib/Ftrim[4:0] setting in Table 27.

Table 29. Calibration result register (address 4Ch)

Bit	Symbol	Description	Value	Function
7 to 0	Calib_value[7:0]	calibration value as selected per Calib/Ftrim[4:0] setting	,	calibration info per Calib/Ftrim[4:0] setting

#### 8.7 Gate supply voltage

The ASL4501SHN has an integrated linear regulator to generate the supply voltage of the gate drivers. The integrated linear regulator is internally connected to the pins VGG1 and VGG2. The voltage generated by the linear regulator can be set via the VGG control register.

Table 30. VGG control register (address 15h)

Bit	Symbol	Description	Value	Function
7 to 0	VGG[7:0]	supply voltage for gate drivers	00h	not allowed
				not allowed
			5Dh	maximum output voltage = 10.3 V
				16.25 V – 64 mV × VGG[7:0]
			B7h	minimum output voltage = 4.54 V
				not allowed
			FFh	not allowed

If a setting between 00h and 5Dh is used, a gate driver voltage is targeted that exceeds the limiting values of the IC. Do not program these settings. To ensure that only values in the allowed range are set inside the IC, read back the programmed value immediately after setting it.

If a setting between FFh and B7h is used, the device may not start up VGG. If the device operates, parameters of VGG are not guaranteed.

#### 8.7.1 Gate voltage supply diagnostics

The diagnostic options for the gate voltage supply are:

- Gate driver available; details can be found in Section 8.10
- Gate driver protection active; details can be found in Section 8.10

#### 8.8 Supply voltage monitoring

When at least one of the outputs is enabled and bit VGG\_ok is set, the ASL4501SHN continuously measures the voltage at pin VBAT. It allows the system to monitor the supply voltage without additional external components. It also offers the option to put an automatic undervoltage or overvoltage protection in place.

Note: The VIN\_UV and VIN\_OV bits in the status register use the battery voltage measurement. As a result, the VIN\_UV and VIN\_OV bits are only reliable when at least one output is enabled.

#### 8.8.1 Battery voltage measurement

The ASL4501SHN continuously measures the voltage at pin VBAT. The measurement result is available in the battery voltage register when at least one output is enabled.

Table 31. Battery voltage register (address 45h)

Bit	Symbol	Description	Value	Function
7 to 0	V_VBAT[7:0]	battery voltage	00h	battery voltage = 0 V
				battery voltage = $0.3555 \times V_VBAT[7:0] \times (1 + (333 \times 10^{-6}) \times (T_junction[7:0] - 38))$
			FFh	maximum measurable battery voltage = 90 V

#### 8.8.2 Undervoltage detection

The ASL4501SHN offers a variable undervoltage detection threshold. When the supply voltage drops below this threshold, the undervoltage detect bit is set, and fail silent mode is entered. All gate pins stop toggling and power is no longer delivered to the output.

Table 32. Undervoltage threshold register (address 1Bh)

Bit	Symbol	Description	Value	Function
7 to 0	V_VIN_UV[7:0]	undervoltage	00h	undervoltage detection threshold = 0 V
		detection threshold		undervoltage detection threshold = $0.3555 \times V_{VIN_{UV}[7:0]} \times (1 + (333 \times 10^{-6}) \times (T_{junction[7:0]} - 38))$
			FFh	maximum undervoltage detection threshold = 90 V

#### 8.8.3 Overvoltage detection

The ASL4501SHN offers a variable overvoltage detection threshold. When the supply voltage rises above this threshold, the overvoltage detect bit is set, and fail silent mode is entered. All gate pins stop toggling and power is no longer delivered to the output.

Table 33. Overvoltage threshold register (address 1Ah)

Bit	Symbol	Description	Value	Function
7 to 0	V_VIN_OV[7:0]		00h	overvoltage detection threshold = 0 V
	detection threshold		overvoltage detection threshold = $0.3555 \times V_VIN_OV[7:0] \times (1 + (333 \times 10^{-6}) \times (T_junction[7:0] - 38))$	
			FFh	maximum overvoltage detection threshold = 90 V

#### 8.9 Junction temperature information

The ASL4501SHN provides a measurement of the IC junction temperature. The measurement information is available in the junction temperature register.

Table 34. Junction temperature register (address 46h)

Bit	Symbol	Description	Value	Function
7 to 0	T_junction[7:0]	,	0h to 17h	device junction temperature below -40 °C
		temperature	18h	device junction temperature = -40 °C
				device junction temperature = T_junction[7:0] × (215 / 106) °C - 88 °C
	821	82h	device junction temperature = 175 °C	
			83h to FFh	device junction temperature above 175 °C

#### 8.10 Diagnostic information

The diagnostic register contains useful information for diagnostic purposes. Details for each bit can be found in the following subchapters.

Table 35. Diagnostic register (address 5Fh)

Bit	Symbol	Description	Value	Function
7	Vout1_ok	Vout1 regulated	0	Vout1 is deviating from the target value
			1	Vout1 is regulated to the target value
6	Vout2_ok	Vout2 regulated	0	Vout2 is deviating from the target value
			1	Vout2 is regulated to the target value
5	VGG_ok	gate driver regulation is ok	0	gate driver is not available
			1	gate driver is available
4	Tj_err	device temperature	0	device temperature below 175 °C
		is too high	1	device temperature above 175 °C
3	VIN_UV	VIN undervoltage	0	undervoltage not detected at VIN
			1	undervoltage detected at VIN
2	VIN_OV	VIN overvoltage	0	overvoltage not detected at VIN
			1	overvoltage detected at VIN
1	SPI_err	SPI error	0	last SPI command was executed correctly
			1	last SPI command was erroneous and has been discarded
0	VGG_err	VGG error	0	VGG overload protection not active
			1	VGG overload protection has turned on and VGG is deactivated

#### 8.10.1 Bit VIN OV

The bit VIN\_OV depends on the battery monitoring functionality as described in <u>Section 8.8</u>. It indicates that the device has detected an overvoltage condition and entered the fail silent mode. A write access to the diagnostic register, or once the off mode is entered, clears the bit. The device stays in fail silent mode irrespective of the clearing of the bit.

#### 8.10.2 Bit VIN UV

The bit VIN\_UV depends on the battery monitoring functionality as described in <u>Section 8.8</u>. It indicates that the device has detected an undervoltage condition and entered the fail silent mode. A write access to the diagnostic register, or once the off mode is entered, clears the bit. The device stays in fail silent mode irrespective of the clearing of the bit.

#### 8.10.3 Bit SPI err

The device evaluates all SPI accesses to the device for the correctness of the commands. When the command is not allowed, the SPI\_err bit is set. A write access to the diagnostic register, or once off mode has been entered, clears the bit.

#### 8.10.4 Bit Tj\_err

The bit Tj\_err indicates that the junction temperature has exceeded the maximum allowable temperature, and the device has entered fail silent mode. A write access to the diagnostic register, or once off mode has been entered, clears the bit. The device stays in fail silent mode irrespective of the clearing of the bit. After leaving the off mode (at IC start-up), it is possible that bit Tj\_err is set. To avoid wrong diagnostics, clear the diagnostic register before it is evaluated.

#### 8.10.5 Bit VGG err

Bit VGG\_err is set when the gate driver does not reach the VGG\_ok \_window (when  $V_{VGG}$  is within range) within the regulator voltage start-up error time. Once bit VGG\_err is set, it indicates that an error on the gate driver has been detected and the device has entered fail silent mode. A write access to the diagnostic register, or once off mode has been entered, clears the bit. The device stays in fail silent mode irrespective of the clearing of the bit.

#### 8.10.6 Bit VGG ok

The bit VGG\_ok indicates that the gate driver is regulated to the target voltage and allows the gate drivers to drive the gate driver pins. If the gate driver is outside the VGG\_ok window after t<sub>startup</sub>, and V<sub>VGG</sub> is within range, the device clears VGG\_ok bit and enters fail silent mode.

#### 8.10.7 Bits Vout1 ok and Vout2 ok

The bits Vout1\_ok and Vout2\_ok indicate whether the output voltage is regulated to the target value or deviating from the target value. The bits are set as soon as the corresponding output is within the Vout\_ok window (when  $V_O$  is within the range) for more than  $t_{fltr(OV)}$ . The bits are cleared when the corresponding output is outside the Vout\_ok window for more than  $t_{fltr(OV)}$ .

#### 8.11 SPI

The ASL4501SHN uses an SPI to communicate with an external microcontroller. The SPI can be used for setting the LEDs current, reading and writing the control register.


#### 8.11.1 SPI introduction

The SPI provides the communication link with the microcontroller, supporting multi-slave operations. The SPI is configured for full duplex data transfer, so status information is returned when new control data is shifted in. The interface also offers a read-only access option, allowing the application to read back the registers without changing the register content.

The SPI uses four interface signals for synchronization and data transfer:

- CSB SPI chip select; active LOW
- SCLK SPI clock default level is LOW due to low-power concept
- SDI SPI data input
- SDO SPI data output floating when pin CSB is HIGH

Bit sampling is performed on the falling clock edge and data is shifted on the rising clock edge as illustrated in Figure 8.

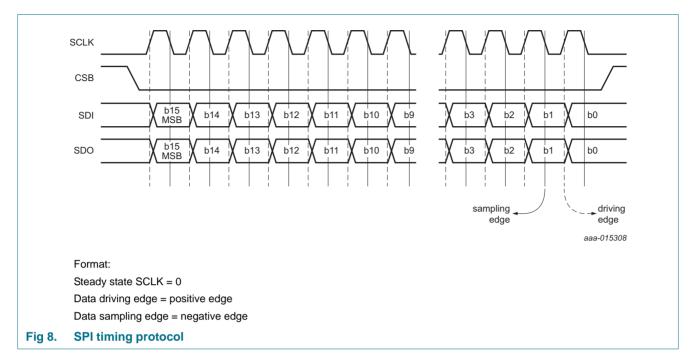

The data bits of the ASL4501SHN are arranged in registers of one-byte length. Each register is assigned to a 7-bit address. For writing into a register, 2 bytes must be sent to the LED driver. The first byte is an identifier byte that consists of the 7-bit address and one read-only bit. For writing, the read-only bit must be set to logic 0. The second byte is the data that is written into the register, so an SPI access consists of at least 16 bits.

The SPI frame format is shown in Figure 9, Table 36 and Table 37.

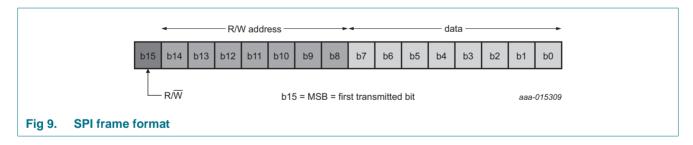


Table 36. SPI frame format for a transition to the device

Bit	Symbol	Description	Value	Function
15	b15	R/W bit	0	write access
			1	read access
14 to 8	b14:8	address bits	XXX XXXX	address that is selected
7 to 0	b7:0	data bits	XXXX XXXX	data that is transmitted


Table 37. SPI frame format for a transition from the device


Bit	Symbol	Description	Value	Function <sup>[1]</sup>
15 to 8	b8:15	diagnostic register	XXXX XXXX	content of diagnostic register
7 to 0	b7:0	data bits	XXXX XXXX	when previous command was a valid read command, content of the register that is supposed to be read
			XXXX XXXX	when previous command was a valid write command, new content of the register that was supposed to be written

<sup>[1]</sup> The first SPI command after leaving the off mode, will return 00h.

The master initiates the command sequence. The sequence begins with CSB pin pulled LOW and lasts until it is asserted HIGH.

The ASL4501SHN also tolerates SPI accesses with a multiple of 16 bits. It allows a daisy chain configuration of the SPI.

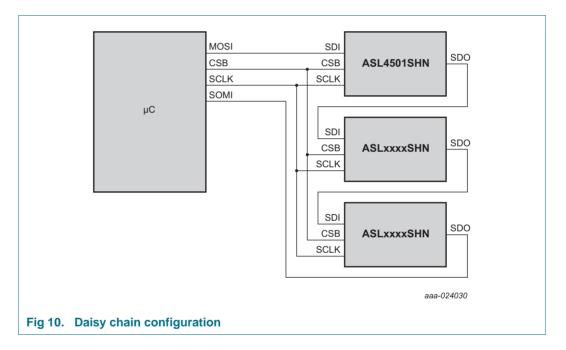

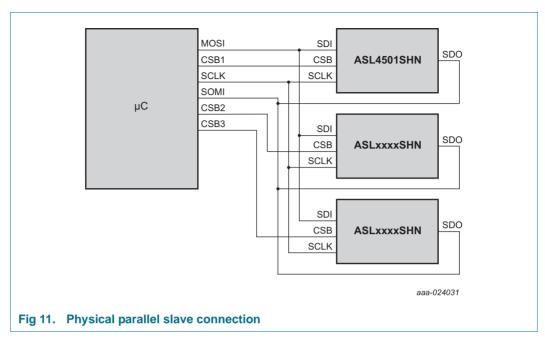


During the SPI data transfer, the identifier byte and the actual content of the addressed registers is returned via the SDO pin. The same happens for pure read accesses. Here the read-only bit must be set on logic 1. The content of the data bytes that are transmitted to the ASL4501SHN is ignored.

The ASL4501SHN monitors the number of data bits that are transmitted. If the number is not 16, or a multiple of 16, then a write access is ignored and the SPI error indication bit is set.

#### 8.11.2 Typical use case illustration (write/read)

Consider a daisy chain scheme with one master connected to four slaves in daisy chain fashion. The following commands are performed during one sequence (first sequence):

- Write data FFh to the register 1Ah slave 1
- Read from register 02h of slave 2
- Write data AFh to the register 2Fh of slave 3
- Read from register 44h of slave 4

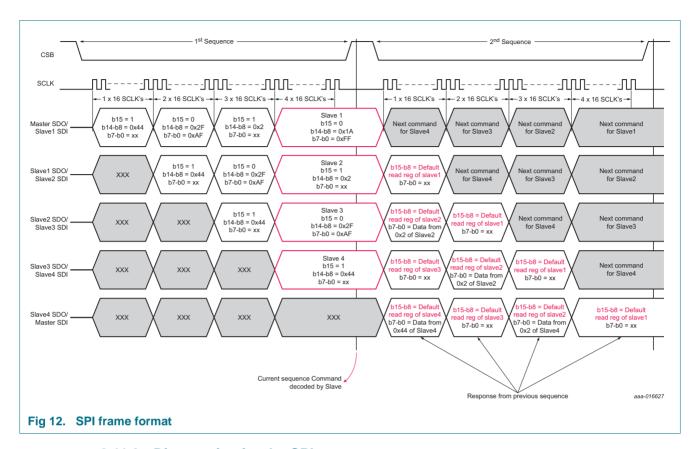

#### 8.11.3 Diagnostics for the SPI

The device is evaluating all SPI access to the device for the correctness of the commands. When the command is not allowed, the SPI err bit is set.

The conditions that are considered as erratic accesses are:

- SPI write is attempted to a read-only location or reserved location
- SPI write is attempted during operation to a configuration register
- SPI read is attempted from a reserved location
- SPI command does not consist of a multiple of 16 clock counts

If an SPI access is considered to be erratic, no modifications to a SPI register are made. The access after the erratic SPI command returns the diagnostic register and zero in the data field.

For details concerning the SPI\_err bit, see <u>Section 8.10</u>.

#### 8.11.4 Register map

The addressable register space amounts to 128 registers from 00h to 7Fh. They are separated into two groups as shown in <u>Table 38</u>. The register mapping is shown in <u>Table 39</u> and <u>Table 42</u>. The functional description of each bit can be found in the dedicated chapter.

Table 38. Grouping of the register space

Address range	Description	Content
00h to 1Fh	control registers	control registers
20h to 7Fh	diagnostic registers	diagnostic information

#### 8.11.4.1 Control registers

#### Table 39. Control register group overview

Address	Name	Reset value	7	6	5	4	3	2	1	0
00h	function control	00h	-	-	-	-	Cnt_CSB	Vout2en[1]	Vout1en[1]	Cfg_dn
01h	gate driver enable	00h	-	-	-	-	EN_G4[2]	EN_G3[2]	EN_G2[2]	EN_G1 <sup>2</sup>
03h	target voltage output 1	00h		V_Vout_1[7:0]						
04h	target voltage output 2	00h		V_Vout_2[7:0]						
05h	limit voltage output 1	00h					Vmax_	_Vout_1[7:0]		
06h	limit voltage output 2	00h					Vmax_	_Vout_2[7:0]		
07h	maximum phase current Vout1	46h					I_max_per_p	ohase_Vout_1	1[7:0]	
08h	maximum phase current Vout2	46h		I_max_per_phase_Vout_2[7:0]						
1Ch	frequency trimming register	09h	-	-			Calib/	Ftrim[4:0]		-

<sup>[1]</sup> Bits are locked with bit Cfg\_dn is HIGH. When bit Cfg\_dn is LOW, bits can be changed. Read is always possible.

<sup>[2]</sup> Individual gate drivers that are enabled when Cfg\_dn and VGG\_ok are set HIGH, can be turned on and off during operation of the system. Gate drivers, disabled when bits Cfg\_dn and VGG\_ok are set HIGH, remain off, even when the gate enable bits are set HIGH later.

#### 8.11.4.2 Configuration registers

The configuration registers inside the control block can only be written in configuration mode. In the other modes, this register can only be read.

Table 40. Configuration register group overview

Address	Name	Reset value	7	6	5	4	3	2	1	0	
02h	gate driver output	00h	-	-	-	-	O_G4	O_G3	O_G2	O_G1	
09h	clock divider for output 1	0Fh		Clkdiv1[7:0]							
0Ah	clock divider for output 2	0Fh				С	lkdiv2[7:0]				
0Bh	internal phases output 1	0Fh	-	-	-	-	EN_P4_1	EN_P3_1	EN_P2_1	EN_P1_1	
0Ch	internal phases output 2	0Fh	-	-	-	-	EN_P4_2	EN_P3_2	EN_P2_2	EN_P1_2	
0Dh	phase off and delay output 1	39h			Phdel1[4:	0]			Phoff1[2:0]		
0Eh	phase off and delay output 2	39h	Phdel2[4:0]				Phoff2[2:0]				
0Fh	gate driver phase	00h	-	-	-	-	O_GP4	O_GP3	O_GP2	O_GP1	
10h	phase selection configuration	E4h	Phsel	4[1:0]	Phsel	3[1:0]	Phsel	2[1:0]	Phse	Phsel1[1:0]	
11h	loop filter proportional configuration	00h		Prop	2[3:0]		Prop1[3:0]				
12h	loop filter integral configuration	00h		Integ	2[3:0]		Integ1[3:0]				
13h	slope compensation configuration	88h		Slpcm	p2[3:0]			Slpcm	p1[3:0]		
14h	current sense slope resistor configuration	00h	Slpr4[1:0] Slpr3[1:0]			B[1:0]	Slpr2	2[1:0]	Slpr	I[1:0]	
15h	gate driver control	FFh			•	\	/GG[7:0]		•		
1Ah	overvoltage detection threshold	FFh				V_\	/IN_OV[7:0	]			
1Bh	undervoltage detection threshold	00h				V_\	/IN_UV[7:0	]			

#### 8.11.4.3 Internal registers

The ASL4501SHN uses the SPI registers to control some internal functions. In order to avoid any unintended behavior of the device, do not modify these registers but leave them all at their default value.

Table 41. Internal register group

Address	Name	Reset value	7	6	5	4	3	2	1	0
19h	internal 1	82h	-	-	-	-	-	-	-	-
25h	internal 2	27h	-	-	-	-	-	-	-	-
26h	internal 3	3Bh	-	-	-	-	-	-	-	-
2Fh	internal 4	E8h	-	-	-	-	-	-	-	-
30h	internal 5	09h	-	-	-	-	-	-	-	-

#### 8.11.4.4 Diagnostic registers

The ASL4501SHN provides diagnostic data via some SPI registers. These registers are read only, but error bits can be cleared via a write access to the register.

Table 42. Diagnostic register group overview

Address	Name	7	6	5	4	3	2	1	0	
41h	CSB count low		CSB_cnt[7:0]							
42h	CSB count high		CSB_cnt[15:8]							
45h	battery voltage				V_VBA	T[7:0]				
46h	junction temperature				T_junction	on[7:0]				
4Ch	calibration result register		Calib_value[7:0]							
5Fh	diagnostic register	Vout1_ok	Vout2_ok	VGG_ok	Tj_err	VIN_UV	VIN_OV	SPI_err	VGG_err	

### 9. Limiting values

#### Table 43. Limiting values

In accordance with the Absolute Maximum Rating System (IEC 60134).

Symbol	Parameter	Conditions		Min	Max	Unit
$V_{BAT}$	battery supply voltage	EN = LOW		-0.3	+60	V
		EN = HIGH		-0.3	+40	V
V <sub>VCC</sub>	voltage on pin VCC			-0.3	+5.5	V
$V_{GND}$	ground supply voltage	voltage between ground pins		-0.6	+0.6	V
$V_{FBx}$	voltage on feedback pins	FB1 and FB2		-0.3	+90	V
Vo	output voltage	programmed target voltage according to registers 0x03h and 0x04h		10	80	V
$V_{I(dig)}$	digital input voltage	voltage on digital pins SDO, SDI, CSB, SCLK and EN		-0.3	+5.5	V
$V_{VGG}$	voltage on pin VGG	VGG1	[1]	-0.3	+20	V
		VGG2	[1]	-0.3	+20	V
V <sub>sense</sub>	sense voltage	voltage on sense pins SNH1, SNH2, SNH3, SNH4, SNL1, SNL2, SNL3 and SNL4		-0.3	+1.8	V
$V_{Gx}$	voltage on gate pins	voltage on gate pins G1, G2, G3 and G4		-0.3	+10	V
Tj	junction temperature			-40	+175	°C
T <sub>stg</sub>	storage temperature			-55	+175	°C
V <sub>ESD</sub>	electrostatic discharge voltage		[2]	-2	+2	kV
			[3]	-500	+500	V

- [1] VGG1 and VGG2 are IC internally connected (shorted).
- [2] HBM according to AEC-Q100-002 (100 pF, 1.5 k $\Omega$ ).
- [3] CDM according to AEC-Q100-011 (field induced charge; 4 pF).

#### 10. Thermal characteristics

#### Table 44. Thermal characteristics

Symbol	Parameter	Conditions	Тур	Unit
R <sub>th(tot)</sub>	total thermal resistance		37	K/W

[1] In accordance with JEDEC, JESD51-2, JESD51-5 and JESD51-7 with natural convection on 2s2p board. Board with two inner copper layers (thickness: 35 µm) and thermal via array, under the exposed pad connected to the first inner copper layer.

#### 11. Static characteristics

#### Table 45. Static characteristics

Minimum and maximum values are specified for the following conditions:  $V_{BAT} = 5.5 \text{ V}$  to 40 V,  $V_{EN} = 4.5 \text{ V}$  to 5.5 V,  $V_{VCC} = 4.5 \text{ V}$  to 5.5 V and  $T_j = -40 \text{ °C}$  to +175 °C[1]. All voltages are defined with respect to ground, positive currents flow into the IC. Typical values are given at  $V_{VIN} = 40 \text{ V}$ ,  $V_{EN} = 5 \text{ V}$ ,  $V_{VCC} = 5 \text{ V}$  and  $T_j = 25 \text{ °C}$  unless otherwise specified.

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
Supply pin	VBAT					
I <sub>DD</sub>	supply current	operating; no load on VGG; gate pins LOW; one phase; one output	5	13	-	mA
		operating; no load on VGG; gate pins low; four phases; two outputs	-	20	-	mA
l <sub>off</sub>	off-state current	EN = LOW	-	-	5	μΑ
V <sub>th(det)pon</sub>	power-on detection threshold voltage		-	-	4.5	V
Supply pin	VCC					,
I <sub>VCC</sub>	supply current on pin VCC	EN = HIGH; CSB = LOW	-	-	250	μА
Supply pin	EN					
I <sub>EN</sub>	supply current on pin EN	EN = HIGH	-	-	225	μΑ
Output volt	age					1
V <sub>O(acc)</sub>	output voltage accuracy	Vout1: operating accuracy 1	-0.03 × Vout1 - 0.711	-	+0.03 × Vout1 + 0.711	V
		Vout2: operating accuracy 2	-0.03 × Vout2 - 0.711	-	+0.03 × Vout2 + 0.711	V
Vo	output voltage	bit Vout1_ok/Vout2_ok is set when V <sub>O</sub> is within the range regarding the target value	-5.4	-	+2.4	V
Regulated v	voltage output					
$V_{VGG}$	voltage on pin VGG	$V_{BAT} \ge V_{VGG} + V_{do(reg)VGG}$ [2]	4.46	-	10.04	V
		bit VGG_ok is set when V <sub>VGG</sub> is within the range regarding the target value	-2.4	-	+2.4	V
$V_{do(reg)VGG}$	regulator dropout voltage on pin VGG	I <sub>VGG</sub> ≤ 50 mA; regulator in saturation	-	0.5	1.0	V
		I <sub>VGG</sub> ≤ 160 mA; regulator in saturation	-	1.6	3.2	V
V <sub>reg(acc)VGG</sub>	regulator voltage	25 °C to T <sub>j(max)</sub>	-5	-	+5	%
	accuracy on pin VGG	−40 °C to +25 °C	<b>-7</b>	-	+5	%
C <sub>VGG</sub>	capacitor on pin VGG	ESR ≤ 0.1 Ω	-	1	-	μF
ΔV	voltage variation	deviation from average peak current value at sense pins; before subtracting slope compensation 160 mV, corresponding to a peak set value of 16 A at 10 mΩ R <sub>sense</sub>	l –2.5	-	+2.5	%

#### Table 45. Static characteristics ... continued

Minimum and maximum values are specified for the following conditions:  $V_{BAT} = 5.5 \text{ V}$  to 40 V,  $V_{EN} = 4.5 \text{ V}$  to 5.5 V,  $V_{VCC} = 4.5 \text{ V}$  to 5.5 V and  $T_j = -40 \text{ °C}$  to +175 °C[1]. All voltages are defined with respect to ground, positive currents flow into the IC. Typical values are given at  $V_{VIN} = 40 \text{ V}$ ,  $V_{EN} = 5 \text{ V}$ ,  $V_{VCC} = 5 \text{ V}$  and  $T_j = 25 \text{ °C}$  unless otherwise specified.

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
$\Delta V_{slope}$	slope voltage difference	deviation from average slope voltage value at sense pins; subtraction of slope compensation is 10.9 mV, equal to 10.9 A at 10 m $\Omega$ R <sub>sense</sub> and R <sub>slope</sub> setting of 1 k $\Omega$	-8	-	+8	%
Serial perip	heral interface inputs; pir	s SDI, SCLK and CSB				
$V_{th(sw)}$	switching threshold voltage		0.3V <sub>CC</sub>	-	0.7V <sub>CC</sub>	V
R <sub>pd(int)SCLK</sub>	internal pull-down resistance on pin SCLK		40	-	80	kΩ
$R_{pd(int)CSB}$	internal pull-down resistance on pin CSB		40	-	80	kΩ
$R_{pd(int)SDI}$	internal pull-down resistance on pin SDI		40	-	80	kΩ
Serial perip	heral interface data outpu	it; pin SDO		1		
V <sub>OH</sub>	HIGH-level output voltage	$I_{OH} = -4 \text{ mA};$ $V_{CC} = 4.5 \text{ V to } 5.5 \text{ V}$	V <sub>CC</sub> - 0.4	-	-	V
V <sub>OL</sub>	LOW-level output voltage	$I_{OL} = -4 \text{ mA};$ $V_{CC} = 4.5 \text{ V to } 5.5 \text{ V}$	-	-	0.4	V
I <sub>LOZ</sub>	OFF-state output leakage current	$V_{CSB} = V_{CC}$ ; $V_O = 0$ V to $V_{CC}$ ; $V_{CC} = 4.5$ V to 5.5 V	-5	-	+5	μΑ
Temperatur	e protection			•	-	
ΔT <sub>j</sub>	junction temperature variation	measurement provided via register 46h; T <sub>j</sub> = 130 °C	-20	-	+20	°C
T <sub>sd(otp)</sub>	overtemperature protection shutdown temperature	[4]	150	175	200	°C
V <sub>BAT</sub> monite	oring			,		
$V_{VBAT}$	accuracy of voltage measurement on pin VBAT		$-0.035 \times V_{BAT} - 0.3555$	-	+0.035 × V <sub>BAT</sub> + 0.3555	V

<sup>[1]</sup> All parameters are guaranteed over the virtual junction temperature range by design. Factory testing uses correlated test conditions to cover the specified temperature and power supply voltage range.

<sup>[2]</sup> VGG refers to both VGG1 and VGG2.

<sup>[3]</sup> For a given system with  $V_{BAT}$  = 13.5 V,  $V_{BAT}$  = 15 V,  $V_{BAT}$  = 15  $V_{BAT}$  = 15  $V_{BAT}$  = 10 m $V_{BAT}$  = 1

<sup>[4]</sup> Additional features include protection against load dump transient voltages of up to 60 V and thermal shutdown when the junction temperature of the ASL4501SHN exceeds 175 °C.


### 12. Dynamic characteristics

#### Table 46. Dynamic characteristics

Minimum and maximum values are specified for the following conditions:  $V_{BAT} = 5.5 \text{ V}$  to 40 V,  $V_{EN} = 4.5 \text{ V}$  to 5.5 V,  $f_{OSC} = 130 \text{ MHz}$  to 200 MHz,  $V_{CC} = 4.5 \text{ V}$  to 5.5 V and  $T_j = -40 \,^{\circ}\text{C}$  to +175  $^{\circ}\text{C}^{[1]}$ . All voltages are defined with respect to ground. Positive currents flow into the IC. Typical values are given at  $V_{BAT} = 12 \,\text{V}$ ,  $V_{EN} = 5 \,\text{V}$ ,  $V_{CC} = 5 \,\text{V}$  and  $T_j = 25 \,^{\circ}\text{C}$  unless otherwise specified.


Symbol	Parameter	Conditions	Min	Тур	Max	Unit	
f <sub>DCDC</sub>	DC-to-DC converter frequency		125	-	700	kHz	
f <sub>DCDC(acc)</sub>	DC-to-DC converter frequency accuracy	operating; trimmed	-5	-	+5	%	
f <sub>osc</sub>	oscillator frequency	internal oscillator; untrimmed	130	-	250	MHz	
		target frequency for trimmed operation	-	180	-	kHz %	
t <sub>startup</sub>	start-up time	EN = HIGH until SPI write access	-	-	150	μS	
		EN = HIGH until SPI read access	-	-	2000	00 μs	
Serial periphe	eral interface timing; pins CSB,	SCLK, SDI and SDO		,			
f <sub>clk(int)</sub> /f <sub>SPI_CLK</sub>	internal clock frequency to SPI clock frequency ratio		-	20 : 1	-	1	
t <sub>cy(clk)</sub>	clock cycle time		250	-	-	ns	
t <sub>SPILEAD</sub>	SPI enable lead time		50	-	-	ns	
t <sub>SPILAG</sub>	SPI enable lag time		50	-	-	ns	
t <sub>clk(H)</sub>	clock HIGH time		125	-	-	ns	
t <sub>clk(L)</sub>	clock LOW time		125	-	-	ns	
t <sub>su(D)</sub>	data input set-up time		50	-	-	ns	
t <sub>h(D)</sub>	data input hold time		50	-	-	ns	
$t_{v(Q)}$	data output valid time	pin SDO; C <sub>L</sub> = 20 pF	-	-	130	ns	
t <sub>WH(S)</sub>	chip select pulse width HIGH		250	-	-	ns	
Gate driver				·	·		
t <sub>ch(g)</sub>	gate charge time	20 % to 80 %; V <sub>VGG</sub> = 7.5 V; C <sub>gate</sub> = 2000 pF	-	-	30	ns	
t <sub>dch(g)</sub>	gate discharge time	80 % to 20 %; V <sub>VGG</sub> = 7.5 V; C <sub>gate</sub> = 2000 pF	-	-	14	ns	
Regulated vo	Itage						
t <sub>err(startup)</sub>	start-up error time	of VGG; f <sub>osc</sub> = 180 MHz	-	2.5	-	ms	
t <sub>det(err)</sub>	error detection time	for VGG during operation; f <sub>osc</sub> = 180 MHz	-	31.5	-	μS	
t <sub>fltr(Vo)</sub>	output voltage filter time	for bit Vout1_ok and Vout2_ok; f <sub>osc</sub> = 180 MHz	-	31.5	-	μS	
t <sub>cal</sub>	calibration time	bit VGG_ok = HIGH	-	-	10	ms	

<sup>[1]</sup> All parameters are guaranteed over the virtual junction temperature range by design. Factory testing uses correlated test conditions to cover the specified temperature and power supply voltage range.

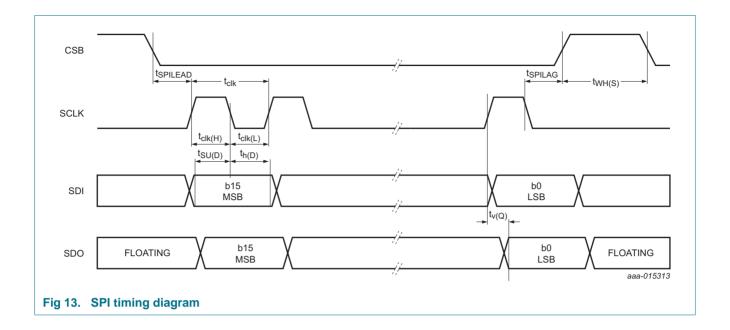

### 13. Application information

<u>Figure 14</u> provides an application example for the ASL4501SHN in a typical four-phase boost converter IC with one output voltage.

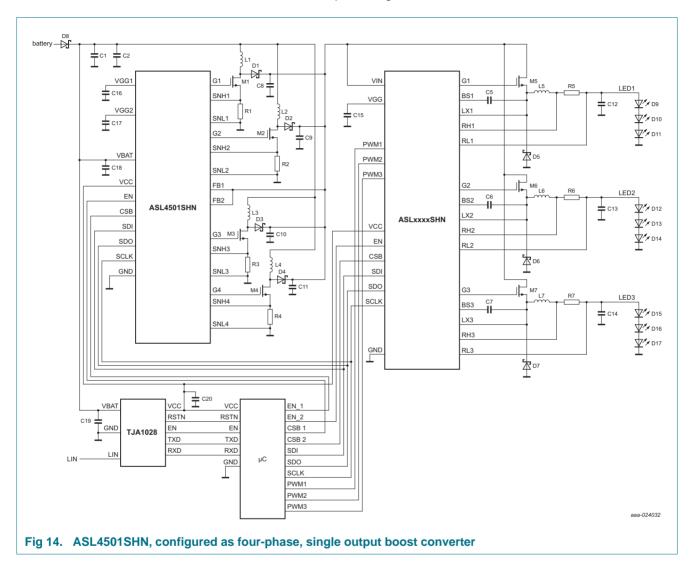

### 14. Test information

### 14.1 Quality information

This product has been qualified in accordance with the Automotive Electronics Council (AEC) standard Q100 Rev-H - *Failure mechanism-based stress test qualification for integrated circuits*, and is suitable for use in automotive applications.

### 15. Package outline

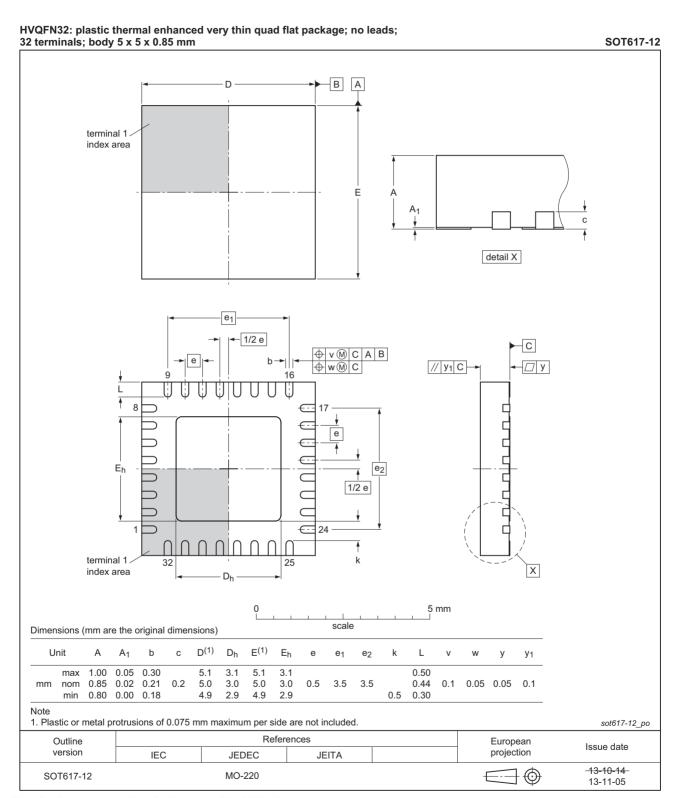


Fig 15. Package outline SOT617-12 (HVQFN32)

### 16. Revision history

#### Table 47. Revision history

Document ID	Release date	Data sheet status	Change notice	Supersedes
ASL4501SHN v.2	20180110	Product data sheet	-	ASL4501SHN v.1
Modifications:	<ul> <li>Updated form</li> </ul>	ula for VGG setting: Table 30 "	VGG control registe	r (address 15h)"
	Updated formula for output voltage settings and input voltage measurements:			
	<ul> <li>Table 18 "Output voltage 1 register (address 03h)"</li> <li>Table 19 "Output voltage 2 register (address 04h)"</li> </ul>			
	<ul> <li>Table 20 "l</li> </ul>	_imit voltage output 1 register (	(address 05h)"	
<ul> <li>Table 21 "Limit voltage output 2 register (address 06h)"</li> </ul>				
	<ul> <li>Table 31 "Battery voltage register (address 45h)"</li> </ul>			
<ul> <li>Table 32 "Undervoltage threshold register (address 1Bh)"</li> </ul>				
	- <u>Table 33 "C</u>	Overvoltage threshold register	(address 1Ah)"	
ASL4501SHN v.1	20170629	Product data sheet	-	-

### 17. Legal information

#### 17.1 Data sheet status

Document status[1][2]	Product status[3]	Definition
Objective [short] data sheet	Development	This document contains data from the objective specification for product development.
Preliminary [short] data sheet	Qualification	This document contains data from the preliminary specification.
Product [short] data sheet	Production	This document contains the product specification.

- [1] Please consult the most recently issued document before initiating or completing a design.
- [2] The term 'short data sheet' is explained in section "Definitions"
- [3] The product status of device(s) described in this document may have changed since this document was published and may differ in case of multiple devices. The latest product status information is available on the Internet at URL http://www.nxp.com.

#### 17.2 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

Short data sheet — A short data sheet is an extract from a full data sheet with the same product type number(s) and title. A short data sheet is intended for quick reference only and should not be relied upon to contain detailed and full information. For detailed and full information see the relevant full data sheet, which is available on request via the local NXP Semiconductors sales office. In case of any inconsistency or conflict with the short data sheet, the full data sheet shall prevail.

Product specification — The information and data provided in a Product data sheet shall define the specification of the product as agreed between NXP Semiconductors and its customer, unless NXP Semiconductors and customer have explicitly agreed otherwise in writing. In no event however, shall an agreement be valid in which the NXP Semiconductors product is deemed to offer functions and qualities beyond those described in the Product data sheet.

#### 17.3 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

#### Suitability for use in automotive applications — This NXP

Semiconductors product has been qualified for use in automotive applications. Unless otherwise agreed in writing, the product is not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Limiting values — Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and (proper) operation of the device at these or any other conditions above those given in the Recommended operating conditions section (if present) or the Characteristics sections of this document is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <a href="http://www.nxp.com/profile/terms">http://www.nxp.com/profile/terms</a>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

**No offer to sell or license** — Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Translations** — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

#### 17.4 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

#### 18. Contact information

For more information, please visit: http://www.nxp.com

For sales office addresses, please send an email to: salesaddresses@nxp.com

# ASL4501SHN

### Four-phase boost converter

### 19. Tables

Table 1.	Ordering information3	Table 23.	Maximum phase current Vout2 register	
Table 2.	Pin description 1		(address 08h)	. 17
Table 3.	Operating modes	Table 24.	Function control register (address 00h)	. 17
Table 4.	Internal phase control enable for phase logic 1	Table 25.	CSB count register 1 (address 41h)	18
	(address 0Bh)9	Table 26.	CSB count register 2 (address 42h)	19
Table 5.	Internal phase control enable for phase logic 2	Table 27.	Calibration/frequency trimming register	
	(address 0Ch)9		(address 1Ch)	. 19
Table 6.	Gate driver output (address 02h)	Table 28.	Calib/Ftrim settings	. 20
Table 7.	Gate driver phase (address 0Fh) 10	Table 29.	Calibration result register (address 4Ch)	20
Table 8.	Phase selection configuration (address 10h)10	Table 30.	VGG control register (address 15h)	21
Table 9.	Gate driver enable (address 01h)12	Table 31.	Battery voltage register (address 45h)	22
Table 10.	Clock divider for Vout1 (address 09h)13	Table 32.	Undervoltage threshold register	
Table 11.	Clock divider for Vout2 (address 0Ah)13		(address 1Bh)	. 22
Table 12.	Phase-off time and phase delay of output 1	Table 33.	Overvoltage threshold register (address 1Ah)	22
	(address 0Dh)13	Table 34.	Junction temperature register (address 46h) .	22
Table 13.	Phase-off time and phase delay of output 2	Table 35.	Diagnostic register (address 5Fh)	. 23
	(address 0Eh)13	Table 36.	SPI frame format for a transition to the device	25
Table 14.	Loop filter proportional configuration	Table 37.	SPI frame format for a transition from the	
	(address 11h)		device	26
Table 15.	Loop filter integral configuration (address 12h) 14	Table 38.	Grouping of the register space	29
Table 16.	Slope compensation configuration	Table 39.	Control register group overview	29
	(address 13h)14	Table 40.	Configuration register group overview	30
Table 17.	Current sense slope resistor configuration	Table 41.	Internal register group	. 31
	(address 14h)15	Table 42.	Diagnostic register group overview	31
Table 18.	Output voltage 1 register (address 03h)15	Table 43.	Limiting values	32
Table 19.	Output voltage 2 register (address 04h)15	Table 44.	Thermal characteristics	32
Table 20.	Limit voltage output 1 register (address 05h) .16	Table 45.	Static characteristics	33
Table 21.	Limit voltage output 2 register (address 06h) .16	Table 46.	Dynamic characteristics	35
Table 22.	Maximum phase current Vout1 register	Table 47.	Revision history	. 39
	(address 07h)17			

## 20. Figures

Fig 1.	Block diagram	.3
Fig 2.	Pin configuration	.4
Fig 3.	State diagram	.6
Fig 4.	Boost converter phase circuit	.8
Fig 5.	Mapping of virtual phases (V1_1 to V2_4) to	
	physical phases (G1 to G4)	.9
Fig 6.	Phase control generator	12
Fig 7.	Frequency trimming flow	18
Fig 8.	SPI timing protocol	25
Fig 9.	SPI frame format	25
Fig 10.	Daisy chain configuration	26
Fig 11.	Physical parallel slave connection	27
Fig 12.	SPI frame format	28
Fig 13.	SPI timing diagram	36
Fig 14.	ASL4501SHN, configured as four-phase, single	
	output boost converter	37
Fig 15.	Package outline SOT617-12 (HVQFN32)	38

### 21. Contents

1	Introduction	. 1
2	General description	. 1
3	Features and benefits	2
4	Applications	. 2
5	Ordering information	
6	Block diagram	
7	Pinning information	
7.1	_	
7.1	Pinning	
	-	
8	Functional description	
8.1 8.1.1	Operating modes	
8.1.2	Off mode	
8.1.3	Operation mode	
8.1.4	Fail silent mode	
8.2	Boost converter configuration	
8.2.1	Virtual phase configuration	
8.2.2	Association of physical phases to the output	
	voltages	. 10
8.2.3	Association of connected phases to the intern	
	phase generation	. 10
8.2.4	Enabling of connected phases	. 12
8.2.5	Boost converter frequencies configuration	. 12
8.2.6	Control loop parameter settings	
8.3	Output voltage programmability	
8.3.1	Output voltage target programmability	
8.3.2	Output overvoltage protection programming .	
8.4	Coil peak current limitation	
8.5	Enabling output voltage	
8.6	Trimming and calibration	
8.6.1	Frequency trimming	
8.6.2 8.6.3	Calibration	
8.7	Gate supply voltage	
8.7.1	Gate supply voltage	
8.8	Supply voltage monitoring	
8.8.1	Battery voltage measurement	
8.8.2	Undervoltage detection	
8.8.3	Overvoltage detection	
8.9	Junction temperature information	
8.10	Diagnostic information	
8.10.1	Bit VIN_OV	
8.10.2	Bit VIN_UV	
8.10.3	Bit SPI_err	
8.10.4	Bit Tj_err	
8.10.5	Bit VGG_err	
8.10.6	Bit VGG_ok	. 24

8.10.7	Bits Vout1_ok and Vout2_ok	24
8.11	SPI	24
8.11.1	SPI introduction	24
8.11.2	Typical use case illustration (write/read)	27
8.11.3	Diagnostics for the SPI	28
8.11.4	Register map	28
8.11.4.1	Control registers	29
8.11.4.2	5	30
8.11.4.3	egege	31
8.11.4.4	g	31
9	Limiting values	32
10	Thermal characteristics	32
11	Static characteristics	33
12	Dynamic characteristics	35
13	Application information	37
14	Test information	37
14.1	Quality information	37
15	Package outline	38
16	Revision history	39
17	Legal information	40
17.1	Data sheet status	40
17.2	Definitions	40
17.3	Disclaimers	40
17.4	Trademarks	41
18	Contact information	41
19	Tables	42
20	Figures	42
21	Contents	43

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.



Компания «ЭлектроПласт» предлагает заключение долгосрочных отношений при поставках импортных электронных компонентов на взаимовыгодных условиях!

#### Наши преимущества:

- Оперативные поставки широкого спектра электронных компонентов отечественного и импортного производства напрямую от производителей и с крупнейших мировых складов;
- Поставка более 17-ти миллионов наименований электронных компонентов;
- Поставка сложных, дефицитных, либо снятых с производства позиций;
- Оперативные сроки поставки под заказ (от 5 рабочих дней);
- Экспресс доставка в любую точку России;
- Техническая поддержка проекта, помощь в подборе аналогов, поставка прототипов;
- Система менеджмента качества сертифицирована по Международному стандарту ISO 9001:
- Лицензия ФСБ на осуществление работ с использованием сведений, составляющих государственную тайну;
- Поставка специализированных компонентов (Xilinx, Altera, Analog Devices, Intersil, Interpoint, Microsemi, Aeroflex, Peregrine, Syfer, Eurofarad, Texas Instrument, Miteq, Cobham, E2V, MA-COM, Hittite, Mini-Circuits, General Dynamics и др.);

Помимо этого, одним из направлений компании «ЭлектроПласт» является направление «Источники питания». Мы предлагаем Вам помощь Конструкторского отдела:

- Подбор оптимального решения, техническое обоснование при выборе компонента;
- Подбор аналогов;
- Консультации по применению компонента;
- Поставка образцов и прототипов;
- Техническая поддержка проекта;
- Защита от снятия компонента с производства.



#### Как с нами связаться

**Телефон:** 8 (812) 309 58 32 (многоканальный)

Факс: 8 (812) 320-02-42

Электронная почта: <u>org@eplast1.ru</u>

Адрес: 198099, г. Санкт-Петербург, ул. Калинина,

дом 2, корпус 4, литера А.